

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)



2 - People Recommended

ASSEMBLY RATING



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

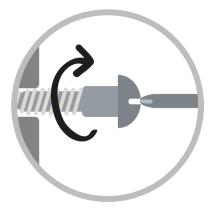

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam lock




cam bolt

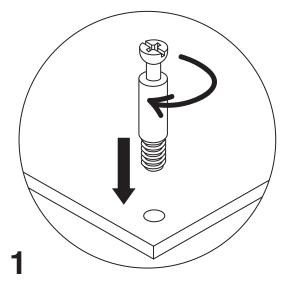


Screw the cam bolt into panel.

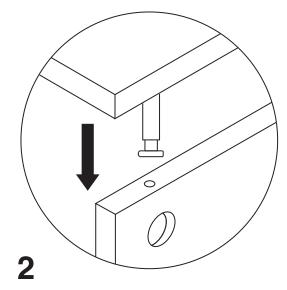

Insert the cam bolt into the bolt hole of joint panel.

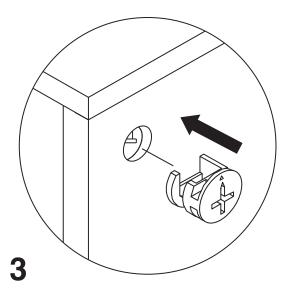

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

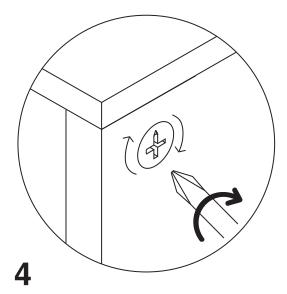



Turn the cam lock clockwise gently until it will not turn any more.


SIDE TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

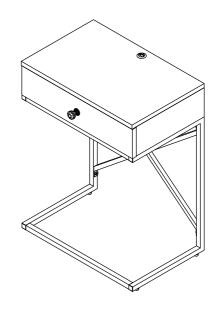

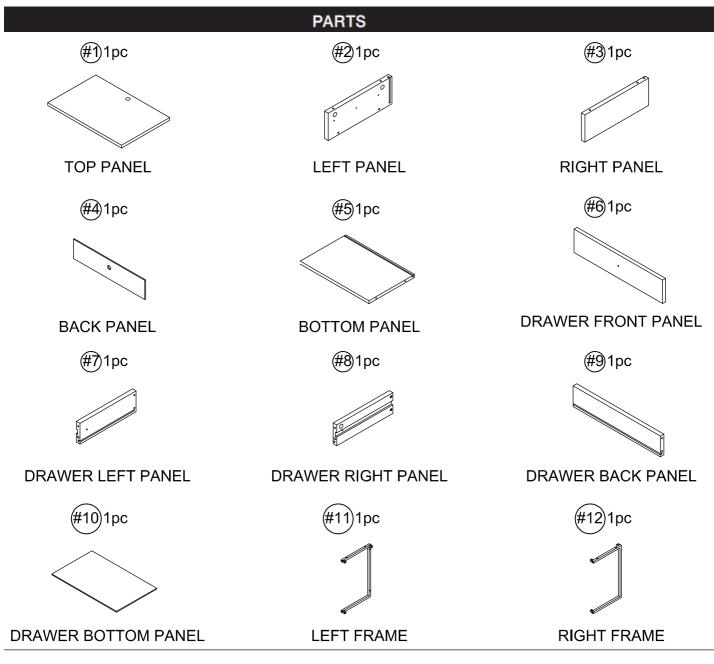

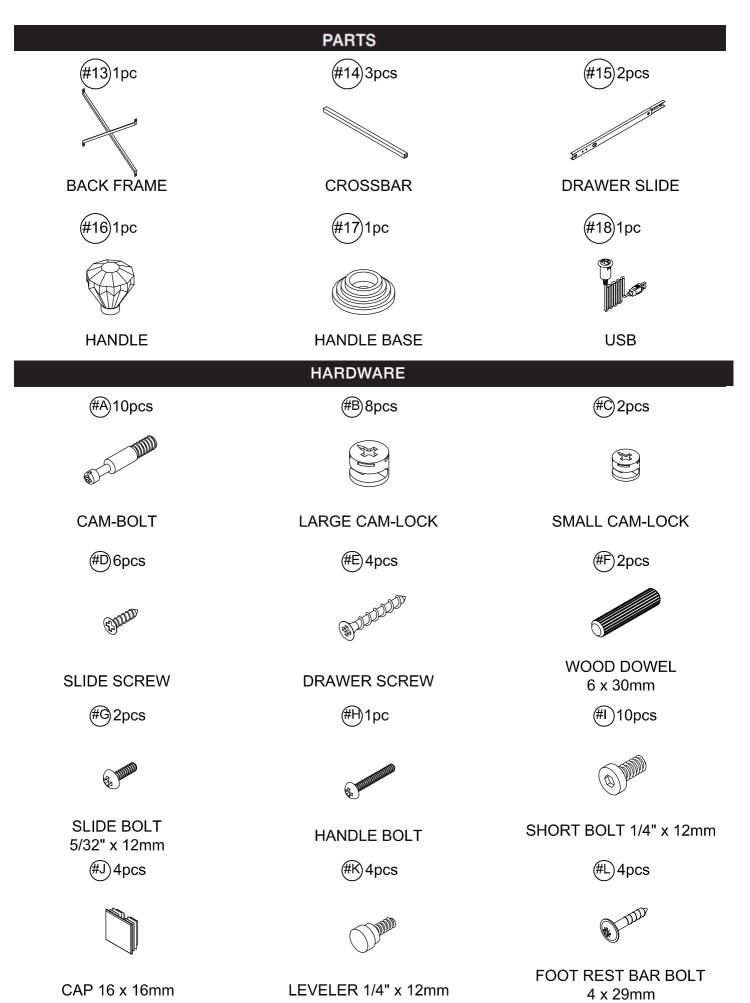

ACCESSORIES











Allen Wench 4mm

1


Part #2 x1pc

Part #3 x1pc

Part #15 x2pcs

Hardware#D x6pcs

Align and secure the rails (#15) to the left and right panels (#2,3).
There are three holes per section of the rails (#15); please align
and screw the middle holes of each 3 hole section of the rails (#14).

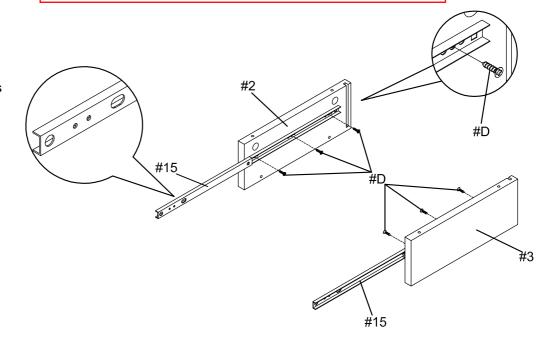

2

Part #2 x1pc


Part #3 x1pc

Part #5 x1pc

Hardware#A x4pcs


Hardware#B x4pcs

Attach cam bolts (#A) to side panels (#2,3). Please reference page 5 on how to secure cam locks (#B) onto cam bolts (#A).

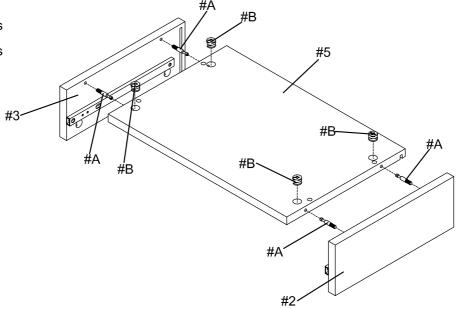

3

Part (#1) x1pc
Part (#4) x1pc
Hardware (#A) x4pcs
Hardware (#B) x4pcs

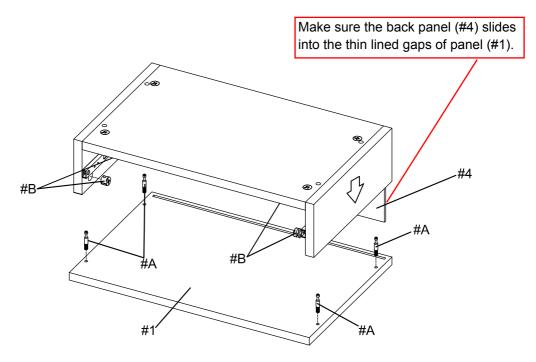

4


Part #7 x1pc

Part #8 x1pc

Part #9 x1pc

Part #19 x1pc

Hardware#E x4pcs

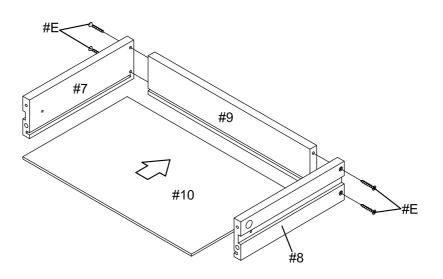

5

Part #6 x1pc

Part #7 x1pc

Part #8 x1pc

Part #16 x1pc


Part (#17) x1pc

Hardware#A x2pcs

Hardware#C x2pcs

Hardware#F) x2pcs

Hardware#H x1pc

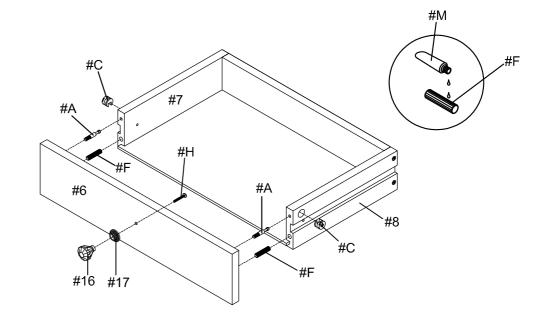

6


Part#1) x1pc

Part (#12) x1pc

Hardware#I)x6pcs


Hardware#Jx4pcs

Hardware#K) x4pcs

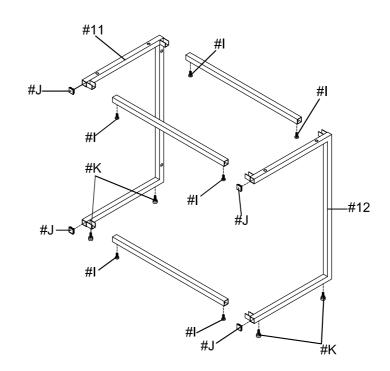


7

Part #13 x1pc
Hardware #1 x4pcs

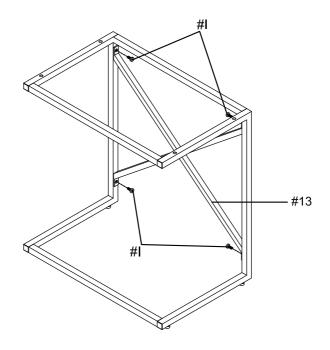


8


Hardware#L x4pcs

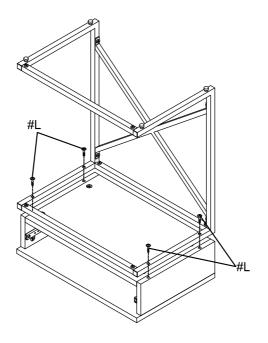


9

 

Extend drawer rails to align to the drawer, then secure by using bolts (#G) from the inside of the drawer.

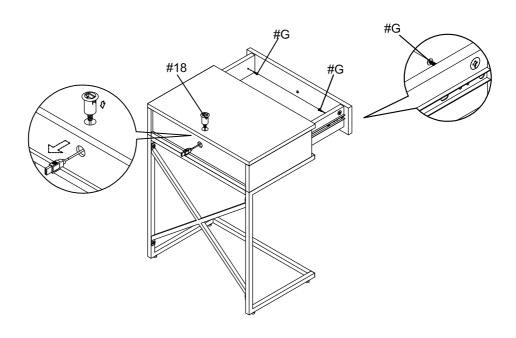

10

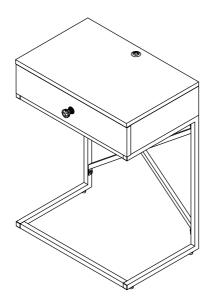

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.