


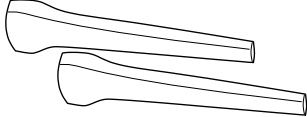
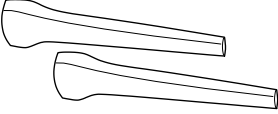

 




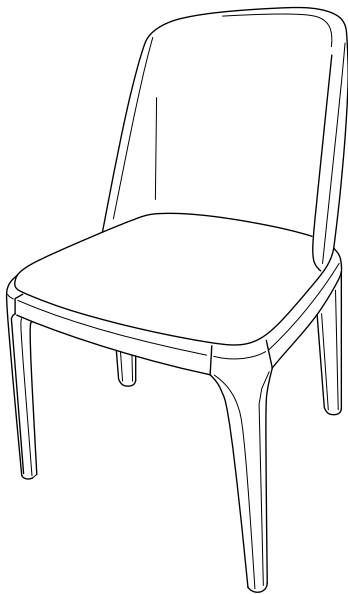


ASSEMBLY INSTRUCTION


DINING CHAIR

A Back Rest  1 pc	B Box Seat  1 pc	C Cushion Seat  1 pc	D Front Leg - Long  2 pcs
E Back Leg - Short  2 pcs	F JCBC Bolt M6 x 70mm  8 pcs	G JCBC Bolt M6 x 20mm  4 pcs	H Spring Washer M6  12 pcs
I Flat Washer M6  12 pcs	J CSK Screw M4 x 32mm  4 pcs	K Allen Key M4 x 110mm  1 pc	

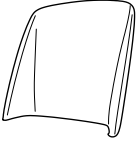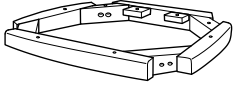


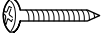This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Install Back Rest (A) with Box Seat (B) by using Flat Washer (I), Spring Washer (H), and JCBC Bolt (G). Use Allen Key (K) to tighten all sections as shown below.

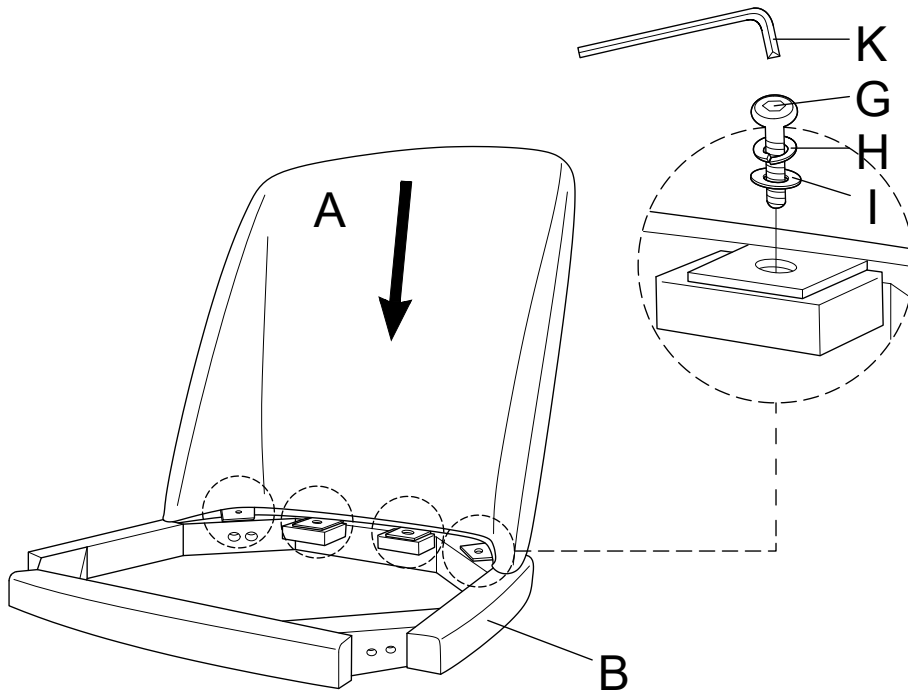


2 Put Cushion Seat (C) as shown below and flip over to continue installing by using CSK Screw (J). In this step, you need an edge of any suitable table and cover the surface with soft rug or carpet. Tighten all sections in this step.

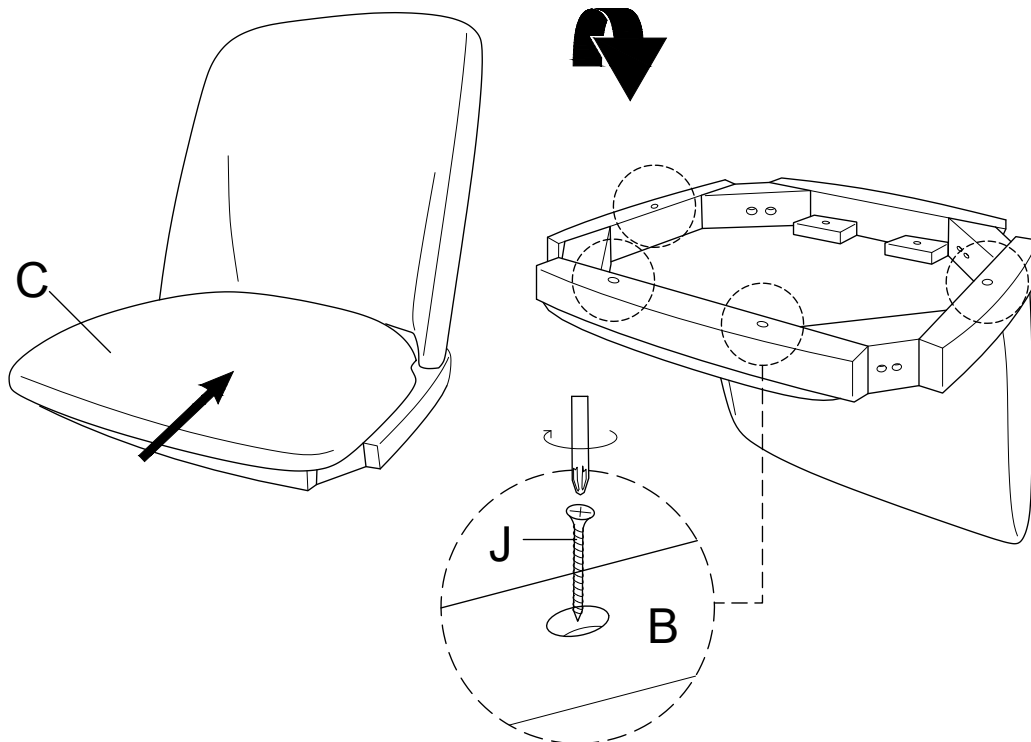

3

Maintain the previous assembly to install Front Leg - Long (D) and Back Leg - Short (E). Make sure to measure all parts of (D) and (E) to determine the length. The longest one for the front leg and the shortest for back leg. Use Flat Washer (I), Spring Washer (H), and JCBC Bolt (F) to install (D) and (E). Use Allen Key (K) to tighten all sections.

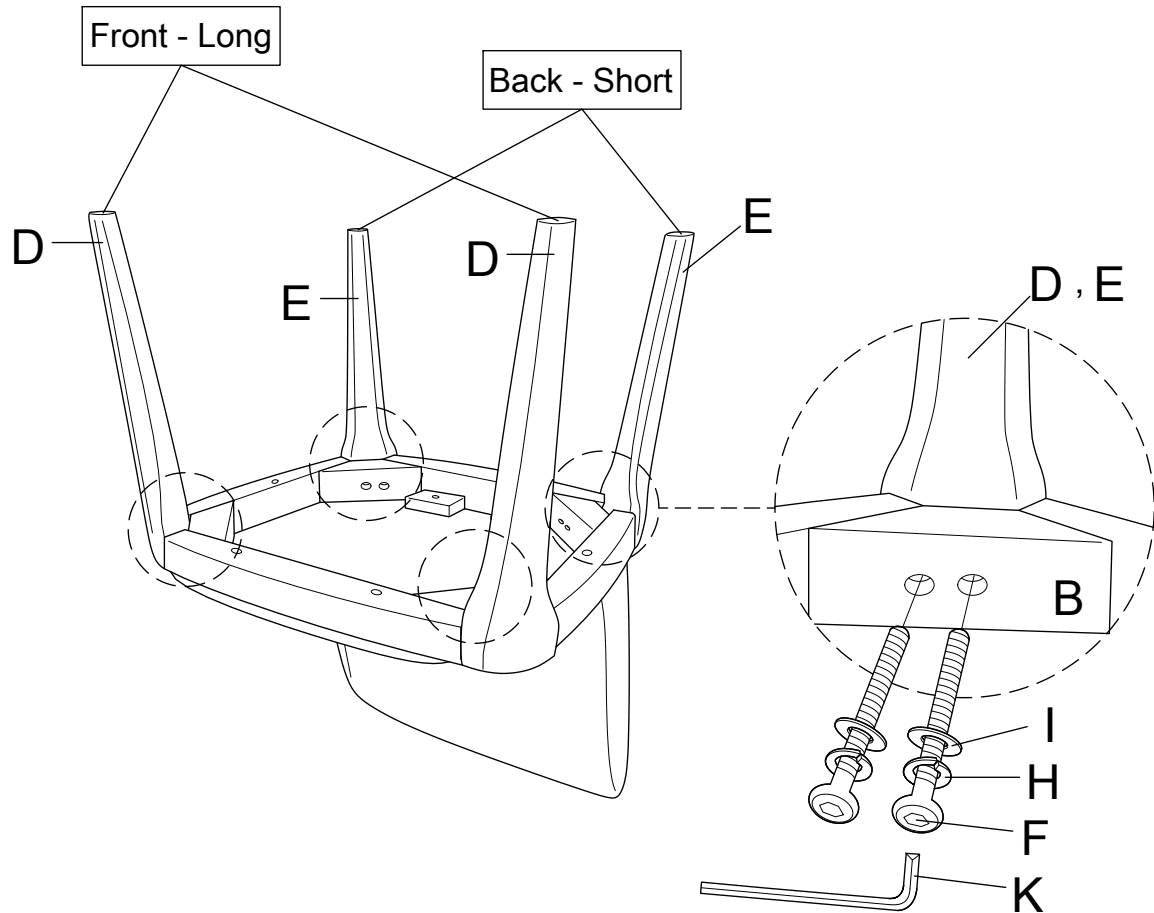

Stand the chair up on even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.