

SPECIFICATION:

Weight: 1.1KG

CUSTOMER SERVICE

Contact us through our website: www.TeamCustomerService.com

If you have any questions about assembly or use, please contact us and we will be glad to assist you.

**HOT AIR POPCORN MAKER**

4

The following are recommended for safety:

- 1) This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2) This appliance is not intended to be operated by means of an external timer of separate remote-control system.
- 3) It is not permitted to be operated by children. Supervision is necessary when appliance is used near or by children to ensure that they do not play with the appliance.
- 4) Repairs should only be completed by authorized service facility.
- 5) When in use, don't let the cord come in contact with hot unit.
- 6) Do not touch the popping chamber by hand during use.
- 7) The maker must be put on a flat surface to prevent it from falling. Tilting will influence the corn popper.
- 8) Before operating, make sure popcorn maker is placed on stable surface, prevent popcorn maker from falling.
- 9) Do not use the maker by combustibles or explosives or in an overheated or wet place.
- 10) Please use correct method to clean it.
- 11) After using please unplug the cord.
- 12) Let the machine cool down before storing or cleaning.
- 13) The appliance is not intended for use outdoor or for commercial purposes.
- 14) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 15) When using the appliance, do not use the same outlet with other range power appliance in order not to damage the outlet.
- 16) Do not leave unit unattended while in use.

Before Use:

- 1) Check package if the parts are complete.
- 2) Check if the appliance and cord are in good condition.
- 3) Get rid of all packages except nameplate.
- 4) Check local power mains for the rated voltage and the rated frequency.

How to Use:

- 1) Please clean the measuring cup, popcorn maker body, top cover.
- 2) Using the butter melter as a measuring scoop, fill with corn until it is level. (About 70g-80g) DO NOT pack in the corn or overfill.
- 3) Pour the corn into the popping chamber. Only use the recommended amount and do not overfill as too much corn into the machine can cause damage. Do not place anything

2

other than the corn in the popper as could result in damage to the popper and cause a fire hazard.

- 4) Place the top cover into the grooves of the popper.
- 5) If desired, fill the Measuring Cup with butter or margarine. Place the Measuring Cup on top of the Top Cover, butter side up. The heat generated by the Popcorn Maker will melt the butter for adding to the Popcorn in the bowl beside the Popcorn Maker. (Never put the butter into the Aluminum Heat Chamber).
- 6) Place a 4-quart or larger heat-proof bowl under the popping chute to collect the hot popcorn.
- 7) Plug into an electrical outlet and put the switch to "on" position, the popcorn will be ready in about 2-3 minutes.

IMPORTANT: Do not leave unattended while popping. A second bowl may be needed during popping should the first begin to overflow.

CAUTION: To avoid contact with hot kernels, keep your hands and face and children away from the popping chute during popping.

NOTE:

- 1) This machine should never run longer than 5 minutes. You must allow the popper to cool for 10-15 minutes before repeat use.
- 2) Do not put anything other than popping corn in the popping chamber.
- 3) The max corn weight is 100g.
- 4) Always use fresh popping corn for optimal popping performance.

CLEANING

- 1) After using, please unplug the cord. Ensure all popping has stopped before removing the cover.
- 2) Clean the machine only after the machine has cooled down (approx. 10 minutes after use).
- 3) Wash the cover and butter melter in warm soapy water. Rinse and dry thoroughly.
- 4) Wipe the corn popper base and chamber with a clean and dry soft cloth or rag. **NEVER IMMERSIVE THE BASE IN WATER.**
- 5) After all the parts are cleaned and dried, store it for next time use.

NOTE : Wait for approx. 10 to 15 minutes before using the Popcorn Maker again.

STORAGE

When the Popcorn Maker is not in use, disconnect the Popcorn Maker and store in a safe, dry place, out of reach of children.

3