 



# PRODUCT INSTRUCTION

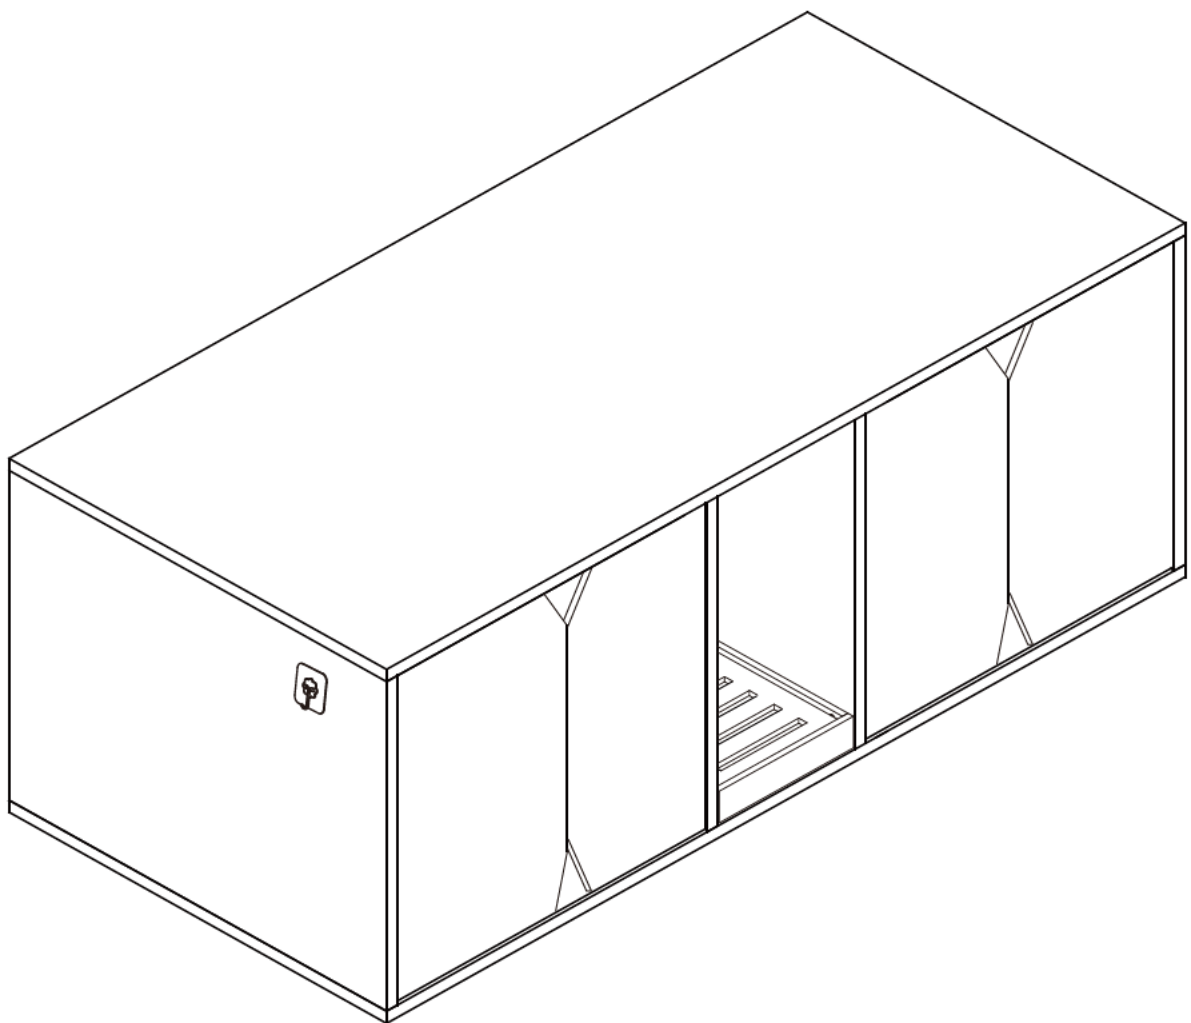




### **IMPORTANT INFORMATION!**

 please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

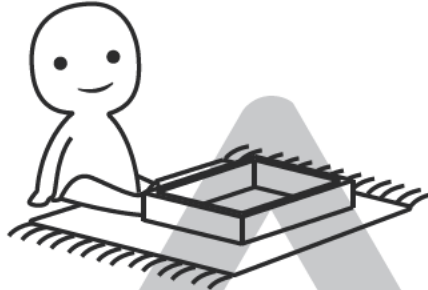


### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

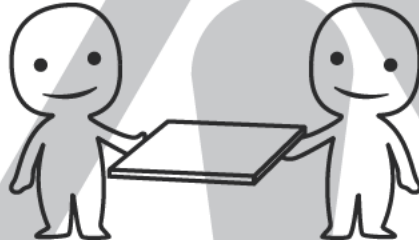

### **IMPROVE EFFICIENCY !**

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

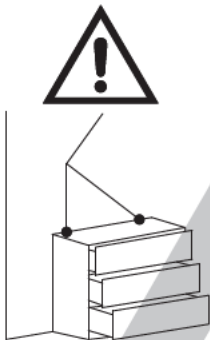

### **ANTI-TOPPLE WARNING !**

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

 
### **IMPORTANT !**

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

# Parts List / Teileliste

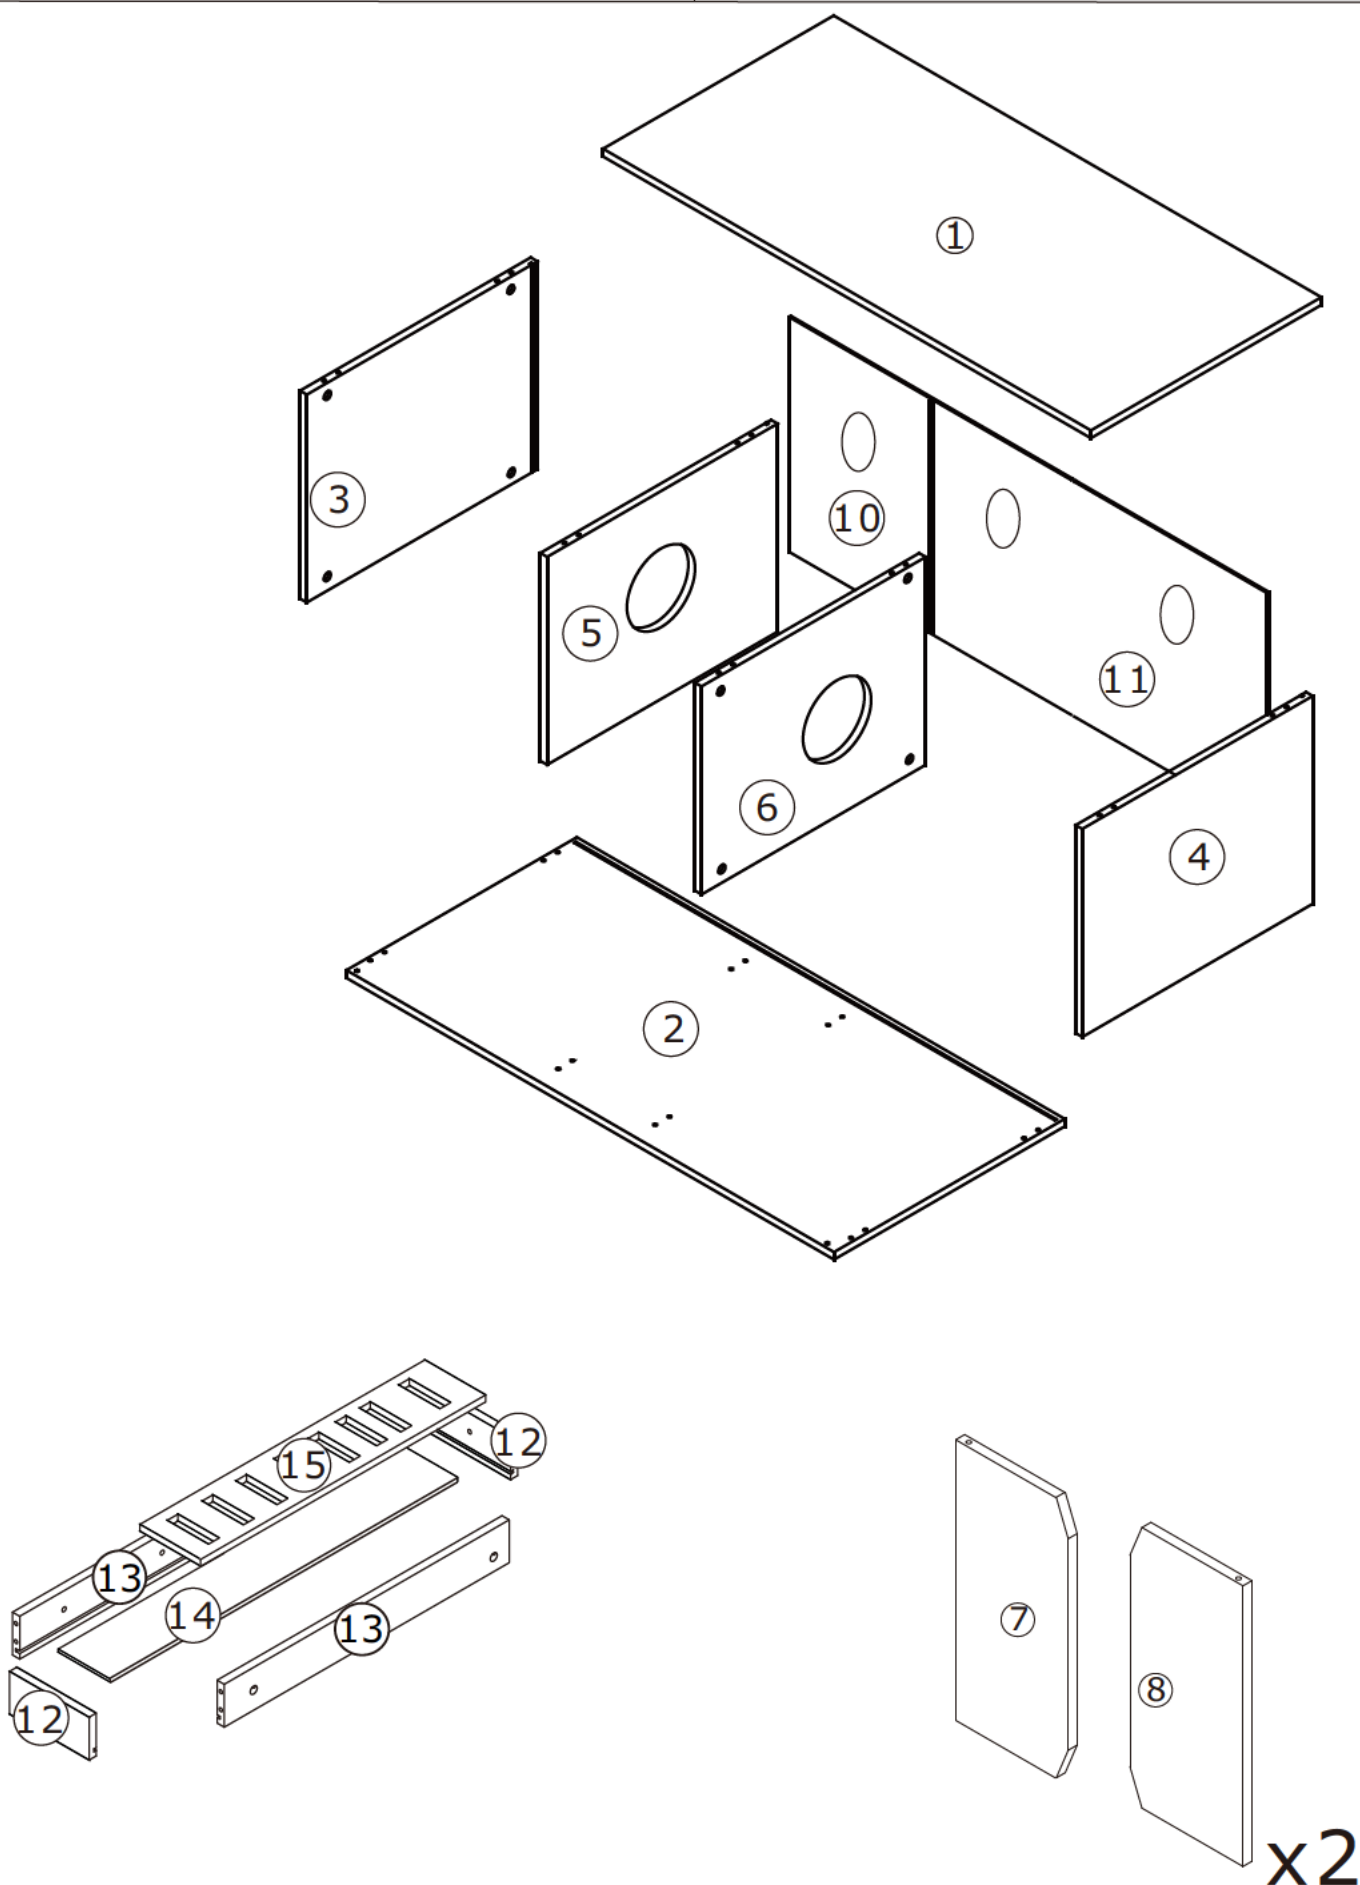

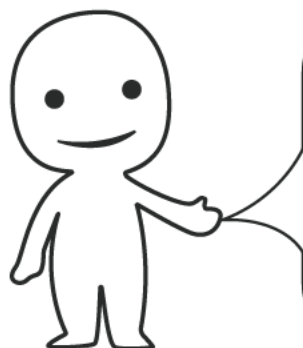


Please prepare the following tools

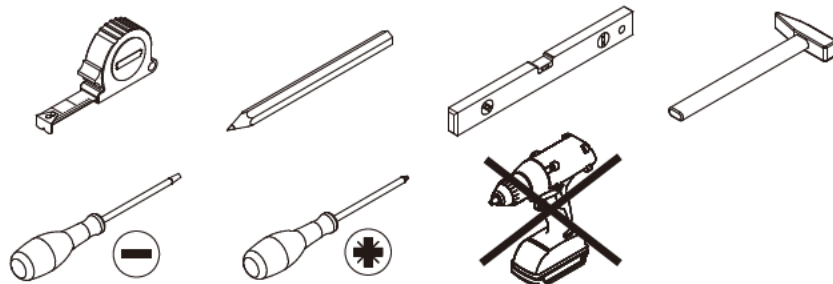 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 AX20+2




Ø 5X31mm

BX20+2




Ø 15X9.5mm

 CX28+2



Ø 6X30mm

 Dx4

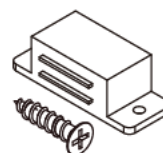

Ø 3.5X14mm

Ex4



Ø 3X10mm

FX18+1



Ø 3X10mm

Gx8



HX6



 
JX20+2



K X1



Embedded parts

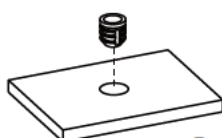

X3

1

AX8




Ø 5X31mm

Dx4



 Ø 3.5X14mm

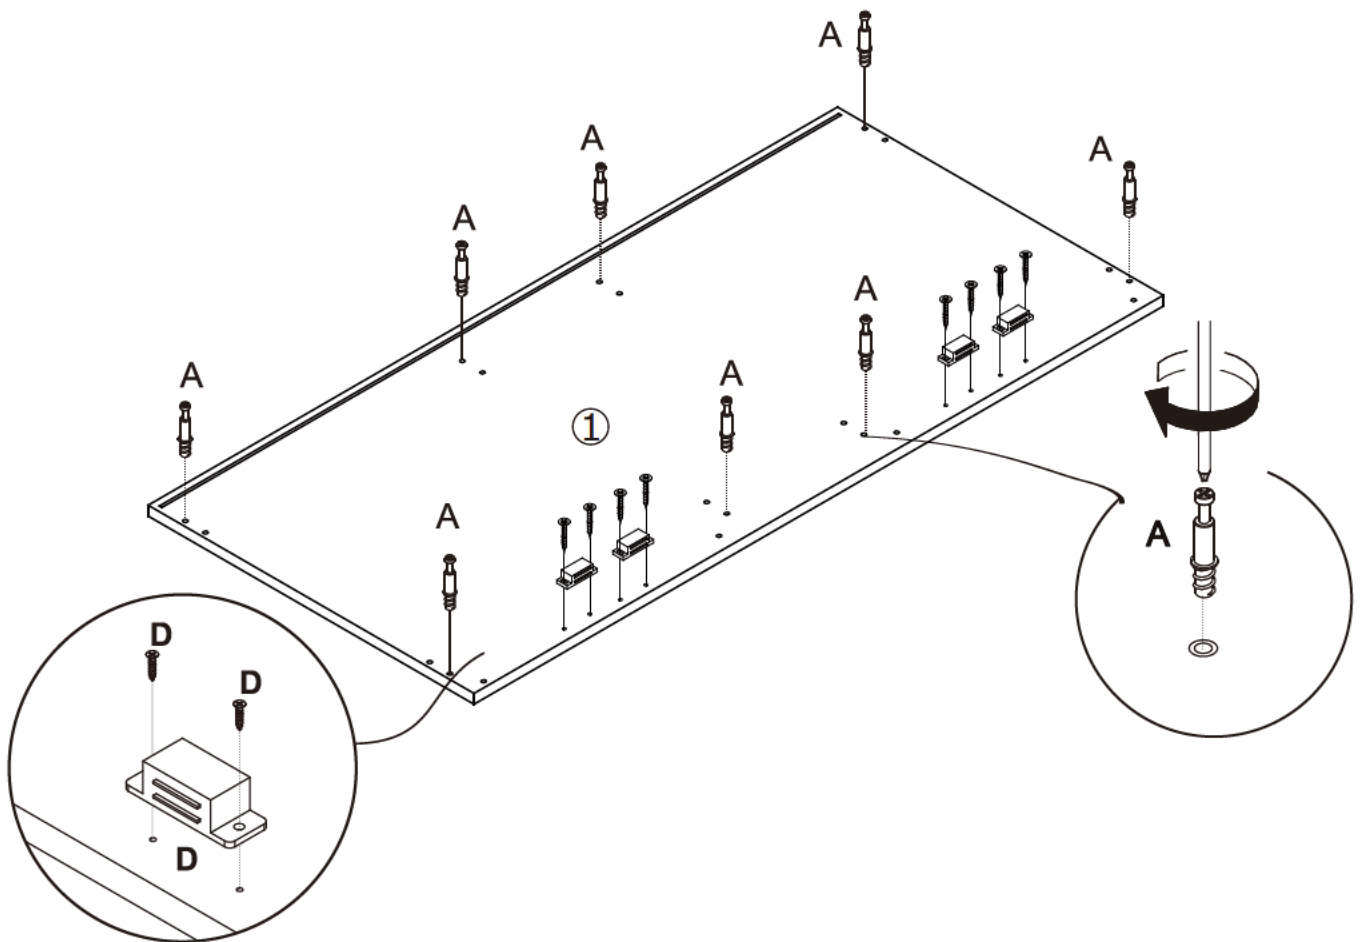

2

Ax12






Ø 5X31mm

Cx12



   Ø 6X30mm

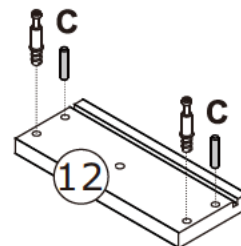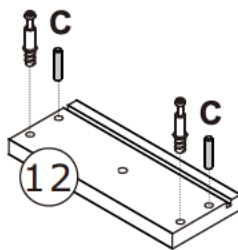
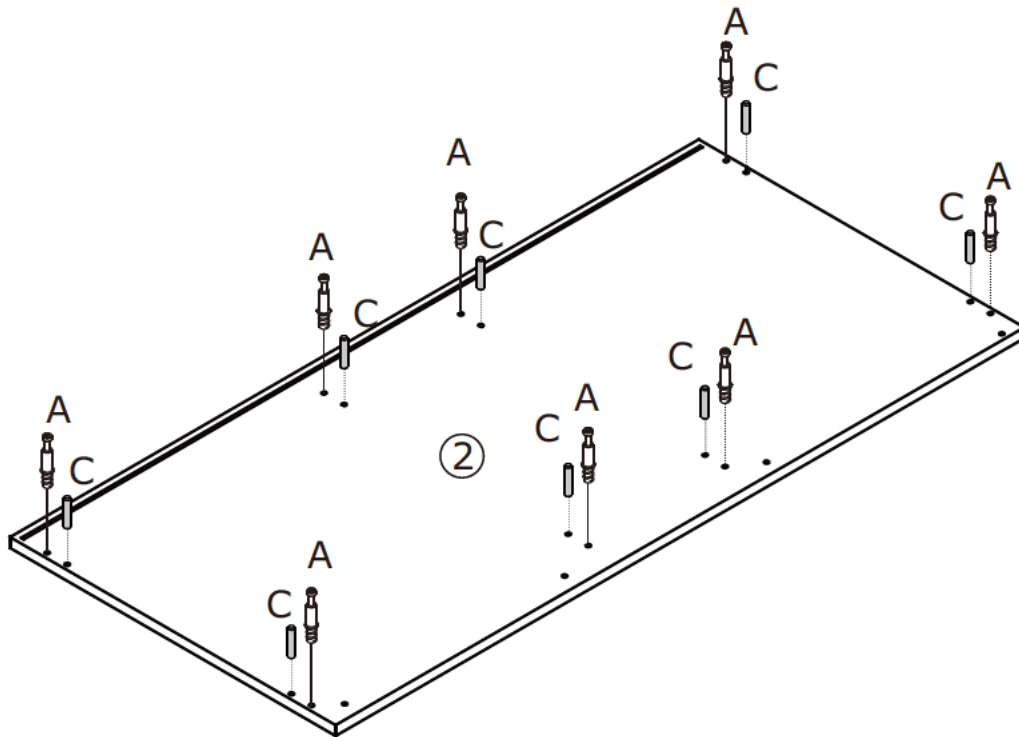


3

Bx8



  Ø 15X9.5mm

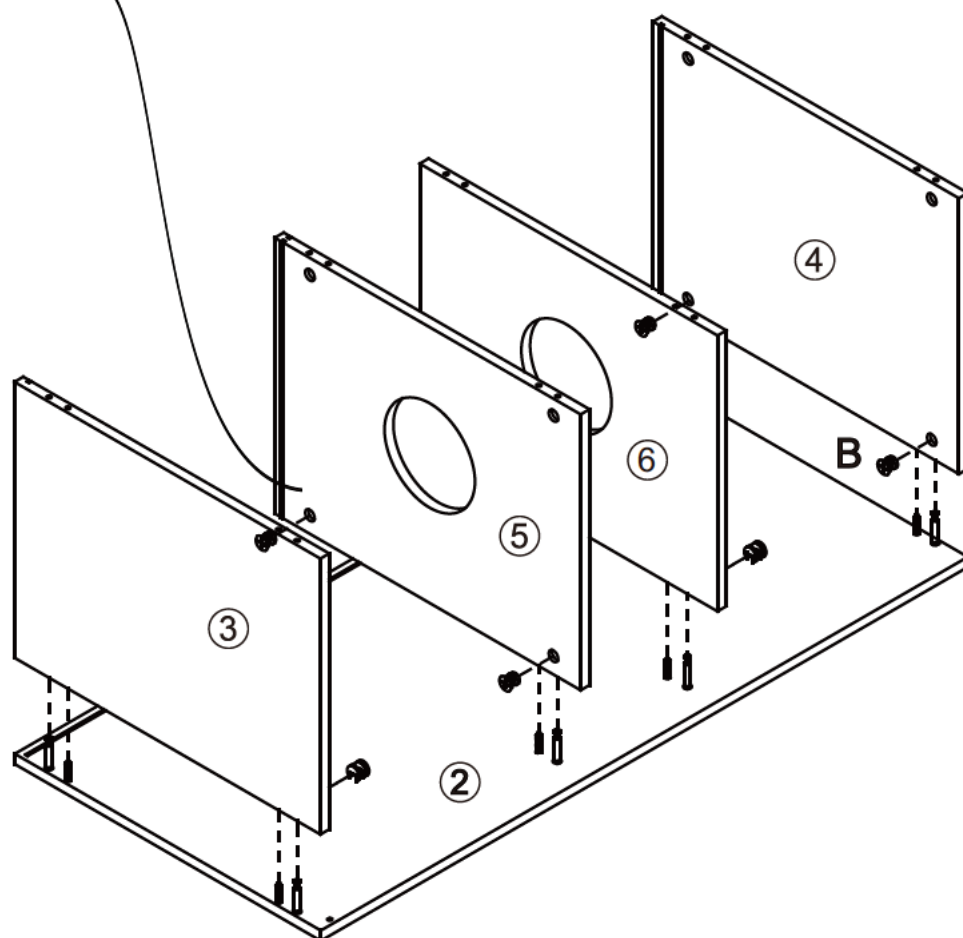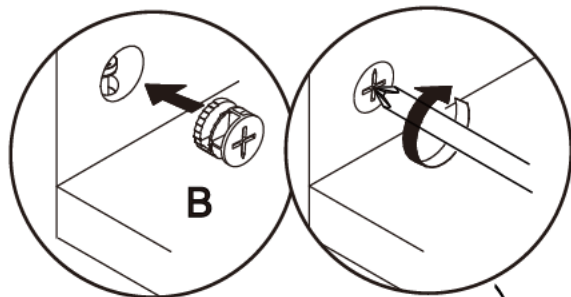

5

Bx8




Ø 15X9.5mm

Cx8





 Ø 6X30mm

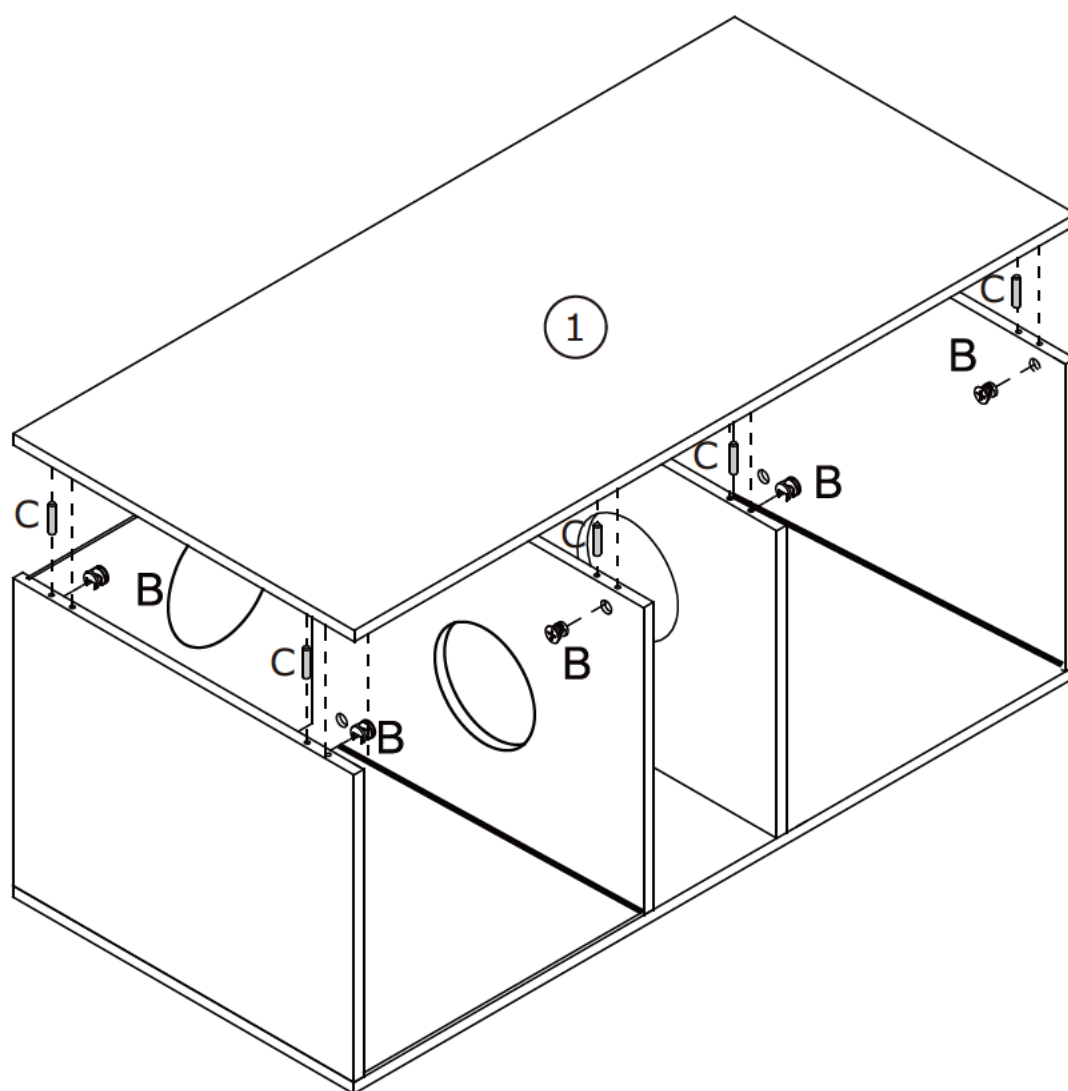



4

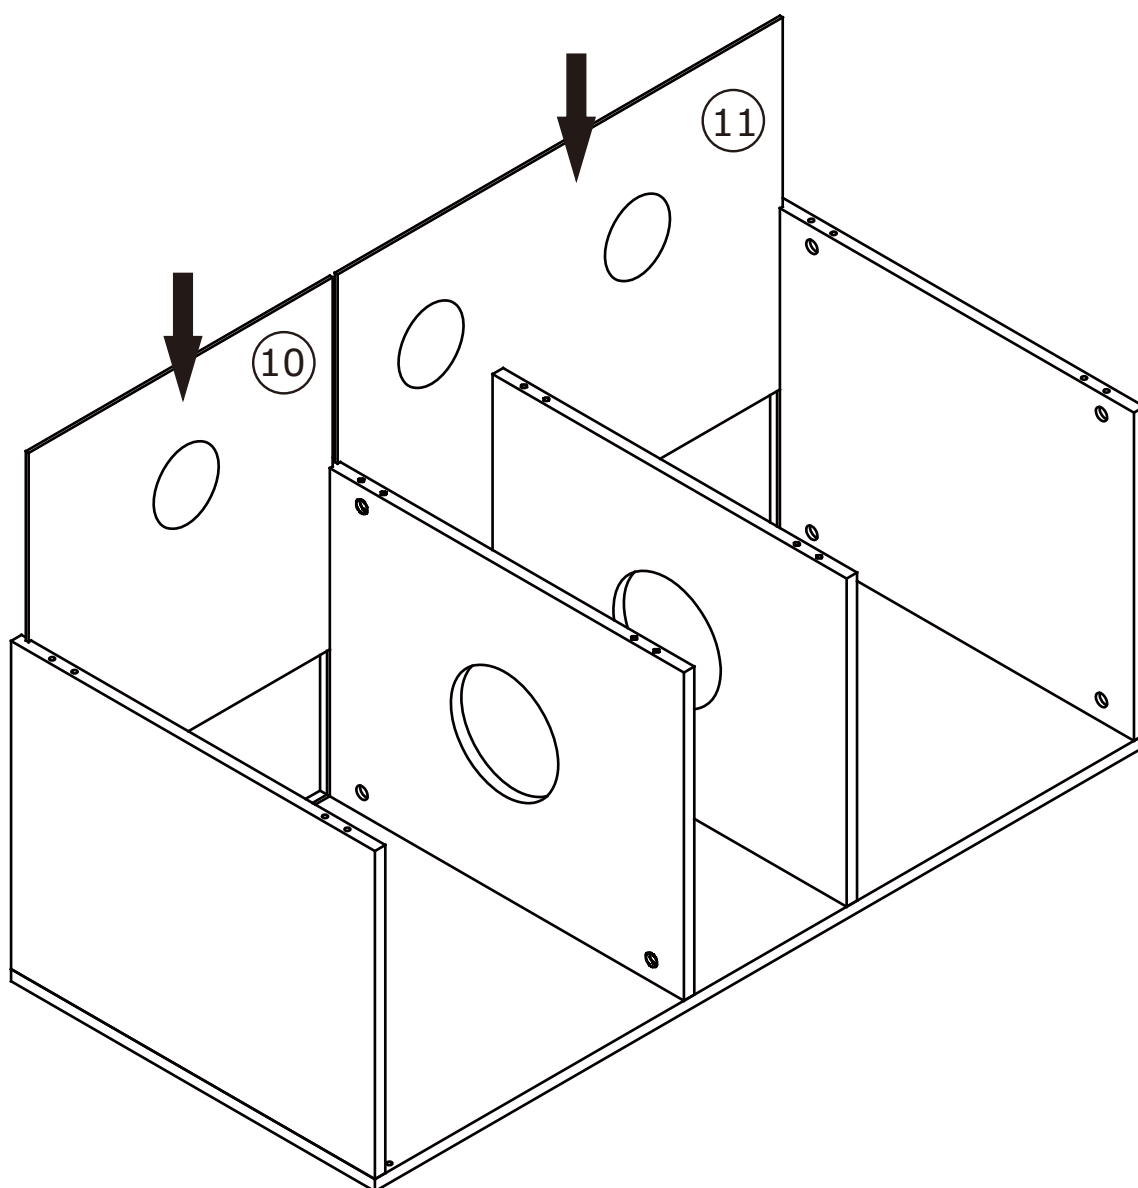  

6



Gx8



Ex4







  Ø 3X10mm

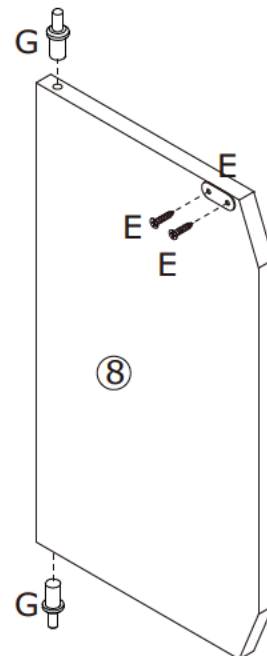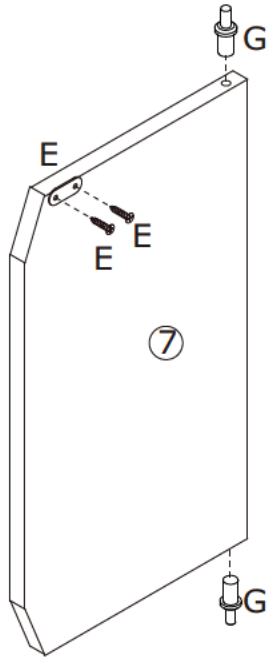

x2

    7

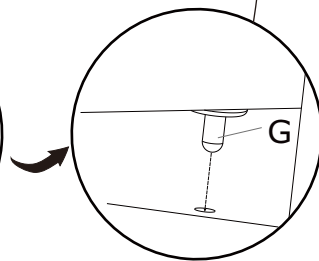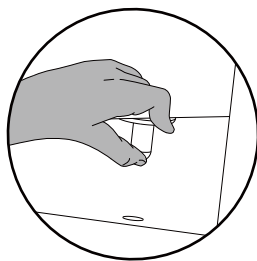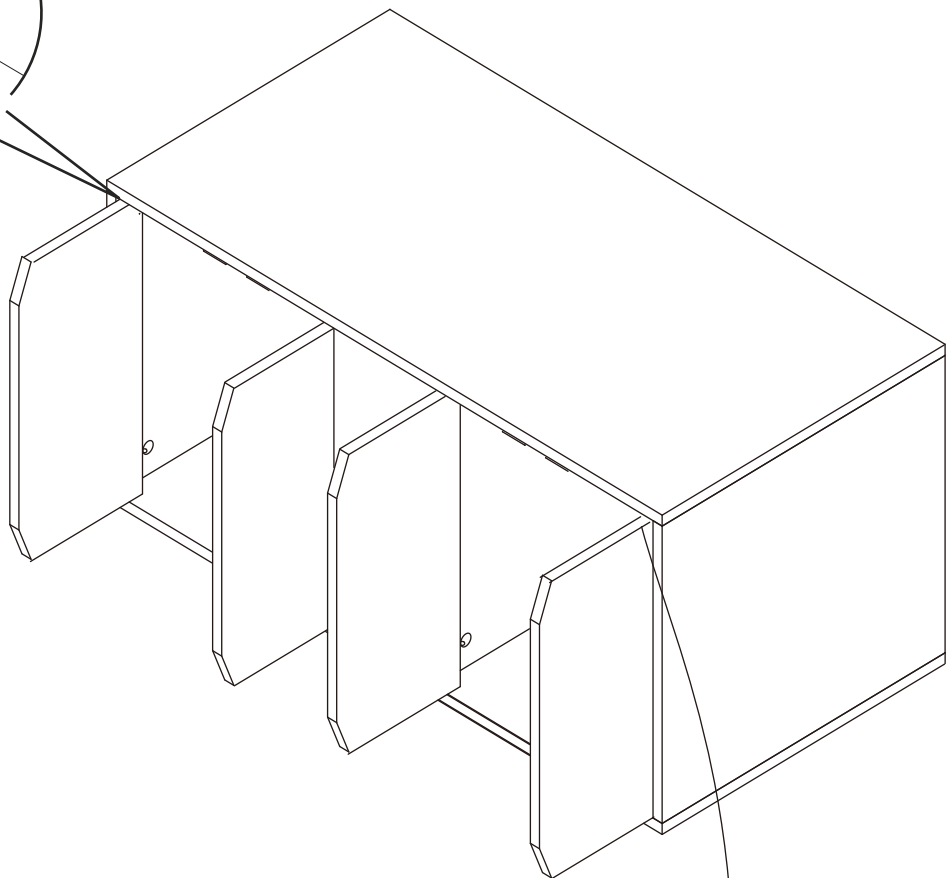
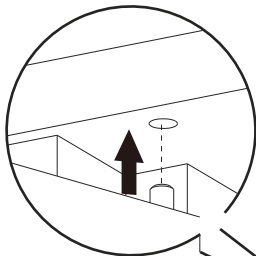


8

Fx14



  Ø 3X10mm

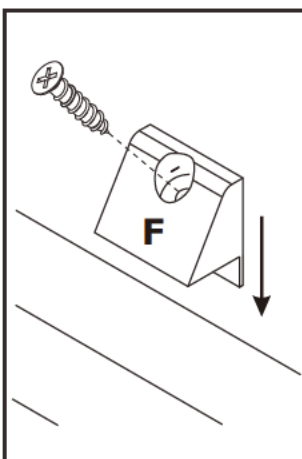
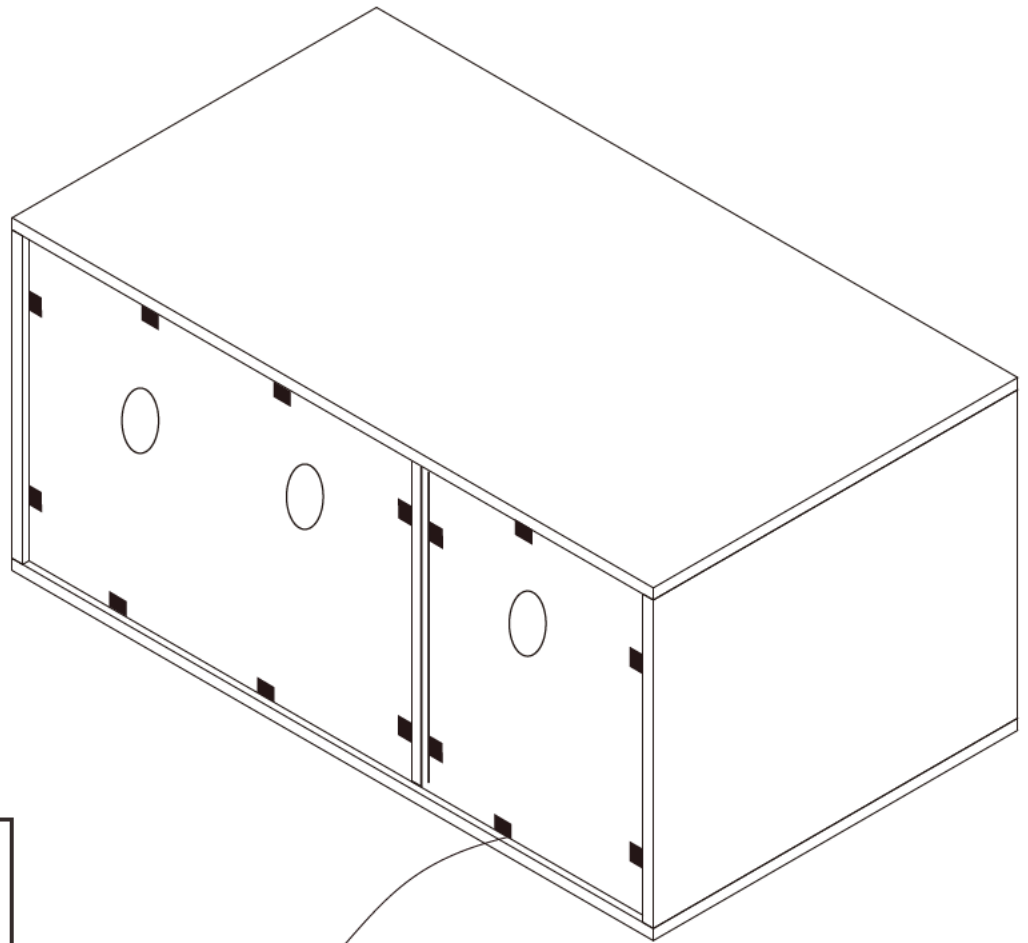


9

Kx1



  Hx6

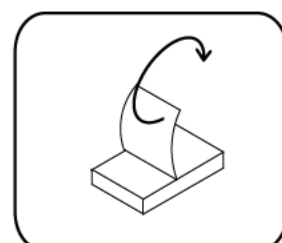
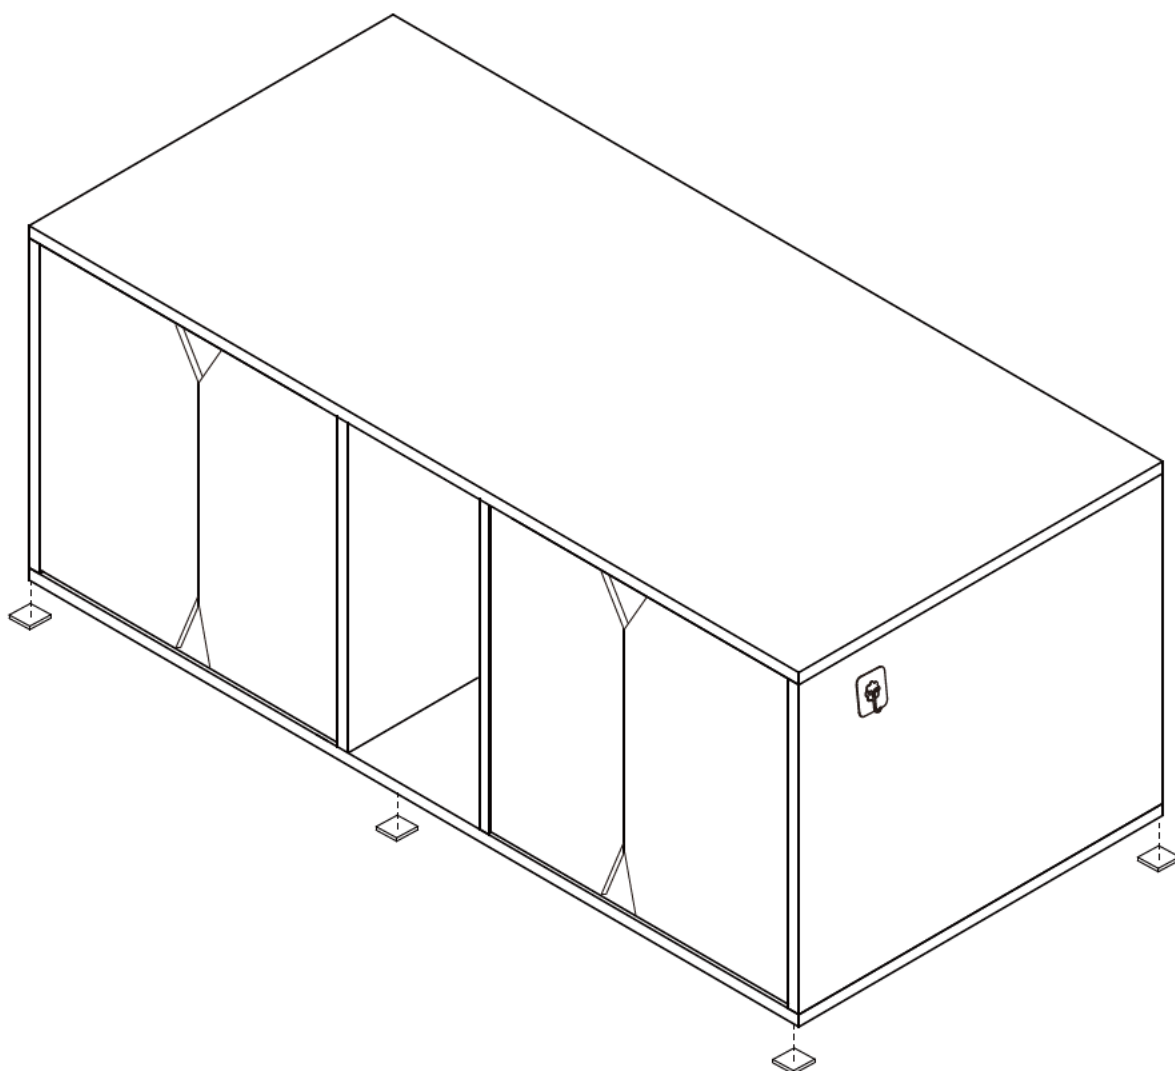


10

Bx2



  Ø 15X9.5mm

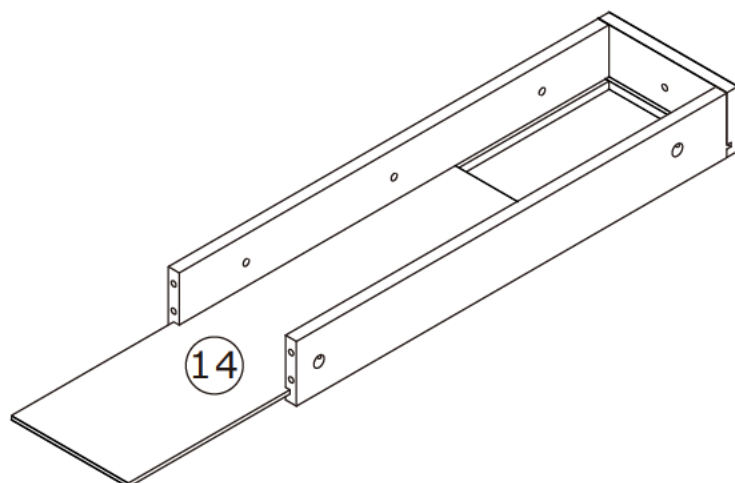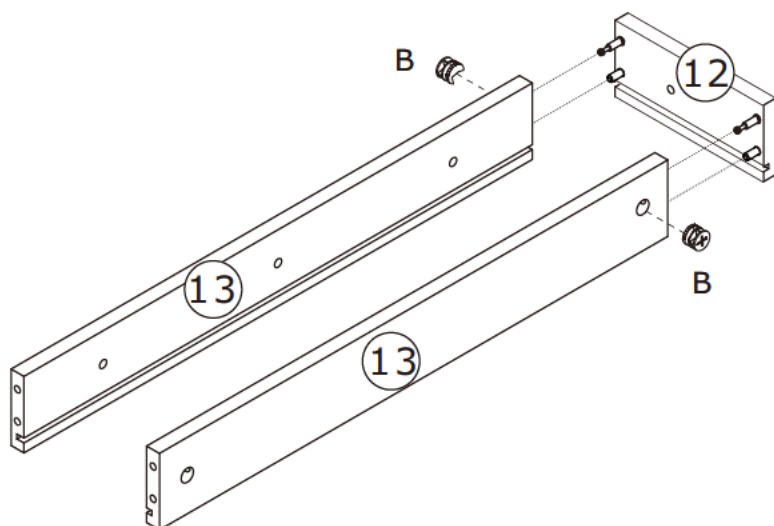

11

Bx2






Ø 15X9.5mm

Cx8



   Ø 6X30mm

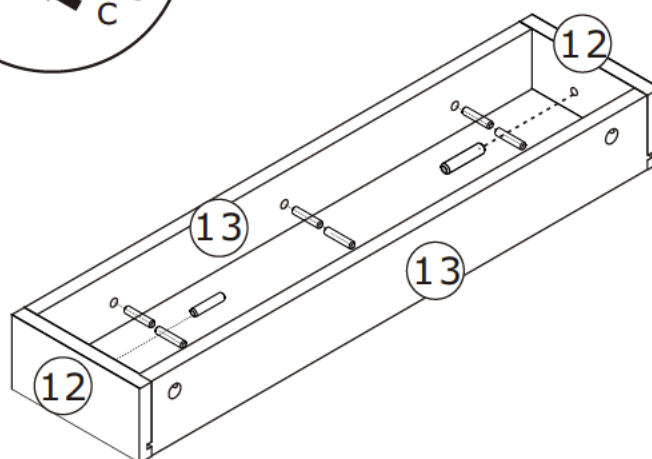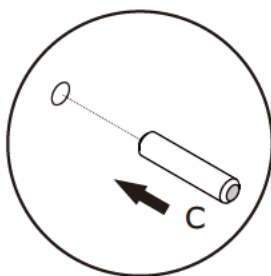
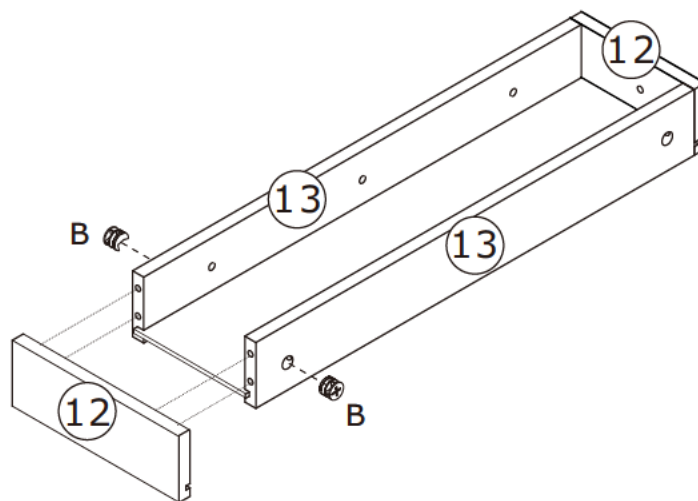


12

Fx4



 
 
Ø 3X10mm

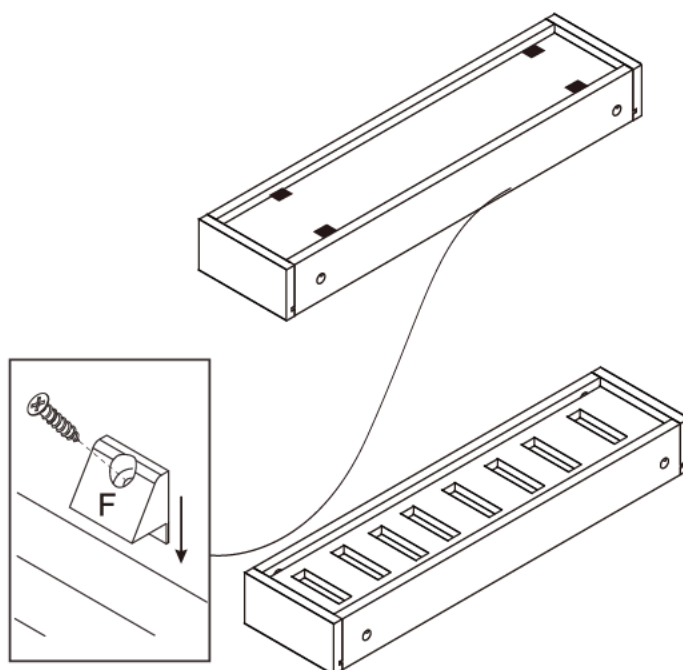
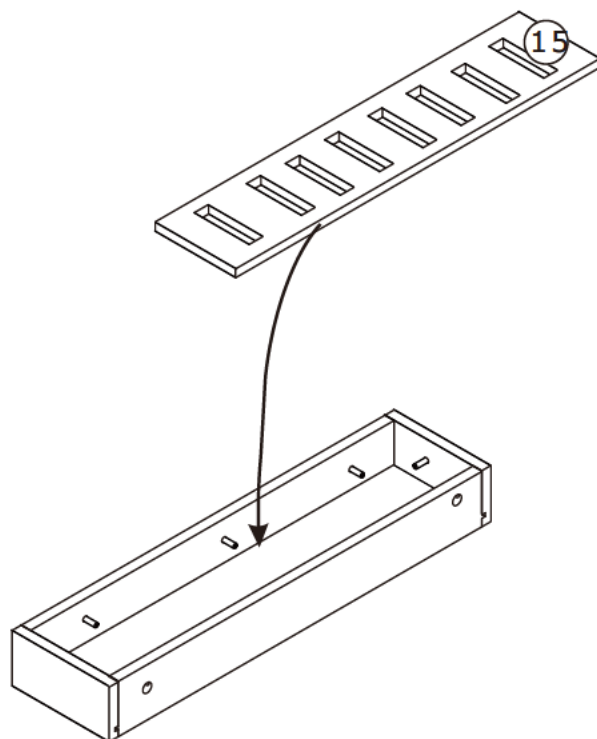




13

    Jx20

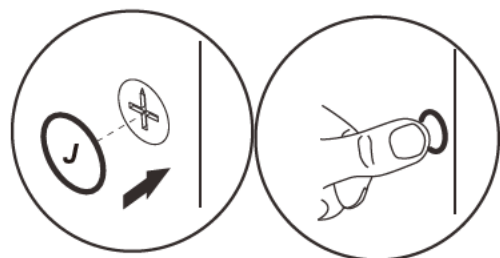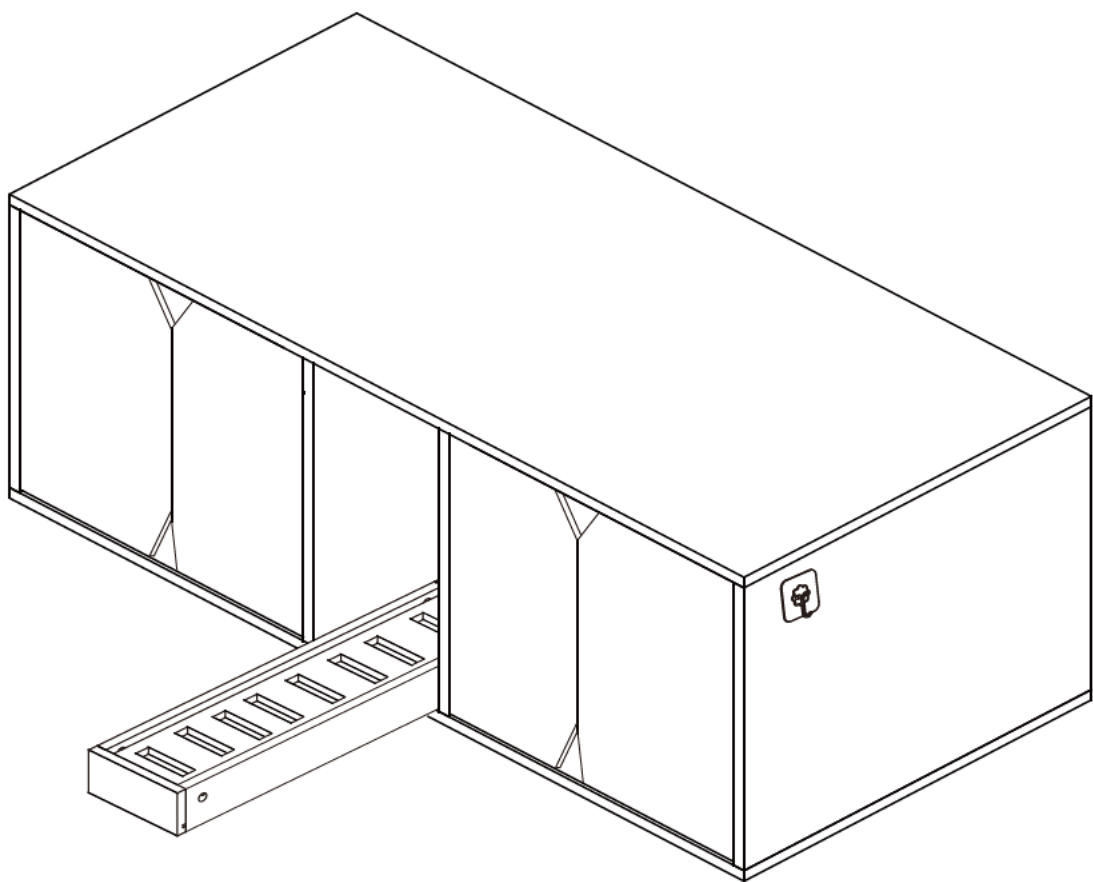

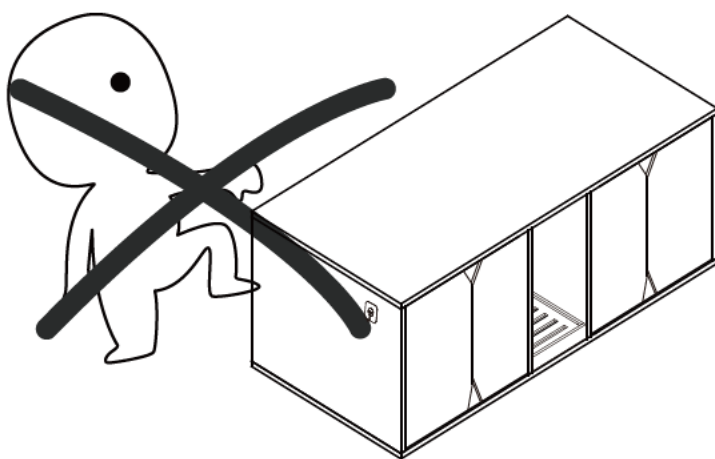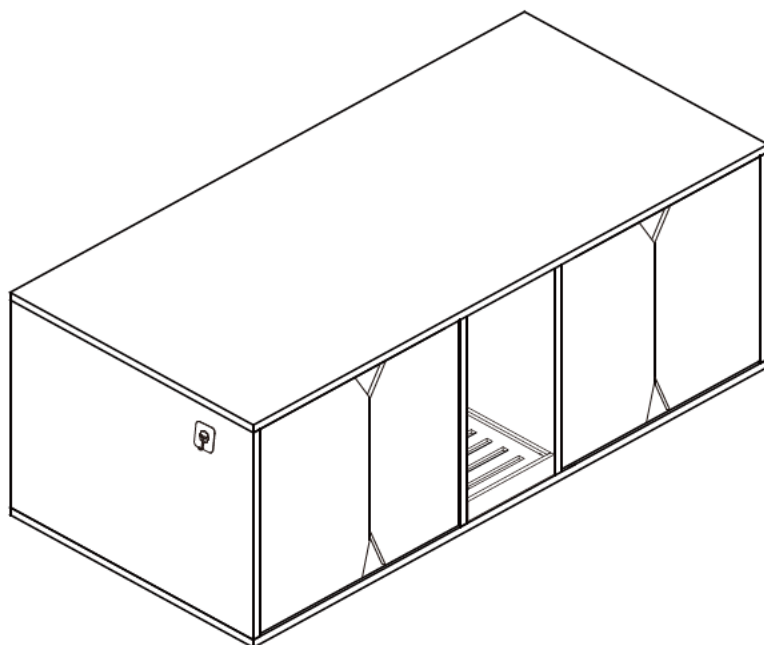

Serious or fatal crushing injuries can occur from furniture tip-over.  
To further reduce the risk of serious injury and death from tip-overs:

Schwere oder tödliche Quetschverletzungen können durch Umkippen von  
Möbeln auftreten.  
Um das Risiko schwerer Verletzungen und Todesfälle durch Umkippungen  
weiter zu reduzieren.

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.