

Model No.:ZL-001-40W

Operating Guidelines for Remote controller

The remote controller should be paired with the LED Panels

Pairing: Hold the button (A/B/C) for the group you want to assign for the LED Panels and power on the LED Panels. When the light flashes then the pairing is successful. Each Group (A/B/C) can have maximum 20 pcs LED Panels assigned to it. It is recommended to have a set (4 pcs LED Panels) assigned to a group for ease of operation.

Clear Pairing: Hold button 'O' on the remote and power on the LED Panels to clear the pairing. Once the light flashes, it means the pairing is cleared.

Key Function

1: "A/B/C" : A/B/C are 3 different groups, Select the group and then choose function buttons like Switch on/Switch off/ CCT Change/ Dimming to operate the LED Panels of that group.

2." I " : Switch on LED Panels of all Groups together; **"O" :** Switch off LED Panels of all Groups together.



3.Color Temperature switch: Switch CCT color to daywhite/coolwhite/warmwhite.



4.Brightness switch : Switch brightness to 100%/50%30% .



5.Low brightness mode: Switch to very low brightness mode.

6.  **Increase Brightness;**  **Reduce Brightness**

7. **"K+" & "K-":** Adjust CCT from 3000K to 6500K

