 


ASSEMBLY INSTRUCTION

N759P459609

N759P459610

N759P351761

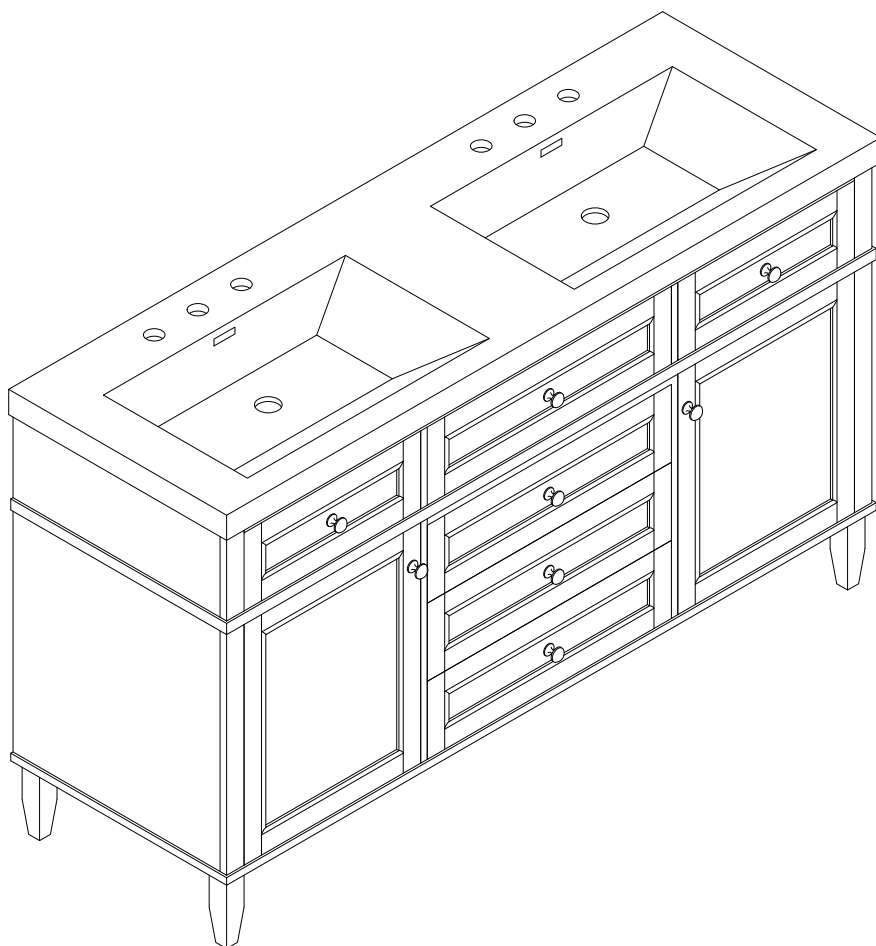

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.







Before Installation


Important-Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.












- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

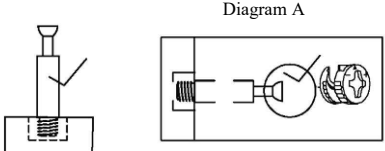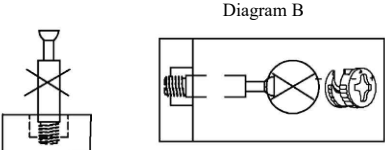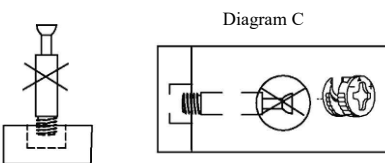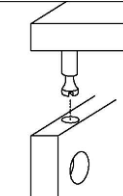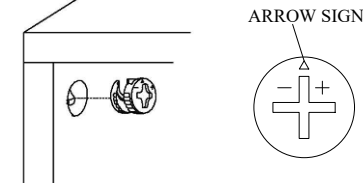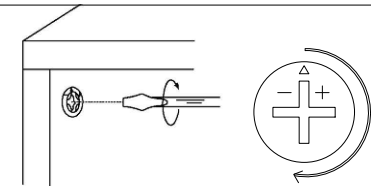      
Diagram A 	Insert Cam Bolt into hole as shown in diagram A.
Diagram B 	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
Diagram C 	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

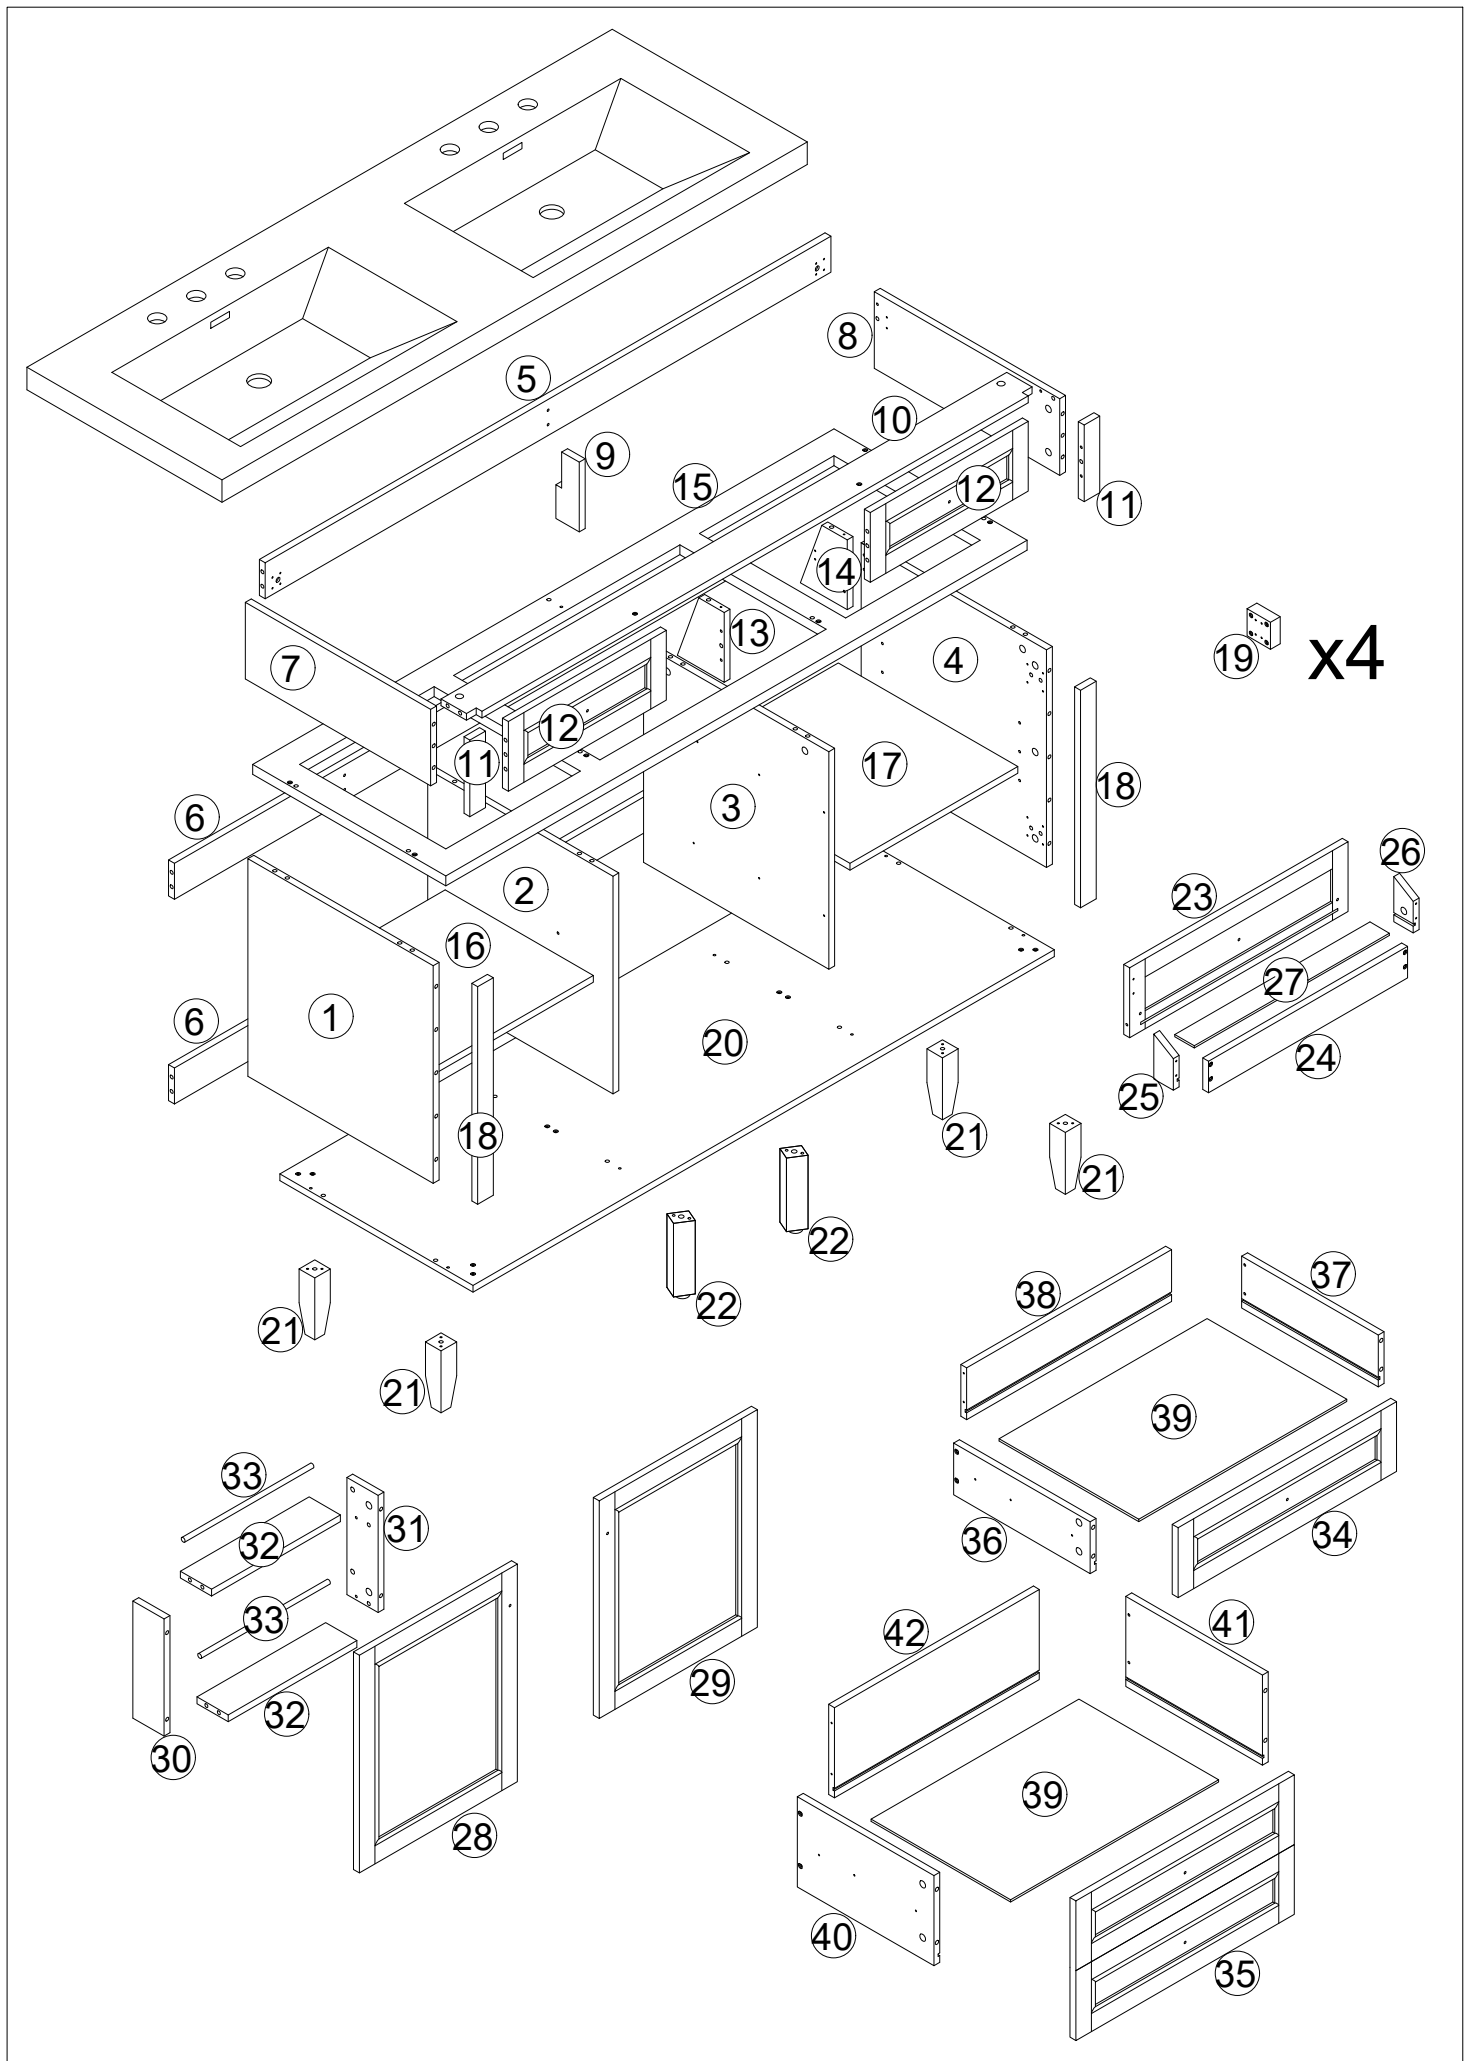 


N759P459609 :

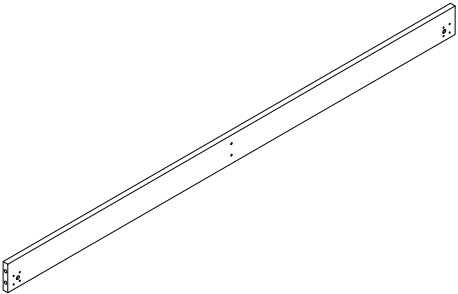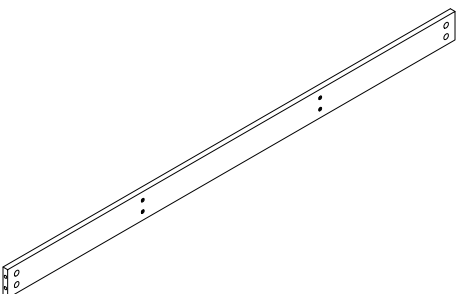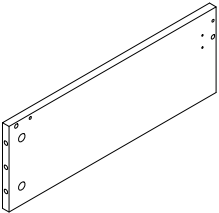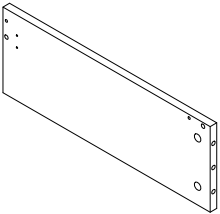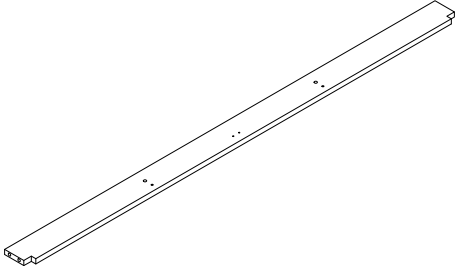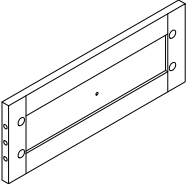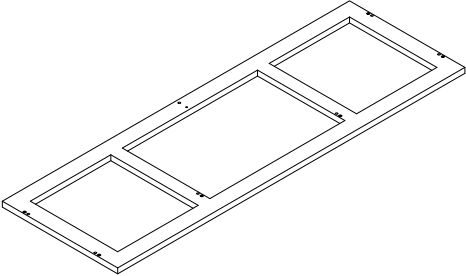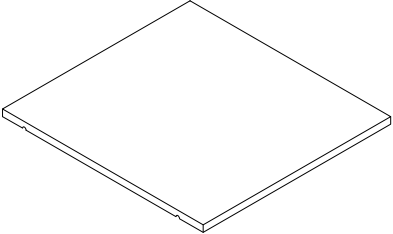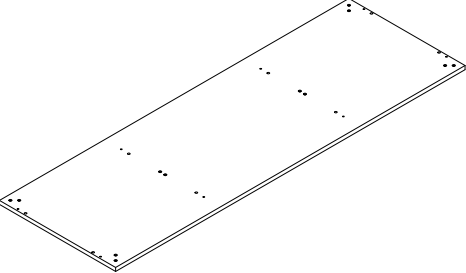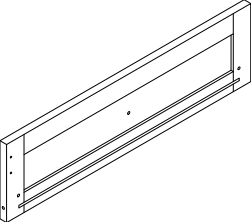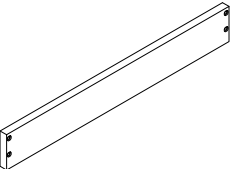           		
⑤ x 1	⑥ x 2	⑦ x 1
		
⑧ x 1	⑩ x 1	⑫ x 2
		
⑮ x 1	⑰ x 1	⑱ x 2
		
⑳ x 1	㉓ x 1	㉔ x 1

 
N759P459609 :

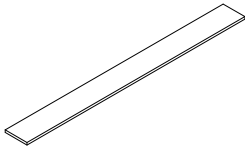


27 x 1

 


32 x 2

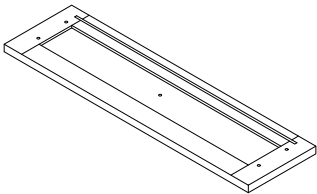 


34 x 1

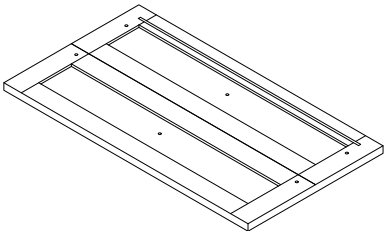 


35 x 1

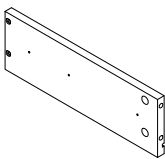 


36 x 1

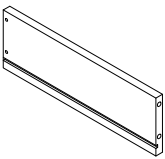 


37 x 1

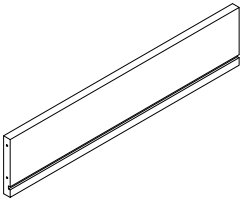 


38 x 1

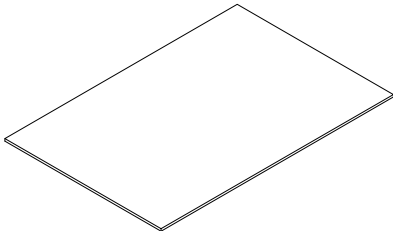 


39 x 2

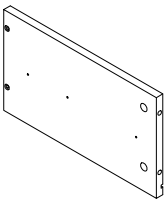 

40 x 1

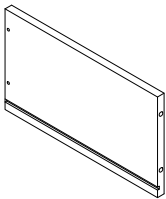 


41 x 1

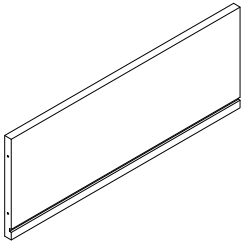 


42 x 1

 
N759P459610 :

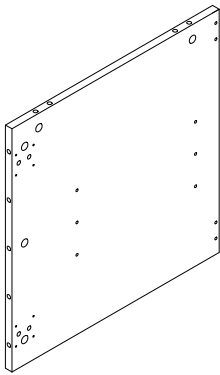


① x 1

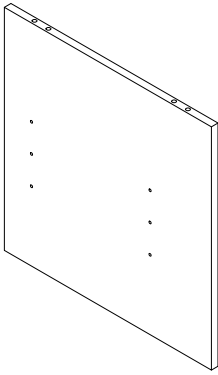 


② x 1

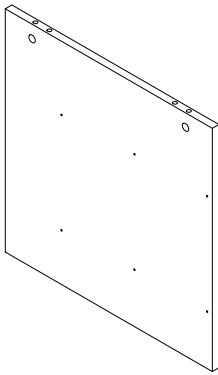 


③ x 1

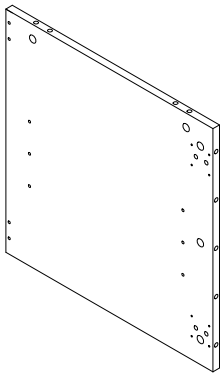 


④ x 1

 


⑨ x 1

 


⑪ x 2

 


⑬ x 1

 

⑭ x 1

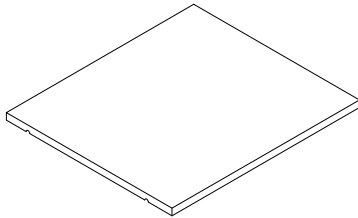 

⑯ x 1

 

⑳ x 4

 
 
 
 


㉒ x 2











㉔ x 1


N759P459610 :

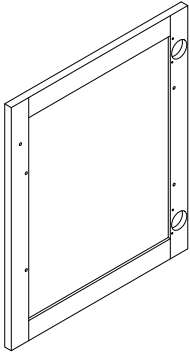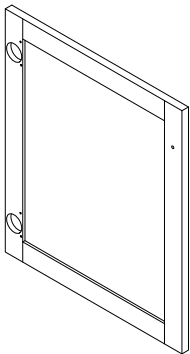		
26 x 1	28 x 1	29 x 1
		
30 x 1	31 x 1	33 x 2

      
 
 
N759P459610 :

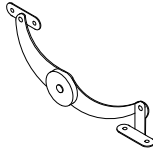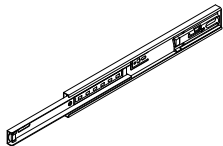 Φ6x35mm A x 56+2	 Φ15x12mm B x 56+2	 Φ8x30mm C x 57+2	 M3.5x12mm D x 10+1	 M4x14mm E x 48+2	 M4x14mm F x 12+1
 M4x35mm G x 55+2	 M5x40mm H x 12+1	 M4x8mm I x 6	 M4x18mm J x 2	 K x 8	 L x 2
 M x 2	 N x 3	 Φ8x40mm O x 2	 M6x60mm P x 2	 Φ5x25mm Q x 8	 R x 1
 S x 4	 T x 4	 U x 4	 19 x 4		





 
N759P351761 :

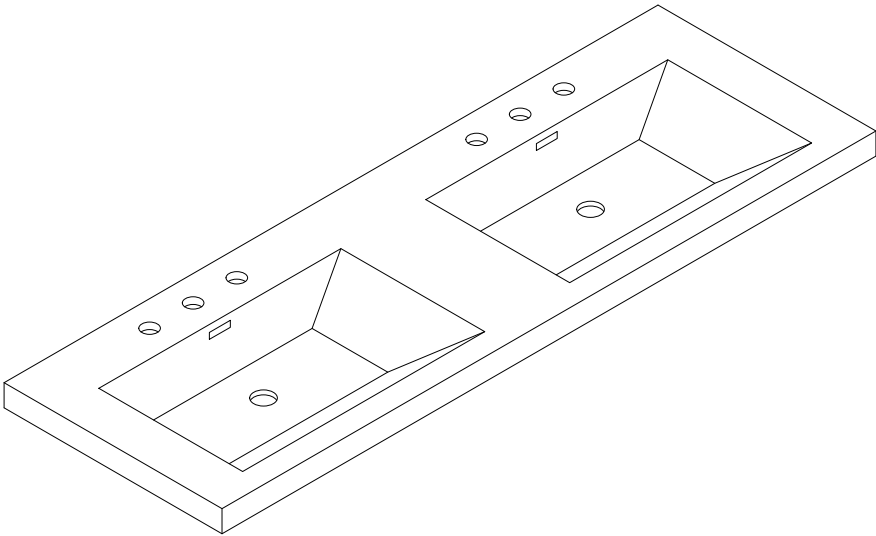

  
 
Step 1

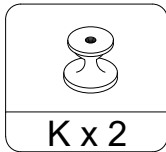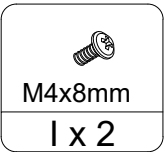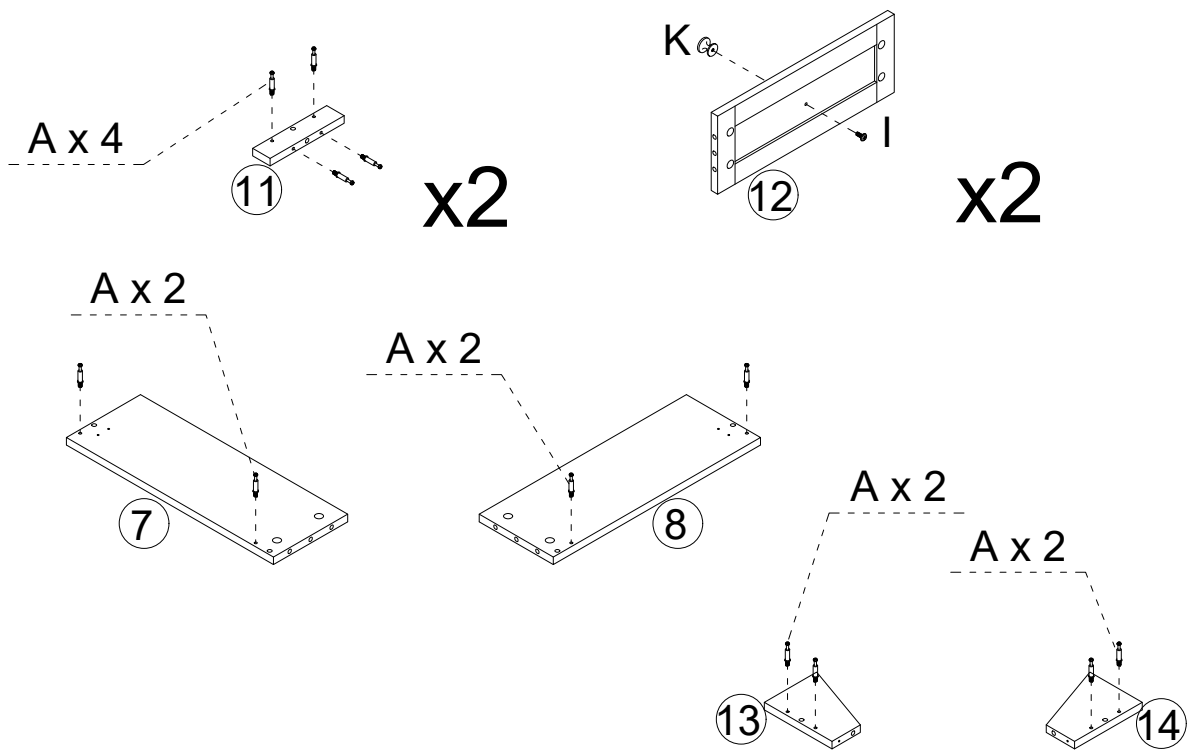

   
 
 
Step 2

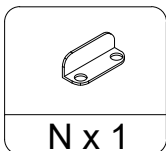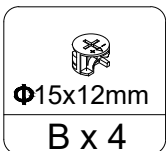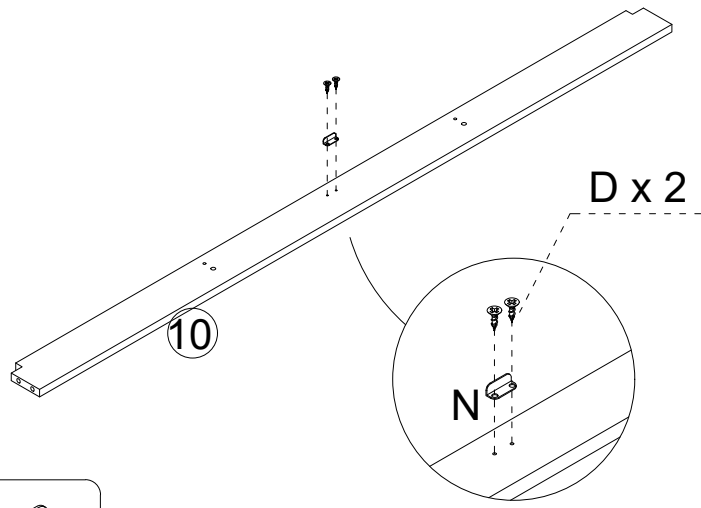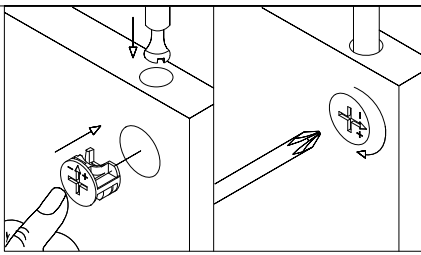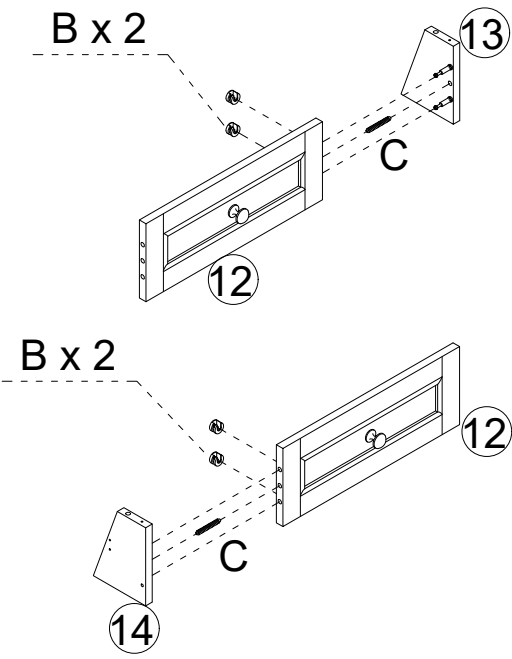

 
 
Step 3

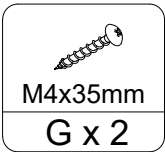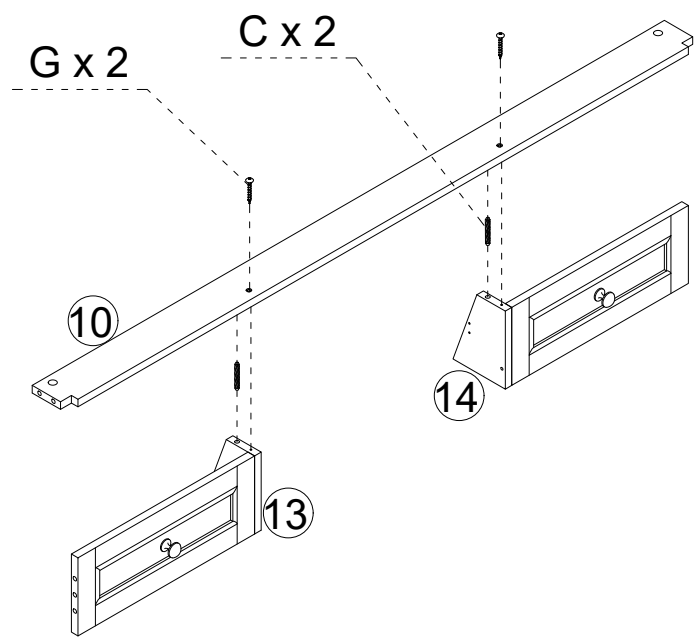

  
 
Step 4

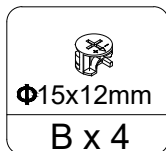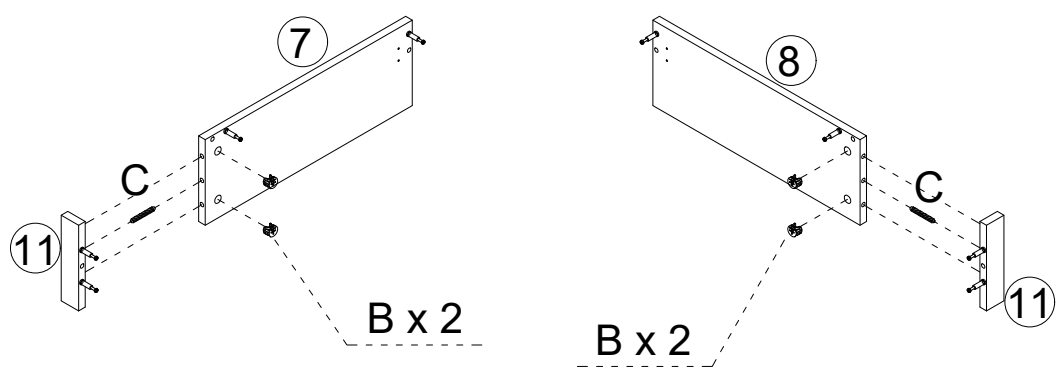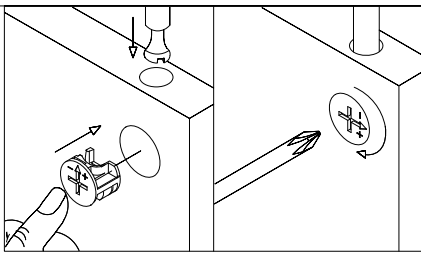

 
 
Step 5

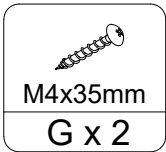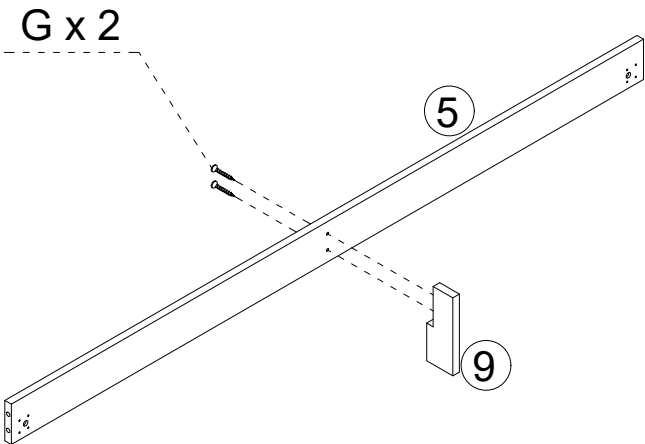

  
Step 6

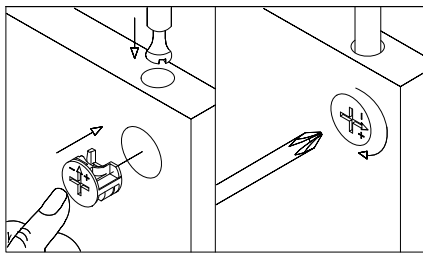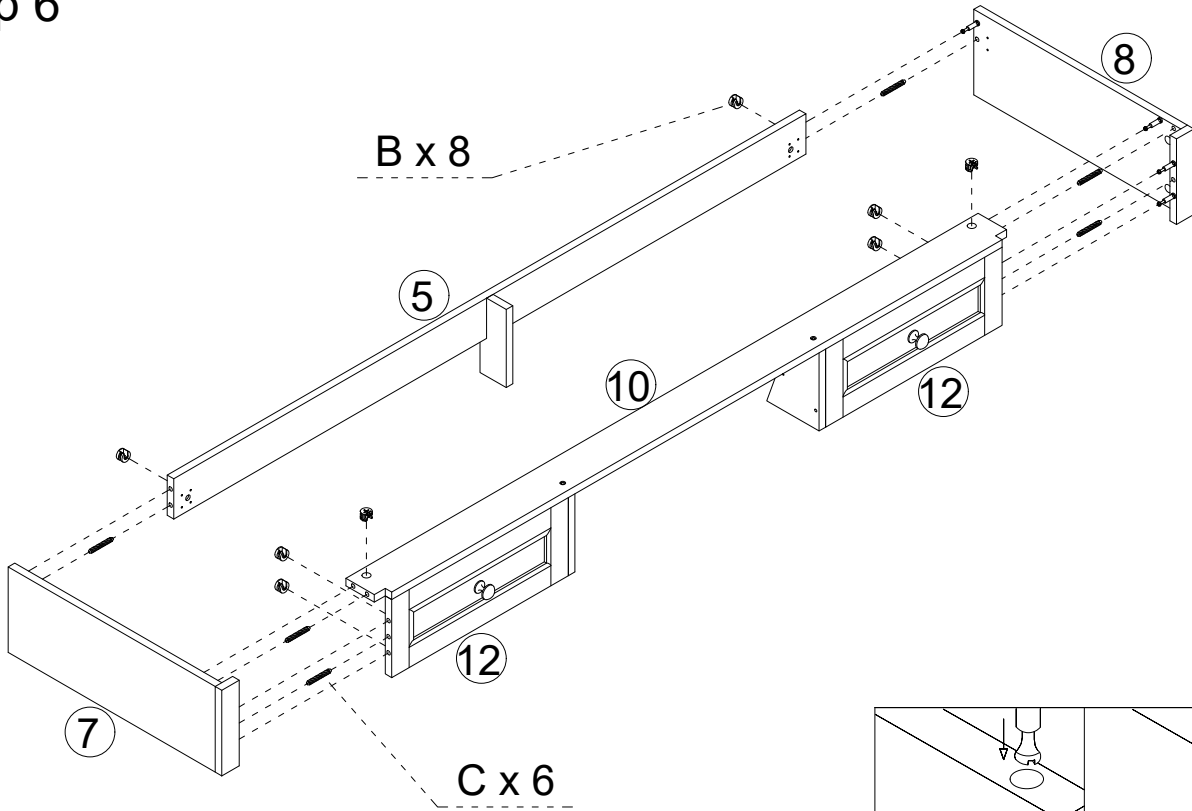

  
Step 7

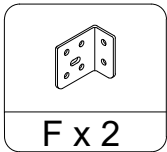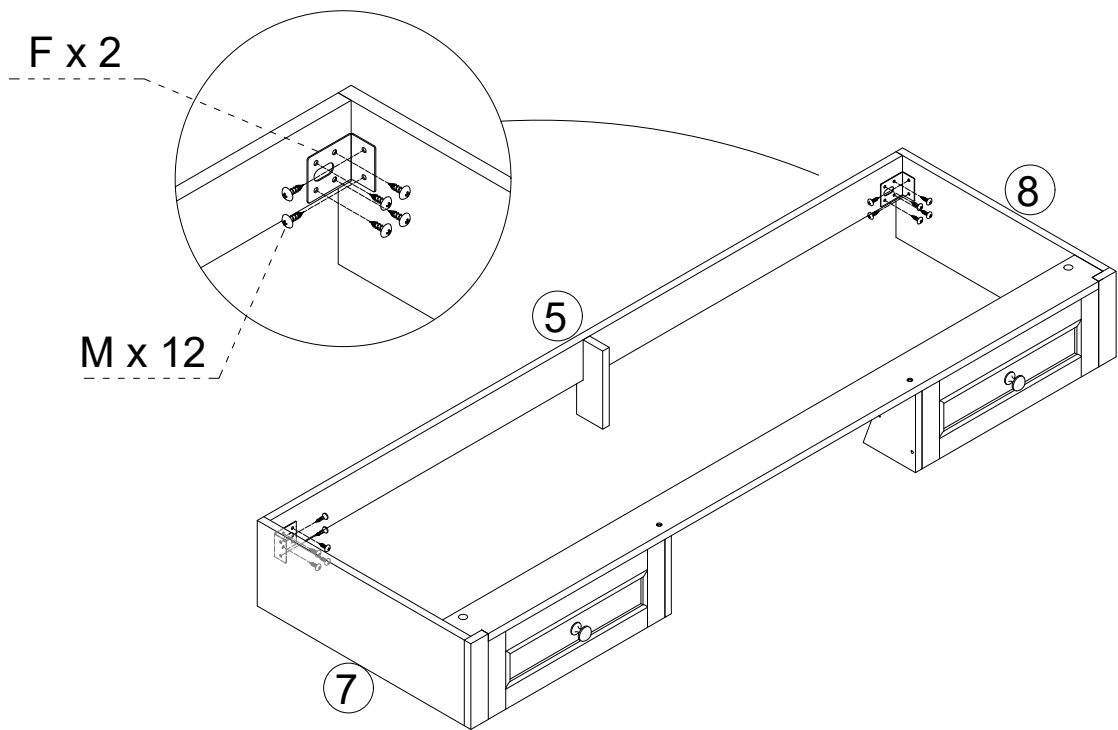




 
Step 8

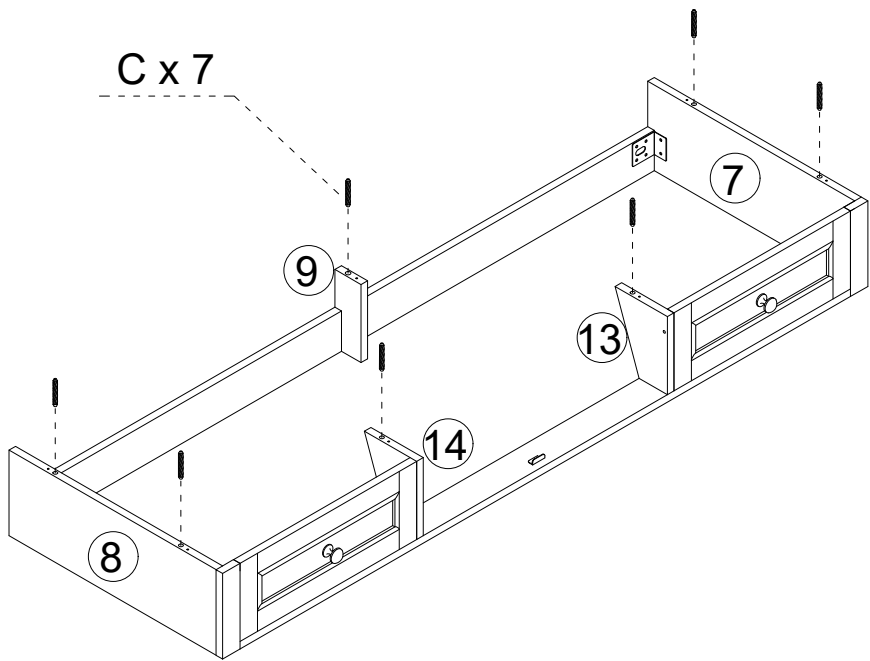

 Step 9

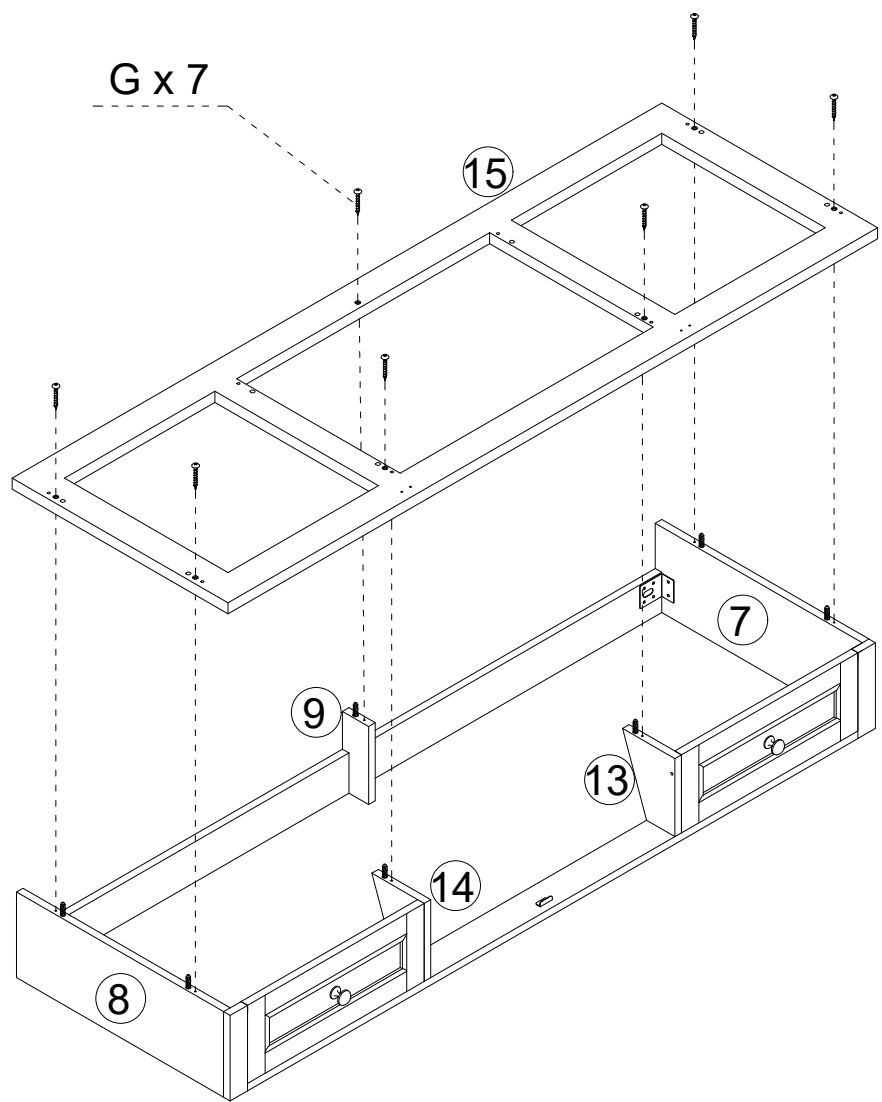

    Step 10

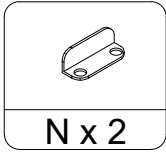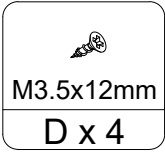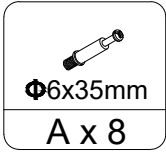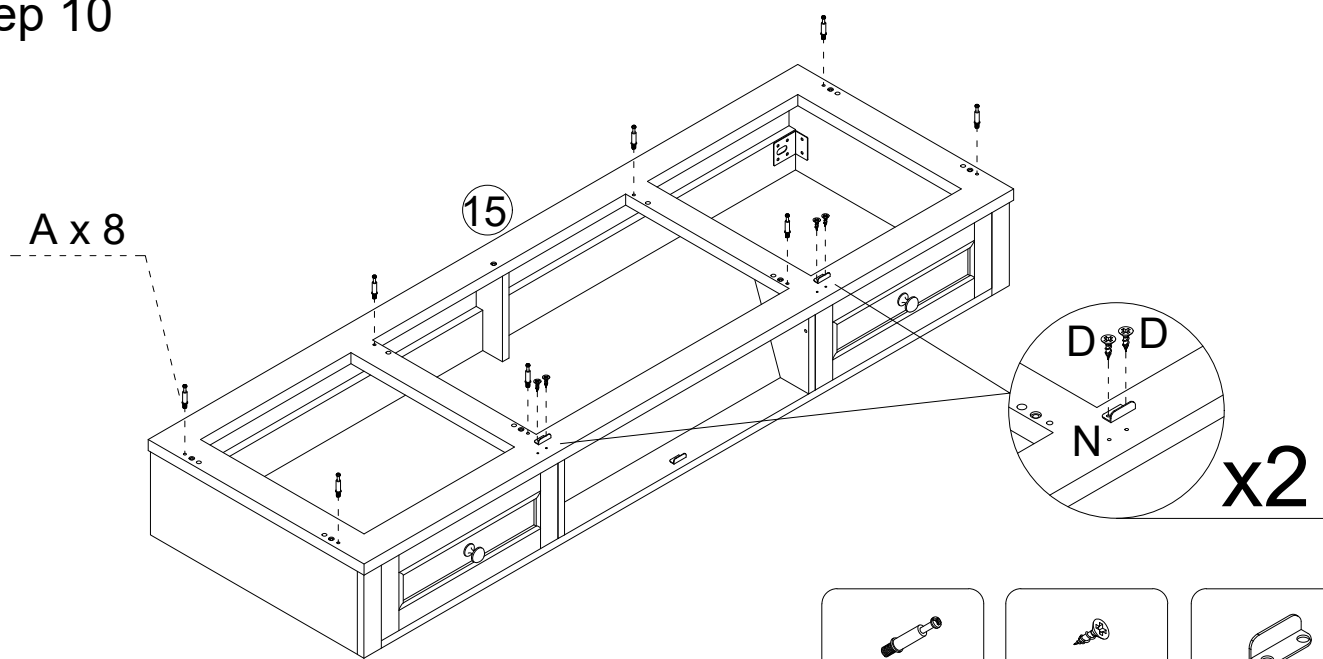

Step 11

 
 
**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

**Pay attention when connecting !
The sliding module must be at the front end.**


STEP 1 : Extend Slide
Extender la diapositiva

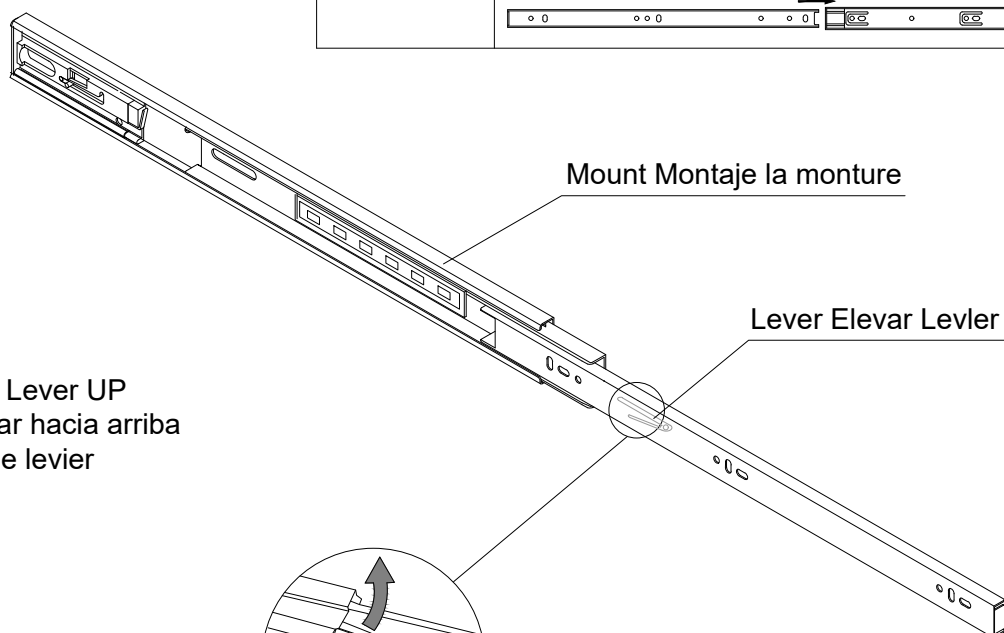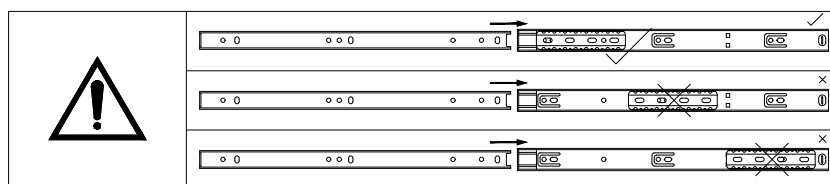

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

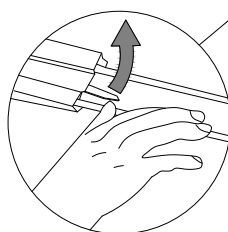


 **Push lever for the left of drawer ,
press the lever for the right of drawer.**



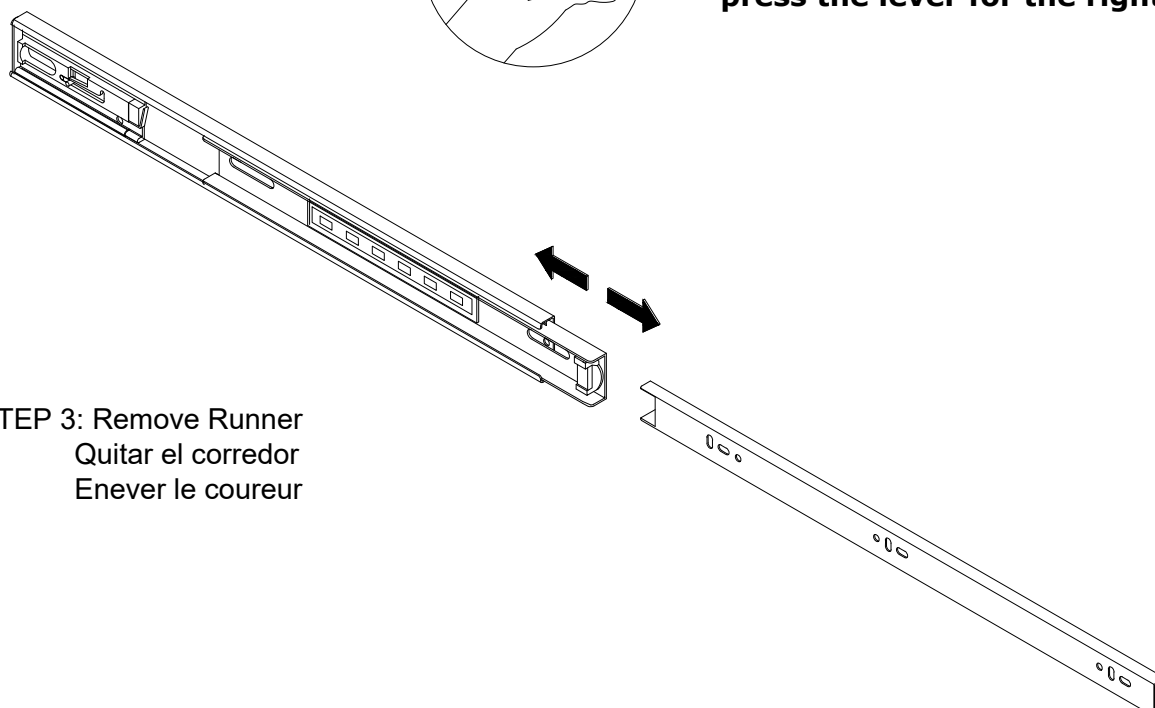


STEP 3: Remove Runner
Quitar el corredor
Enever le coureur


 
Step 12

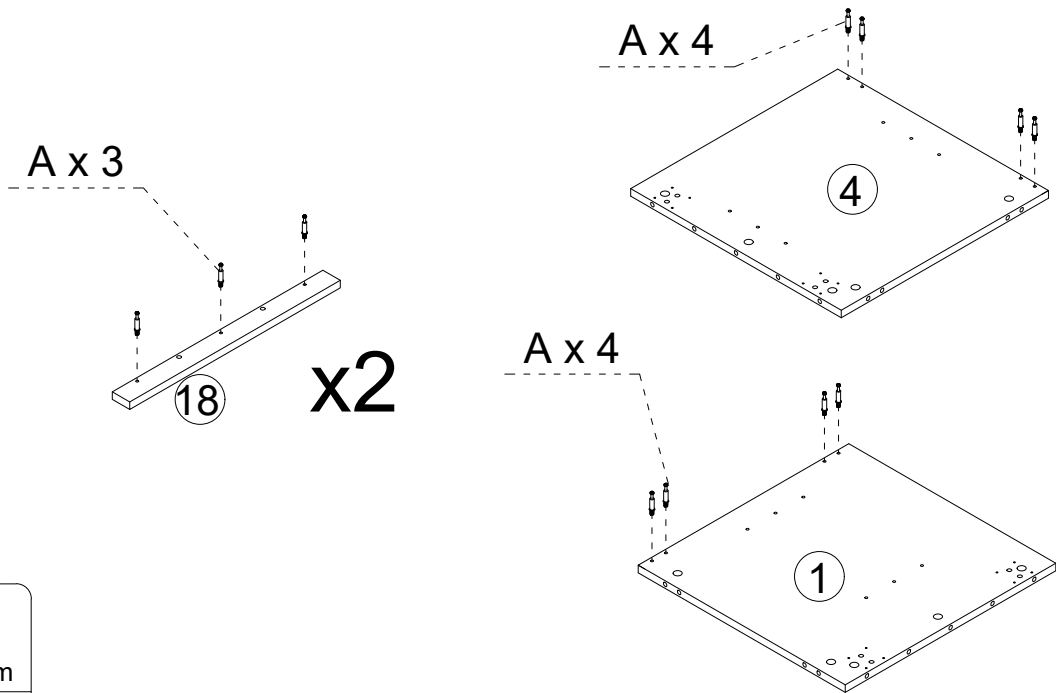

  
 
Step 13

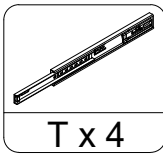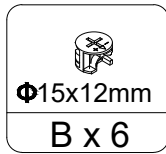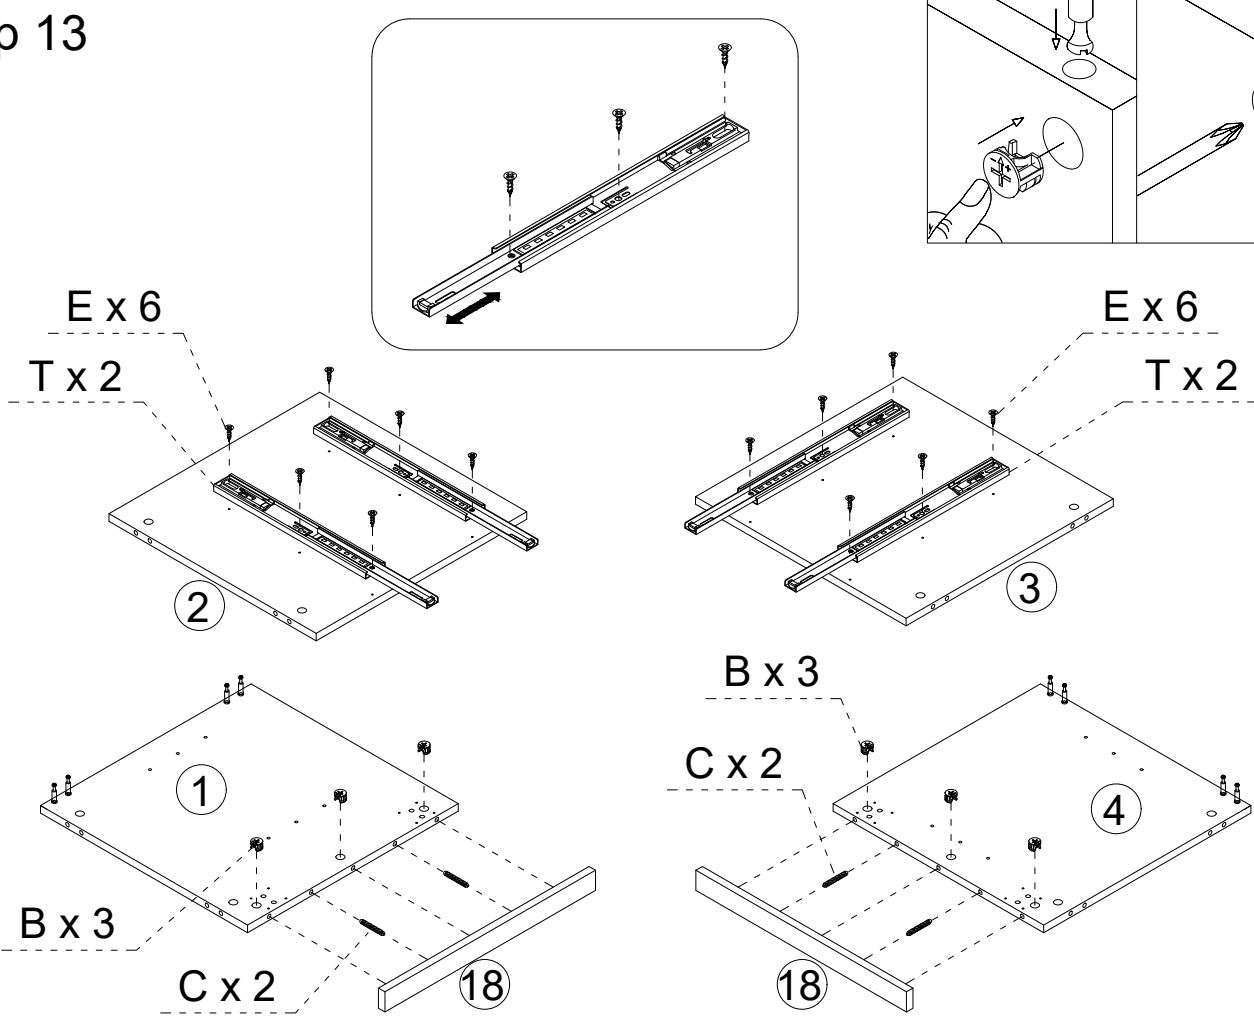

  
Step 14

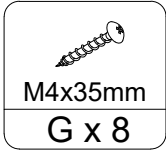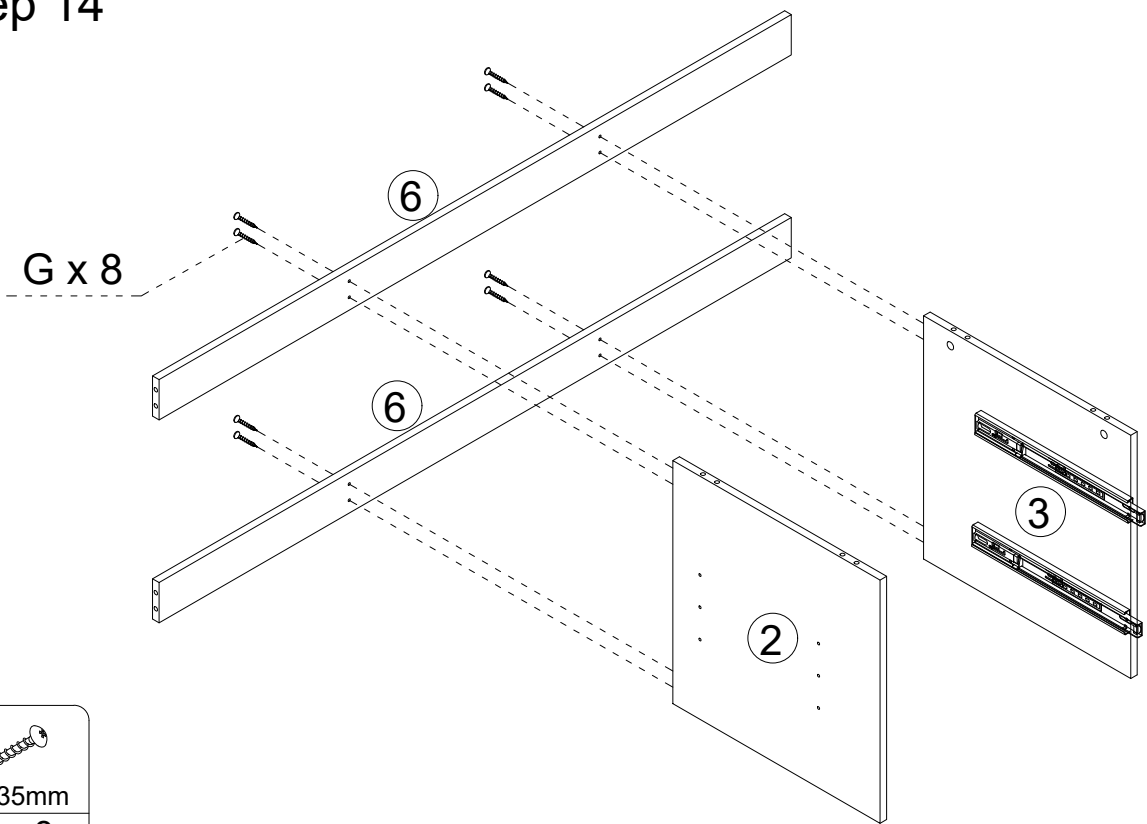

 
 
Step 15

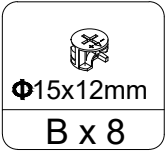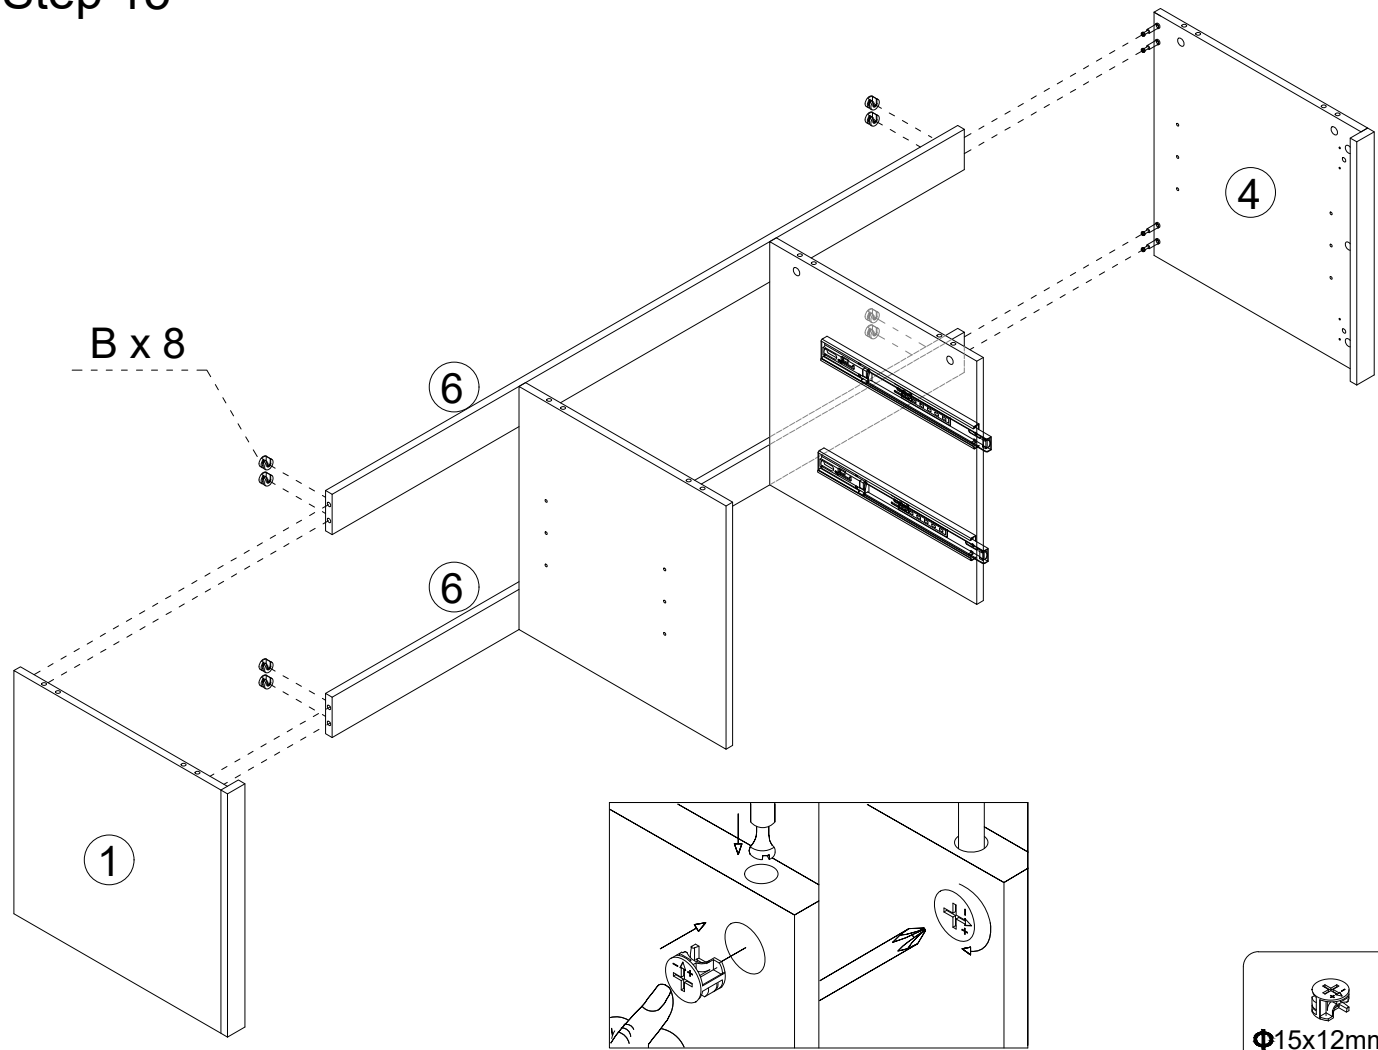

 
Step 16

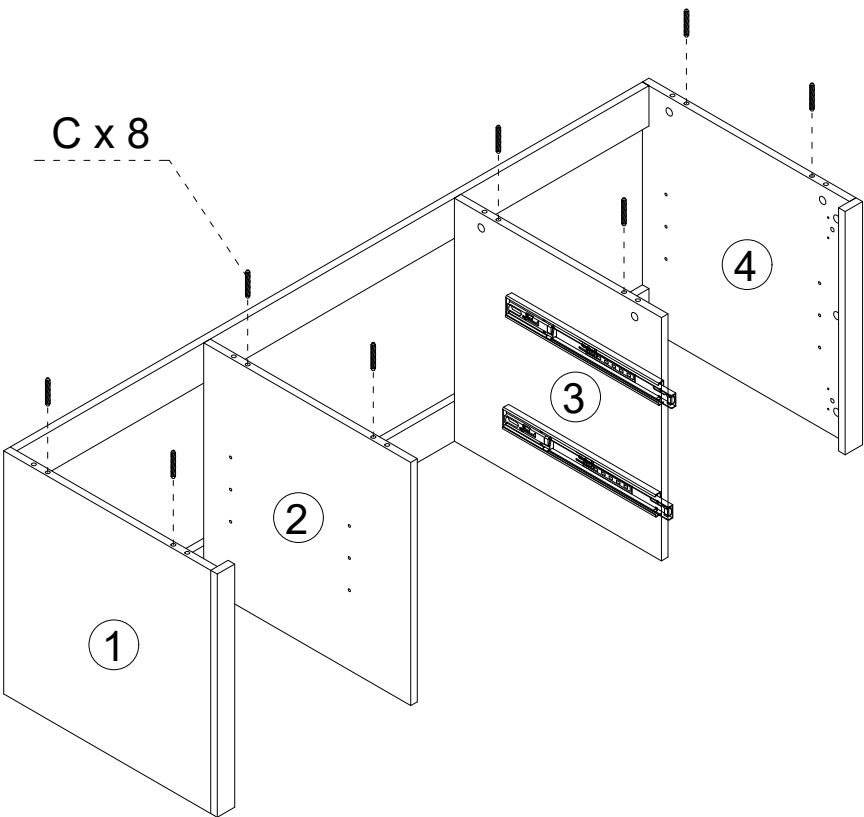

  
Step 17

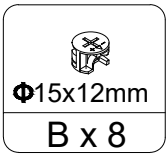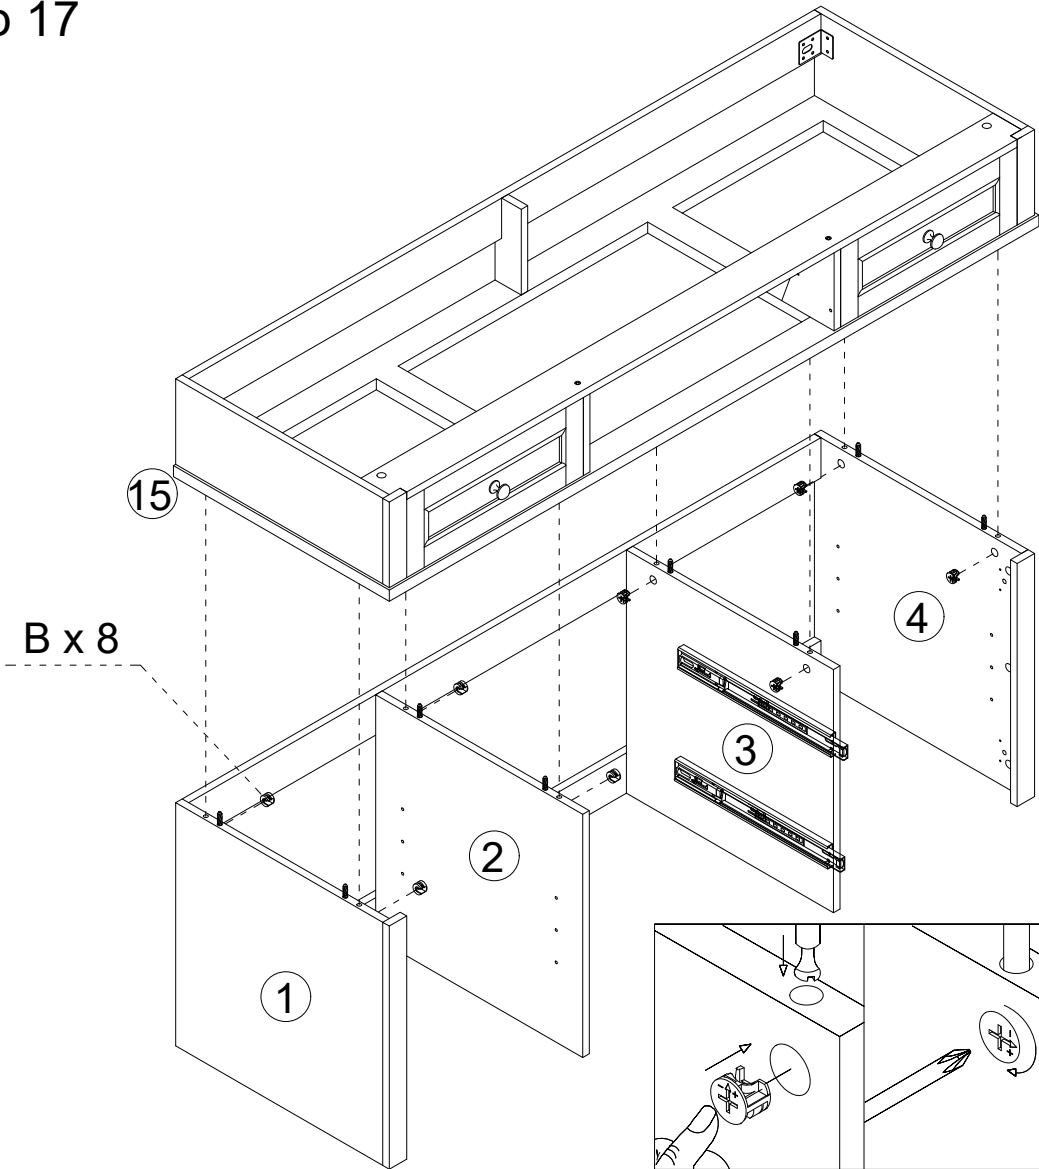

 
Step 18

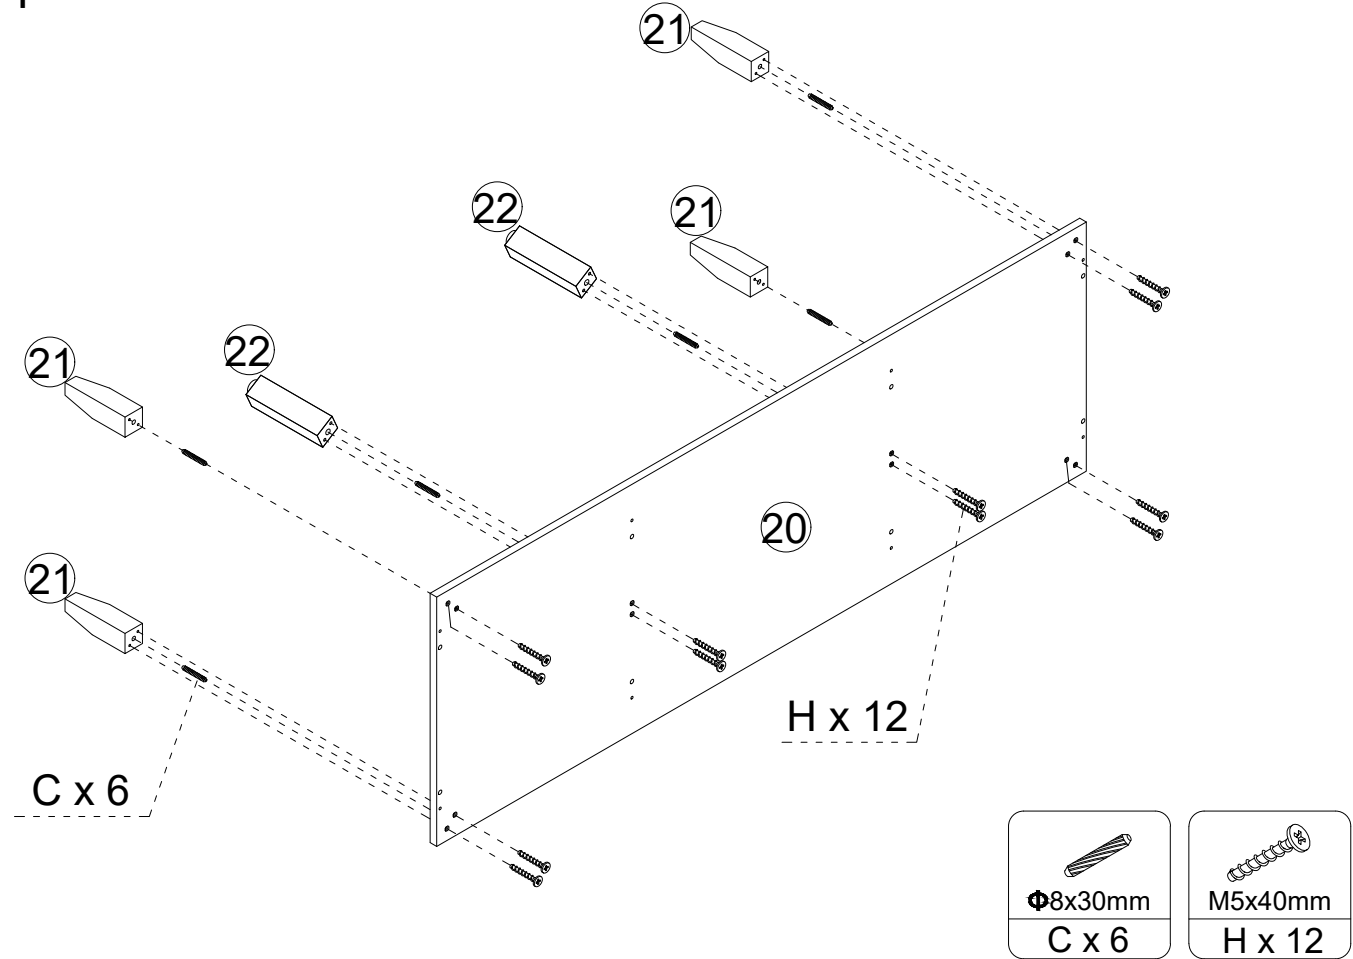

 
Step 19

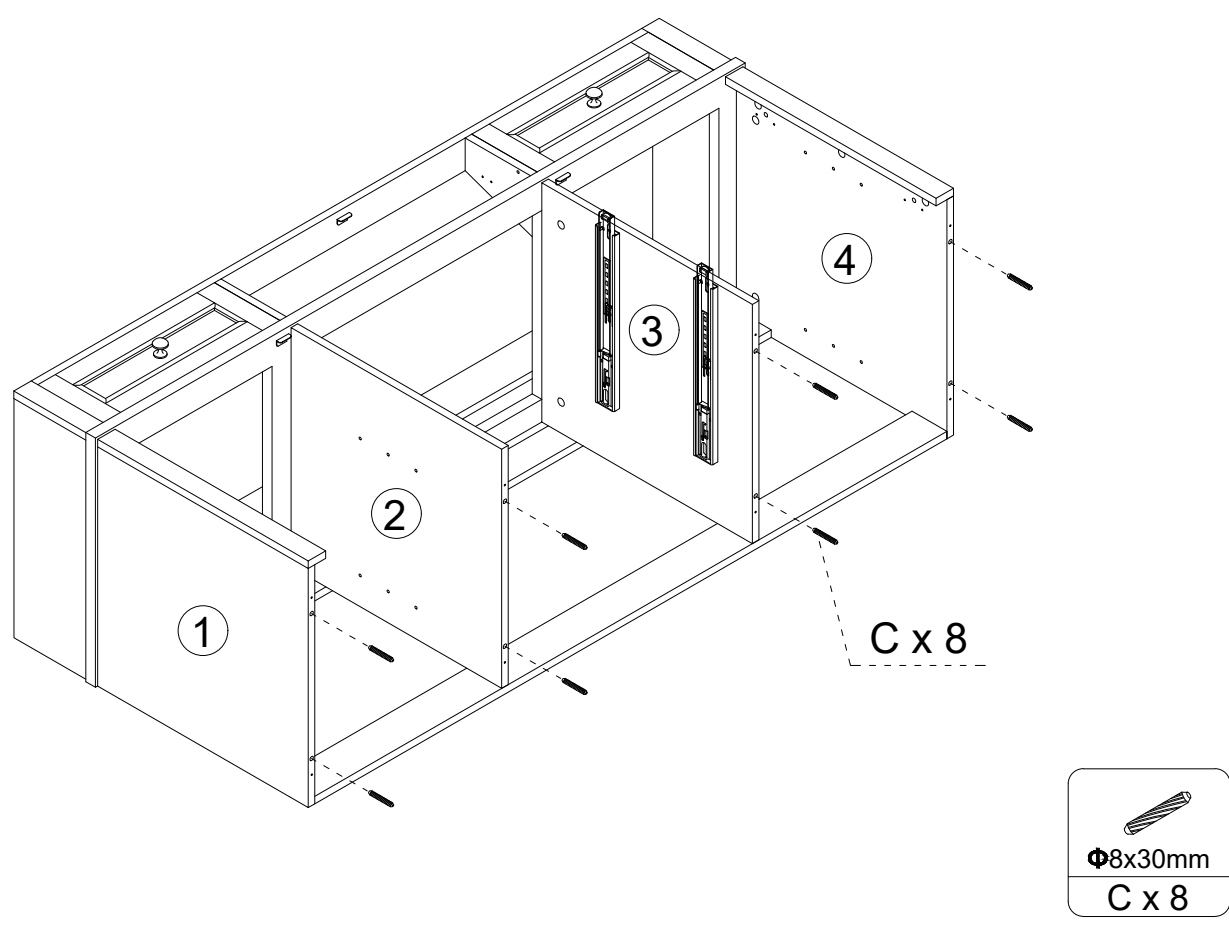






 
Step 20

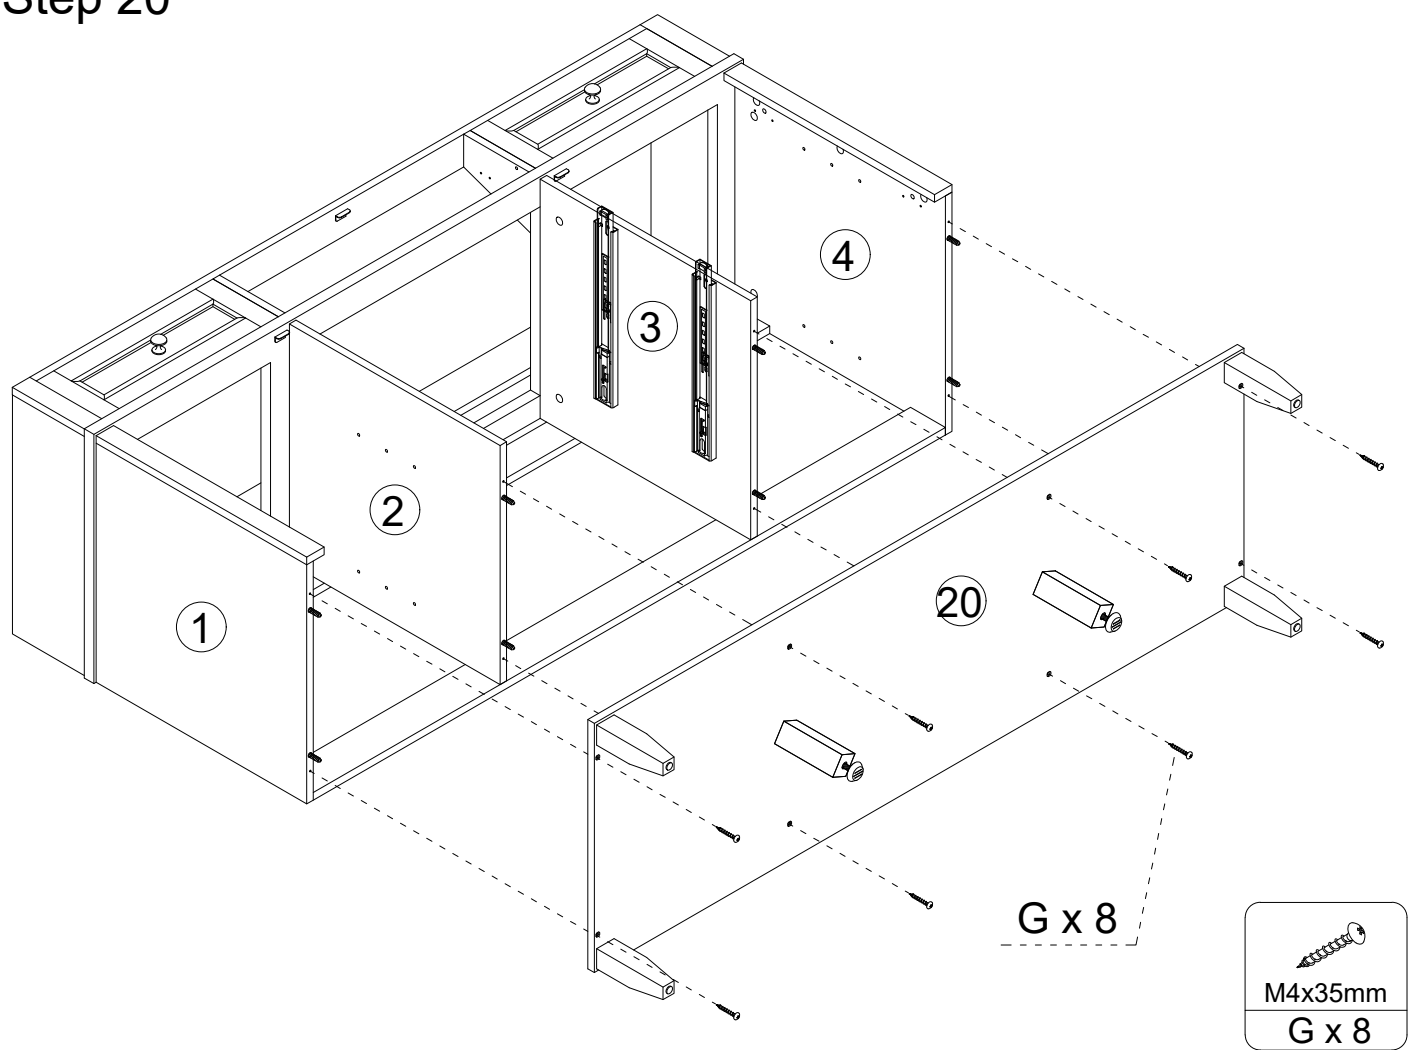



 
Step 21

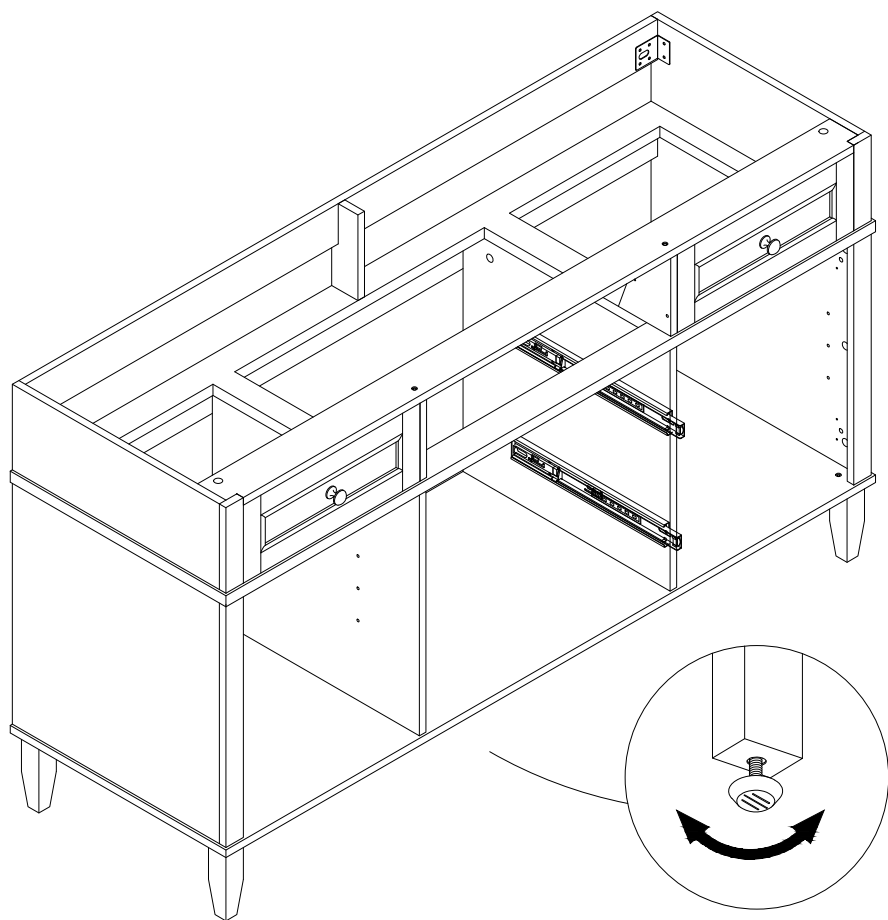

  
 
 
 
 
Step 22

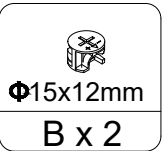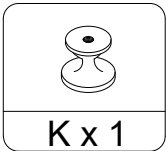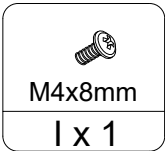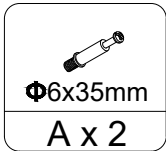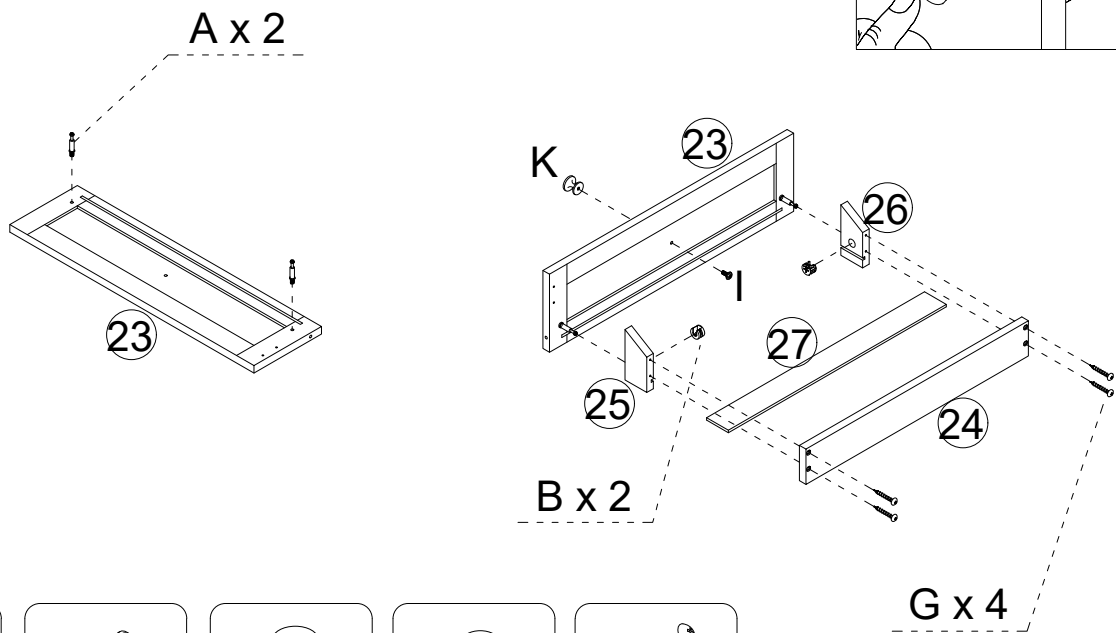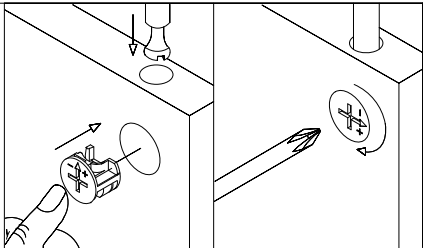


 
 
 
Step 23

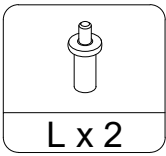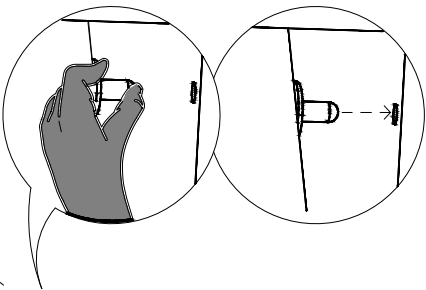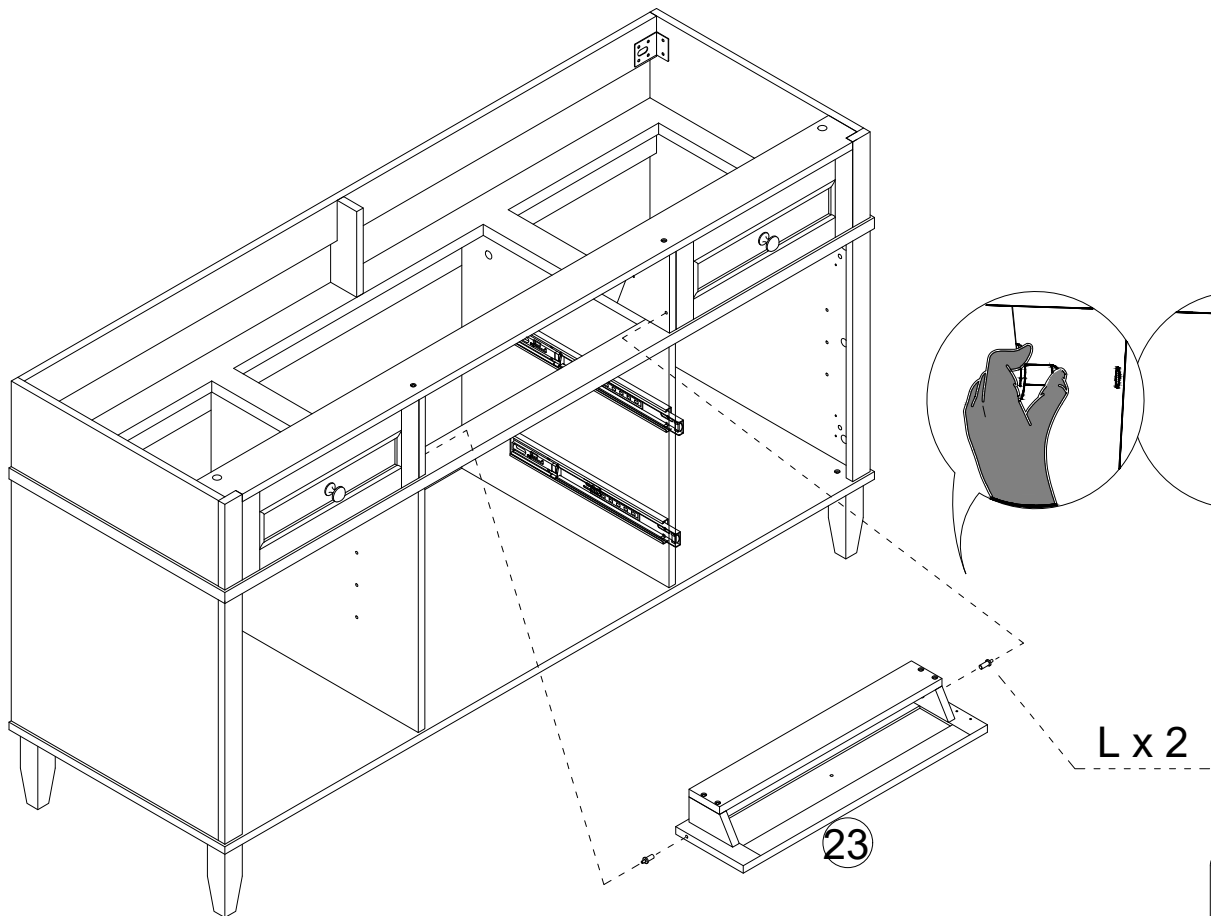

    
 
Step 24

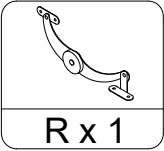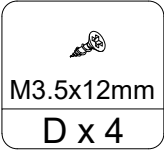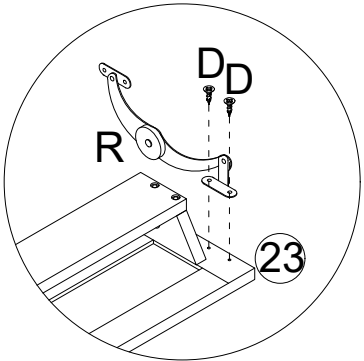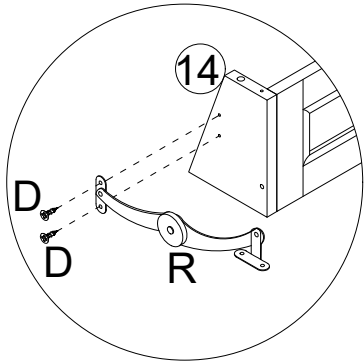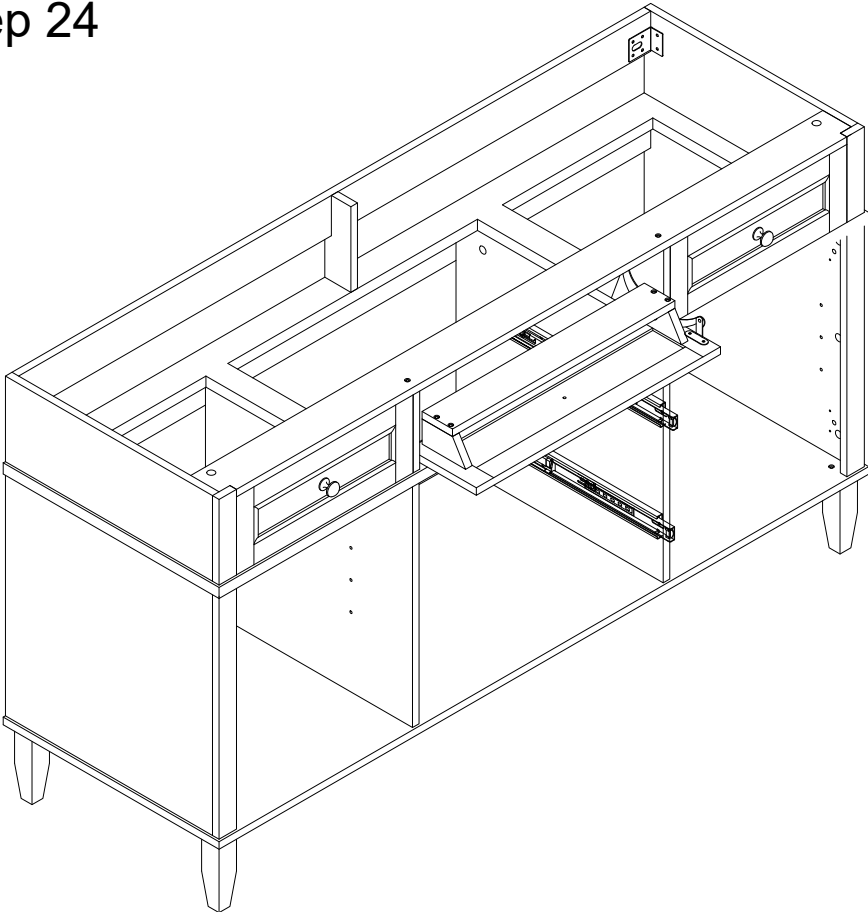

  
 
 
Step 25

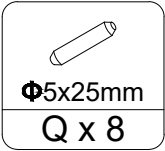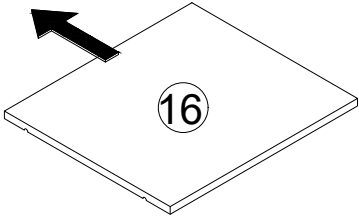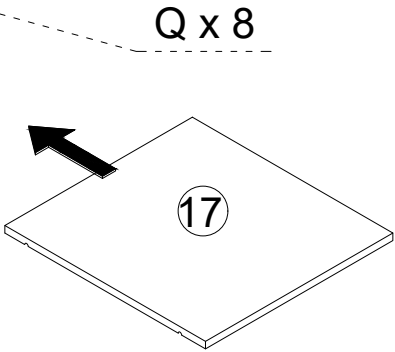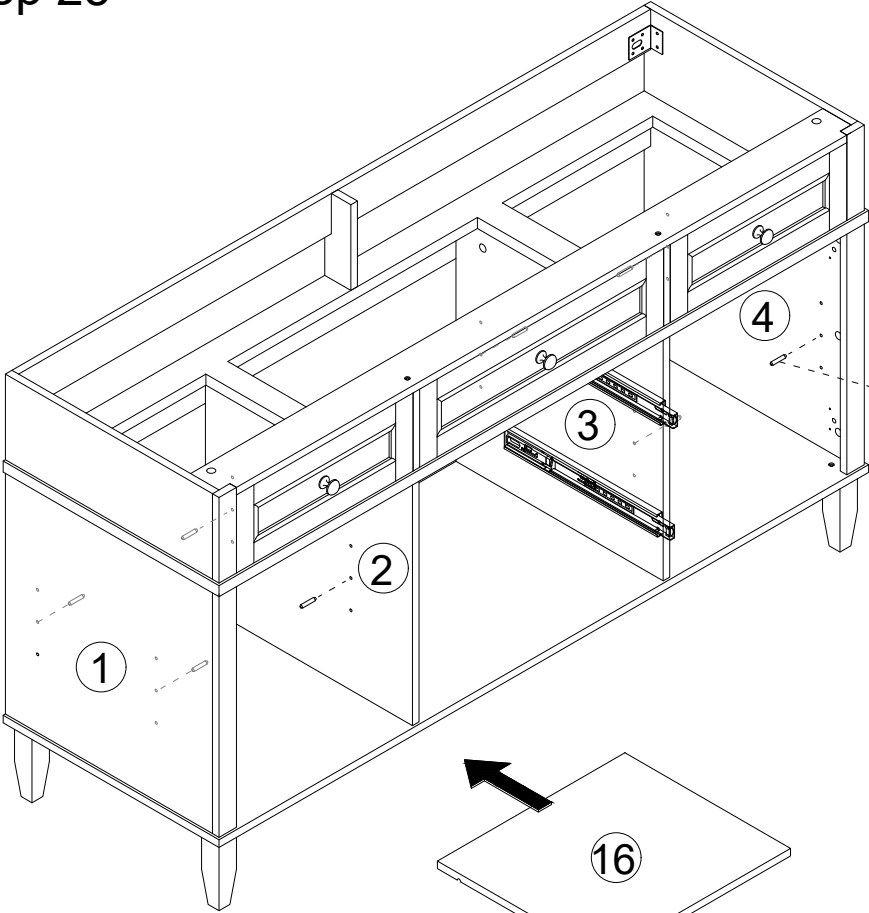


 
 
Step 26

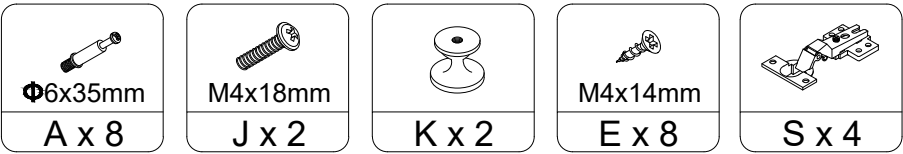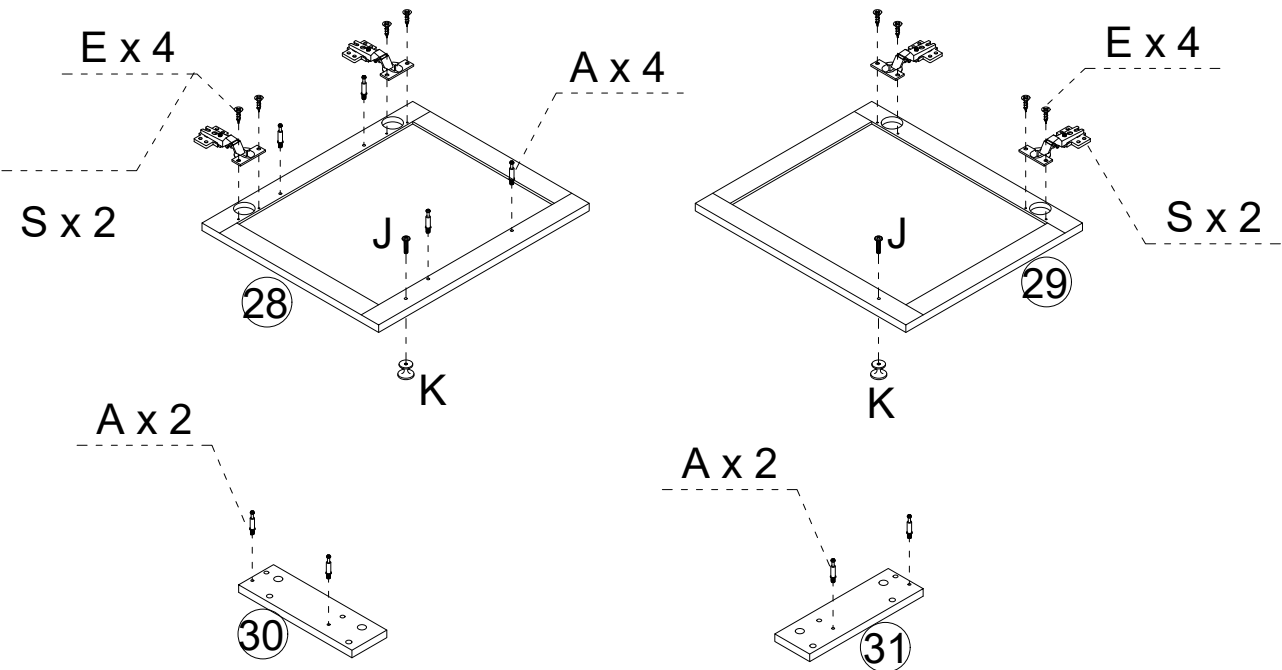

   
Step 27

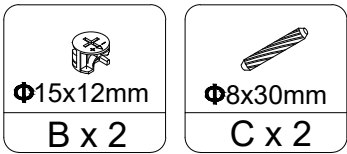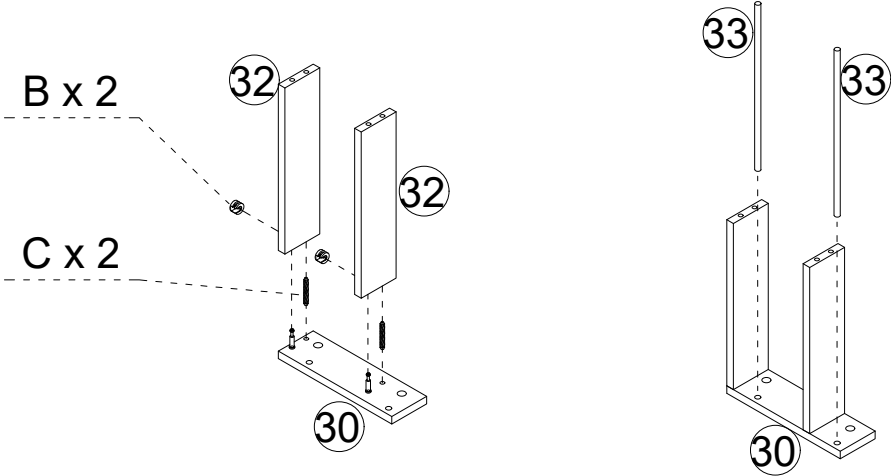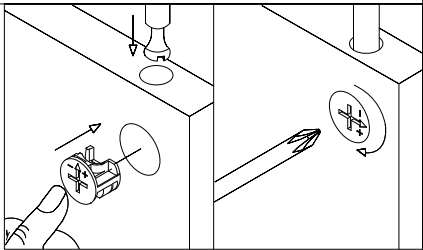

   
Step 28

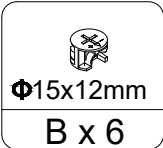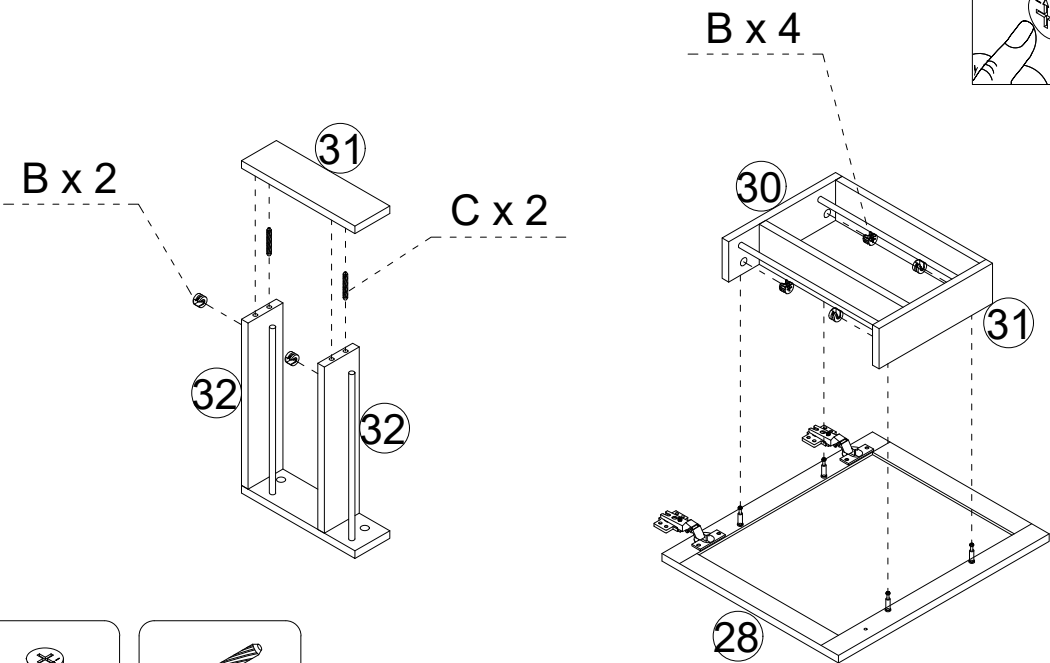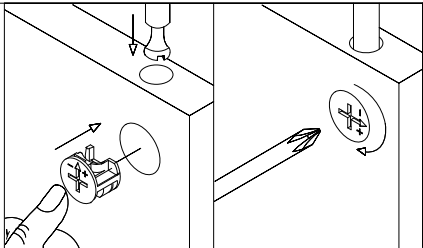




 
Step 29

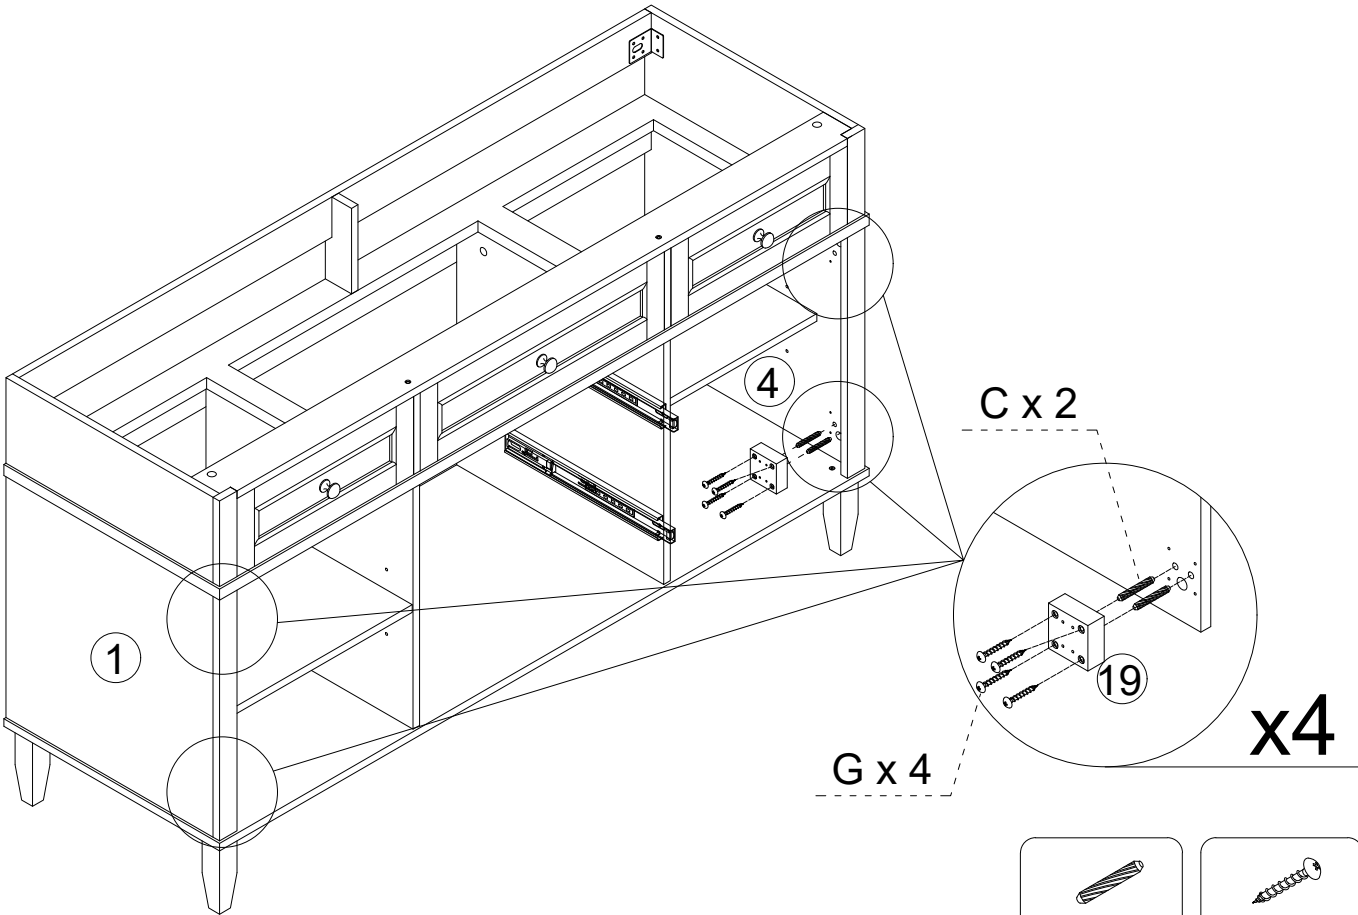

 Step 30


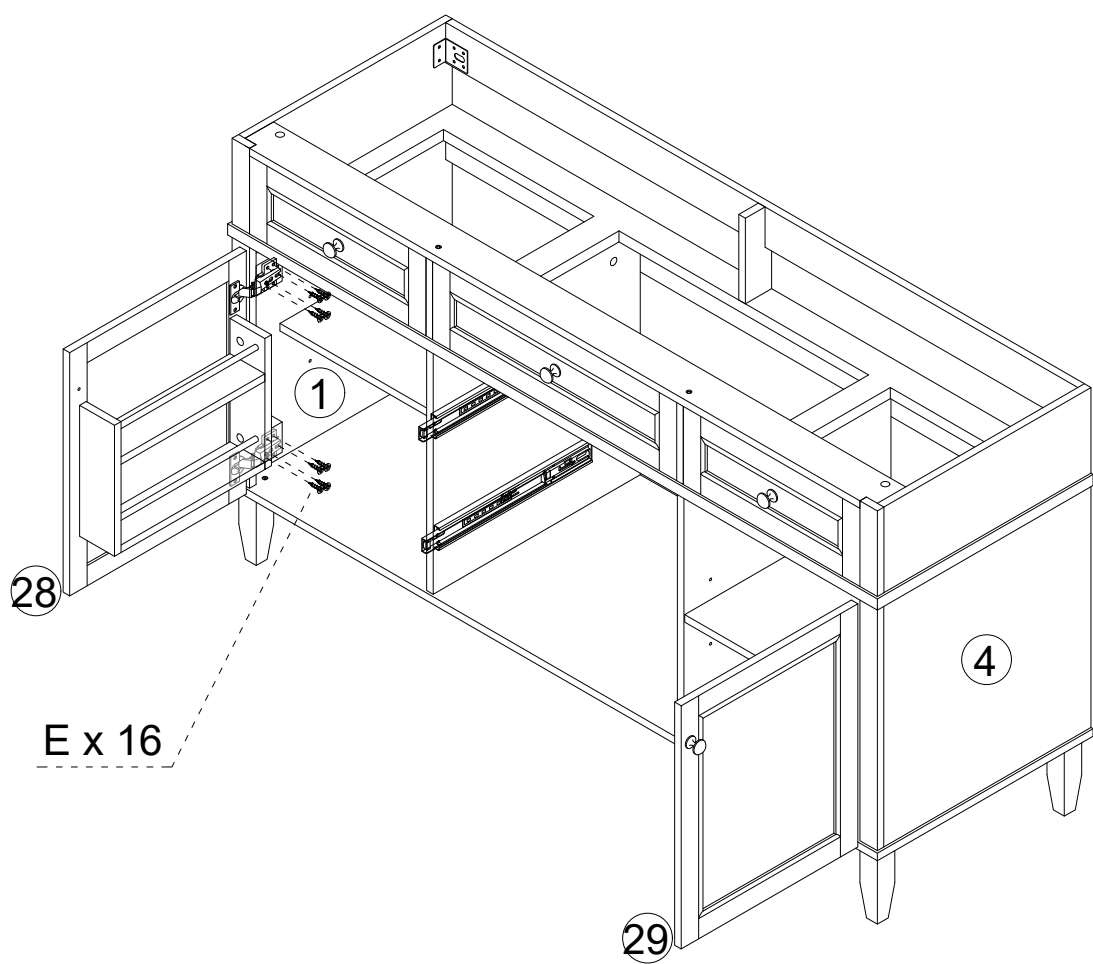


    Step 31

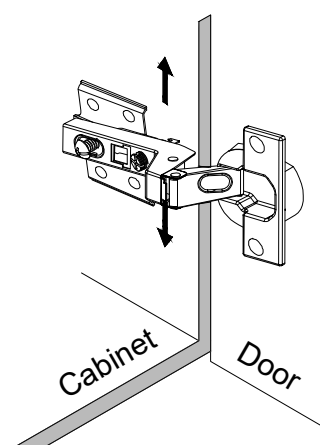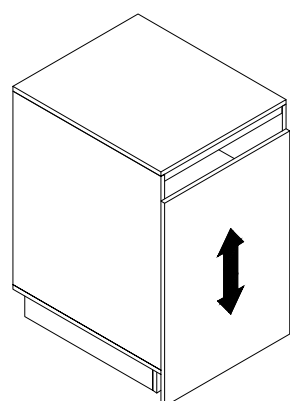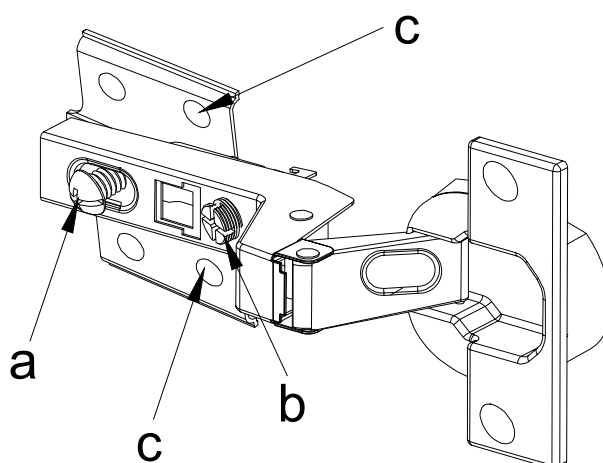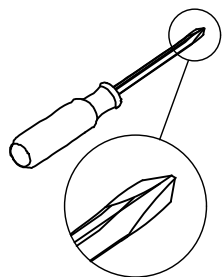



To adjust the vertical height.

  Loosen the four screws "c" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

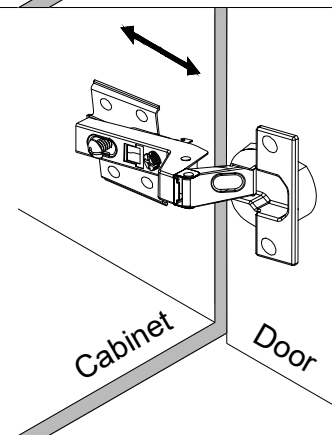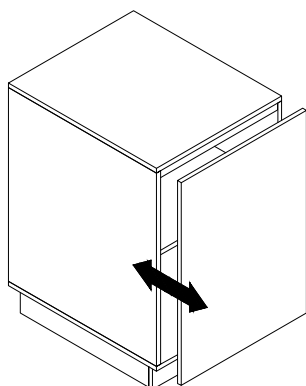

To adjust depth.



 
 
Loosen screw "a" and adjust door, if the door can not be adjusted, please loosen screw "b", then try again. Tighten screw "a" and "b".

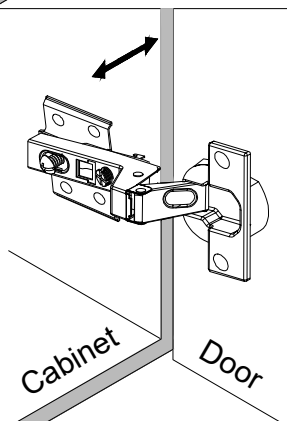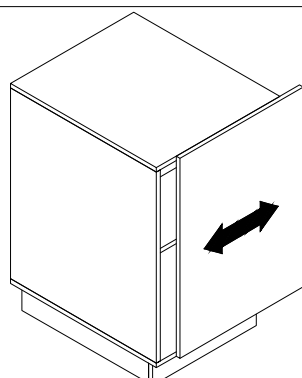



To adjust side ways.

Turning the screw "b" on BOTH hinges on each door.


 
 
 
 
Step 32

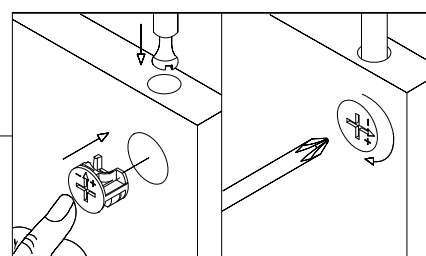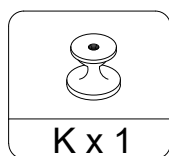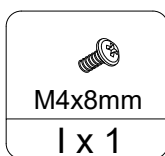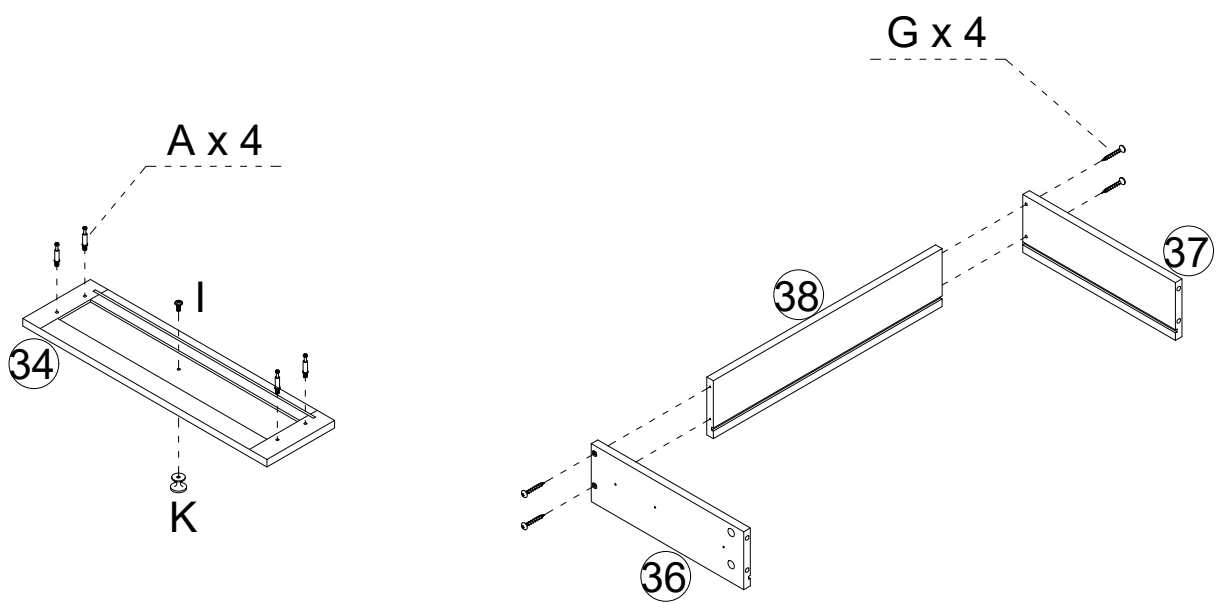

 
 
Step 33

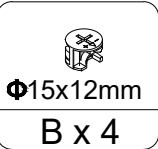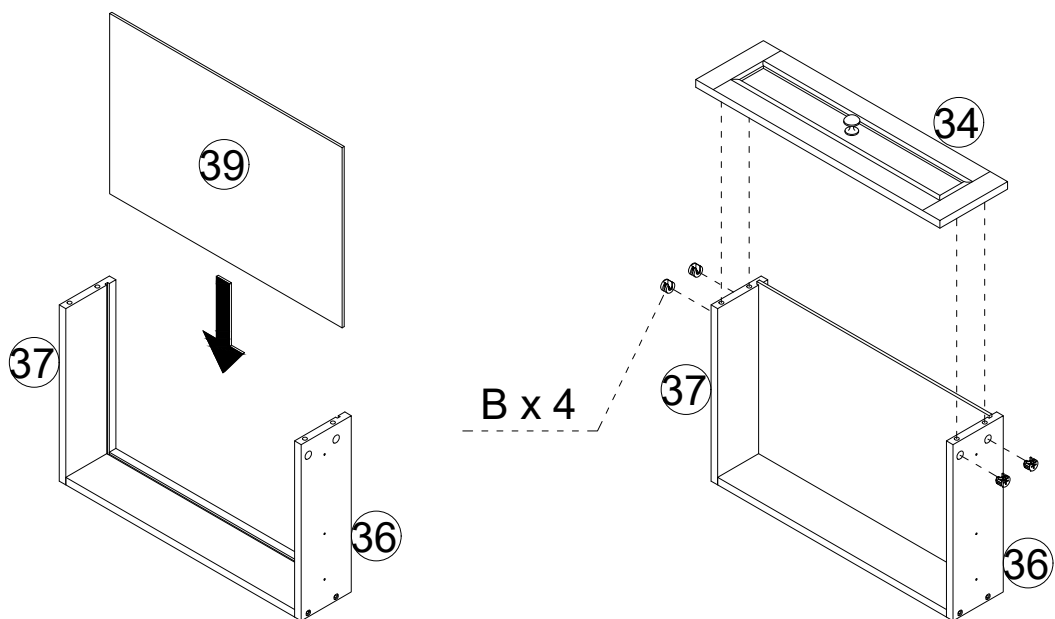

     
Step 34

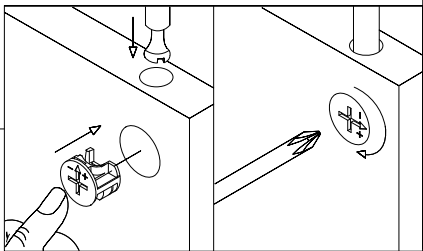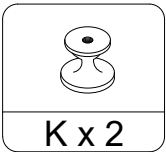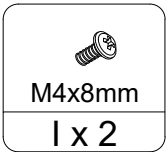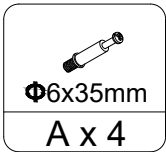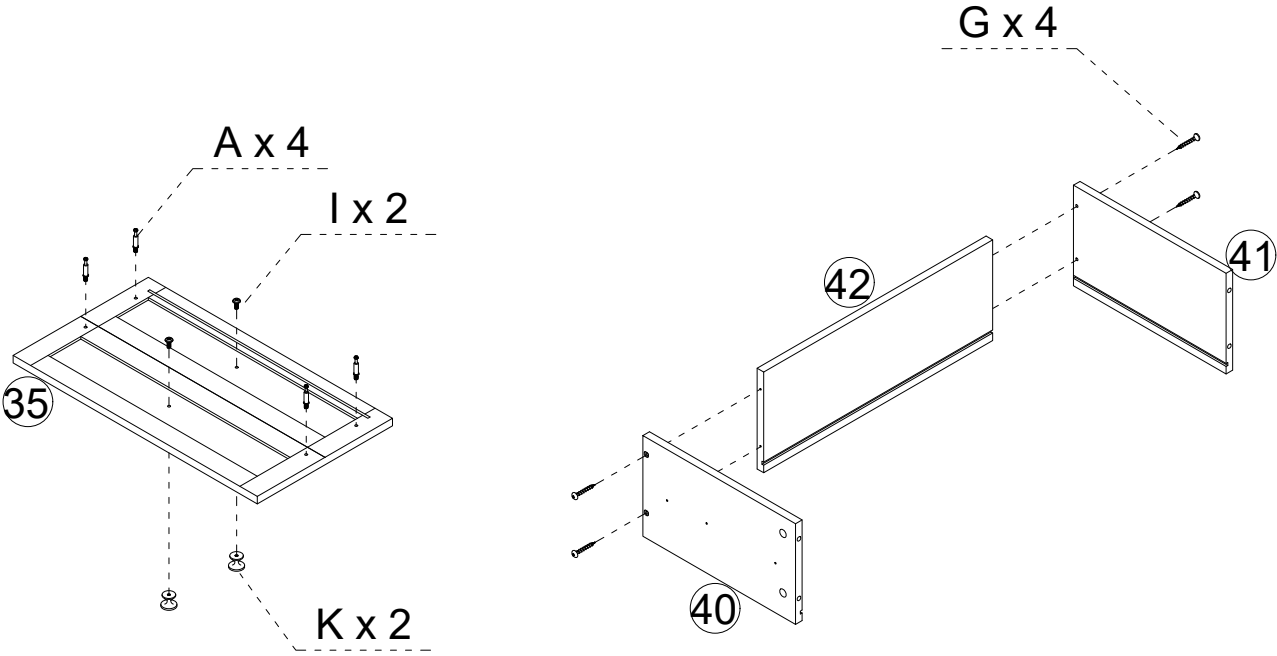

  
Step 35

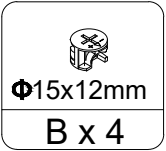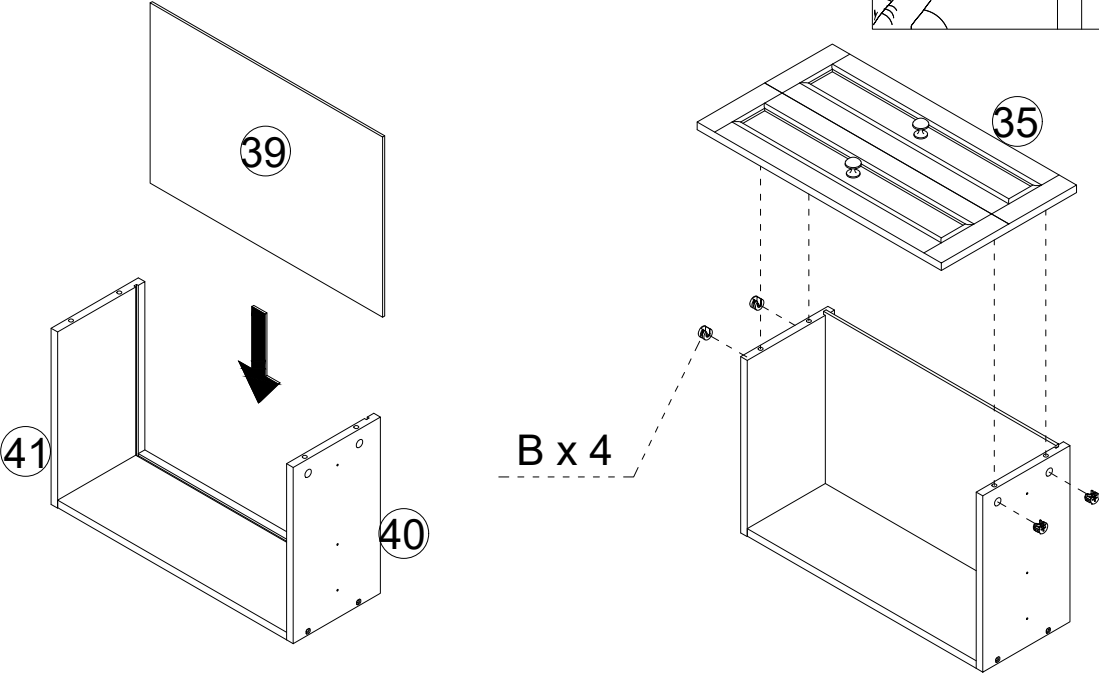

 Step 36


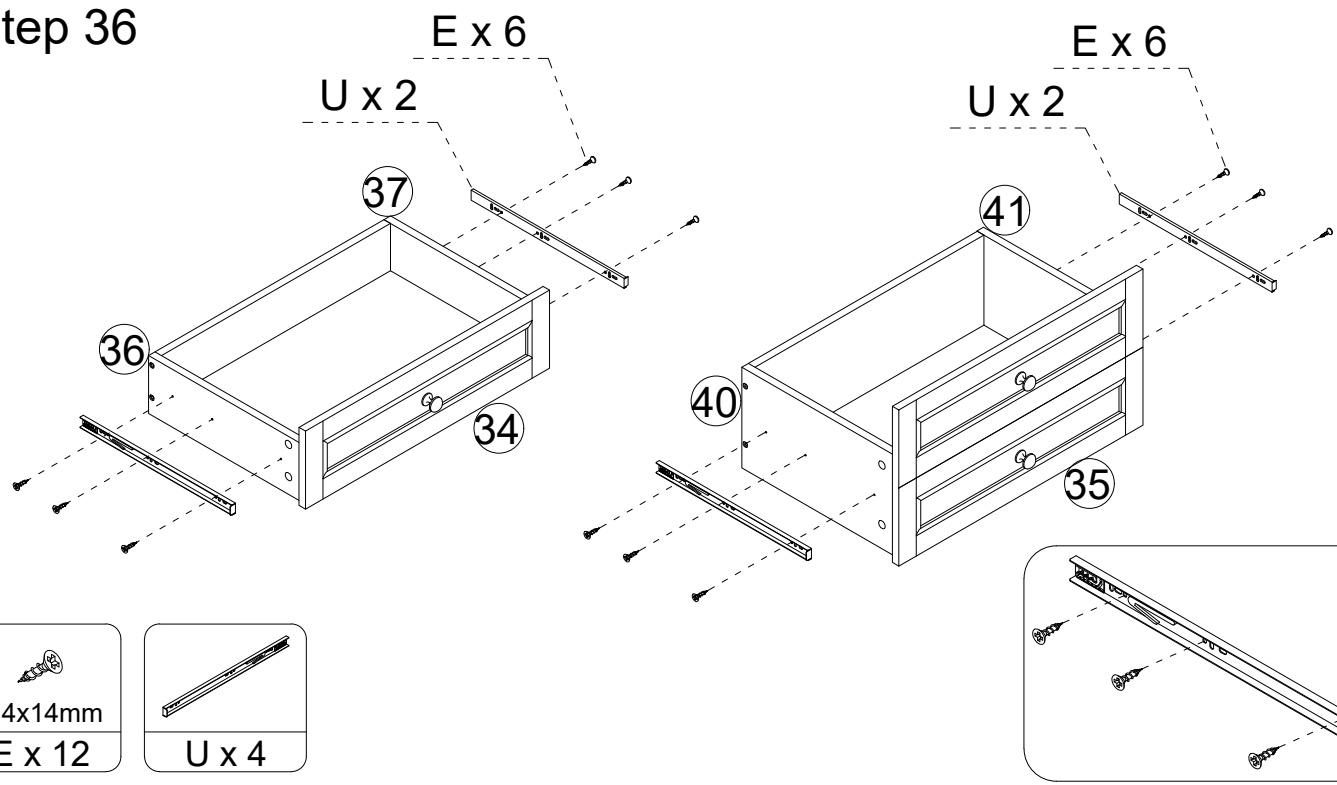


 Step 37

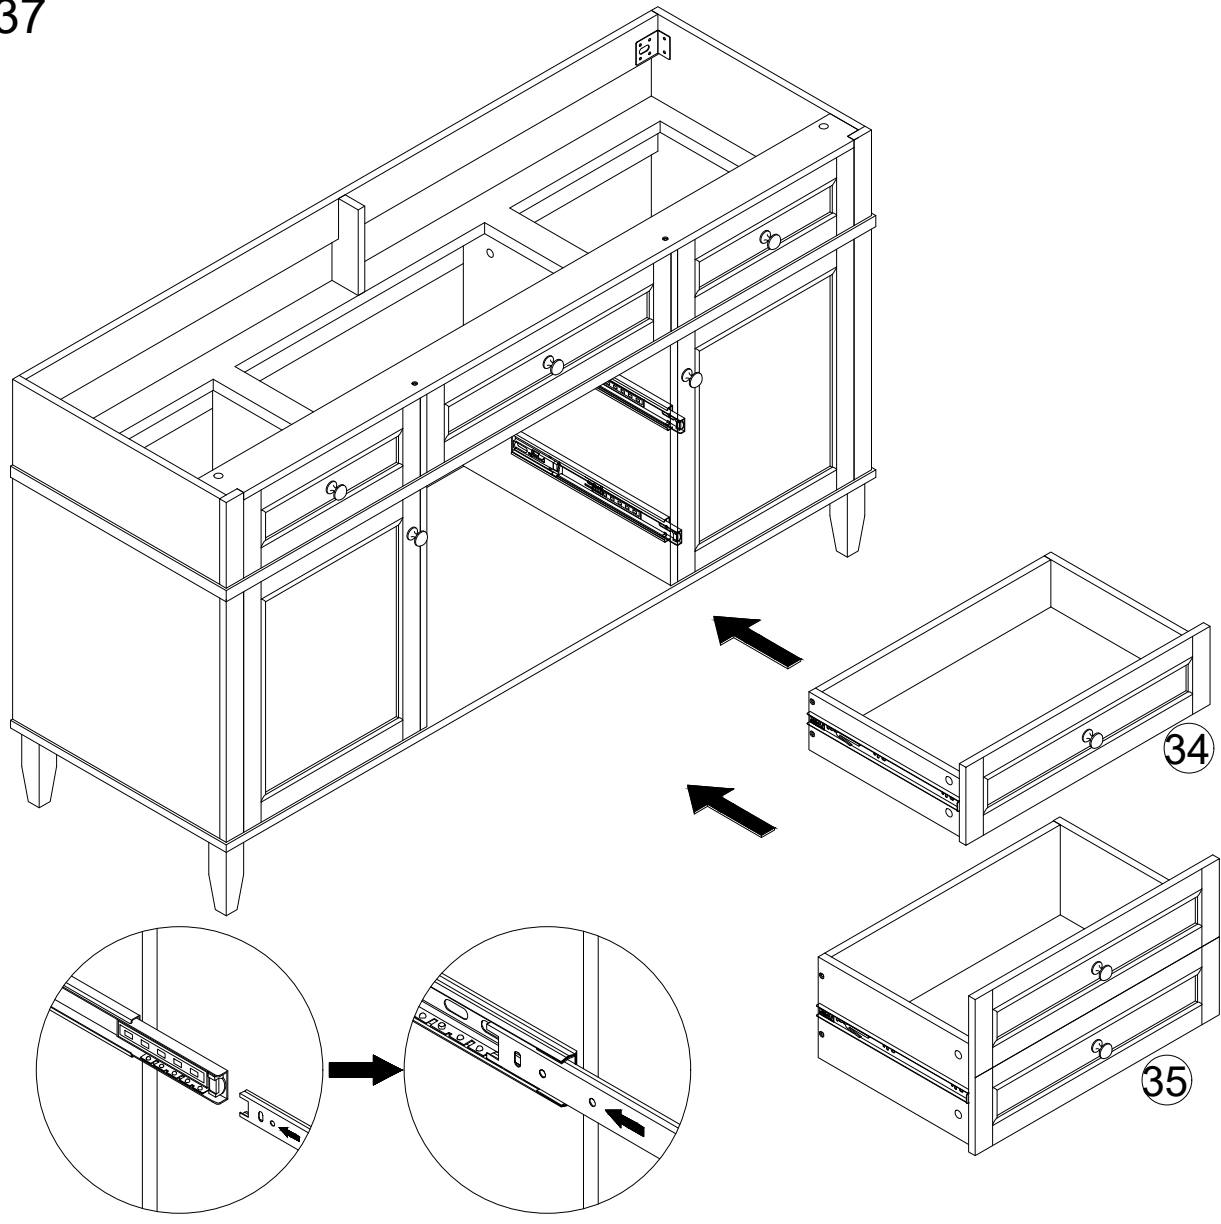



Step 38

  Wall

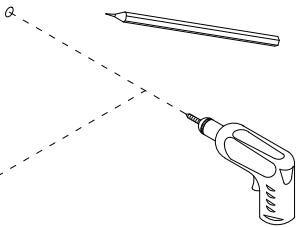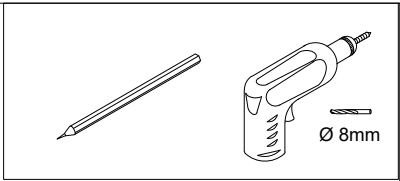

Step 39

 
 
Wall

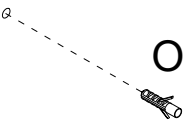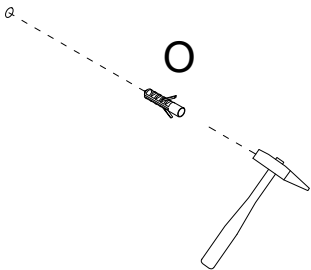

Step 40


Wall

  P x 2

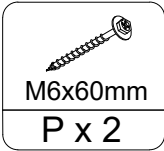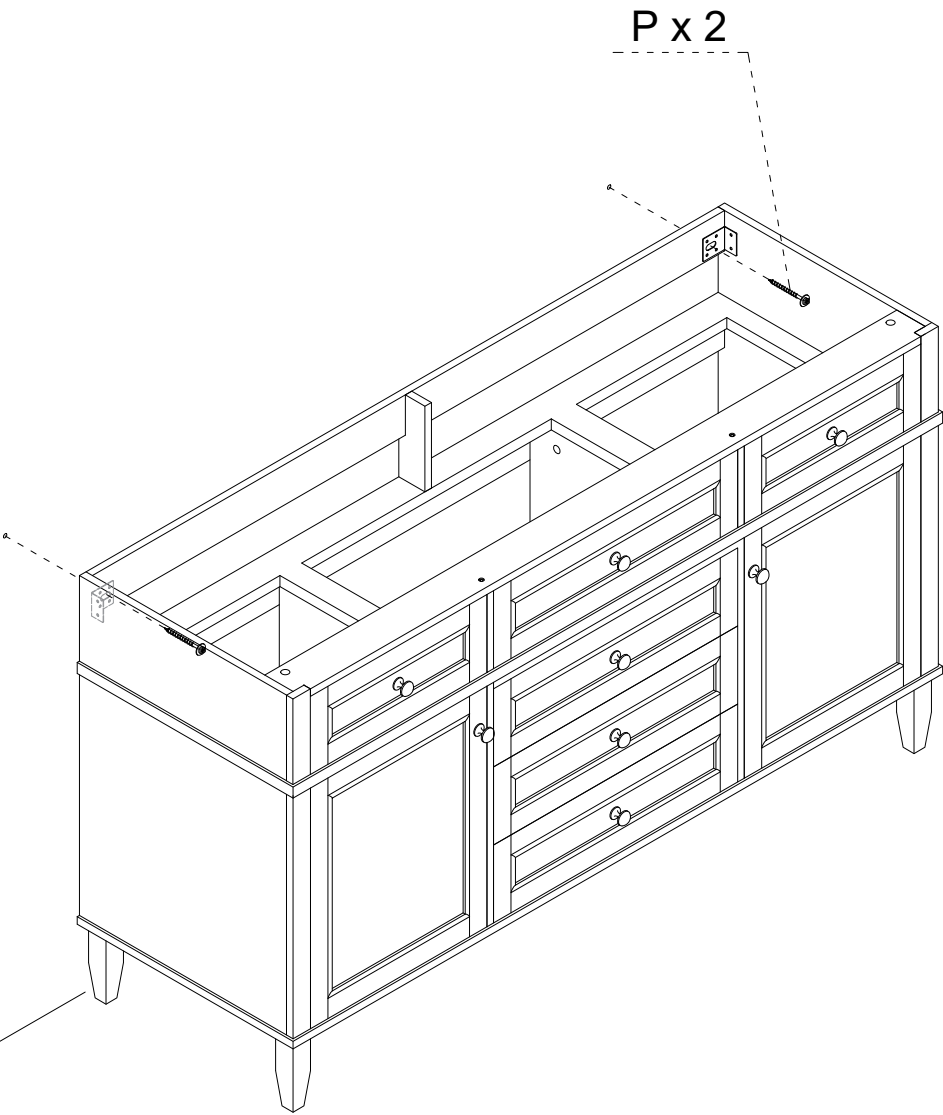

Step 41

 Wall

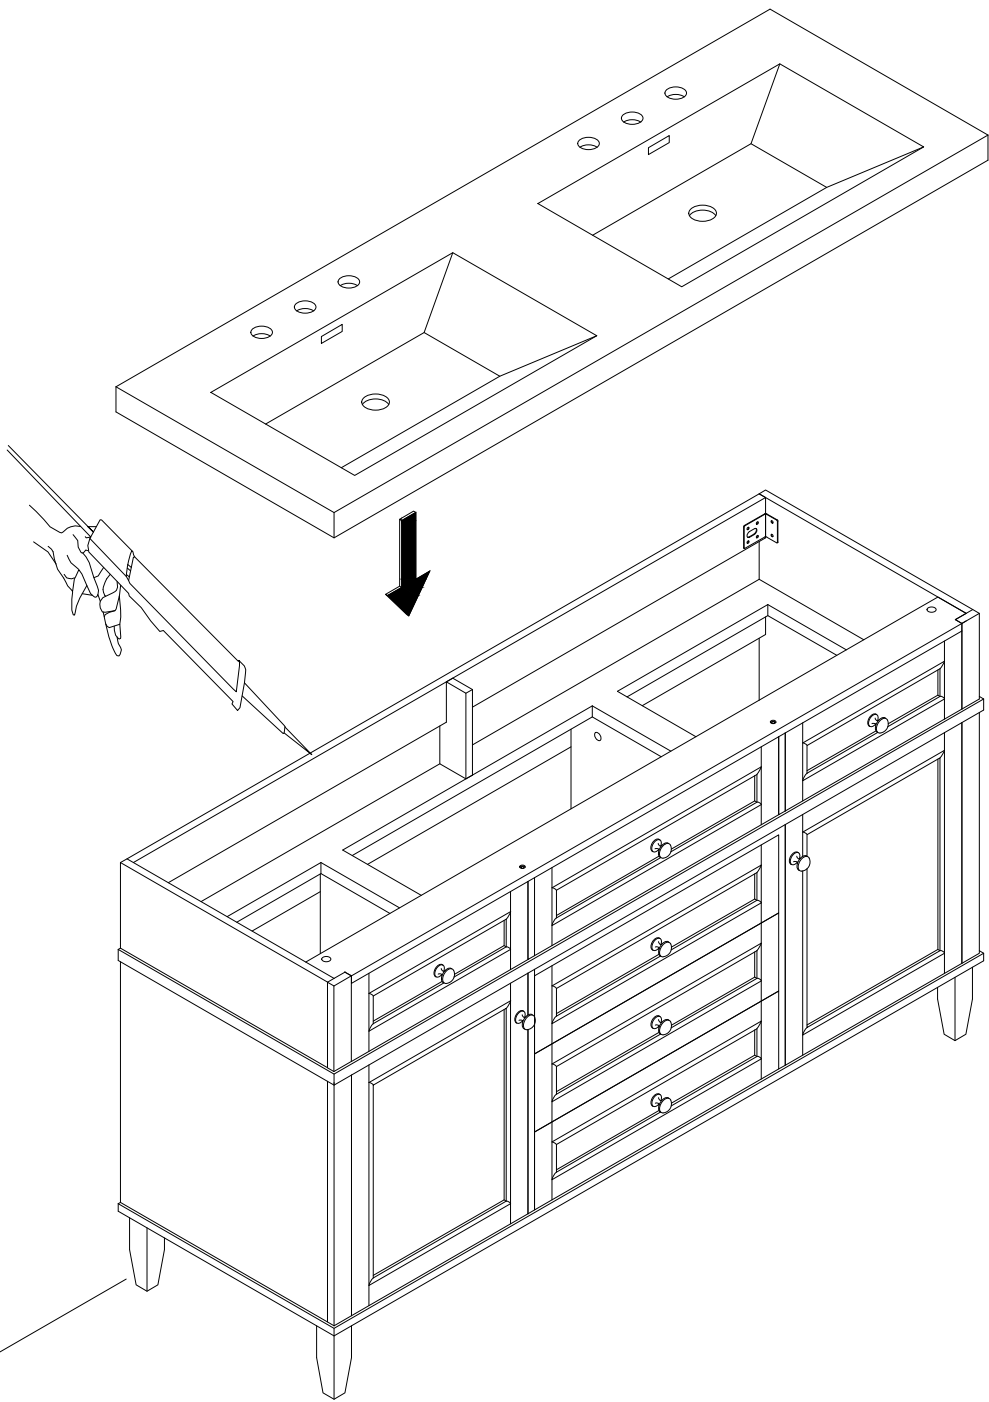

Step 42

