

4. How to clean the electric clothes airer

1. Before cleaning, please be sure to turn off the power, unplug, and let the airer cool down.
2. Do not let the any part of the airer to become immersed in water.
3. Before use ensure the item is dry especially the electrical wire and plug.
4. Wipe the shell with a damp coth, then use soft cloth to dry the rack.

Note: Never use metal balls or other coarse cloth to clean the racks, avoid to damage the rack surface.

5. Troubleshooting

Fault	Cause	Troubleshooting
Electric clothes airer rack does not work, Will not heat up or turn on.	Power plug is not connected	Check the power plug connections
	Power switch is not turned on	Turn the switch to the ON
	Power cord is damaged	Replace the power cord by professionals

Please note:

If the fault persists, please contact the retailer you purchased this from

Rated Voltage: AC 220-240V
IP Degree: IP X1

Winged Heated Folding Airer

INSTRUCTIONS



Before using this product, please read the following instructions carefully and keep for future reference.

1. Health and Safety Warning

1. This product should **not** be operated near water, please keep clear of baths, sinks and showers.
2. If the supply cord is damaged, it must be replaced or repaired by a licensed professional.
3. This appliance is **not** suitable for children.
4. Only use to dry Washable textiles, Silk fabric is prohibited to dry.
5. After powered on for 5 minutes, the temperature of the airer will stay constant heat of 45-50 degrees, when covering the airer with clothing the temperature will reach up to 60 degrees.
6. Do **not** use to dry poor heat resistant textiles.
7. To save energy when using this product, do **not** use for soaked clothing, clothing must be drained of excess water.
8. This product must be equipped with a fixed wiring and power cut-off to the room overcurrent protection apparatus.
9. This product must be used by connecting to the power that matches the rated voltage shown on the nameplate, next to the power switch.
10. Do **not** use if there are any signs of malfunction or damage.
11. This product has the three wire triangle UK. The product must be grounded to avoid safety risks and danger.
12. If this product needs repairing, the power must be completely turned off.

2. Components and Functions

Name	Function
Power Cord	For connecting the power
Switch button	ON(Start to work) / OFF(Finish working)
Support legs	Support the drying racks and objects
Heating region	For drying clothes/towels/socks,ect

3. Product use and instructions

1. To use the drying clothes rack, you should follow the **Health and Safety Warnings** and place in a safe area.
2. Assemble the airer according to the image. Once assembled, place in a safe area and turn on the power to start using.
3. When finished, fold the support legs and wings to collapse the airier.

