

TOOLS REQUIRED



Phillips Screwdriver (Not Included)



Hammer (Not Included)



2 - People Recommended



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

_			_	
_	_	_	_	

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

- • • -

PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.















Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note :

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.









Screw the cam bolt into panel.



Align the cam lock with its side opening (or arrow) pointing to cam bolt.



cam lock



Insert the cam bolt into the bolt hole of joint panel.



Turn the cam lock clockwise gently until it will not turn any more.



Please keep instructions for future reference.

• Check the quantity and irregularity of parts and hardware before you start.









2

Hardware ① x2PCS Hardware ③ x6PCS

Accessory A4 x1PC



Apply a dab of glue into dowel holes of panels before inserting dowels (#3).





Part **B** x1PC Part **G** x2PCS

Accessory A4 x1PC









10

ASSEMBLY COMPLETED



 (\checkmark)

Please ensure the furniture rests on an ever and flat surface. If the produst wobbles or feels loose,double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

