


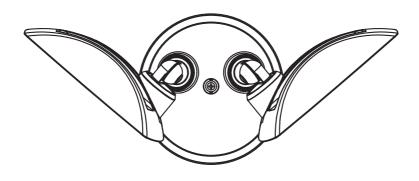

LED TWIN HEAD FLOOD LIGHT

INSTALLATION, **USAGE, & CARE GUIDE**



Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call, text, or email PROBRITE Customer Care 9am-5pm EST Monday to Friday.

1-844-507-5651

support@PROBRITE.com

PROBRITE.COM

TABLE OF CONTENTS

Table of Contents	2	Hard
Safety Information	2	Install
Pre-Installation	3	Opera
Planning Installation	3	Care 8
Specifications	3	Troub
Tools Required		
Package Contents		

Hardware Included	4
Installation	5
Operation	g
Care & Cleaning	11
Troubleshooting	
Warranty	
•	

SAFETY INFORMATION

IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRECAUTIONS

- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- ☐ This light fixture requires a 120 Volt AC power source.
- ☐ Some codes require installation by a qualified electrician.
- ☐ This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices
- ☐ This light fixture should be installed outdoors to a wall or eave.



WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.



WARNING: Risk of fire. Keep the fixture at least 3 in. (76mm) from combustible materials.



CAUTION: Burn hazard. Allow the light fixture to cool before touching.



NOTICE: Do not connect this fixture to a dimmer switch.



INFORMATION: The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation.

These limits are designed to provide reasonable protections against harmful interference when the equipment is operated in a commercial environment.

PRE-INSTALLATION

PLANNING INSTALLATION

Before installing the light fixture, ensure that all parts are present. Compare parts with the *Hardware Included* and *Package Contents* sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

SPECIFICATIONS

Lumens (Light Output)	3000 Lumens	
Watts (Power Consumption)	23 Watts LED	
Replaces	75W Halogen Bulb	
Lumens/Watts (Efficacy)	130 Lumens per watt	
Power Requirements (Input Voltage)	120V	
Light Color (CCT)	4000 Kelvin (Bright White)	
Dimmable	Non-Dimming (Do not wire to dimming switch)	
Operating Modes	Dusk-to-Dawn: Automatically turns light fixture ON during night and OFF during day. Switch-Controlled: Flip switch to turn light fixture ON and OFF.	

TOOLS REQUIRED



Phillips screwdriver



Wire strippers/ cutters



Circuit tester



Silicone sealant



Work gloves




Ladder



Safety goggles

PRE-INSTALLATION (CONTINUED)

PACKAGE CONTENTS

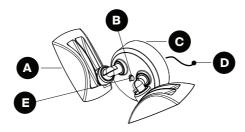

Part	Description	Quantity
Α	Light fixture	2
В	Mounting plate set screw (pre-installed)	1
С	Mounting plate with gasket (pre-installed)	1
D	Hanger wire for hands-free installation (pre-installed)	1
E	Mounting screw cover plug	1

HARDWARE KIT



NOTE: Hardware not shown to actual size.























Part	Description	Quantity
AA	#8-32 x 3/4" Philips head screw	2
ВВ	Wire nut	3
СС	Mounting plate with ground wire	1
DD	10-24 x 5/4 Philips head screw	1
EE	Mounting screw cover plug	1

◄ FOR BEST RESULTS

- ☐ Install light 8-15 feet above the ground.
- Do not mount fixture close to reflective surfaces such as windows, white walls, white surfaces and water.
- ☐ Do NOT wire to dimming switch.
- ☐ When mounting to a wall, make sure the fixture is 7 in. on center away from eave and 13 inches on center away from inside corner of the exterior wall (fig 3).

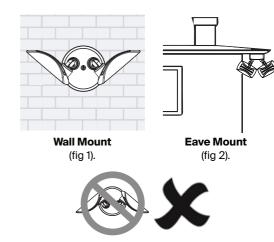

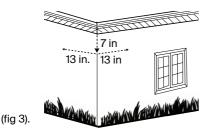




Round

Octagonal

(fig 4).

9 SHUT OFF ELECTRIC POWER OFF

- □ Verify wall switch is in OFF position (fig 5).
- At the main electrical panel, turn off the circuit breaker that supplies power to the junction box you are working on (fig 6).
- ☐ For screw-in type fuses, unscrew the fuse that supplies power to the junction box you are working on (fig 7).

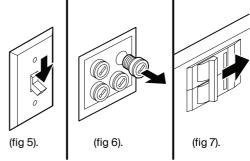

5 PROBRITE.COM

INSTALLATION (CONTINUED)

3 REMOVE THE MOUNTING PLATE



NOTE: The mounting plate (C) come pre-assembled on the light fixture (A) for shipping.




NOTE: The mounting plate set screw (B) comes pre-installed on the light fixture.

Remove the mounting plate bracket (C) from the back of the fixture by removing the mounting screw cover plug (E) and then loosening the mounting screw (B) using a philips head screwdriver.




TIP: Only unscrew the tightening screw (B) far enough to remove the mounting plate bracket (C). Do not fully remove the set screw (B).

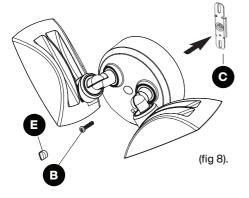

4 INSTALL THE MOUNTING PLATE


- Route the junction box wires through the large center hole in the mounting plate bracket (C).
- ☐ Align the holes on the mounting plate bracket (C) with the holes of the junction box. Use two #8 screws (AA) to attach the mounting plate bracket (C) to the junction box

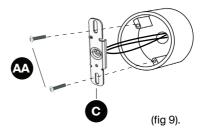


INSTALLATION (CONTINUED)

5 MAKE THE ELECTRICAL CONNECTIONS

- If necessary, strip 3/8" of insulation from junction box and lighting fixture wires (fig 10). Connect wires by twisting the exposed wires together and using the wire nuts (BB). Ensure no loose wires.
- ☐ Connect lighting fixture black wire to junction box black wire, (line), lighting fixture white wire to junction box white wire (common), the junction box ground wire to the green lighting fixture ground wire, which is attached to the mounting plate.

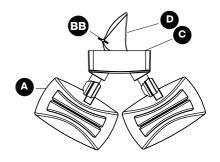



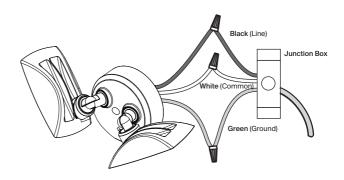

Non-Dimming Wiring Diagram

(fig 10).

TIP: Hold


Hold stripped ends near each other and align any frayed strands (do not twist wires).

Push the wires into wire nut (BB) and use your fingers to twist the wire nut clockwise until tight. Check for tightness by pulling wires.

INSTALLATION (CONTINUED)

6 MOUNT THE LIGHT


- Once wiring is complete, align the mounting screw hole in the center of the fixture with the mounting screw hole in mounting plate bracket (C).
- Insert the mounting plate set screw (B) back through the hole in the center of the fixture and tighten until fixture is firmly secured against the wall or eave.

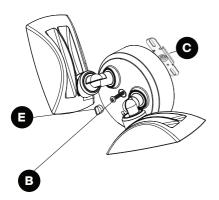

(fig 11).

8 CAULK AROUND THE LIGHT FIXTURE

 Caulk around the light fixture (A) and surface with silicone sealant (not included).

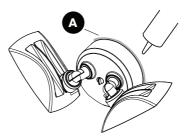



NOTICE: Failure to properly caulk around the surface and light fixture (A) could lead to water damage and is not covered under warranty.



NOTE: When attaching this fixture (A) to a surface mount junction box, caulk between the light fixture and junction box.

(fig 13).

AIM THE LAMP HEADS

- After fixture is securely mounted, loosen screws on the lamp head arms with a philips screwdriver.
- Aim each lamp head (A) toward desired direction.
- Use a philips screwdriver to tighten the lamp head arm screws, locking lamp heads in desired position.
- ☐ From the breaker and switch, turn power back ON to the light fixture to verify it illuminates.





CAUTION: Keep lamp heads 30° below horizontal to prevent water damage and electrical shock.

(fig 12).

CARE AND CLEANING

- ☐ Shut off main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- ☐ Do not spray the light fixture with a hose or power washer.

TROUBLESHOOTING

Extreme hot or cold weather could affect the performance of the built-in sensors that detect body heat. Certain winter clothing can shield a person's body heat from the sensor during extreme cold weather. During extreme hot weather, the sensor may not be able to distinguish the difference between normal body temperatures and the surrounding high temperatures. The sensor will begin working normally once weather conditions return to normal.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Security light comes on during the day.	Wiring inside electrical box came loose. Dusk-to-Dawn sensor is in shaded area and is fooled into thinking it is nighttime.	Shine a flashlight onto the light sensor. If the security light turns off then the fixture is mounted in an area that does not allow enough light to enter the sensor. Relocate security light. Use the sensor of the sensor.
Security light cycles ON and OFF continuously.	Dusk-to-Dawn sensor is sensing reflected light from the security light.	Change the position of the light head, aim light away from the reflecting surfaces.
		Put a small piece of black electrical tape over the Dusk-to-Dawn sensor.
		Relocate the security light to a different location where it no longer causes reflected light.

5-Year Limited Warranty

This is a limited warranty offered by Probrite for a period of five years from the date of purchase to its customers. Probrite warrants to customers that the products will be free from defects in material and workmanship. The obligation of Probrite under this warranty is limited to the provision of replacement of products and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to Probrite. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted.

It should be noted that the warranty does not apply to Probrite products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by Probrite which have been supplied, installed and/or used in conjunction with Probrite products are not covered under this warranty. Any damages caused by replacements bulbs, LEDs or corrosion or discoloration of brass components are also not covered by this warranty.

Limitation of Liability:

In no event Probrite shall be liable for indirect, consequential, incidental or special damages, or lost profits. Probrite is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of Probrite products, or supply of any replacement parts that, exceed the purchase price of Probrite products giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

To Claim:

Please contact PROBRITE customer service at 1-844-507-5651 or email support@probrite.com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

PROBRITE®

Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email our Lighting Specialists 9am-5pm EST Monday to Friday.

1-844-507-5651

support@probrite.com

www.probrite.com

RETAIN THIS MANUAL FOR FUTURE USE

Para las translaciones en español, visit www.probrite.com/install