

TAYAMA®

ALKALINE WATER FILTER PITCHER 3.2 L



User Manual

Model: TWP-10

Tayama Appliance USA Inc.
www.tayama-usa.com
support@tayama-usa.com

Product images are for reference only. Please refer to the actual product.

USER GUIDE

Please read and keep this manual carefully before using the product.

1. Product maintenance and upkeep require the use of components approved by our company.
2. This product is suitable for use with municipal tap water that meets the water quality standards of GB5749-2006.
3. The filter cartridge is a consumable and needs to be replaced regularly. The filter replacement time is not the same as the quality warranty period.
4. Due to regional water quality and varying water usage, the filter replacement time may differ. Please refer to actual usage for specific details.
5. Do not pour water when there is still unfiltered water in the original water tank to avoid mixing unfiltered water with filtered water.
6. Use the filtered purified water as soon as possible to avoid the prolonged storage time that may impact the filtering effectiveness.

- ⚠ Please do not place the product in a high-temperature and high-humidity environment.
- ⚠ Do not apply detergents or unknown liquids to the product.
- ⚠ Do not disassemble the product without authorization, as it may cause damage to components and result in abnormal functionality.
- ⚠ Avoid cleaning the product with corrosive liquids or exposing it to environments containing harmful chemicals.

NOTICE

Do not pour carbonated drinks, milk, coffee, tea or other similar liquids into the Alkaline Water Pitcher when the cartridge is in place. Doing so may reduce or destroy the cartridge filter properties.

Do not use in the microwave or heat on a stove. Please store in a cool, dry place.

If you are not accustomed to Alkaline Water, please go slowly in order to allow time for your body to adjust.

Do not use the alkaline water filter for infants.

Patients with heart issues, allergy and stomach problems should consult with their physician before using the alkaline water filter pitcher.

If any unusual symptoms or heavy detox symptoms arise please stop use and consult with your physician. Replacement water filter cartridges are available, please contact us for more information.

PARAMETER

Items	Contents
Product Name	Alkaline Filter Pitcher
Size	252 x134 x254 mm
Capacity	3.2 L
Flow rate	0.2L/min
Filter replacement time	60 days
Water sources	GB5749-2006 municipal tap water
Effluent quality	Complies with the sanitary requirements of the "Hygienic Safety and Functional Evaluation Specification for Domestic Drinking Water Quality Treatment Appliances - General Water Treatment Appliances"(2001).

TROUBLESHOOTING

First time use dark color water:

It is normal to have dark color water in the first 2-3 filtration cycles before initial use. This is because the filter material is made from pure natural coconut shell material, which undergoes high-temperature sintering. The water will become more clear and normal after flushing and is guaranteed to be safe and non-toxic for the human body.

Slow flow rate or no water coming out:

If there is a slow flow or no water coming out after using for a week or about 10 days, it is normal. This is because the coconut shell filter material may become clogged due to prolonged filtration. The solution is to remove the filter cartridge, soak it in clean water for 5 minutes, then rinse it in the opposite direction and shake the filter cartridge a few times.

No filtering effect:

If the filter cartridge has been used for an extended period, it needs to be replaced. If there is dripping at the connection of the filter cartridge, please refer to the user manual for reinstallation, ensuring the proper placement of the sealing ring and the filter cartridge.

PARTS DIAGRAM



WATER FILTER PITCHER EASY SET UP GUIDE



1. Rinse the filter cartridge under cold tap water for 15 seconds before starting to use.



2. Soak the filter cartridge in cold water for 15 minutes.



3. Align with the slot and push upward to ensure proper assembly.



4. Press and hold the reminder's "START" button for about 6 seconds until all bars appear on the display. When the bars disappear, it indicates that the filter should be replaced.



5. Fill the assembled water tank body with water and filter it twice to clean the filter cartridge from impurities. Discard the water from the first two filtrations, and start using the water from the third filtration.

FILTER REPLACEMENT



① Remove the lid cover. To remove the water tank lift it out of the pitcher by the groove near the handle, pull tank upwards. Turn used filter cartridge clockwise and pull downwards to remove it.

② Replace the new filter cartridge by holding top of water tank, aligning with the filter cartridge slot and turn counterclockwise until it locks into place.



③ To program the Electronic Cartridge Life Indicator, press and hold the "START" button for about 6 seconds until all the bars appear on the display, then it is ready to use. If you want to keep track of the filter usage duration, do not turn this feature off. After 60 days, the battery symbol will automatically turn off indicating 60 days has passed.