



Instruction for Remote Control:

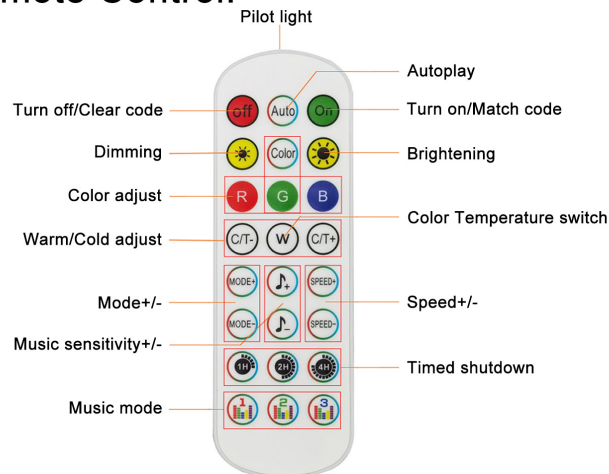

1. Turn off/Clear code: Short press the button to turn off the lights; Press and hold the button for 5 seconds to cancel the matching between the lamp and the remote control.
 2. Turn on/Match code: : Short press the button to turn of; Long press the button for 5 seconds to match the lamp with the remote control(You may need this operation to light up the lamp for the first time.).
 3. Note: Code matching and clearing operations can be performed within 20 seconds of power on. When code matching and clearing are successful, the light will flash once;
 4. Speed+/-: Switch color mode and change speed, with a total of 10 gears;
 5. Music sensitivity+/-: Adjust music mode sensitivity;
 6. Timed shutdown: Set timed shutdown time, shutdown and Clear Timer;
 7. Pilot light: When the remote control is pressed, the pilot light will light up. If the pilot light does not light up when pressing the remote control, please check the battery level of the remote control.
- Note: There is a plastic sheet on the remote control, which needs to be removed before use;

Assembly Instruction:

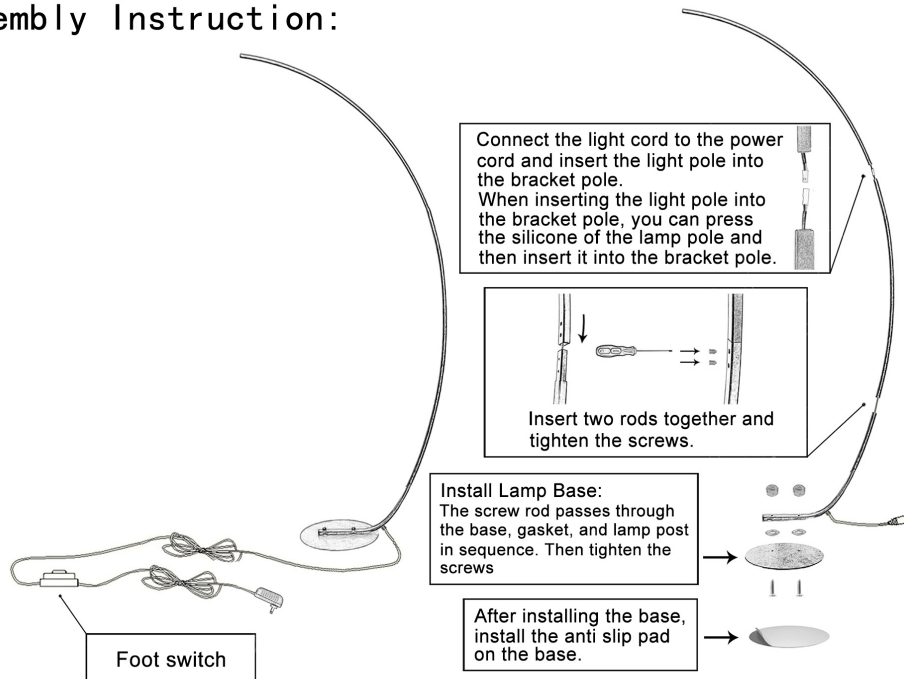

- Note:
1. All operations must be performed only after switching off or powering off.
 2. It is normal that yellow light spots appear from the light strip after brightness is adjusted to the minimum.
 3. The minimum brightness is not equal to 0% brightness.
 4. The lampshade may be slightly separated during transportation, which results in light leakage, it can be easily fixed by pushing it gently by hand.