



*Atomizing Fireplace – Operation  
& Care*

## *Water-Filling Instructions*

Smart Water-Fill Mode:

After plugging in and powering on, you can add or drain water immediately. The first button on the top-right of the keypad is the fill/drain key:

- Press and hold for 5 s → starts filling; tap once → stops filling.
- Press and hold for 5 s again → starts draining; tap once → stops draining.

Water levels: LOW, START, HIGH.

When water reaches the LOW line the fill function starts automatically and stops when HIGH is reached.

## *When the water level is at the start level (unit powered on)*

1. During filling, the unit starts the atomizer/fan and the flame effect appears once the hardware is activated.
2. If the water level drops below the start level, the unit alerts: "Low water—please add water." When the level rises above the start level, the tank is full and the unit stops filling automatically (a "tank full" alert sounds while powered on).

Friendly reminder: The flame effect reaches its best appearance after 15 minutes of operation.

## *Smart Voice Control & Mobile App Setup – Video Demo*


1. First, download the app (Smart Tuya) from your app store.
2. Plug in the fireplace and, while it's powered off, press and hold the Timer button until you hear a beep—this starts pairing mode.
3. Open the app, tap "Add Device," and let it auto-scan. When the fireplace appears, tap

## *Remote-control pairing*

While the unit is on standby, press the Child-Lock button three times in quick succession—pairing is complete.

# LCD Panel Functions

## Touch controls for faster, more convenient adjustments

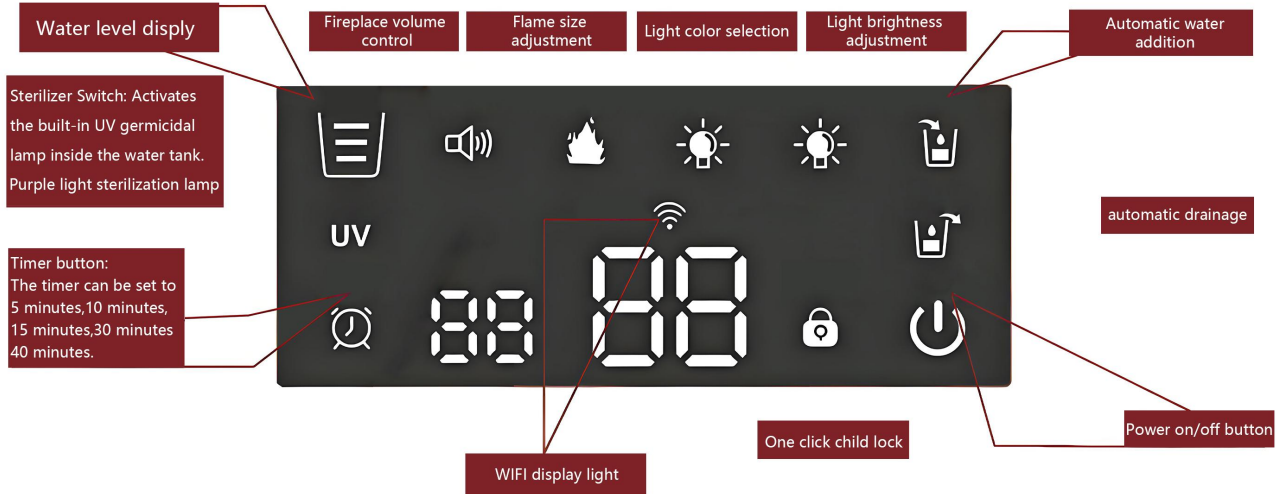

### Remote Operation



### Button Function Description

#### Button Functions

1. Power: short press to turn the fireplace on/off.
2. Child-lock: press and hold for 5 s to enable/disable; when on, only the Power button works.
3. Timer: press and hold for 5 s to enable/disable; short press sets run-time (0–95 min in 5-min steps, default 30 min).
4. UV: short press to switch UV sterilization on/off.
5. Volume: short press to adjust voice level (0–7, 0 = mute, 7 = loudest; default 5).
6. Flame: short press to cycle fan speed F1–F5 (default F5).
7. Color: short press to switch flame color in A1 mode (blue-red-yellow-purple-orange-white-cyan-auto; invalid in A0/A2).
8. Brightness: short press to adjust single-color brightness (0–5, 0 = off, 5 = max; default 5); in auto or color-wheel mode it toggles the light on/off.
9. Water-fill: press and hold for 5 s to start filling; short press stops fill/drain (active only at mid-water level).
10. Drain: press and hold for 5 s to start draining; short press stops fill/drain.

#### Important Notes

1. Always stay nearby while filling water to prevent spills that could damage electrical components.
2. This product uses an ultrasonic atomizer to create the flame effect. Fill the tank only with purified or clean tap water. After prolonged use, scale buildup can crack the atomizer disc, allowing water to seep in and cause a short circuit. Descale the atomizer regularly to extend its service life.
3. Before moving the unit, first disconnect the power, drain all water from the tank, carefully check the panel temperature with your hand, then proceed to move it.

### Atomizing Fireplace – Operation & Care

**About the Atomizing Fireplace:**  
The unit uses ultrasonic atomization combined with a special physical effect to create lifelike flames. An internal ionic mist generator converts water into ultra-fine vapor; a quiet blower propels this vapor upward, while LED lights illuminate the mist, producing the convincing flame you see.

### Installation & Operation of the Atomizing Fireplace

1. The 3-D atomizing fireplace is designed to lie flat inside a recess; a power outlet must be provided within that recess.
2. A ventilation opening must be provide in the recess; panel-vent models do not require a separate vent (consult customer service for vent details).

Water-Level Gauge for Fireplace Refill					
1	700mm	3.5L	6	1800mm	9L
2	800mm	4L	7	2000mm	10L
3	1000mm	5L	8	2500mm	11.5L
4	1200mm	6L	9	3000mm	13.5L
5	1500mm	7.5L			

# Voice Commands for Atomizing Fireplace

	Command word	Response
1	Power-on greeting	smart fireplace system is open.Please wake me up with Hello fireplace
2	Hello-fireplace	Hello-fireplace
3	Exit voice prompt → 1-minute sleep → Any incoming prompt restarts timer	Master I rested5A 010000 AE 60
4	Open-fireplace	Smart fireplace is opening,please wait
5	Close-fireplace	The fireplace is closed
6	Red-flame	orange flame is on
7	Orange-flame	Orange-flame
8	Yellow-flame	yellow flame is on
9	White-flame	white flame is on
10	Cyan-flame	Cyan flame is on
11	Blue-flame	Blue flame is on
12	Purple-Flame	Purple flame is on
13	Switch flame	Flame switched
14	Turn on the light	The lightis on
15	Turn off the light	The light is off
16	automatic-color-displaying	Color is changed automatically
17	Increase-flame High flame	Flame is up
18	Reduce-Flame Low flame	Flame is down
19	Start-adding-water	Add water automatically
20	Water-discharge	Please confirm whether thewater needs to be discharged.
21	Yes	Under drainage
22	Timed thirty minutes	It has been timed for thirty minutes
23	Timed sixty minutes	It has been timed for sixty minutes
24	Timed ninety minutes	It has been timed for ninety minutes
25	Timer shut down	Timer is off
26	increase-the-volume	volume is up
27	lower-the-volume	volume is down