


Manual Book

Ceiling Fan with Lights

Model No.: FS8858-01

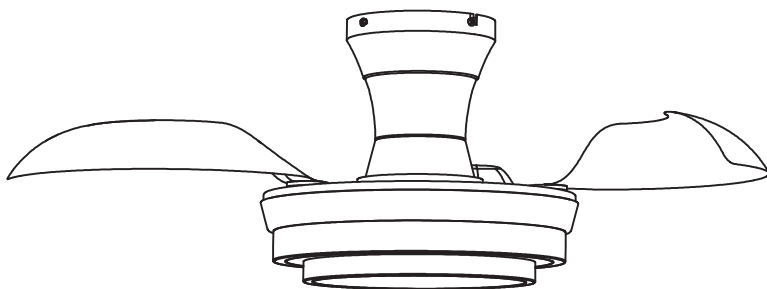

Scan for Installation Video



APP Control Applicable

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably /supporting a minimum of 70 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). The fan must be turned off and the blades stopped before reversing the blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan lights may have different light shades and bulbs.
11. Use only our replacement parts.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

Warning:


To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.

To reduce the risk of fire, electric shock, or personal injury, mount the fan to the outlet box marked "acceptable for fan support".


To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Preparation


Tools You Need

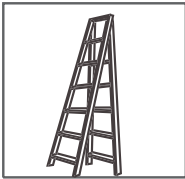


☒ Ladder

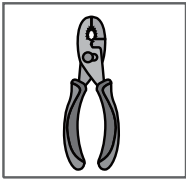


☒ Pliers

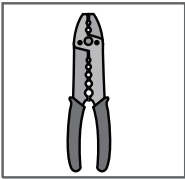

☒ Wire Strippers

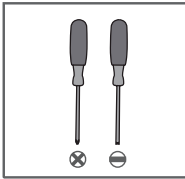

☒ Screwdrivers

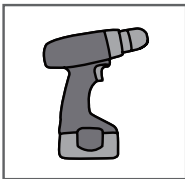


☐ Power Drill (optional)




☐ Drill Bit (optional)

If mounting to a support structure, you will also need the optional tools.

What to Expect with Your Installation

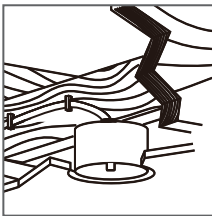


☒ Must be able to secure the fan to building structure or fan-rated outlet box

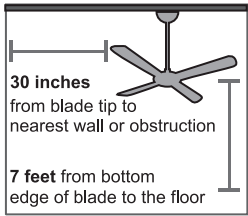

☒ Assess location



☒ Check the box to see the weight of the fan

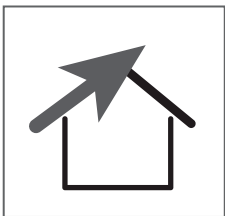

☒ Not applicable for angled ceiling

 
Switch Selection

Note: Using a dimmer switch to control the fan may damage the fan. To reduce the risk of fire or electrical shock, do not use a dimmer switch to control the fan.

The recommended switches are as follows:




Recommended:



Single Pole Switch
(Not Included)



 Not Recommended:


Dimmer Switch

 

Timer Switch


Fan Speed Control
Switch


Motion Sensor
Switch


Installation Recommended

Room Size:

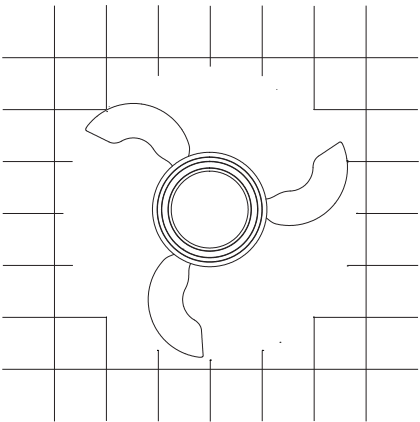


UP TO 8 ft × 10 ft

Room Height:

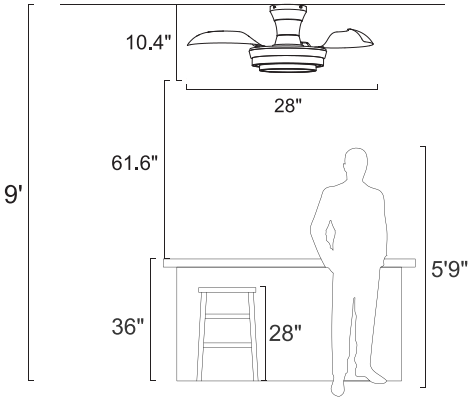


Recommended ceiling height: 7 to 10 ft.

Packing List

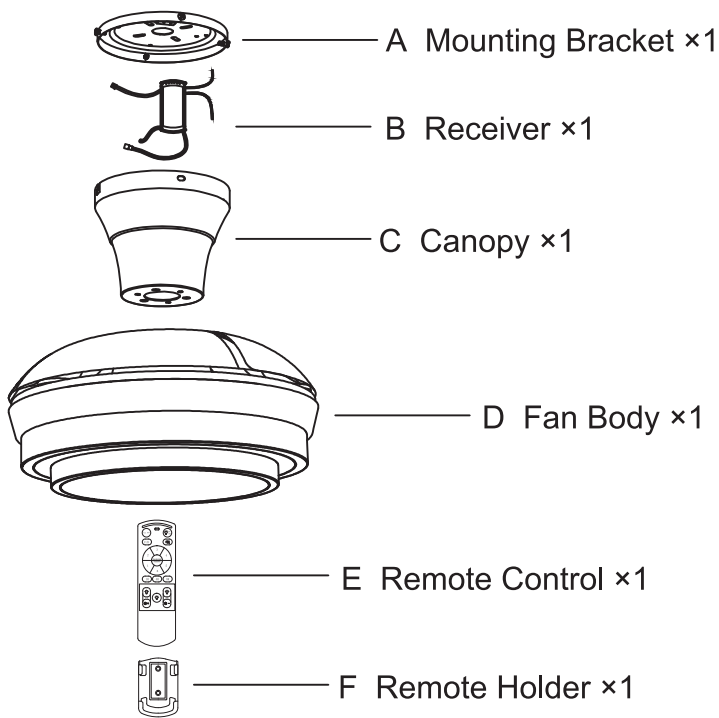

Note: Before installation, please rotate the lampshade at the bottom of the fan body (D) and then remove it. Take out the protective materials inside.


Installation Kit

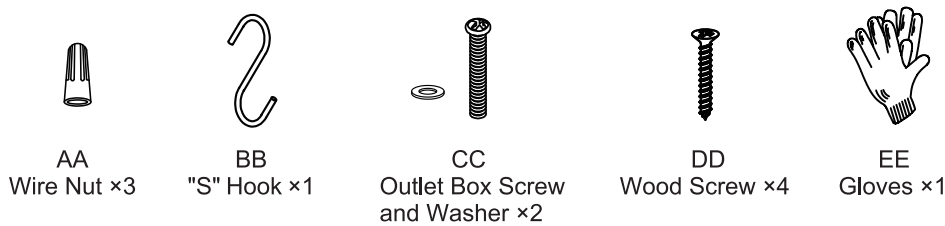

Installation Instructions


1. Assemble the Canopy

Step 1. Loosen and remove the canopy screws from the round slots, and loosen the canopy screws in the 'L' slots but do not remove them. And then take out the mounting bracket from the canopy.

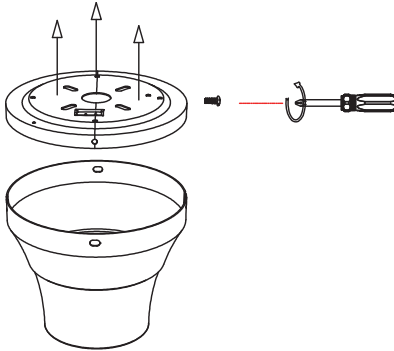


Step 2. Remove the three screws on the recessed holes.

Step 3. Thread the power wire through the canopy, and secure the canopy to the fan body with the screws just taken off.

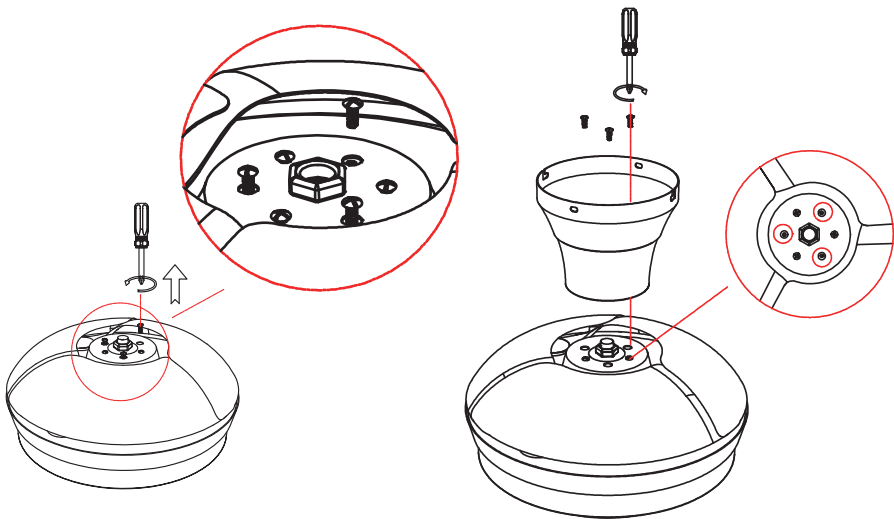


2. Connect the Receiver

Step 1. Connect the fixture wires terminal to the interface on the receiver.

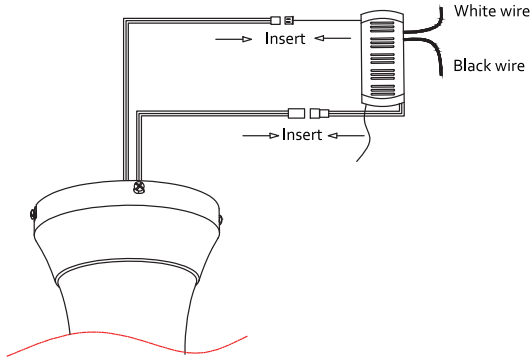


3. Hang the Fan

Step 1. Take off the screws from outlet box, secure the mounting bracket onto the outlet box with screws taken off or provided in the package.

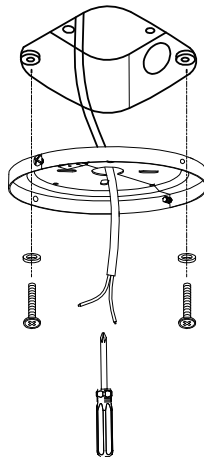


Step 2. Hang the fan onto the mounting bracket with "S" hook provided.

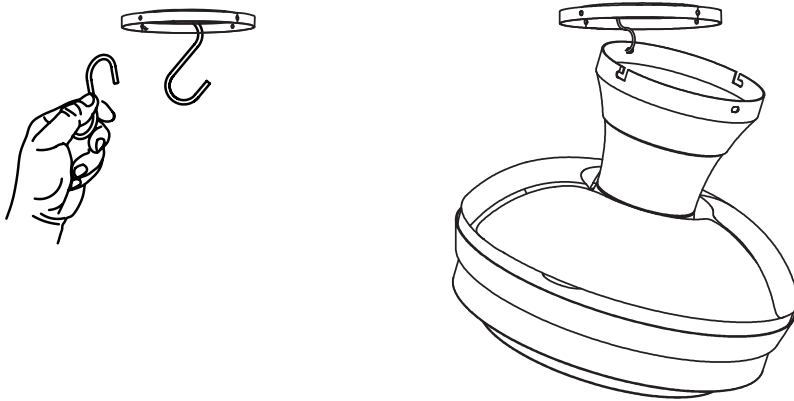

4. Connect the Wires

Step 1. Connect the wires from the receiver to the house supply wires with wire nuts, ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire.



Step 2. Wrap the connection with electrical tape.

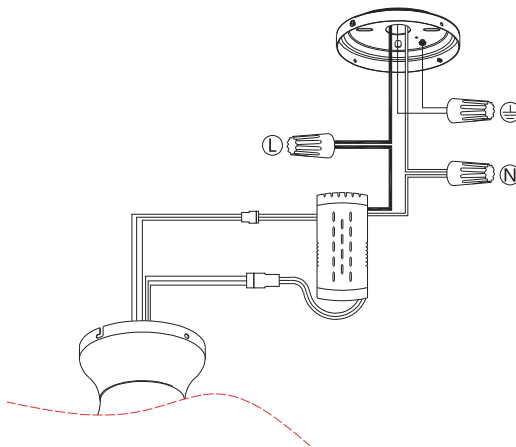

5. Attach the Canopy

Step 1. Take away the "S" hook.

Step 2. Align the "L" slots from the canopy to the canopy screws on the mounting bracket, rotate the canopy to lock it onto the mounting bracket. Tighten the canopy screws.

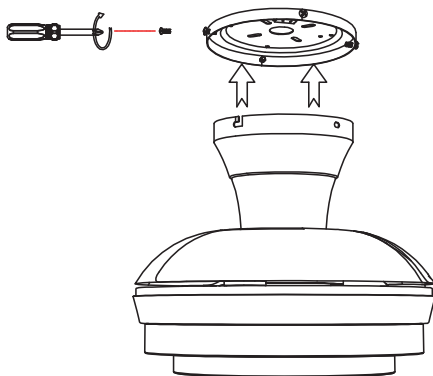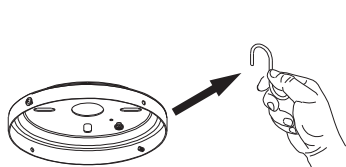



Remote Control Instructions

		Turn off the fan and lights.
		Turn on/off the beep sound.
		Alternate the fan's rotation between forward and reverse.
		Turn off the fan.
		1/2/3/4/5/6 for fan speeds.
		1H//4H/8H for timing the fan.
		Turn on/off the lights.
		Press to quickly switch light colors.
		Press to +/- the brightness of the light.
NOTE: Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included). REMOTE SIGNAL PAIRING: If the remote control loses the signal of the fan, turn off the power from wall switch, then turn it on, press immediately for around 3 seconds, after the fixture beeps or flashes, then it's done.		

APP Control Instructions



Install the "FanLamp Pro" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.

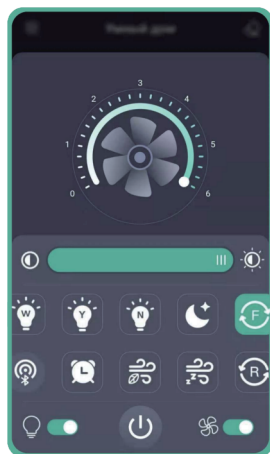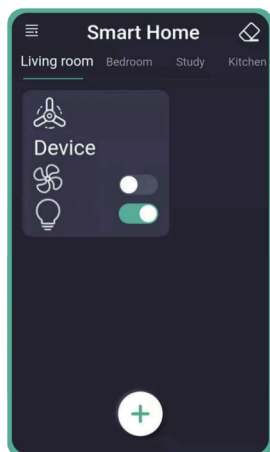

-  Pairing: Click the pair button within 5 seconds after turning on the fan from the wall switch. Once the fan flashes or beeps, it has been successfully paired with your phone and can now be controlled through the app.
-  Slide the slider to change the fan speed.
-  Slide the slider to change the brightness of the light.
-  Quick switch for "White" light color.
-  Quick switch for "Yellow" light color.
-  Quick switch for "Natural" light color.
-  Night mode: Dim the lights.
-  Fan moves forward.
-  Change the direction of the wind (Not applicable on this fan).
-  Timing the fan.
-  Natural wind: The fan speed will change automatically when you use this function.
-  Sleeping wind (Not applicable on this fan).
-  Fan moves reversely.
-  Turn on/off the light.
-  Turn on/off the fan.
-  Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.

Trouble Shooting

1. Fan does not work

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Check the power cord connection and the power supply connection.

2. Lights do not light up / flicker / noisy operation

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check your power and switch to make sure it's powered on.

3. Noisy operation

- Re-tighten all screws on the bracket.
- Check to see if any of the blades are cracked. If so, replace the blades.

4. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again.(See "Remote Control Instructions")
- Install two new batteries.

Clean And Care

To clean, wipe the fixture with soft cloth. Spray from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from place of purchase. Use exact wording from diagrams when ordering parts.