 
 
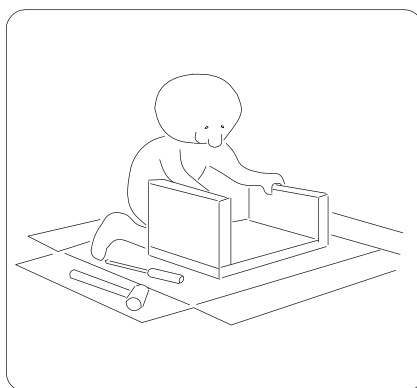 
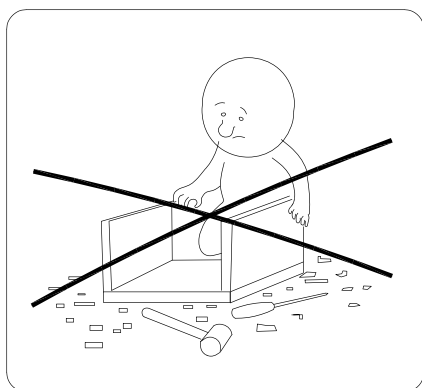 
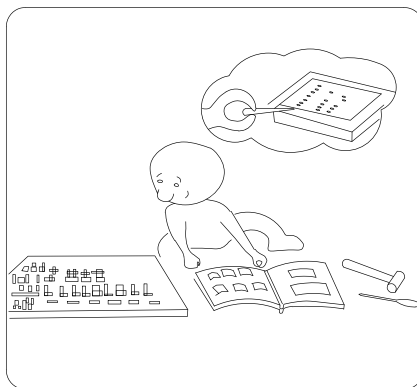 
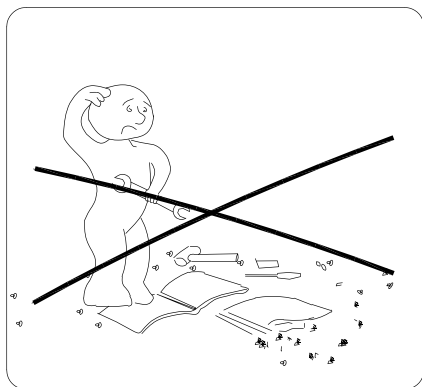 
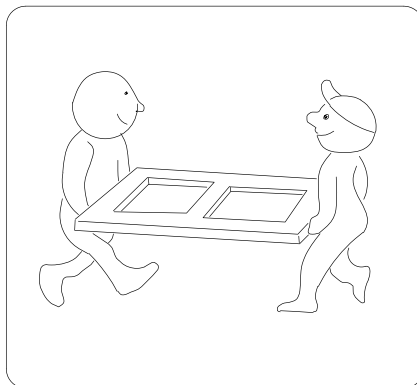 
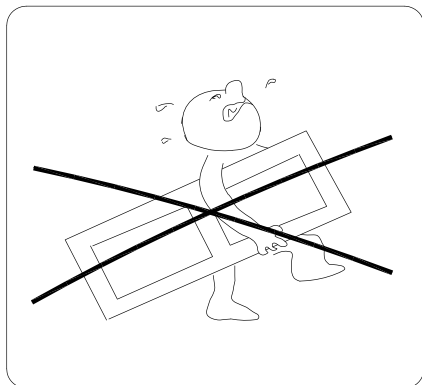 
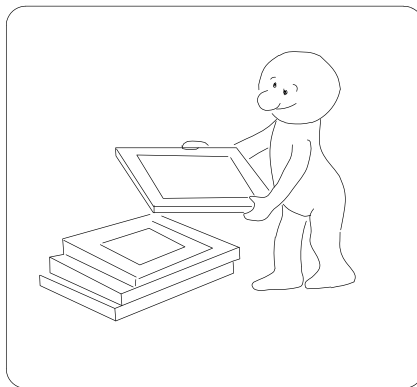 
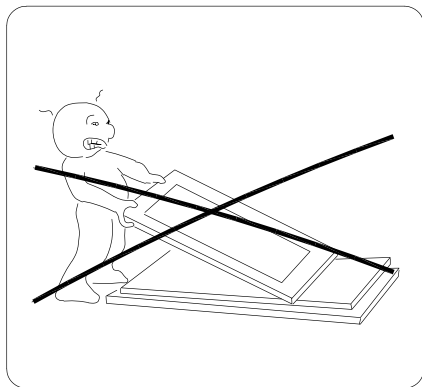 


ASSEMBLY AND CARE INSTRUCTION

Medium Dog Crate

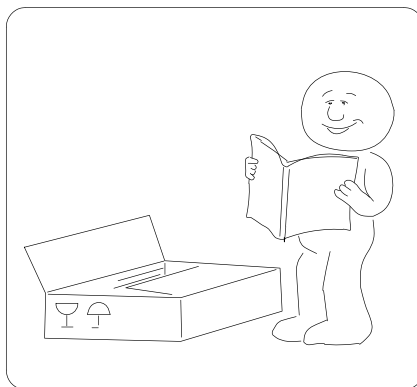

WARNING

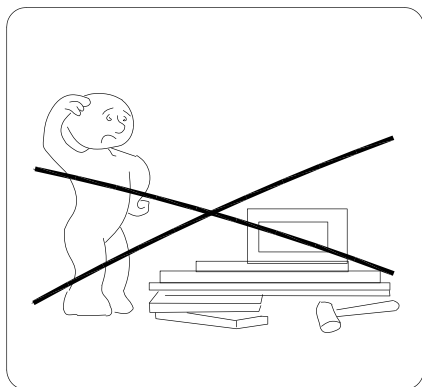 


1. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY.
2. DO NOT LET ANY SHARP OBJECTS TOUCH OR RUB THE SURFACE OF THE PRODUCT.
3. WHEN ASSEMBLING, DO NOT LET CHILDREN PLAY AROUND THE WORKING AREA.
4. PLEASE CONFIRM ALL PARTS ARE CORRECT BEFORE STARTING THE ASSEMBLY PROCESS.
5. DO NOT TIGHTEN ALL BOLTS AND SCREWS COMPLETELY UNTIL THE ENTIRE UNIT HAS BEEN ASSEMBLED AND SET UP.

ADVISE



1. DO NOT SIT OR STAND ON THIS PRODUCT. IT IS INTENDED FOR PETS ONLY.
2. THIS PRODUCT SHOULD BE ASSEMBLED BY AN ADULT.
3. PLEASE PUT THE PRODUCT ON A SMOOTH SURFACE AFTER YOU ASSEMBLED IT.
4. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
5. THE SCREW OF HINGE ON THE DOOR ALSO CAN BE ADJUSTABLE, TO MAKE IT EVEN THEN TIGHTEN ALL SCREWS.

TOOL NEEDED




SCREWDRIVER REQUIRED
- NOT INCLUDED

  PARTS

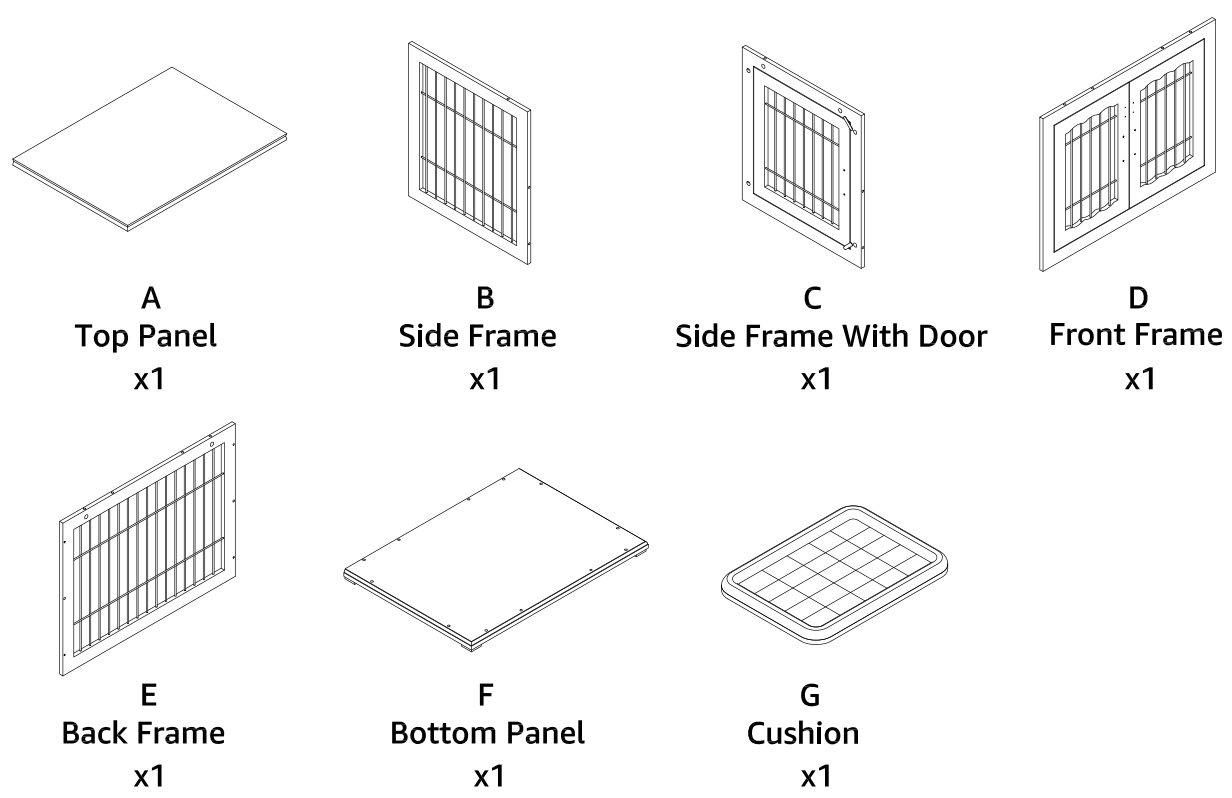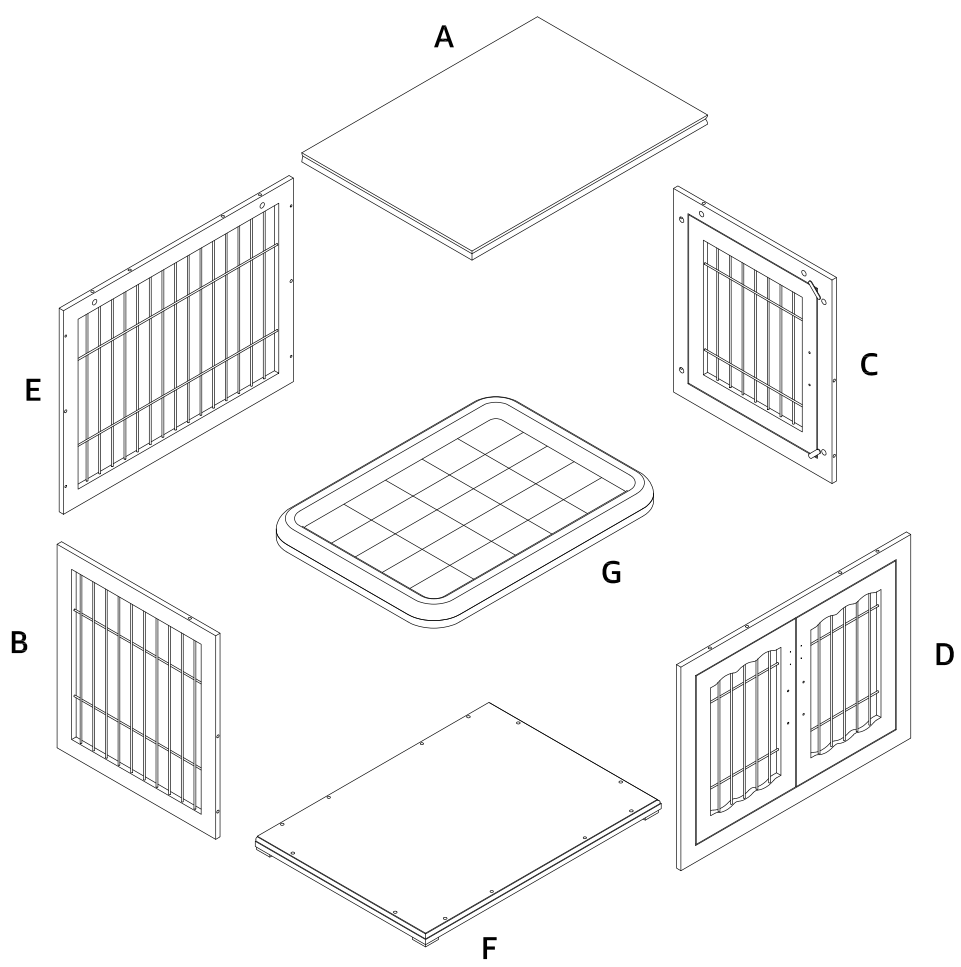

HARDWARE

 


1
x 16 pcs



2
x 16 pcs



 3
x 12 pcs




4
x 2 sets



5
x 12 pcs



 6
x 4 pcs



7
x 2 sets



8
x 8 pcs



9
x 3 pcs



10
x 6 pcs



11
x 8 pcs



12
x 8 pcs



13
x 8 pcs

 
 


14
x 1 pc

ASSEMBLY INSTRUCTIONS

1

Install the latch 4 to the front frame D and tighten them with screw 5.
Insert wood dowel 3 and tighten pin 1 into the front frame D and back frame E.

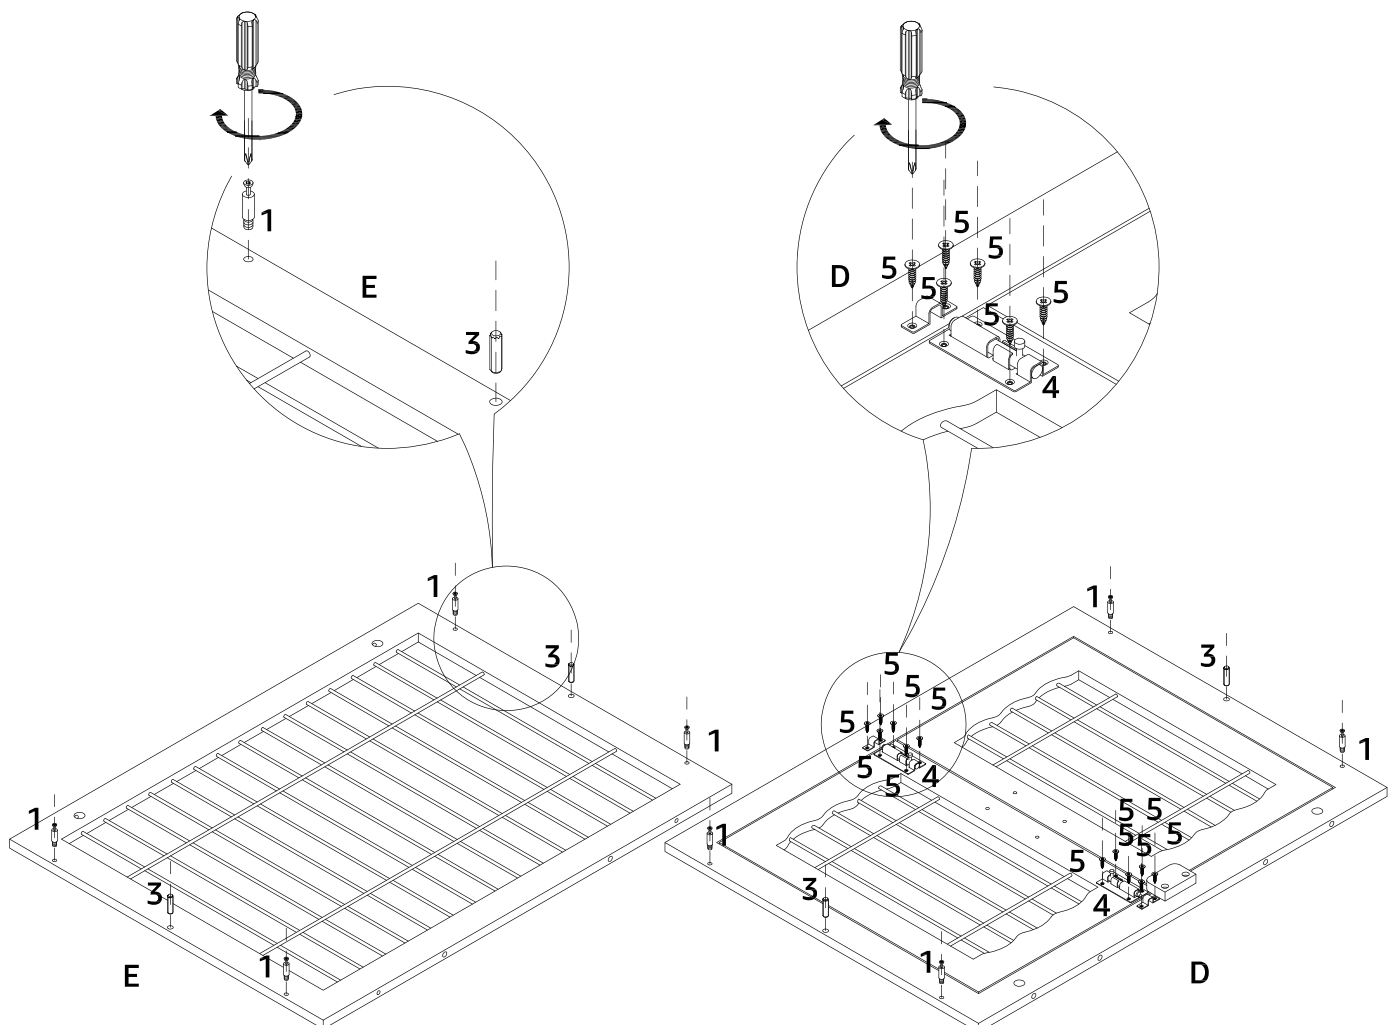
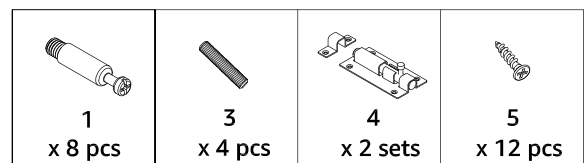


2

Connect side panel B and C to front panel D, insert cam lock 2 into the hole on both side panel B and C, tighten cam lock 2 to pin 1.

Connect back panel E to side panel B and C, insert cam lock 2 into the hole on both side panel B and C, tighten cam lock 2 to pin 1.

  Stick four EVA pad 6 to the corner of bottom panel F.

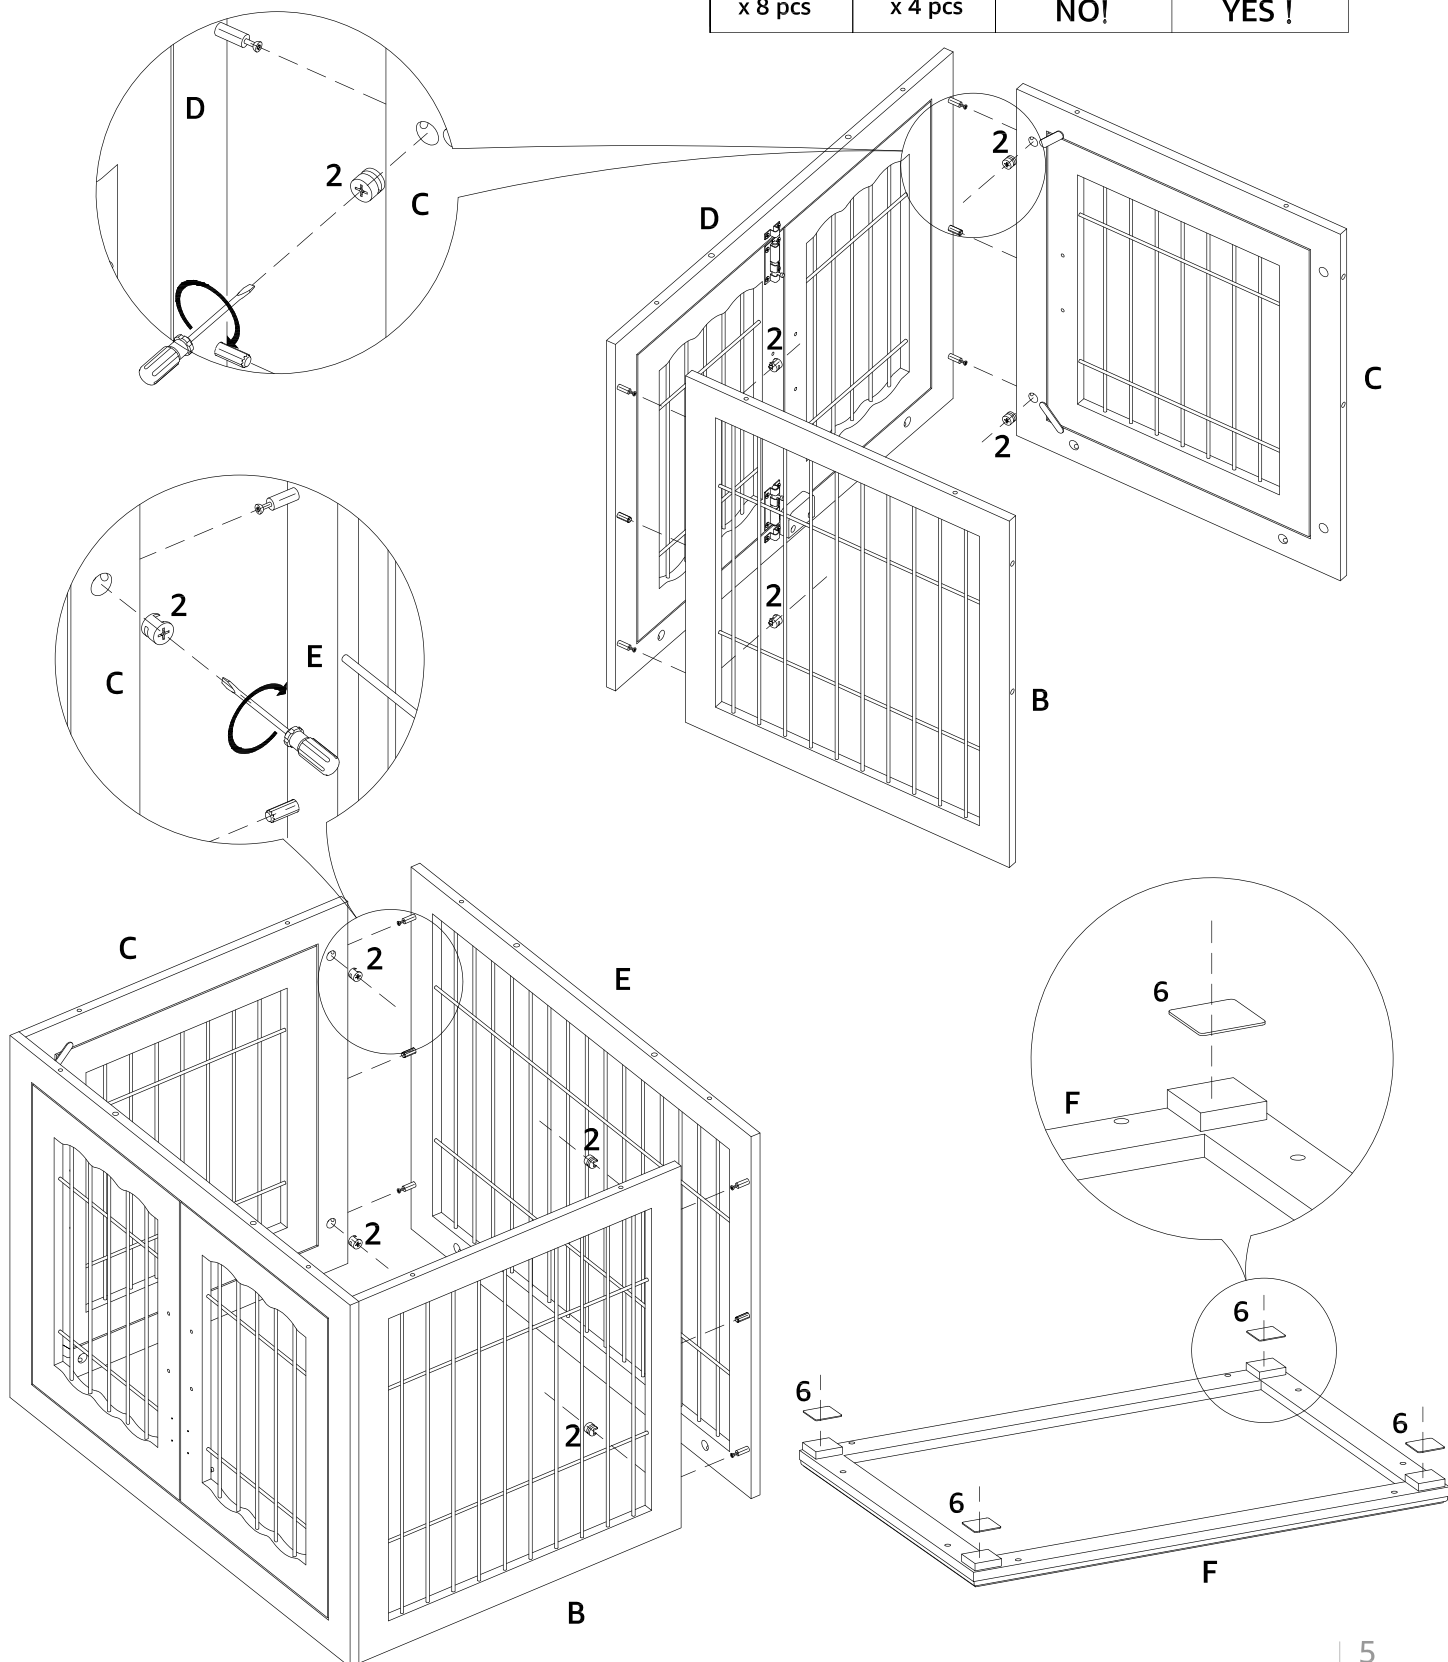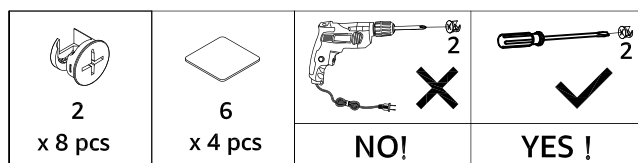








3

Insert the wood dowel 3 into the front and back frame D & E.

Tighten bolt 11 into the hole of the bottom panel F with the washer 12 and 13 using Allen Wrench 14.

Tighten pin 1 into top panel A.

| | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| 1 | 3 | 11 | 12 | 13 | 14 |
| x 8 pcs | x 4 pcs | x 8 pcs | x 8 pcs | x 8 pcs | x 1 pc |

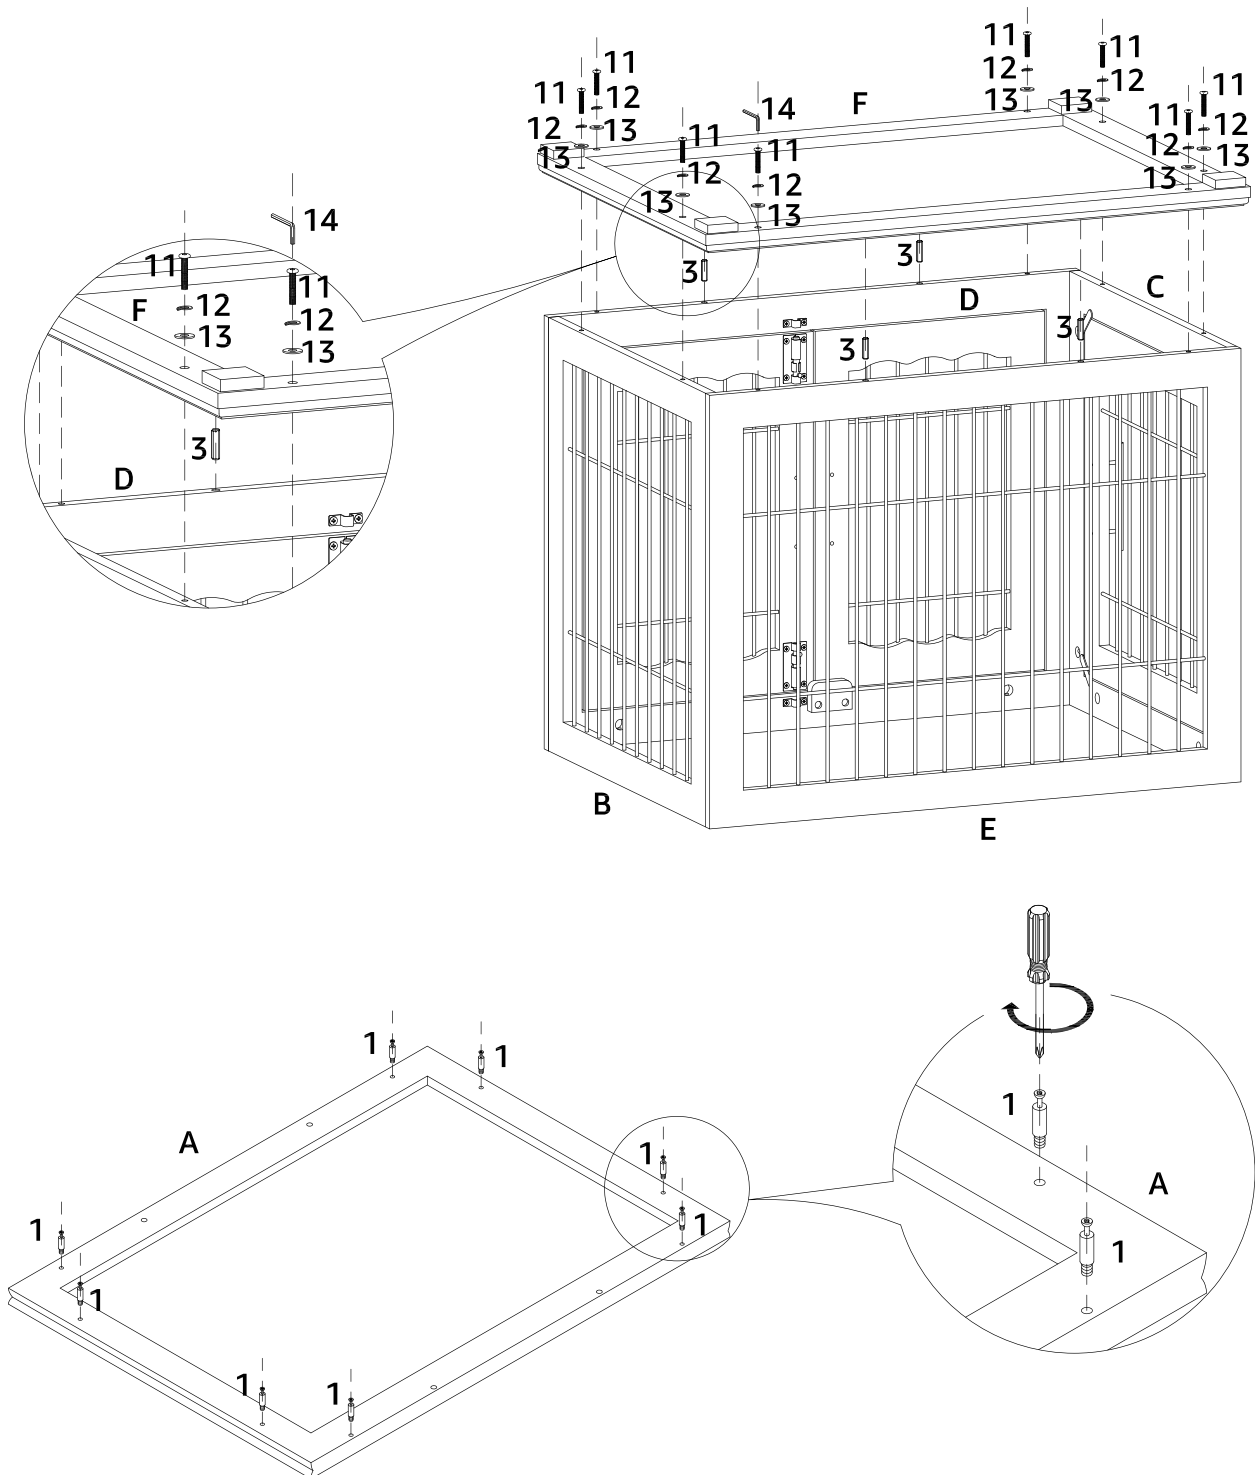 

 



 



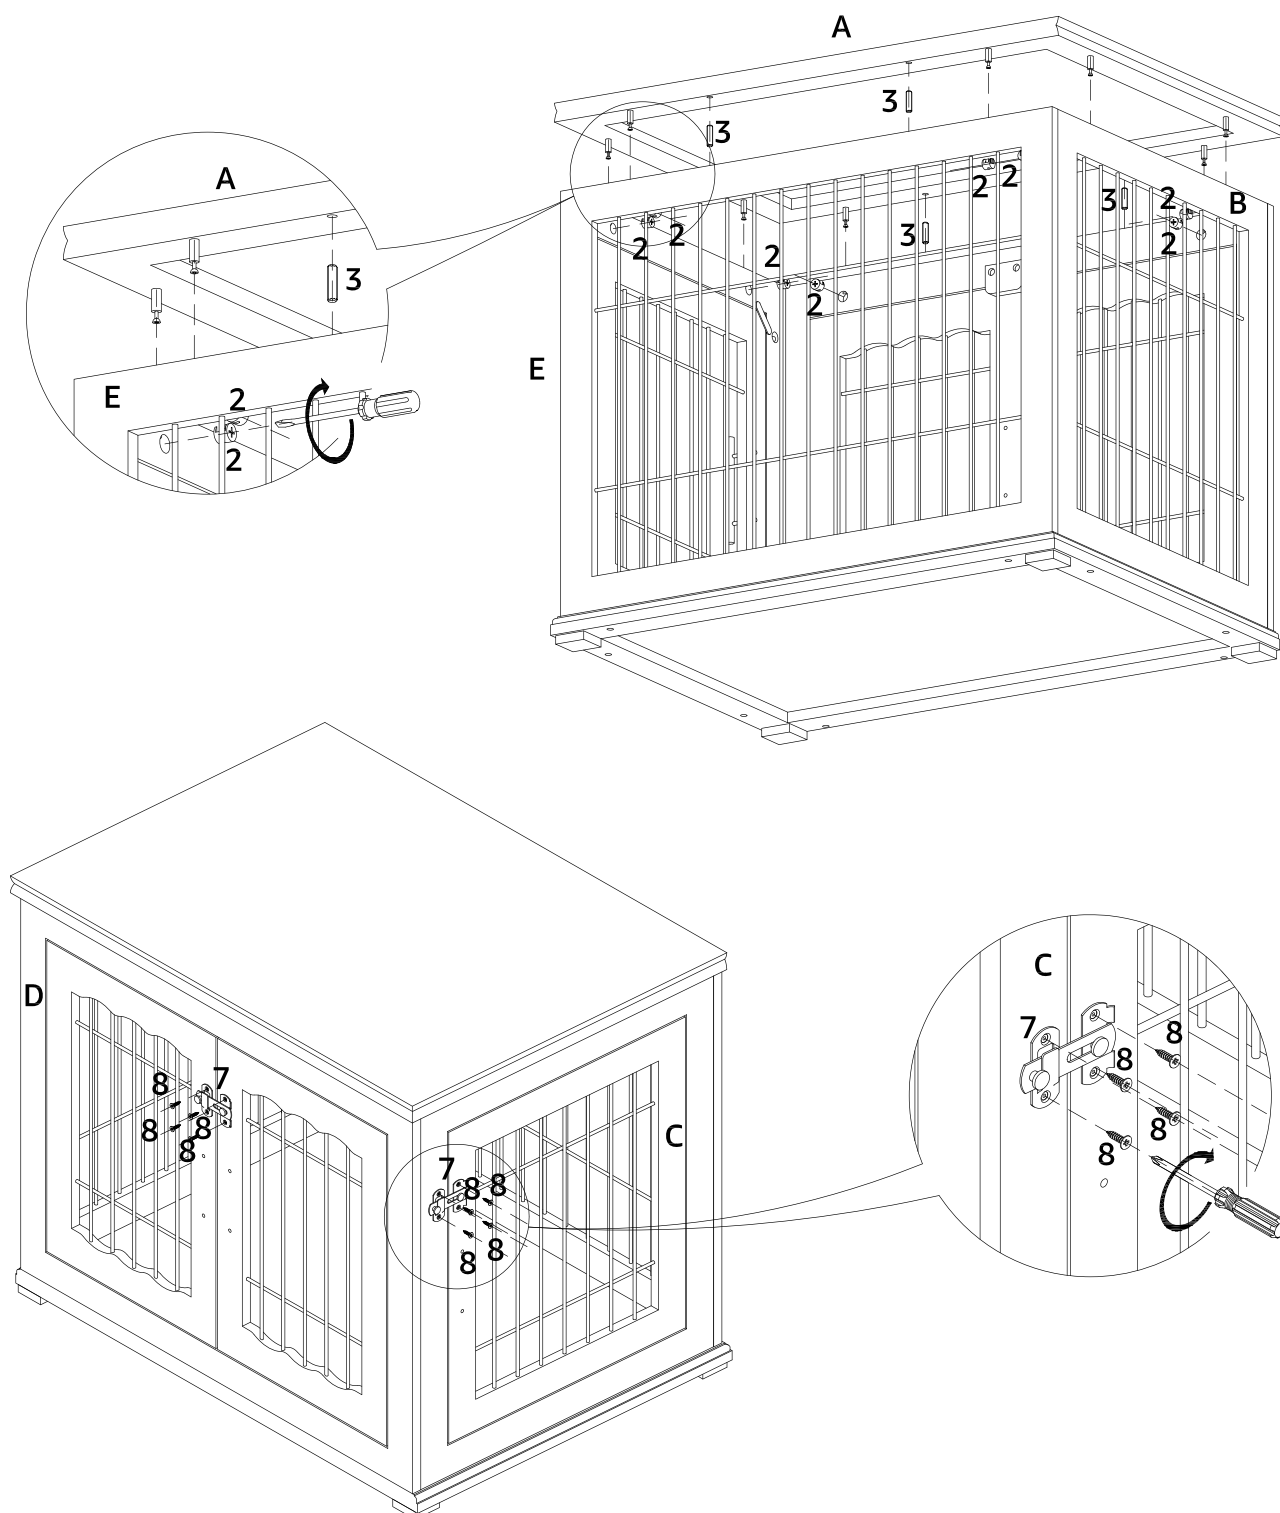 
4

Insert wooden dowel 3 into the assembled frame at first.

Input top panel A into the assembled frame and tighten cam lock 2 to pin 1.

Install the latch 7 to the front frame D and side frame with door C, tighten them with screw 8.

| | | | | | |
|---|---|---|--|---|---|
|  |  |  |  |   |   |
| 2 x 8 pcs | 3 x 4 pcs | 7 x 2 sets | 8 x 8 pcs | NO! | YES ! |



5

Assemble the knob 9 with bolt 10 to the front panel D and the side panel with door C. Input cushion G inside the crate, assembly complete.

