

INSTALLATION

 
Product Manual

Version: 390180US-01-26A-YS




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

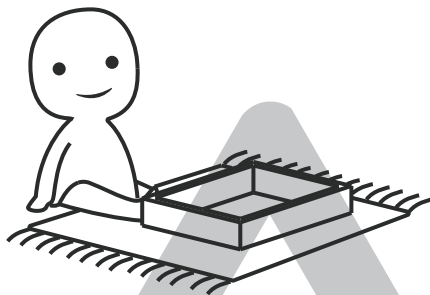



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

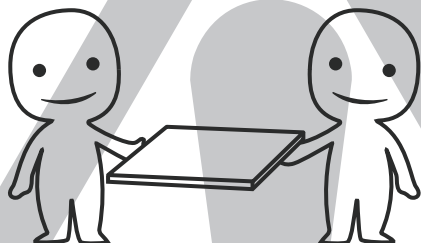

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

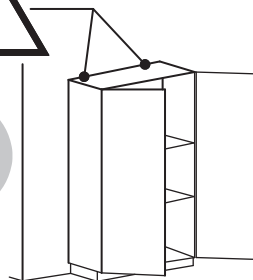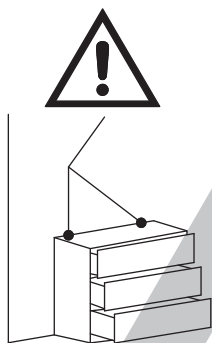

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.













Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

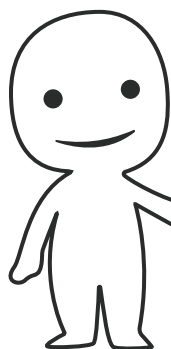


Please prepare the following tools

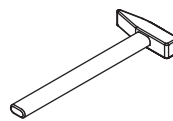 
 
 


            When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

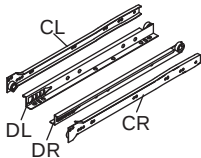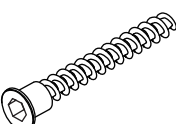A x 48  M4 x 10 mm	B x 14  M6 x 35 mm	C x 22  M3 x 12 mm	D x 2 	E x 14  Ø 15 x 10 mm
F x 6  M6 x 30 mm	G x 4 	H x 15  M4 x 40 mm	I x 2 	J x 6  M4 x 6 mm
K x 16  M6 x 50 mm	L x 1 	M x 12  M7 x 60 mm	N x 8 	O x 4 
P x 1 	Q x 12  M3 x 6 mm	R x 15  M6 x 12 mm	S x 3  M6	T x 4  M6 x 35 mm
U x 8  M4 x 25 mm	V x 4 	W x 6 	X x 16  M5 x 10 mm	Y x 4  M4 x 15 mm

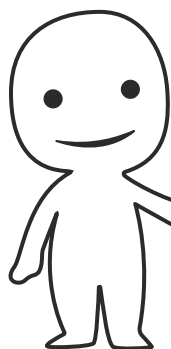 


Please prepare the following tools

   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 
Z x 2



Ø 6 x 30 mm

  A1 x 2



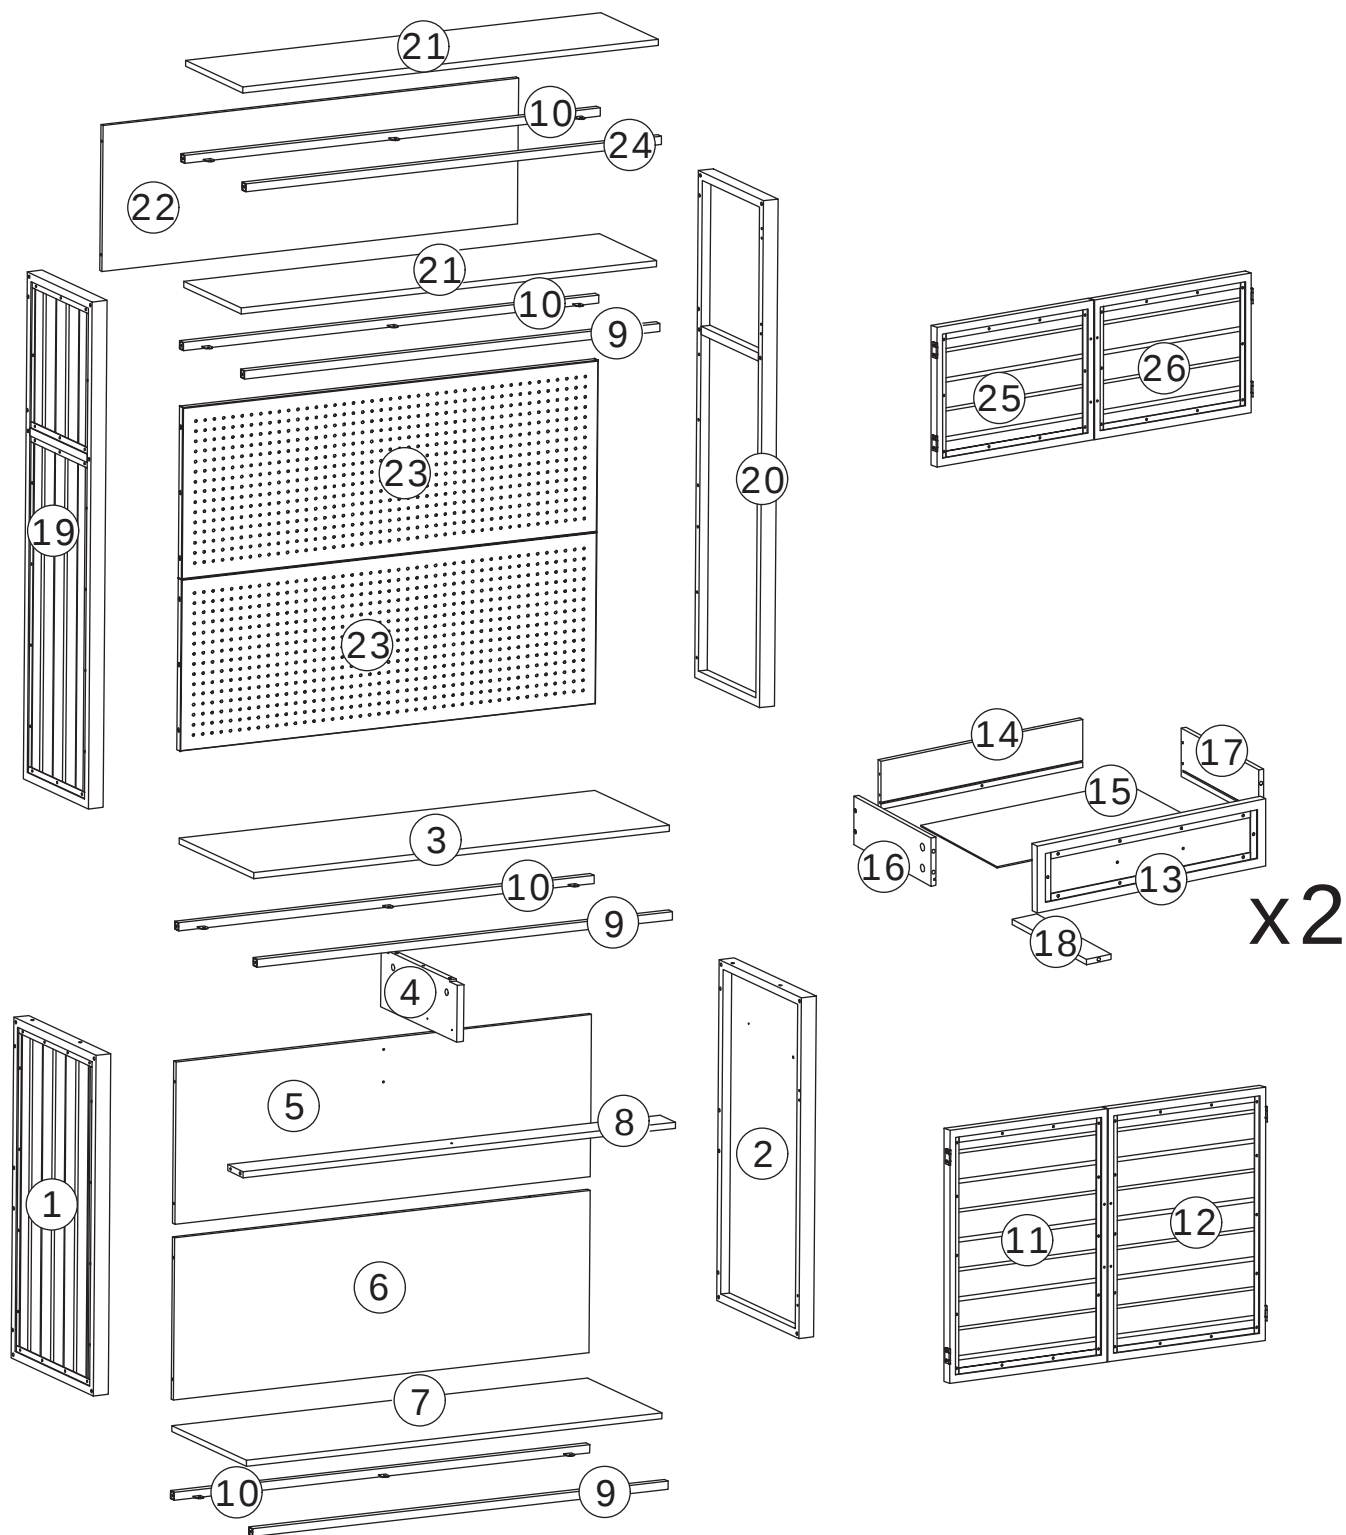


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

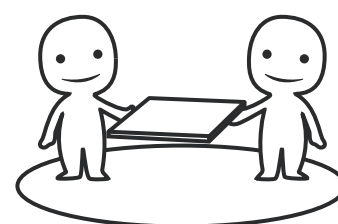


ASSEMBLED BY 2 ADULTS

1

 A x 6
M4 x 10 mm







 Secure parts 9 and 10 to part 3 using screw (A) as shown.

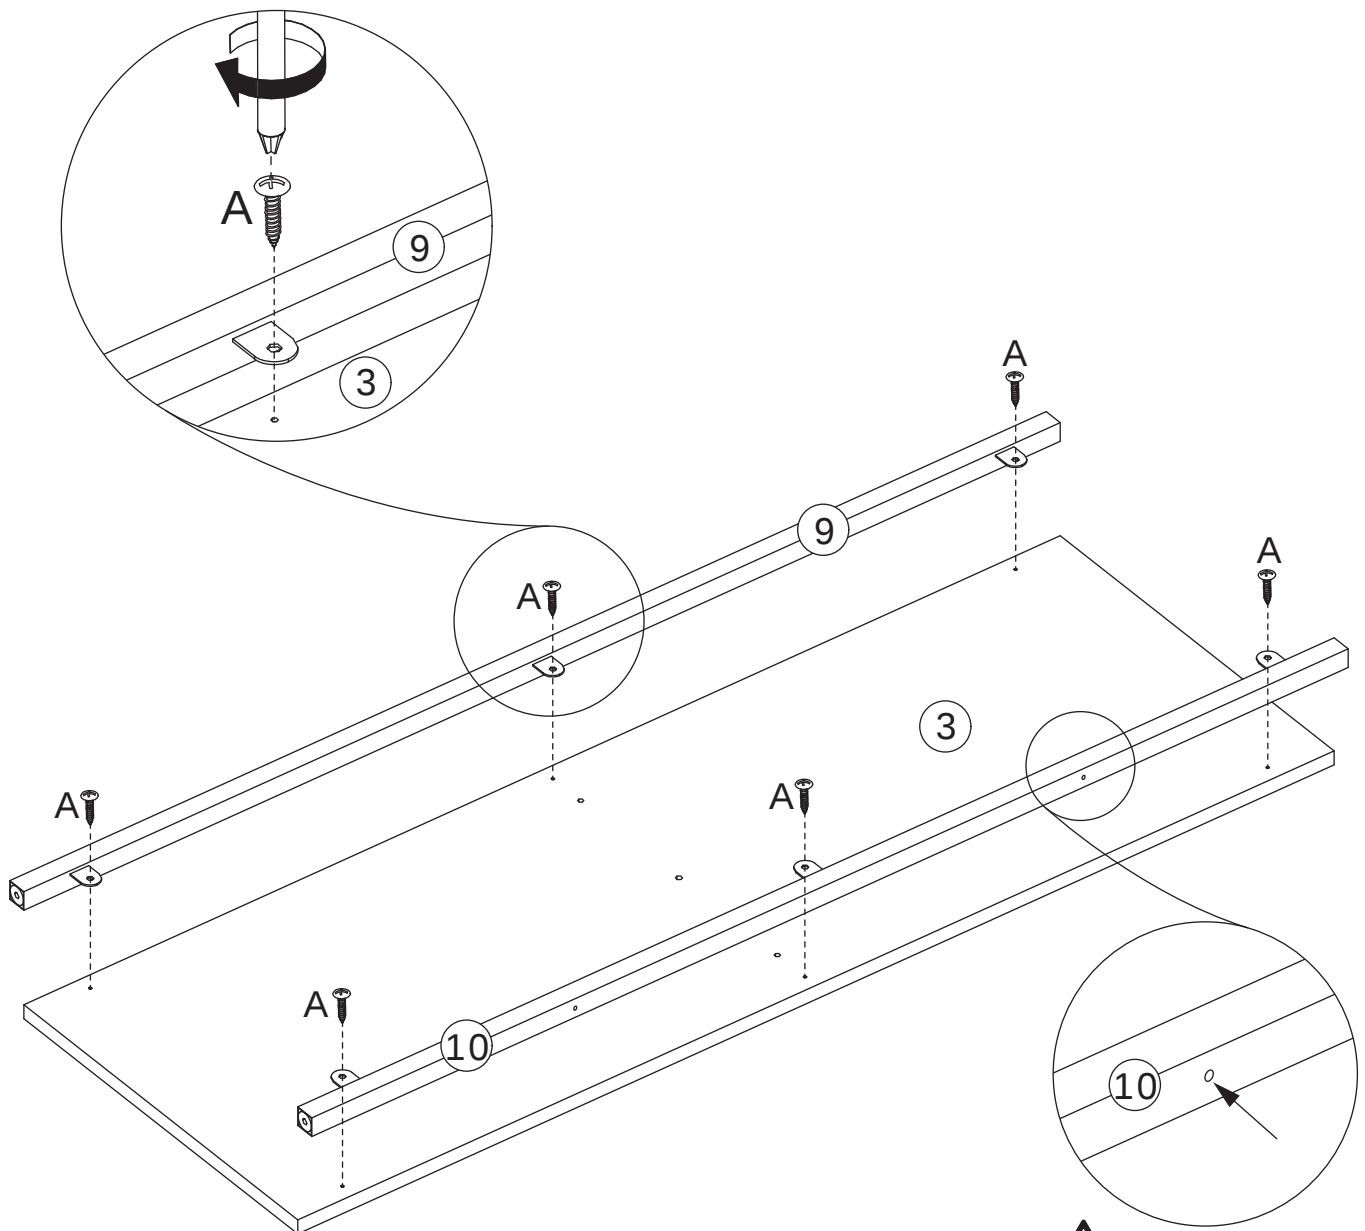


Be sure to identify
the hole locations

  
 
 
2

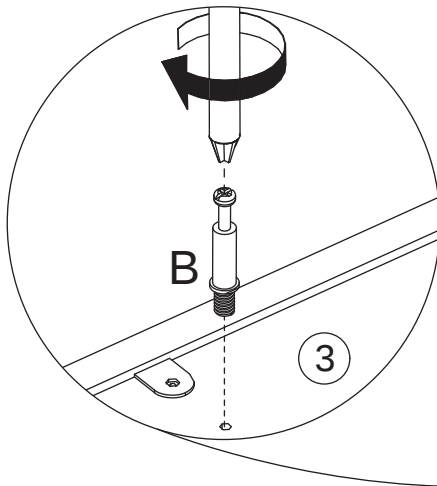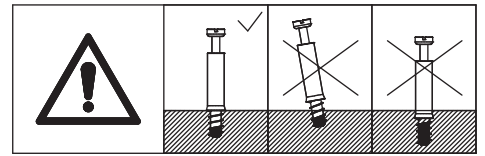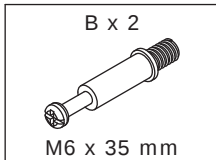



 
Screw eccentric rod (B) to part 3 as shown.

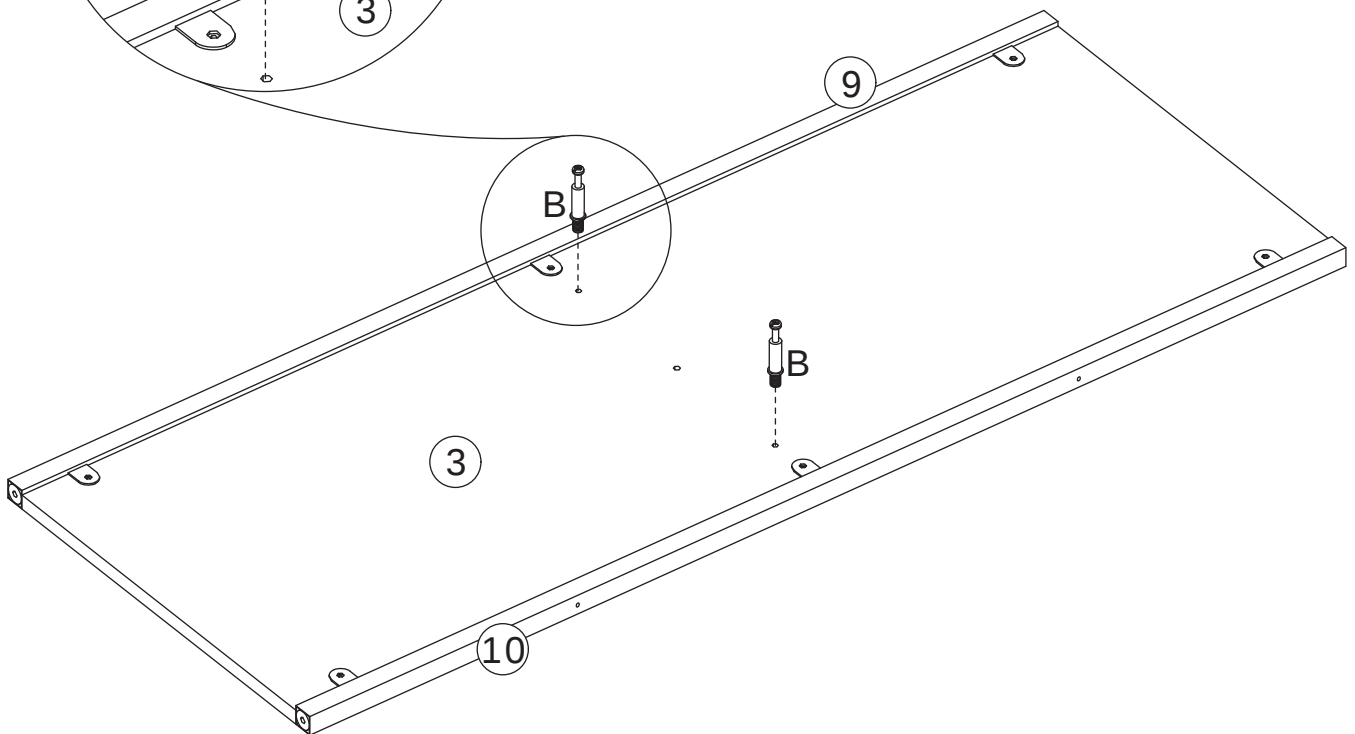

3

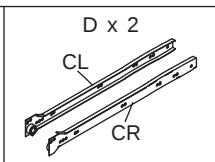  
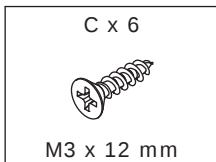 


   Secure slide rail (D-CR) to part 4 using screw (C) as shown.


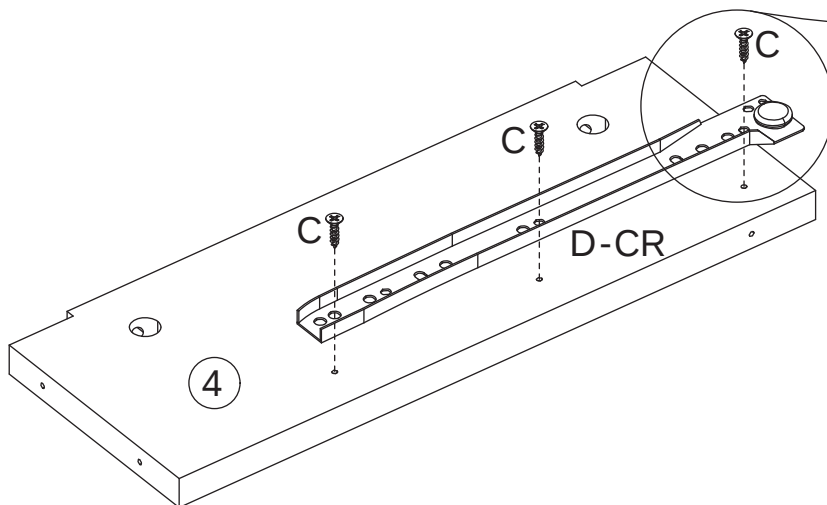
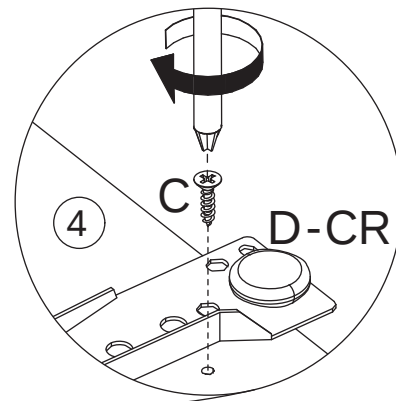
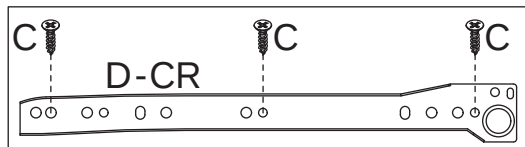


Flip 180°

  
Flip the same board to other side, secure slide rail (D-CL) as shown.

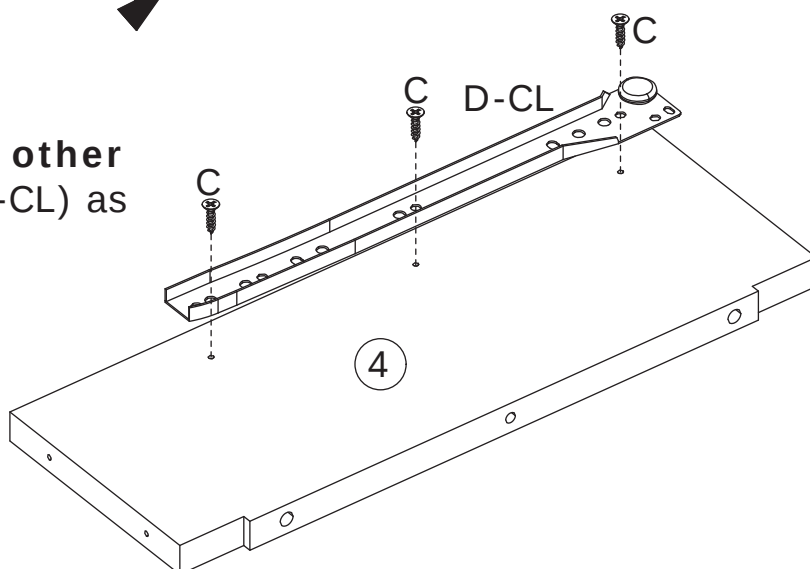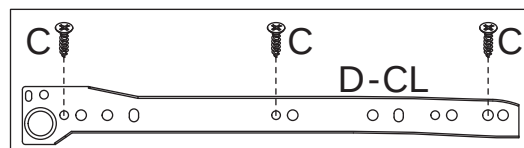

4

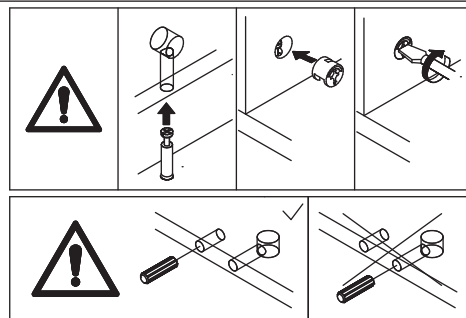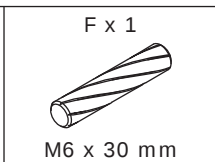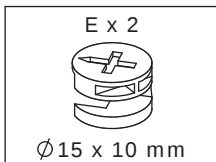    

 
Connect part 4 to part 3 using wooden dowel (F) and secure them with screw (E) as shown.

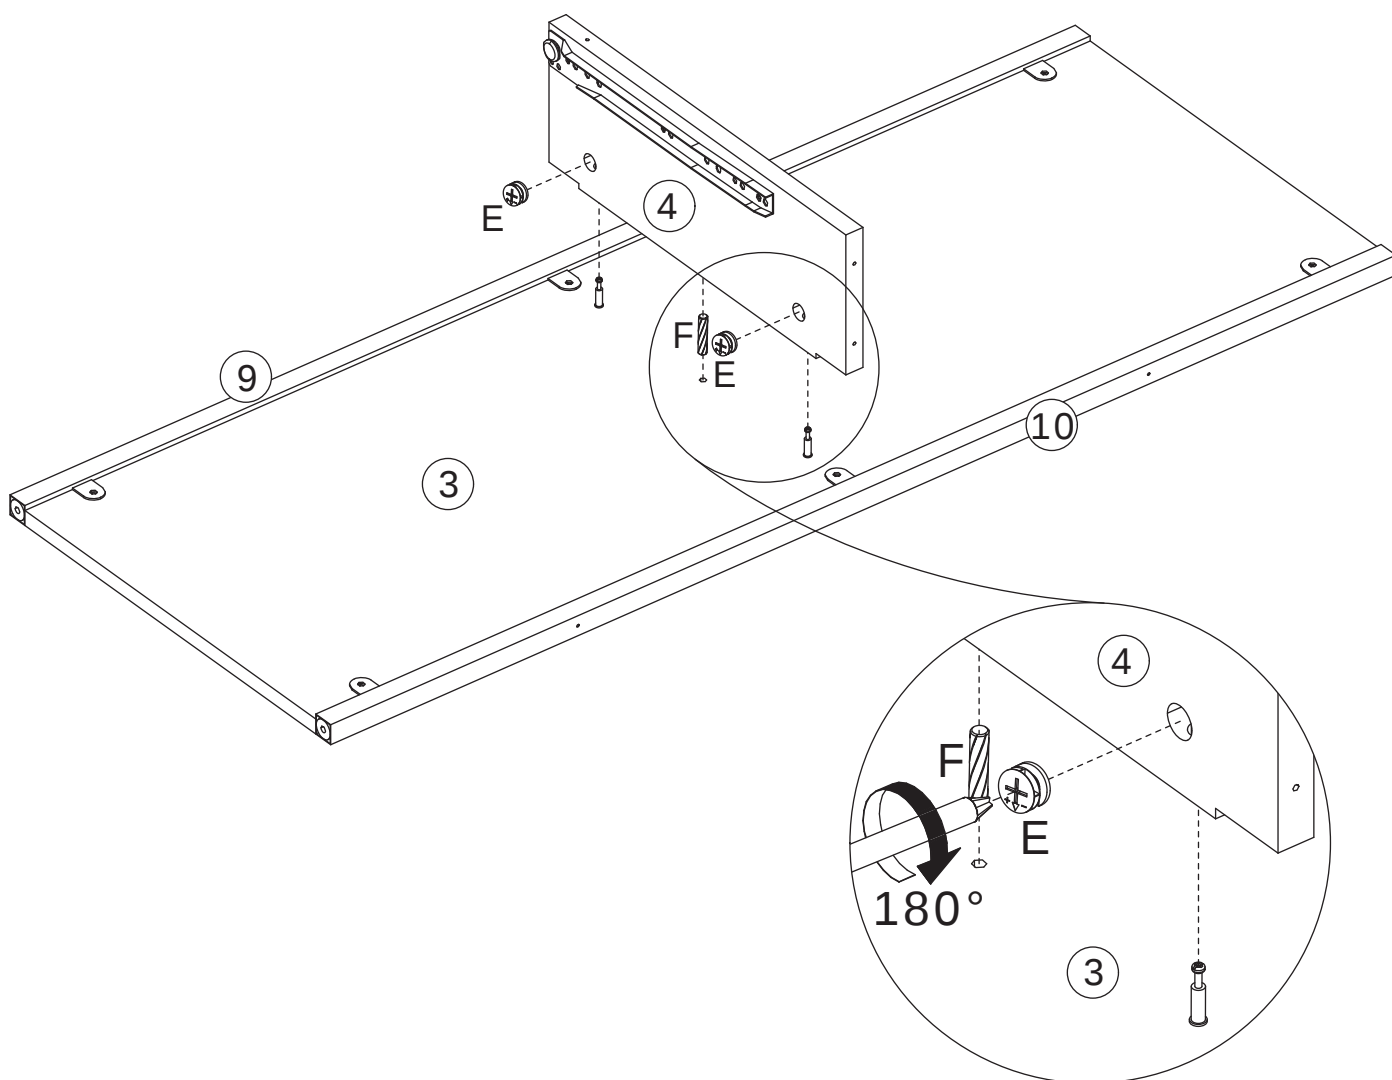




5



 
Secure part (G) to part 8 using screw (C) as shown.

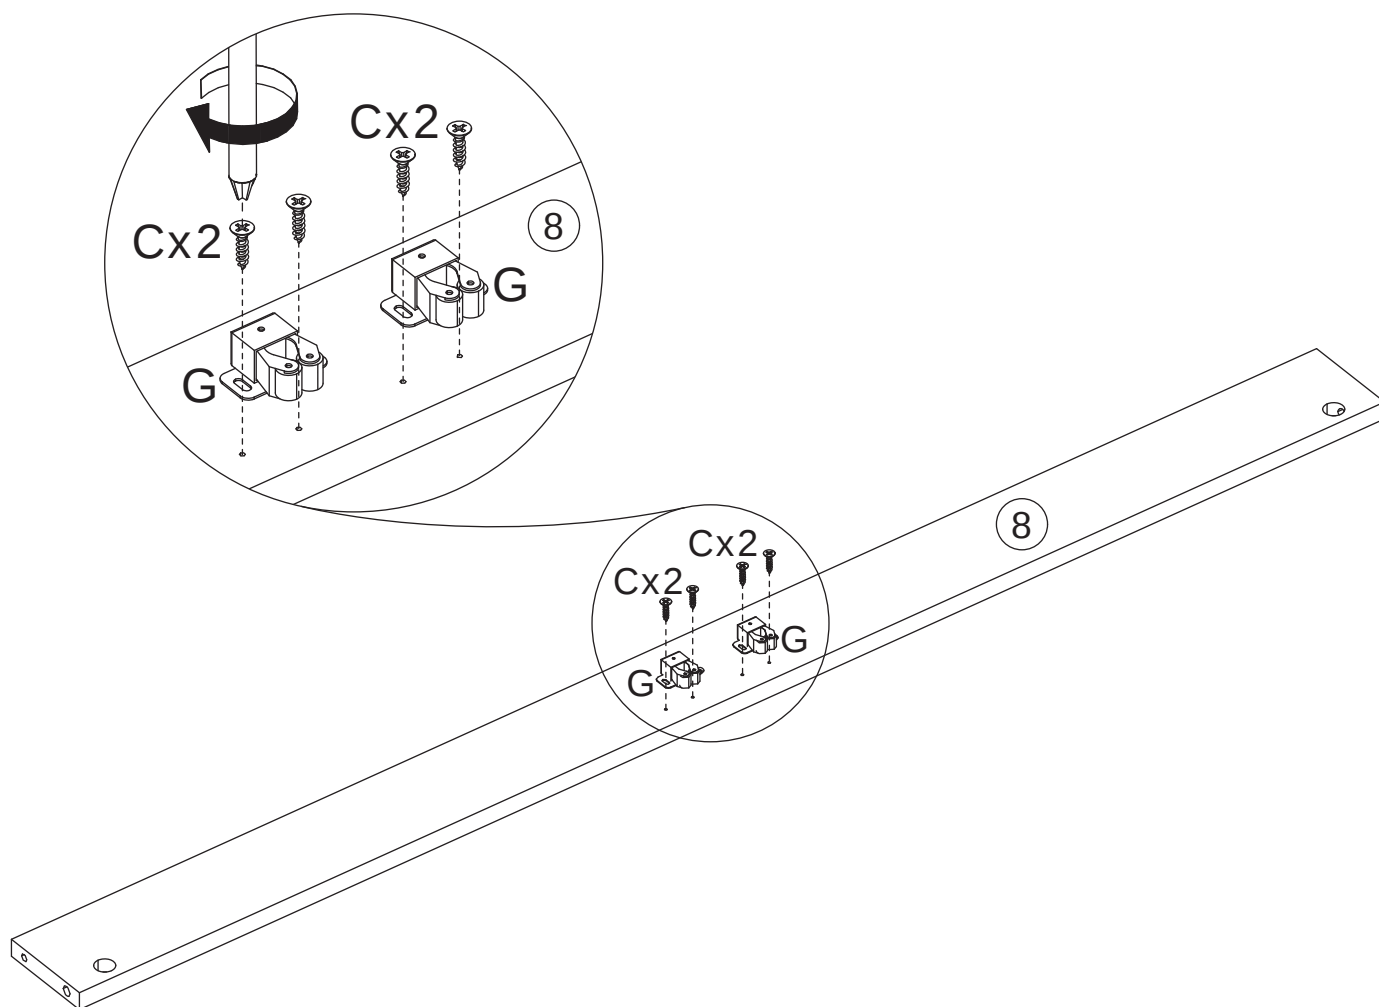

6

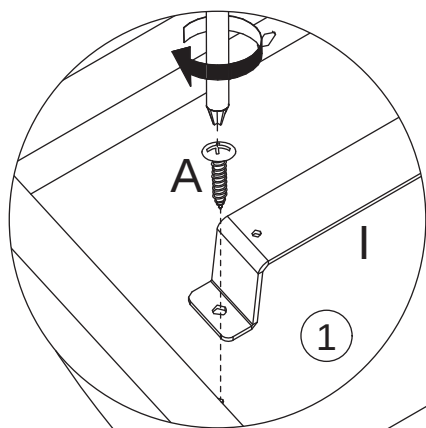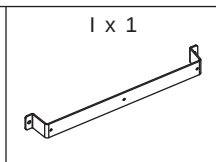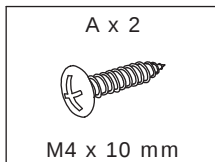   


 
Secure part (I) to part 1 using screw (A) as shown.

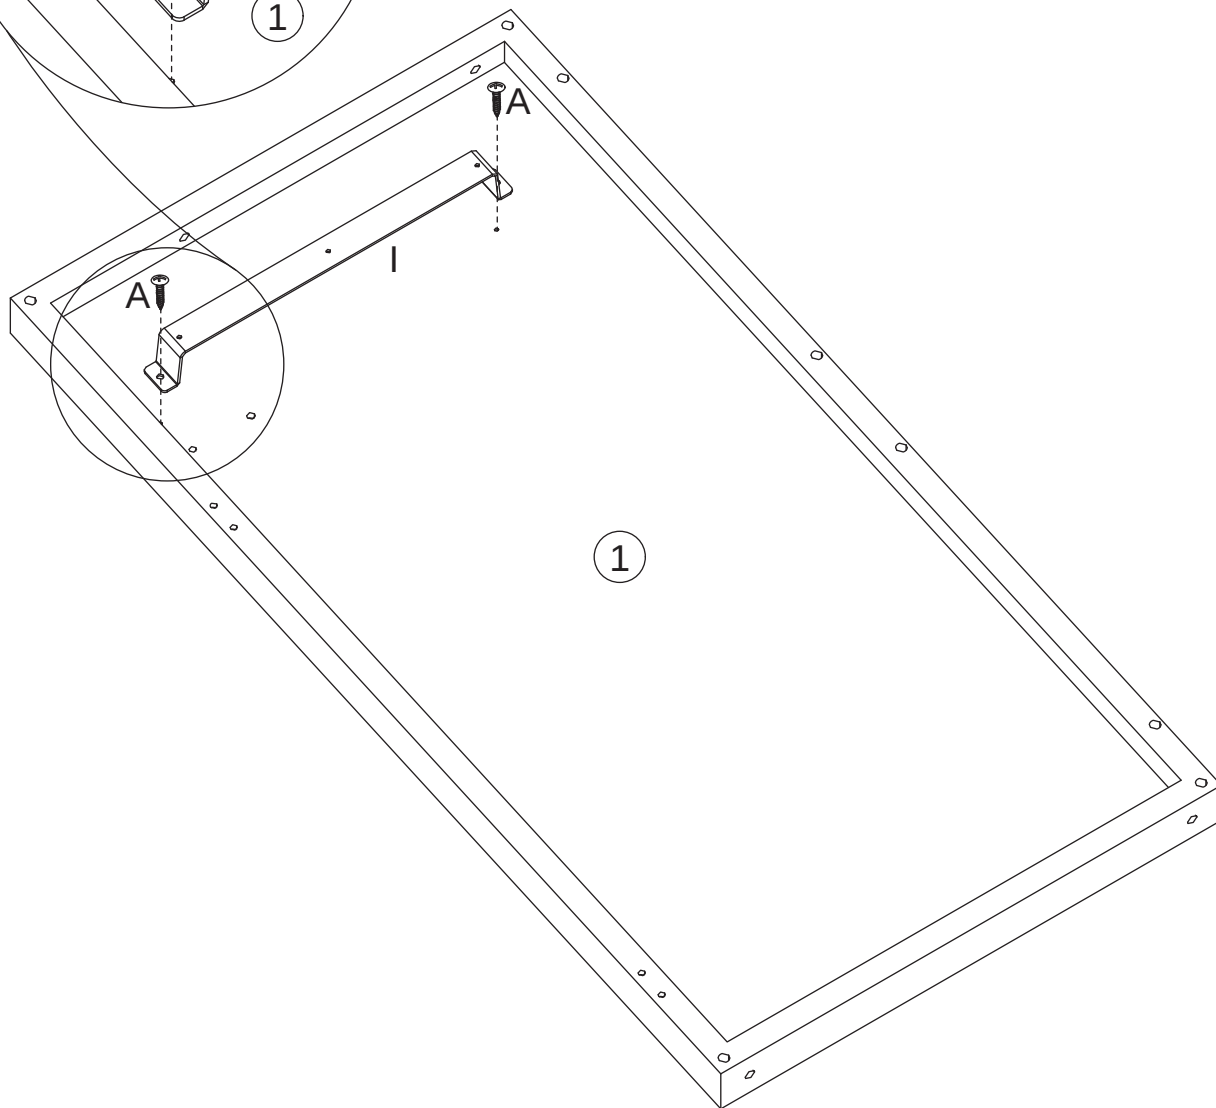





7



  
Secure slide rail (D-CL) to part (I) using screw (J) as shown.

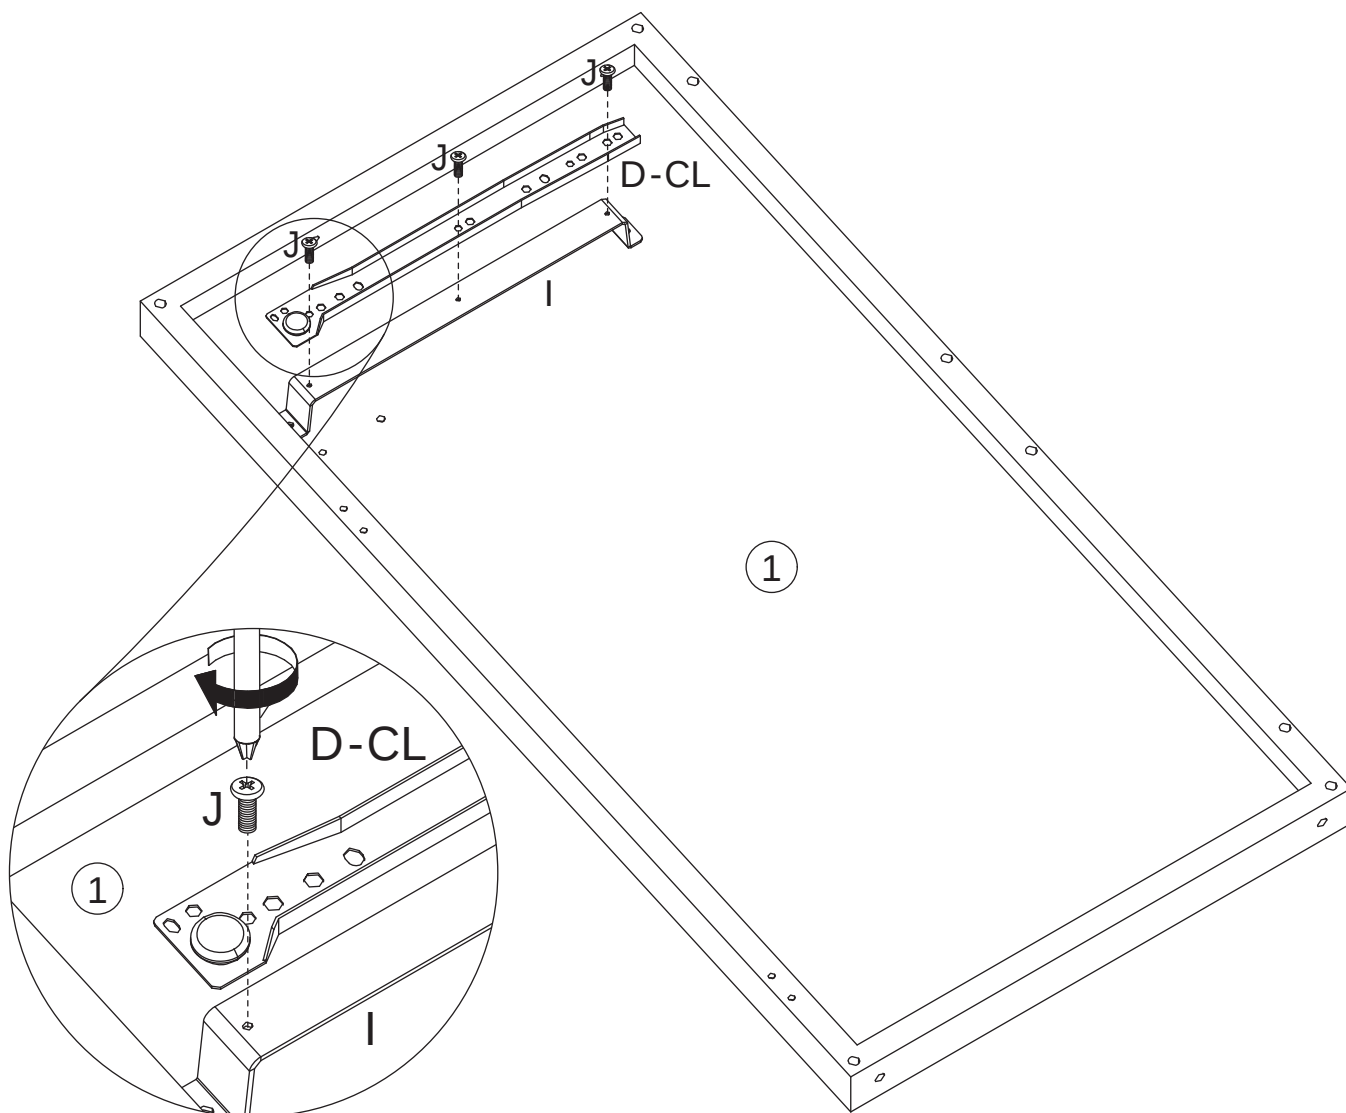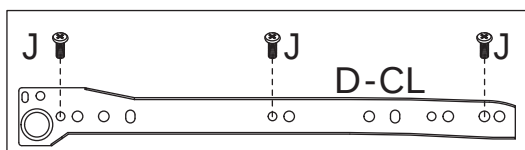



8

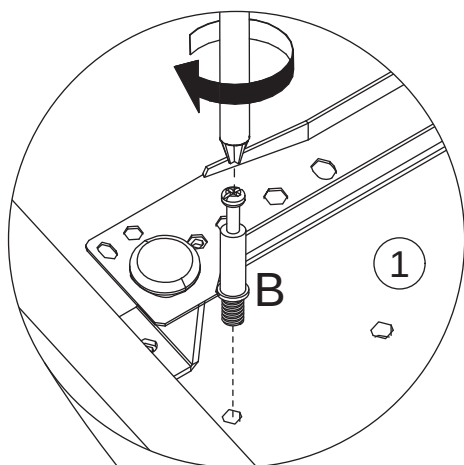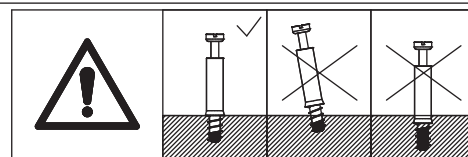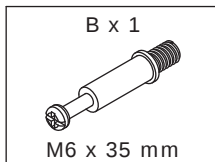    

 
Screw eccentric rod (B) to part 1 as shown.

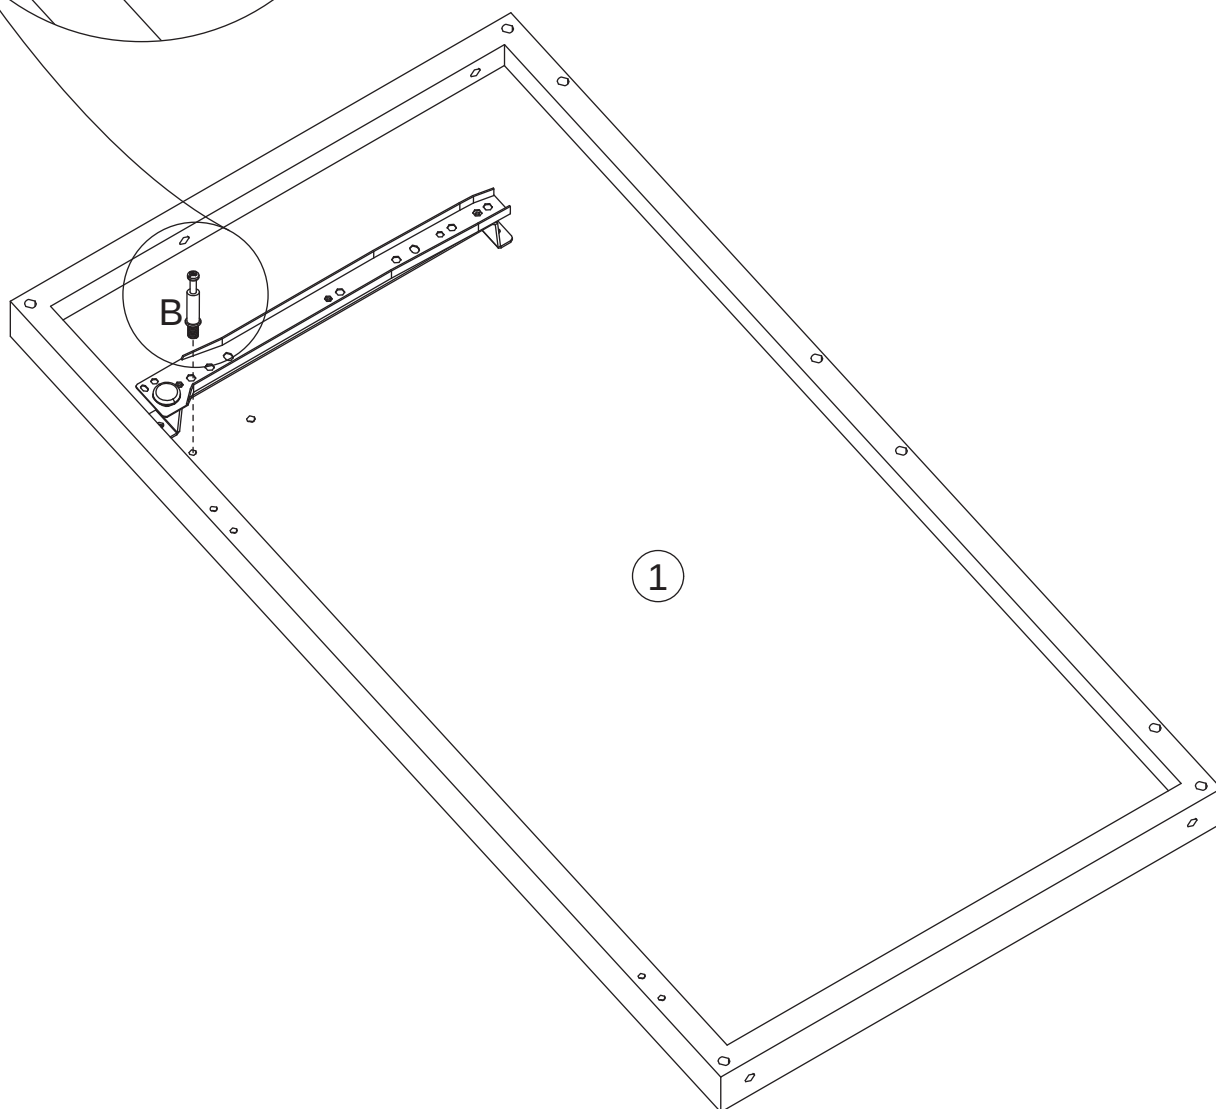


9

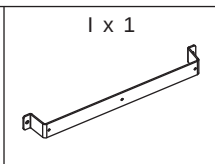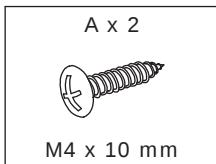  


 
Secure part (I) to part 2 using screw (A) as shown.

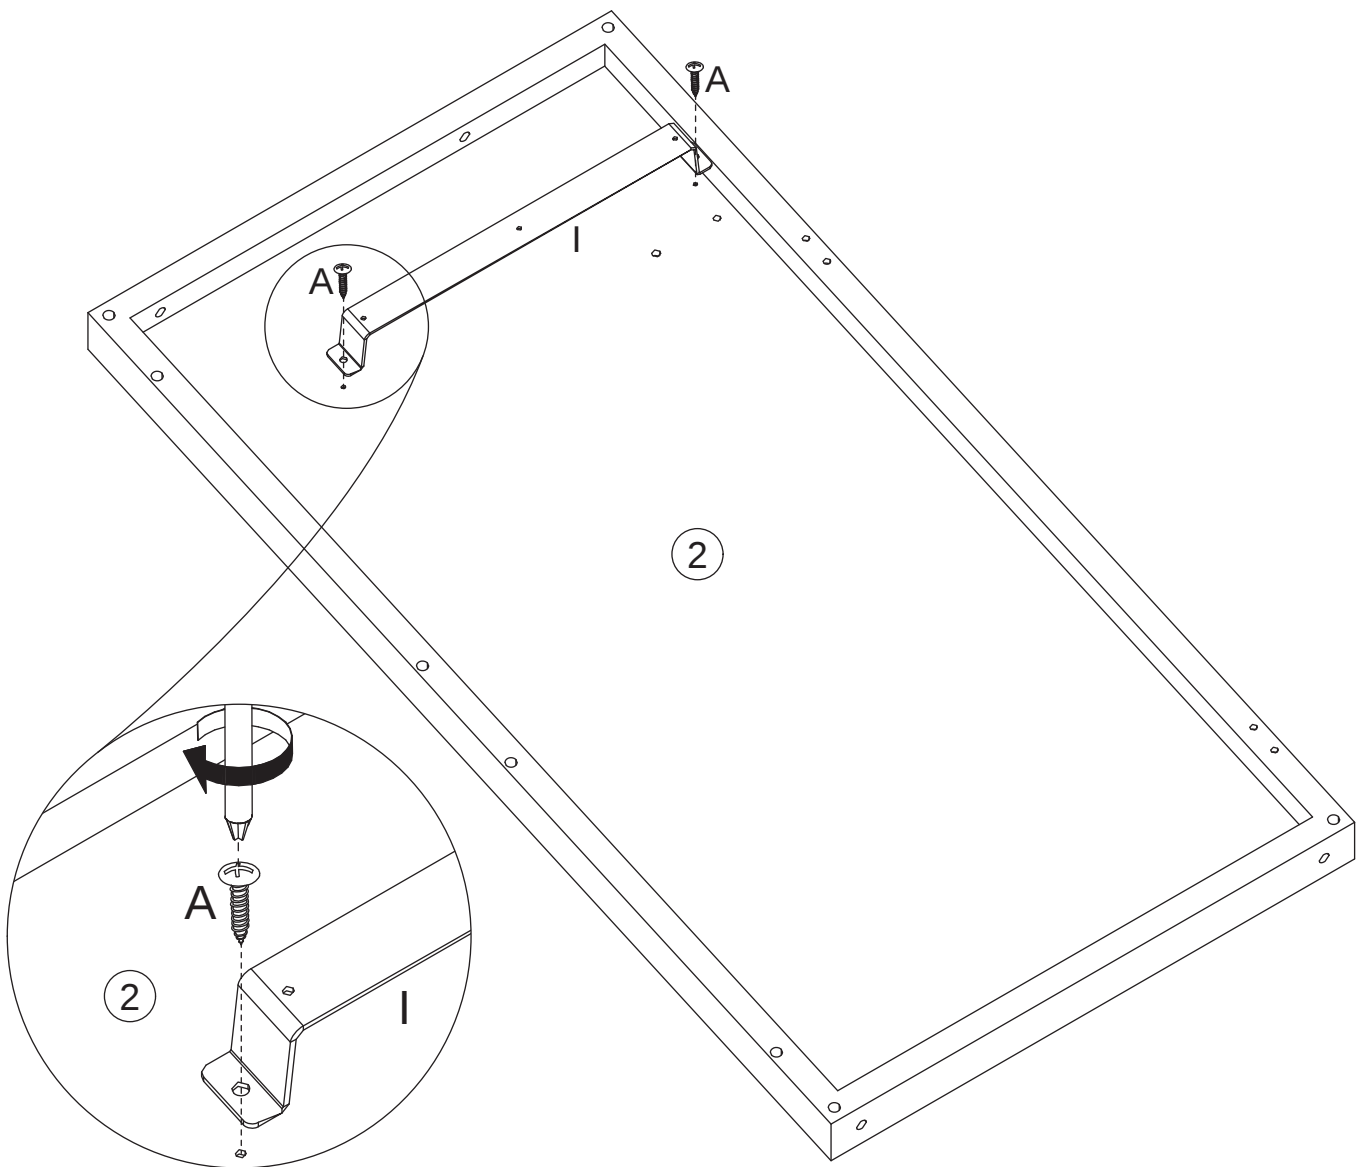




10

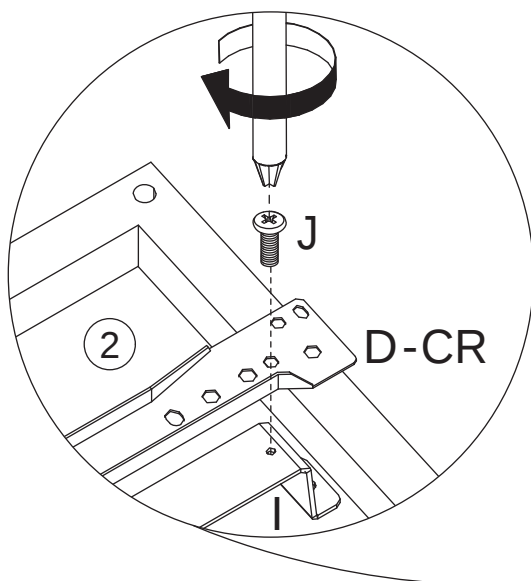 

  
Secure slide rail (D-CR) to part (I) using screw (J) as shown.

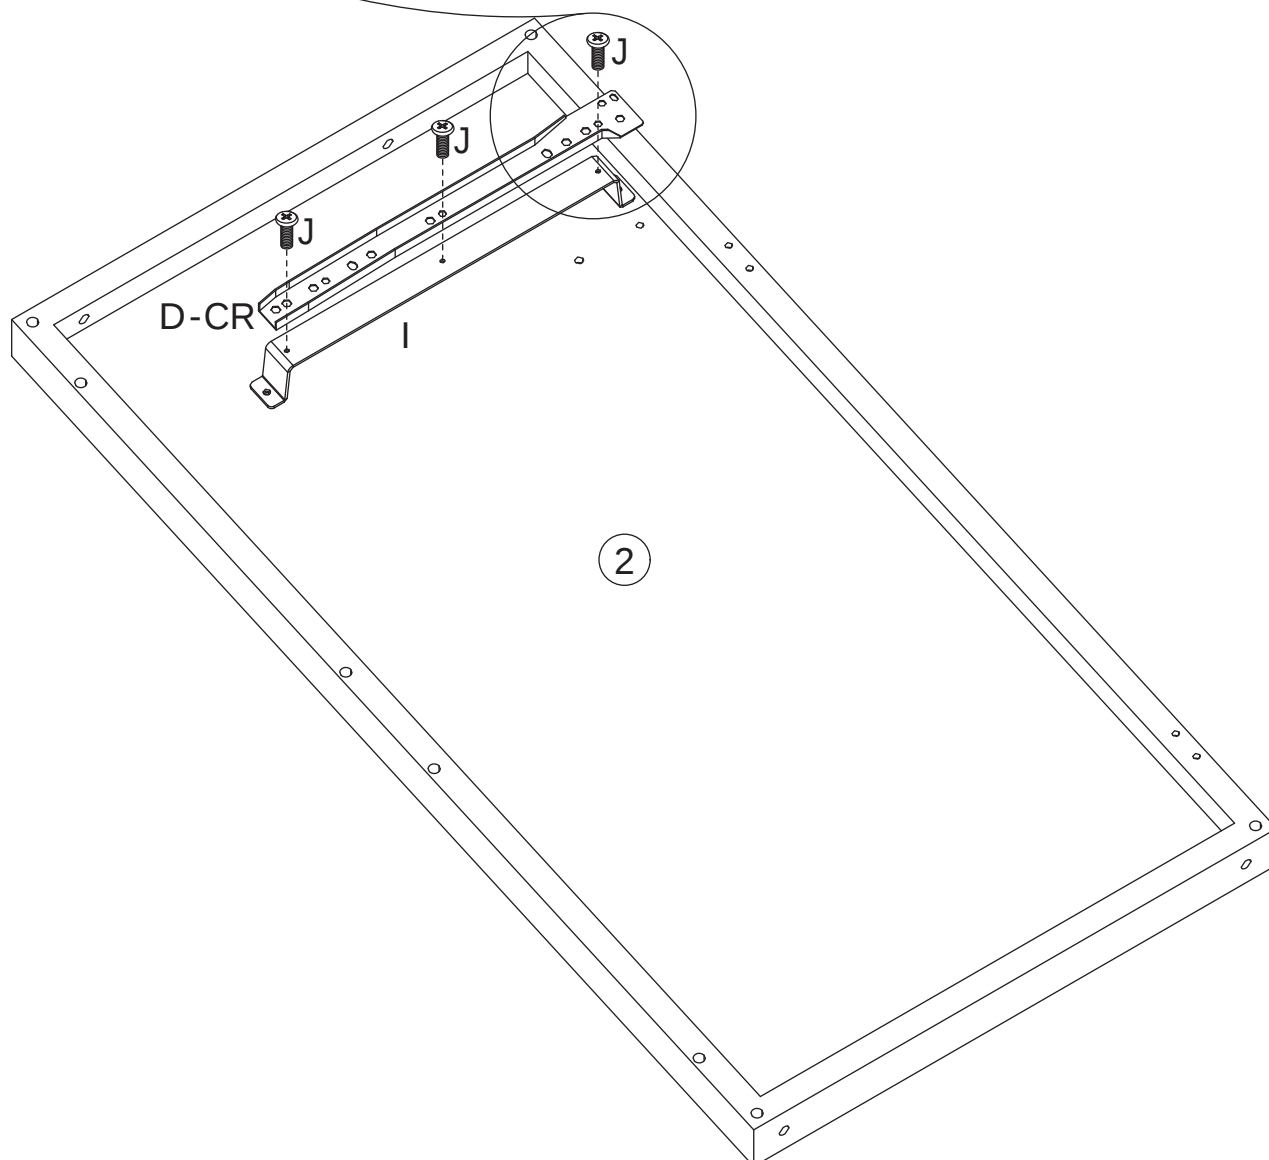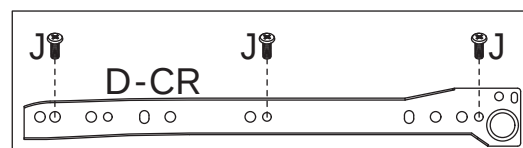

11

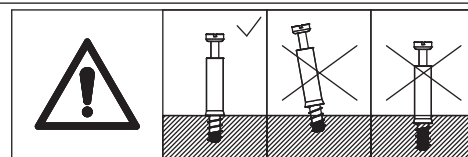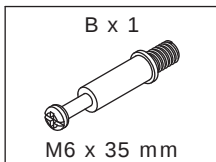   


 Screw eccentric rod (B) to part 2 as shown.

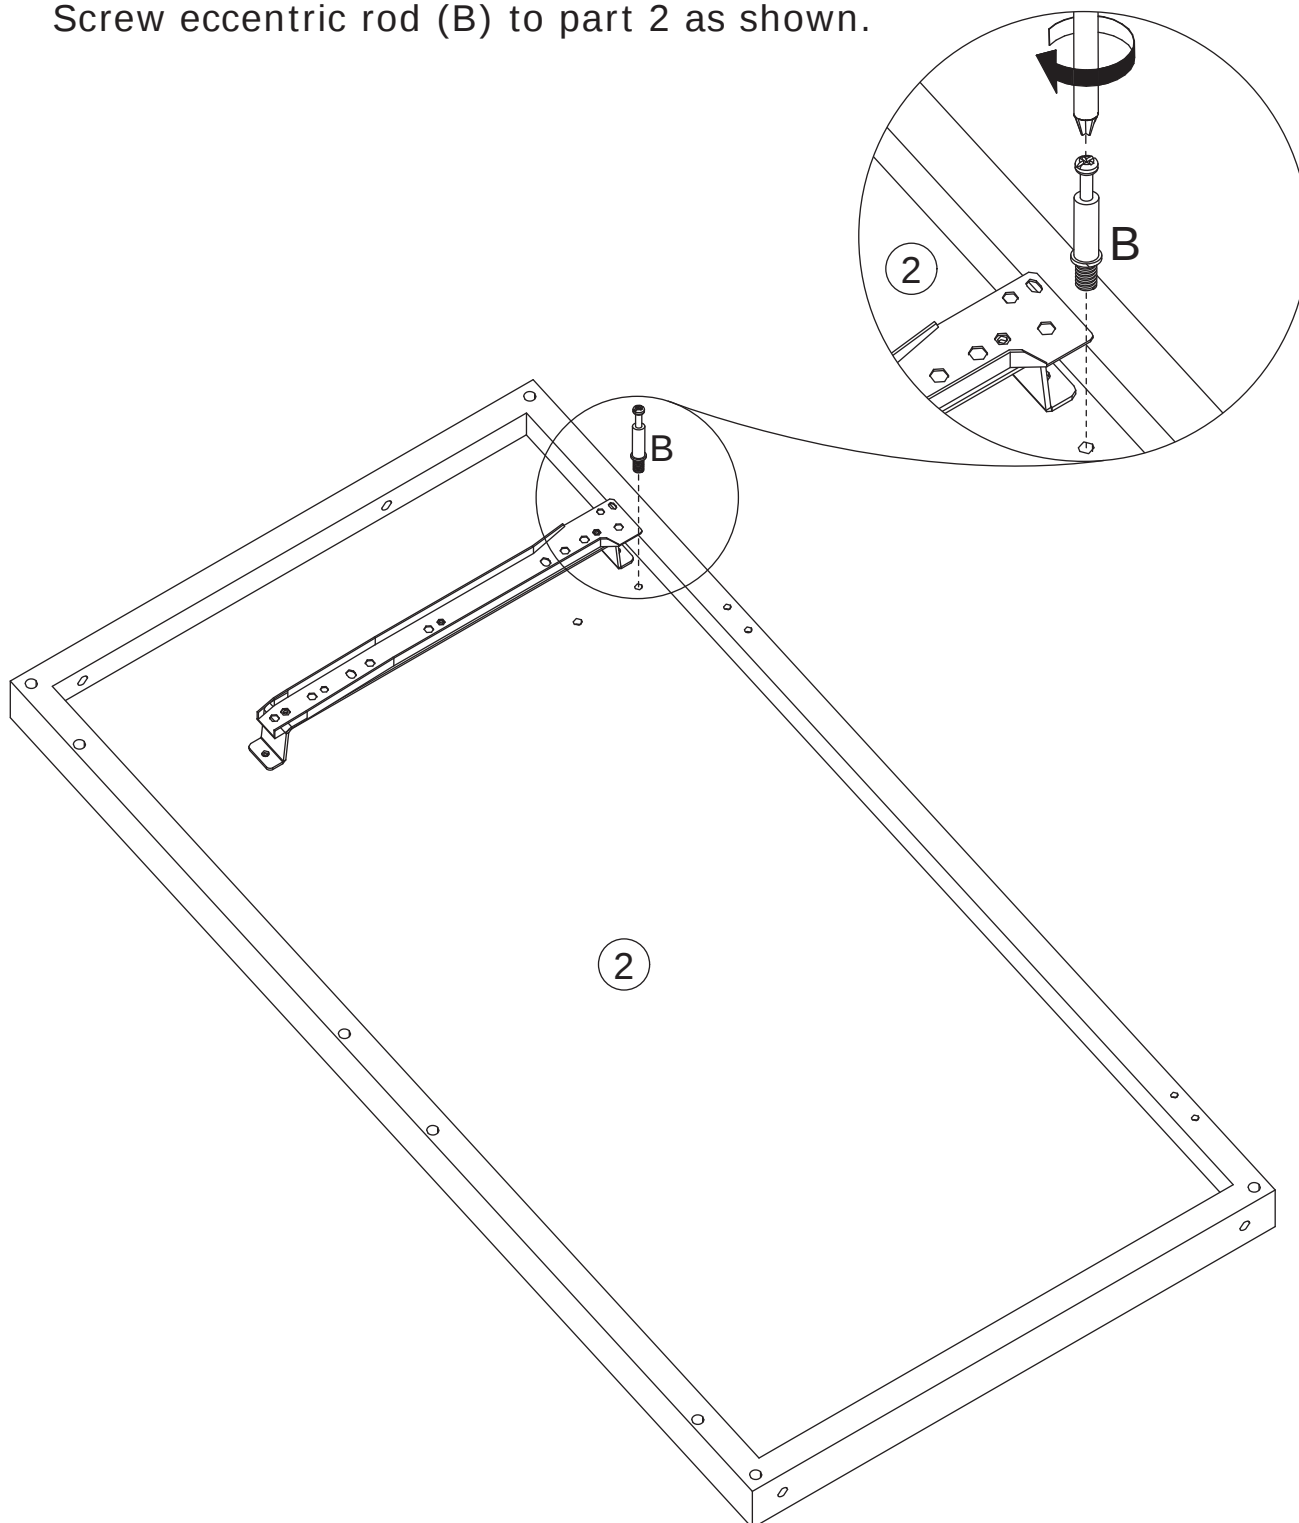



12

 K x 2



M6 x 50 mm

 
 
L x 1

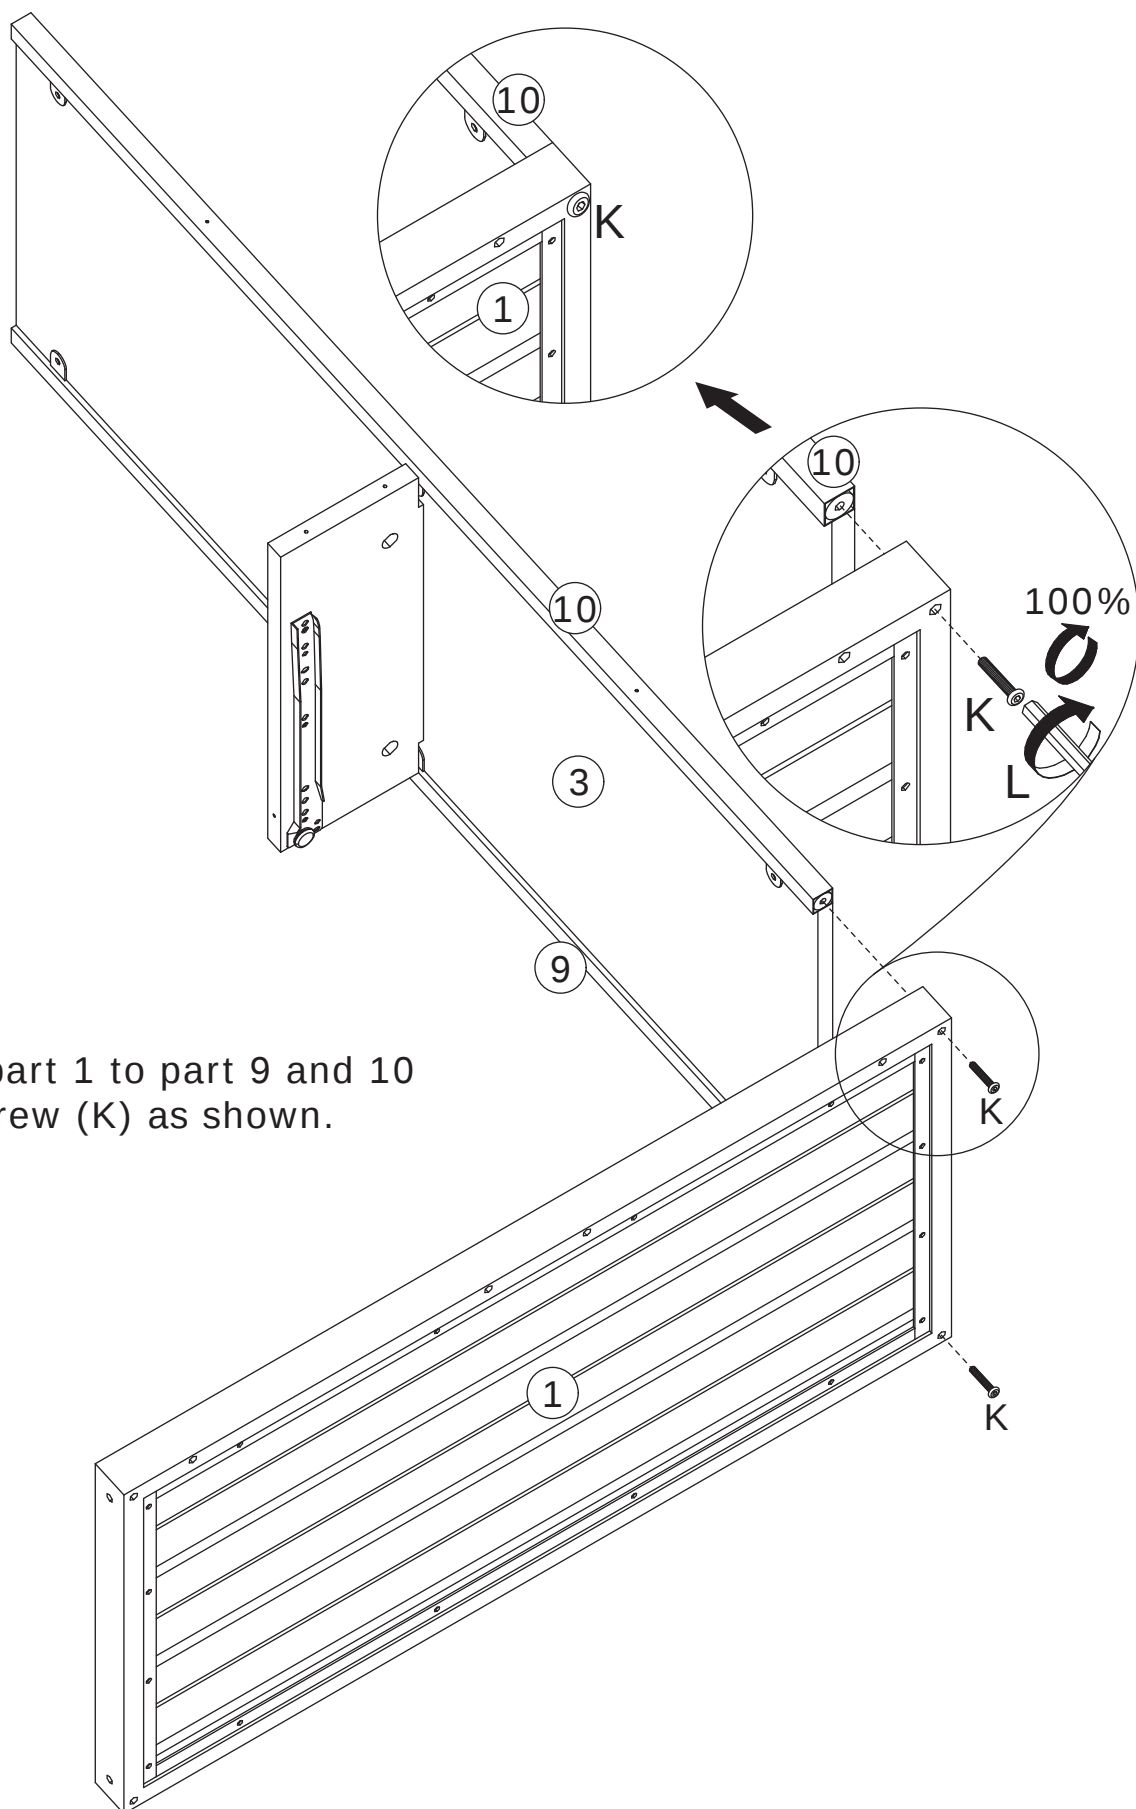


Secure part 1 to part 9 and 10 using screw (K) as shown.

13


 
 
F x 1
M6 x 30 mm

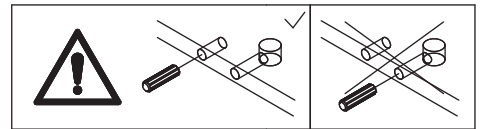 
Connect part 1 to part 8 using wooden dowel (F) as shown.

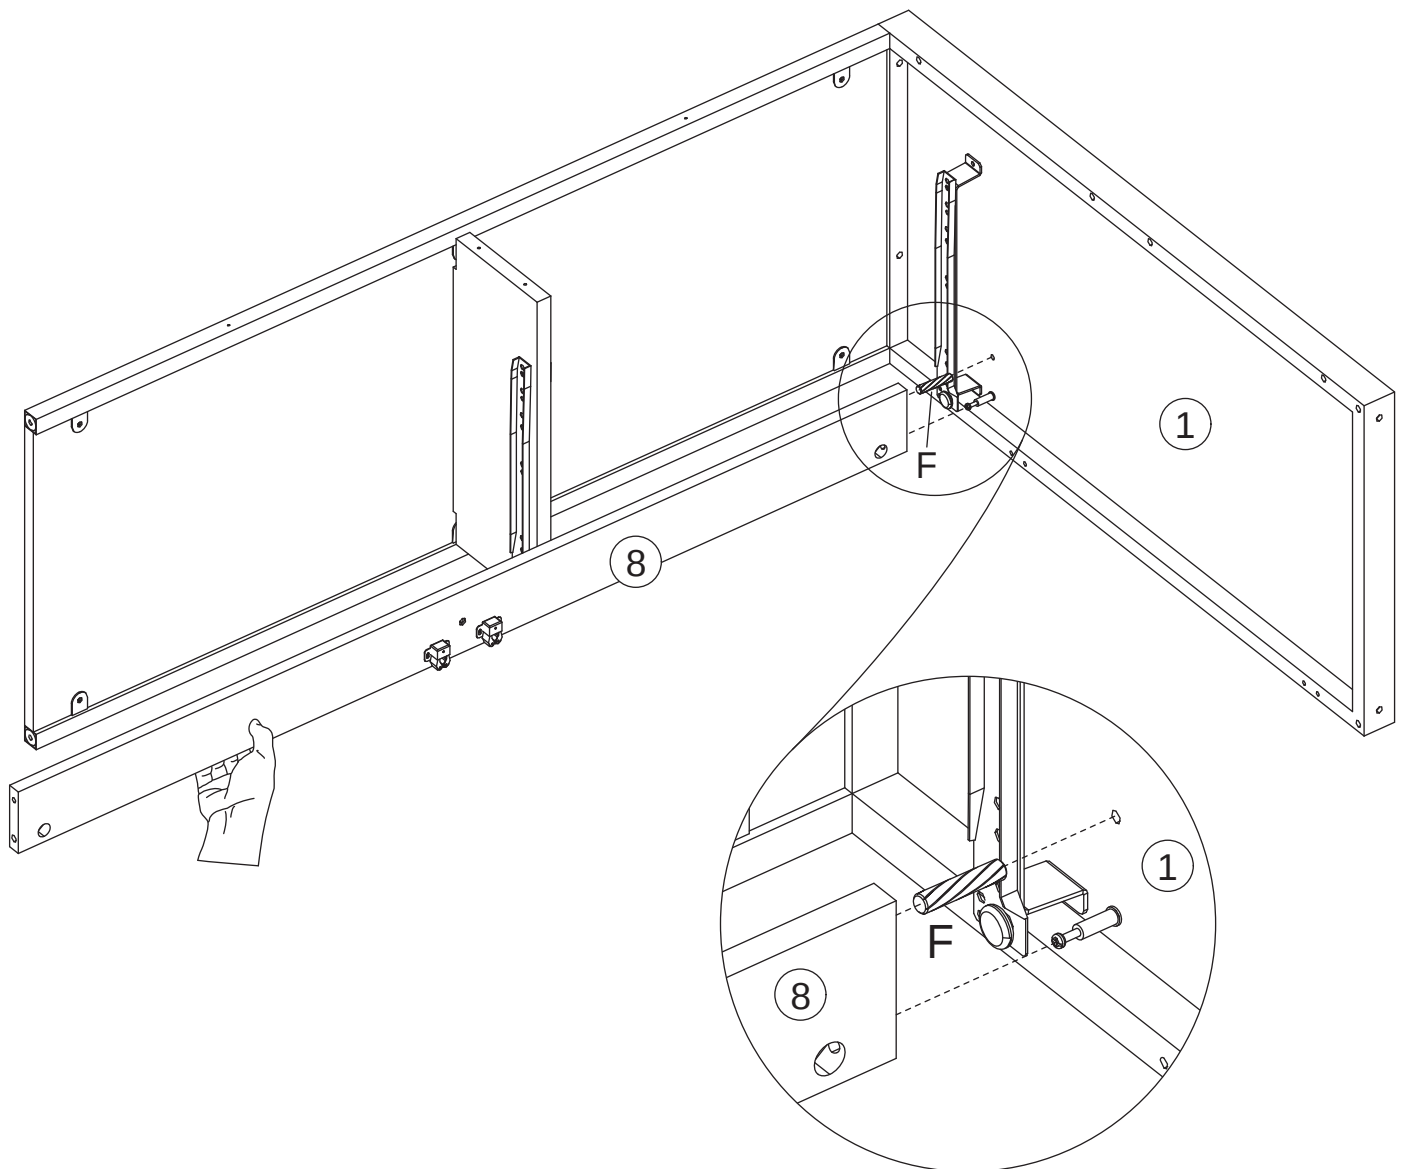

14

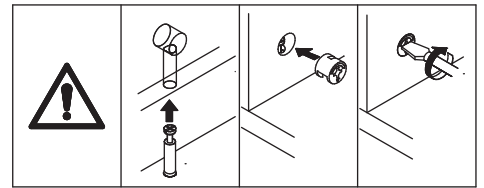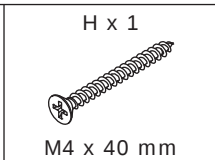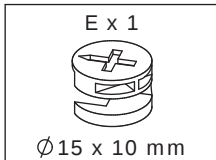   

 Secure part 8 to part 4 using screw (H).
tighten by turning cam lock (E) clockwise.

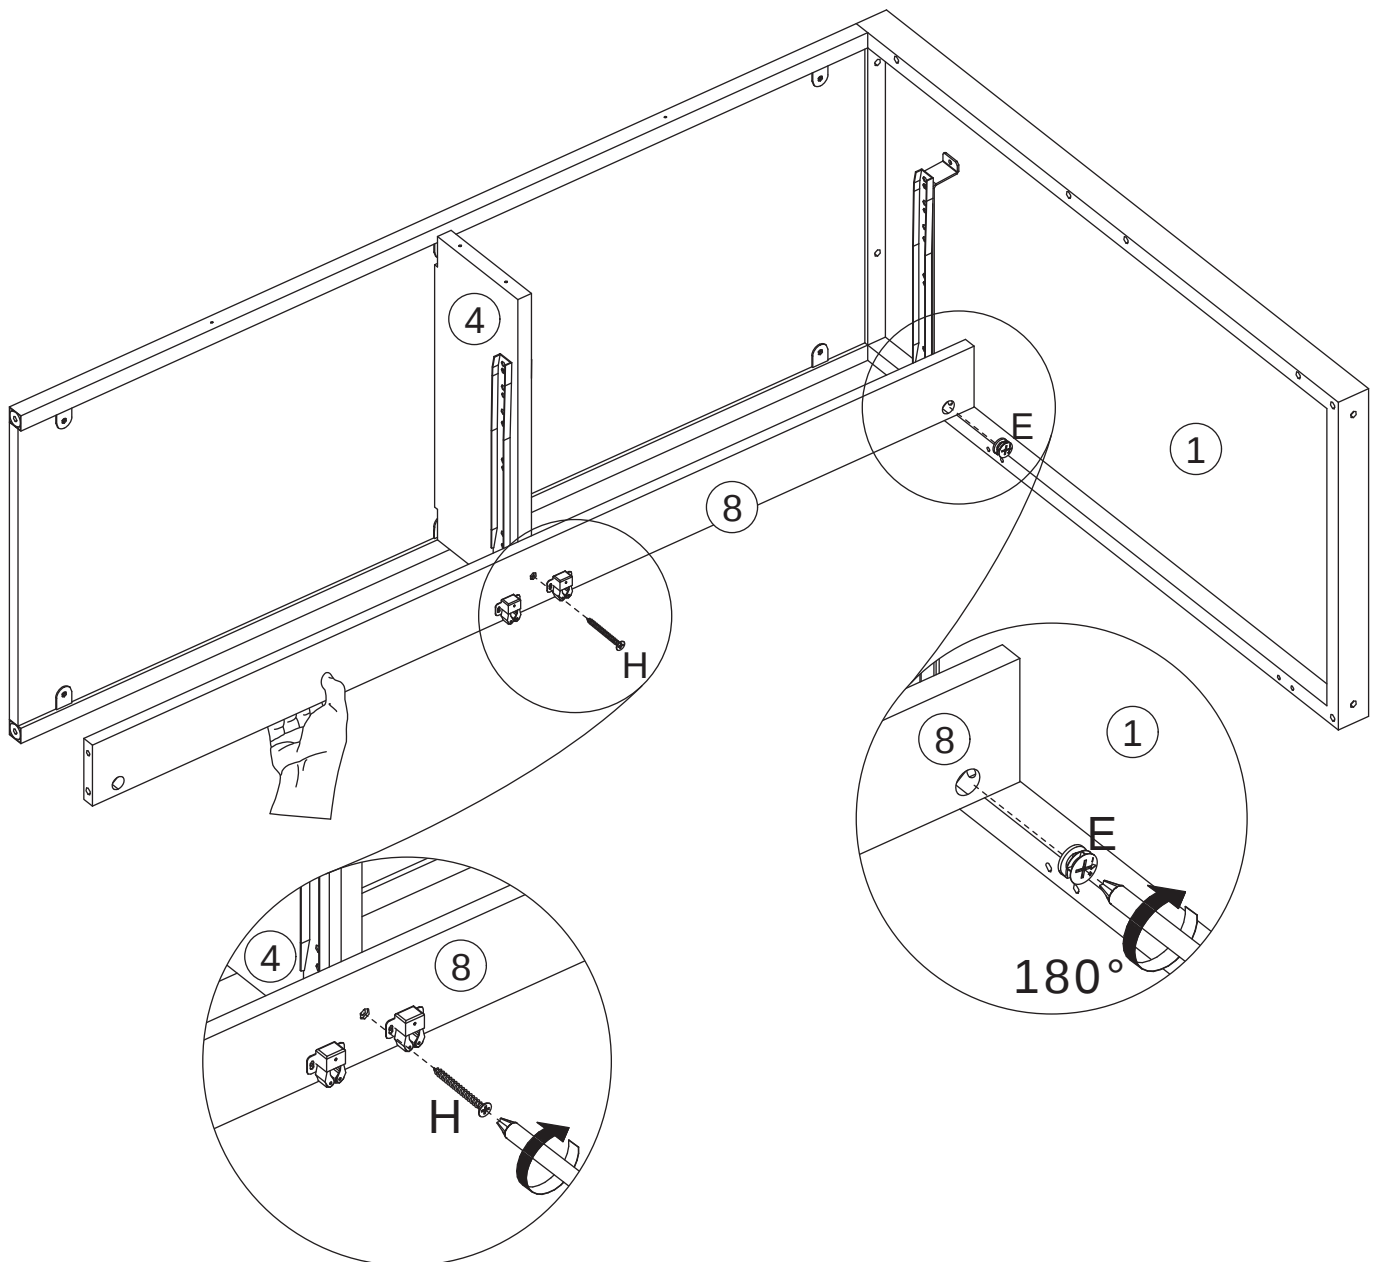


15

F x 1






M6 x 30 mm

 K x 2




M6 x 50 mm

 
 
 
L x 1



 
Connect part 2 to part 8 using wooden dowel (F).
Connect part 2 to part 9 and 10 using screw (K)
as shown.

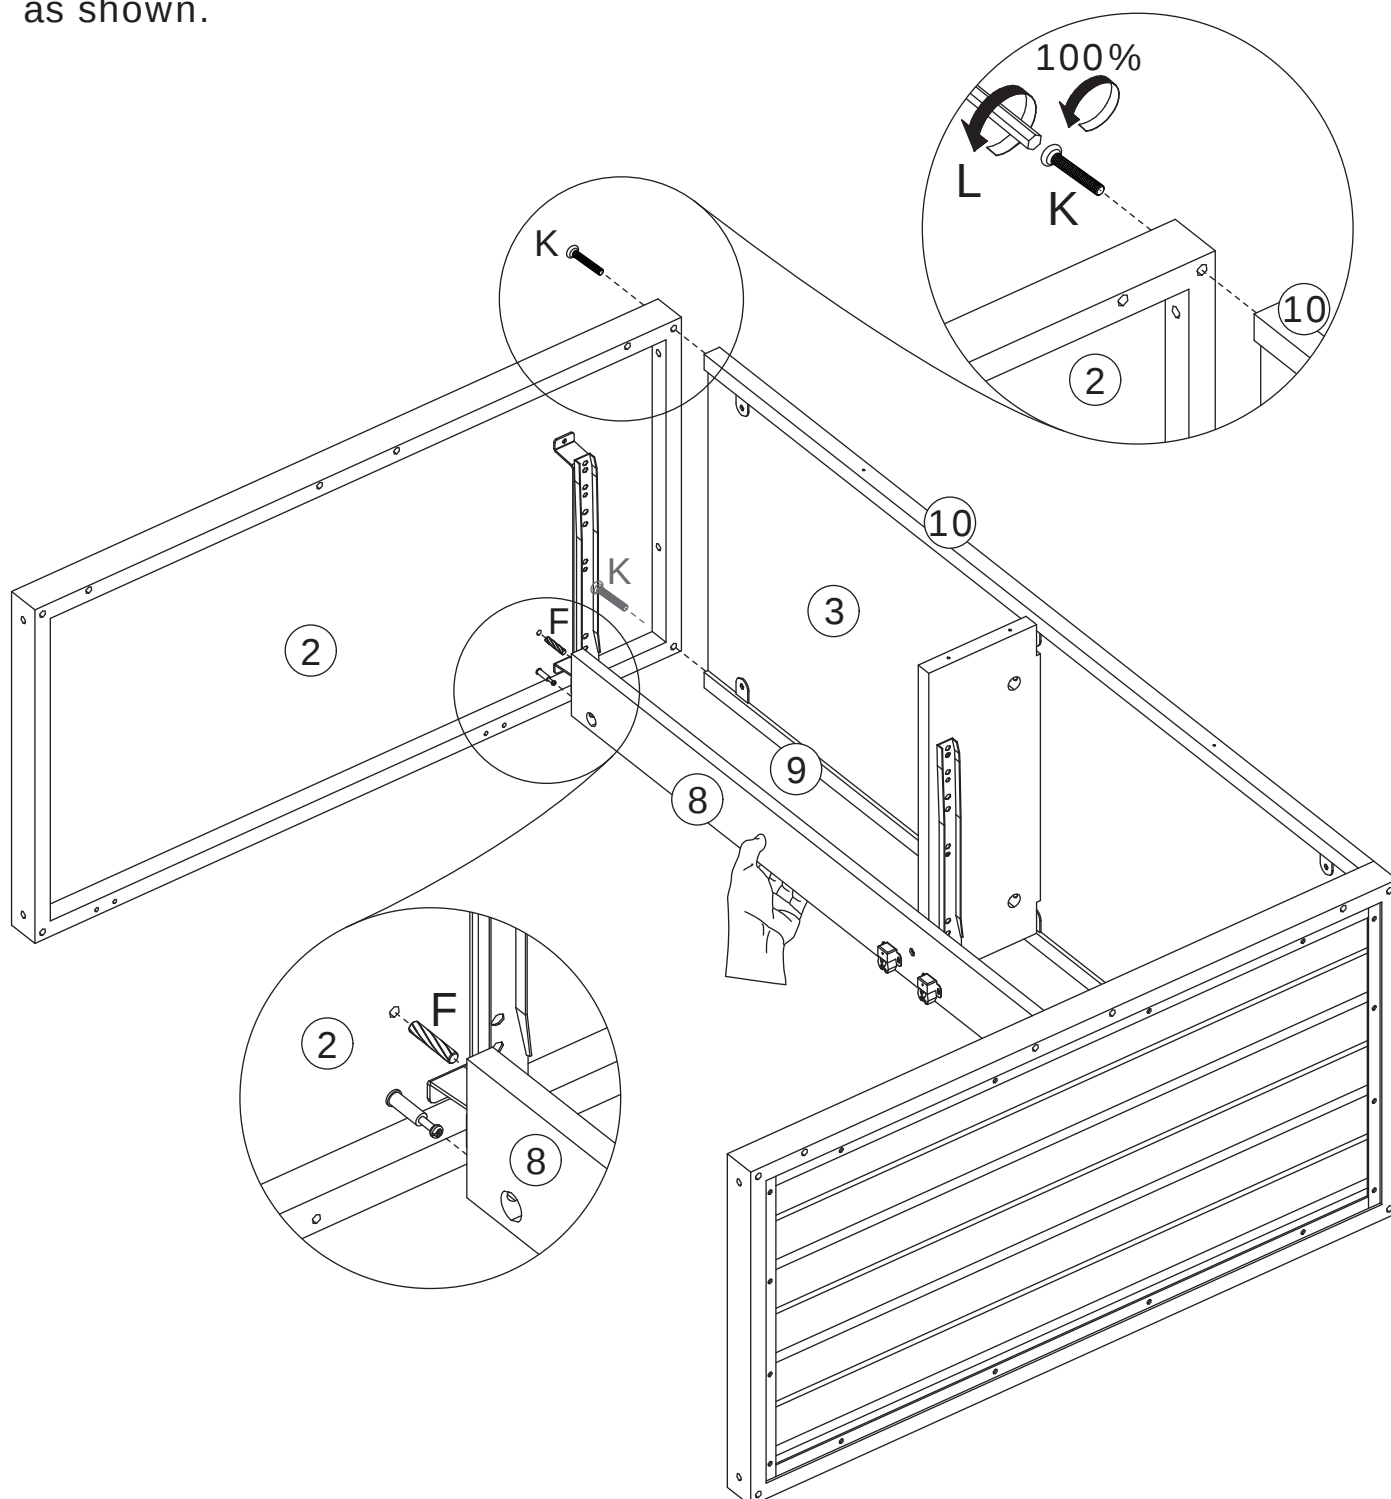




16

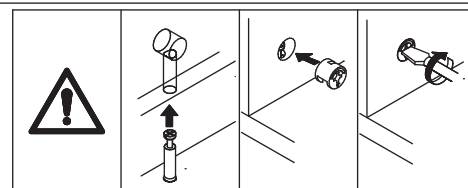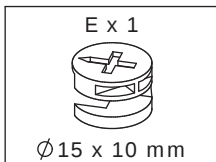   

 
Put cam lock (E) into part 8 and tighten by turning them clockwise.

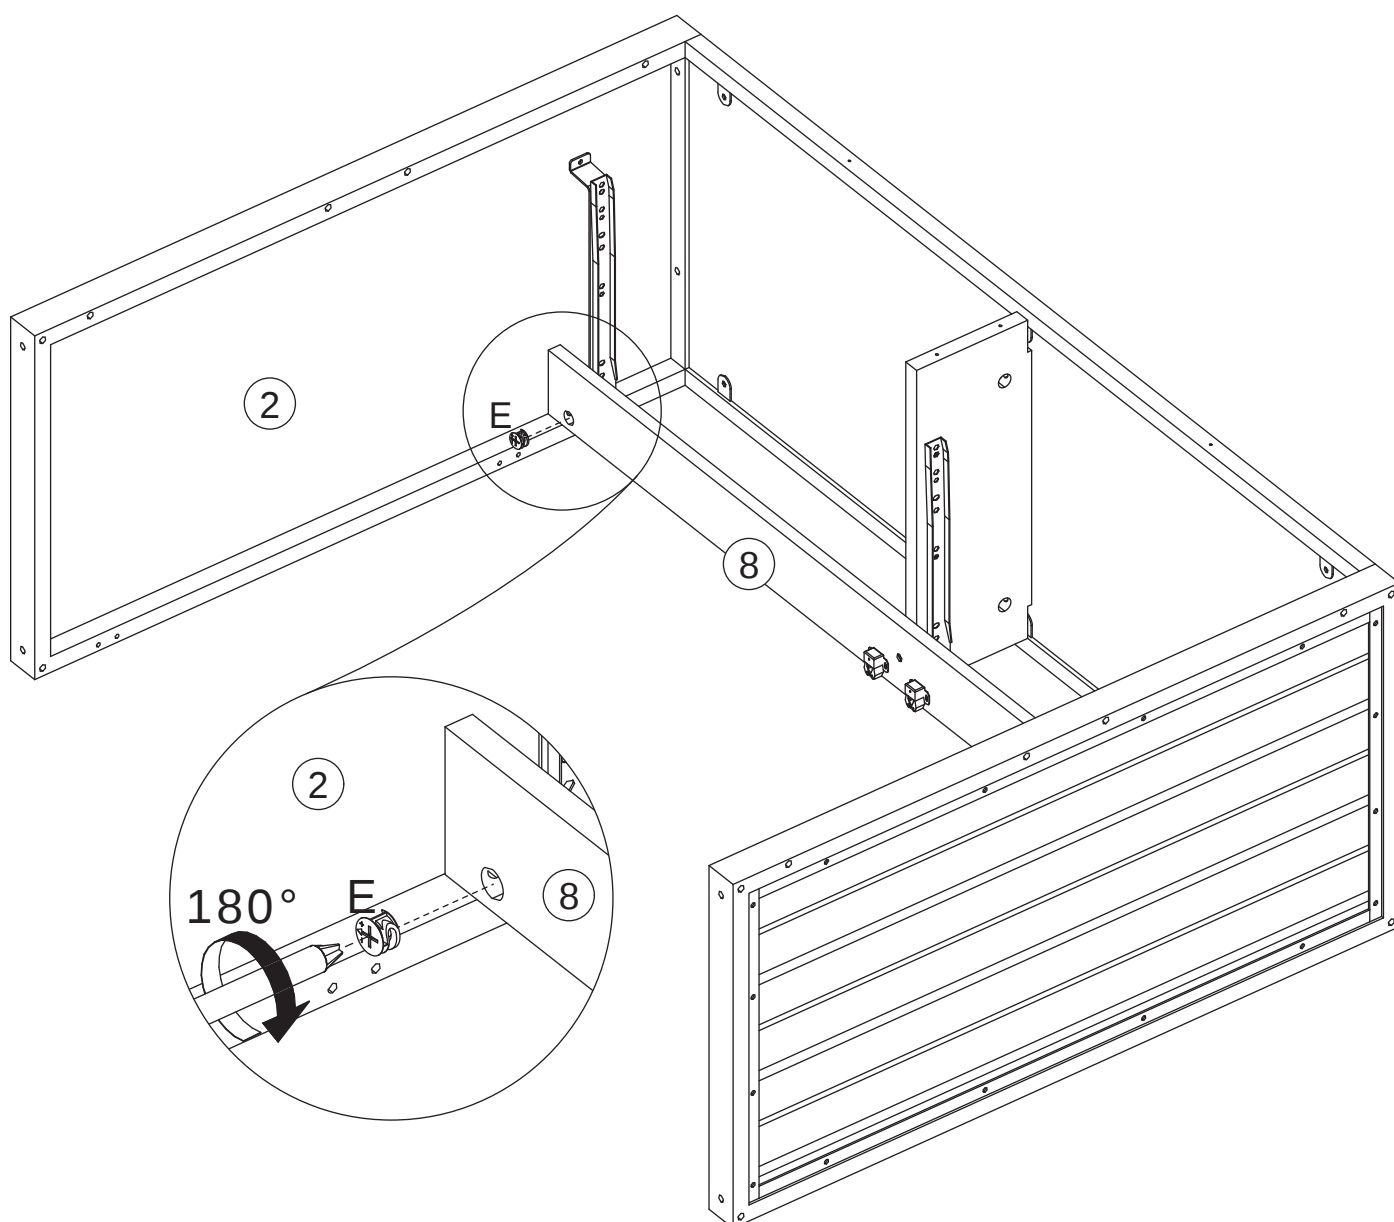

17

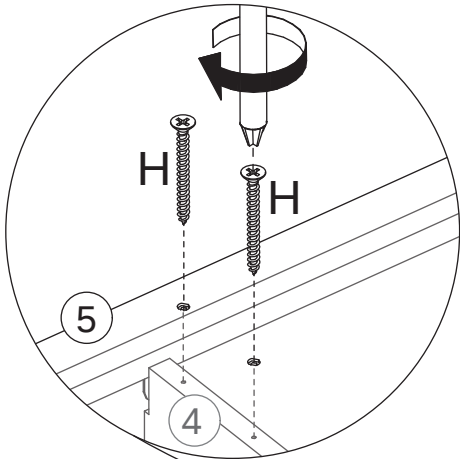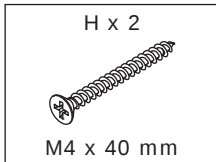   


 Secure part 5 to part 4 using screw (H) as shown.

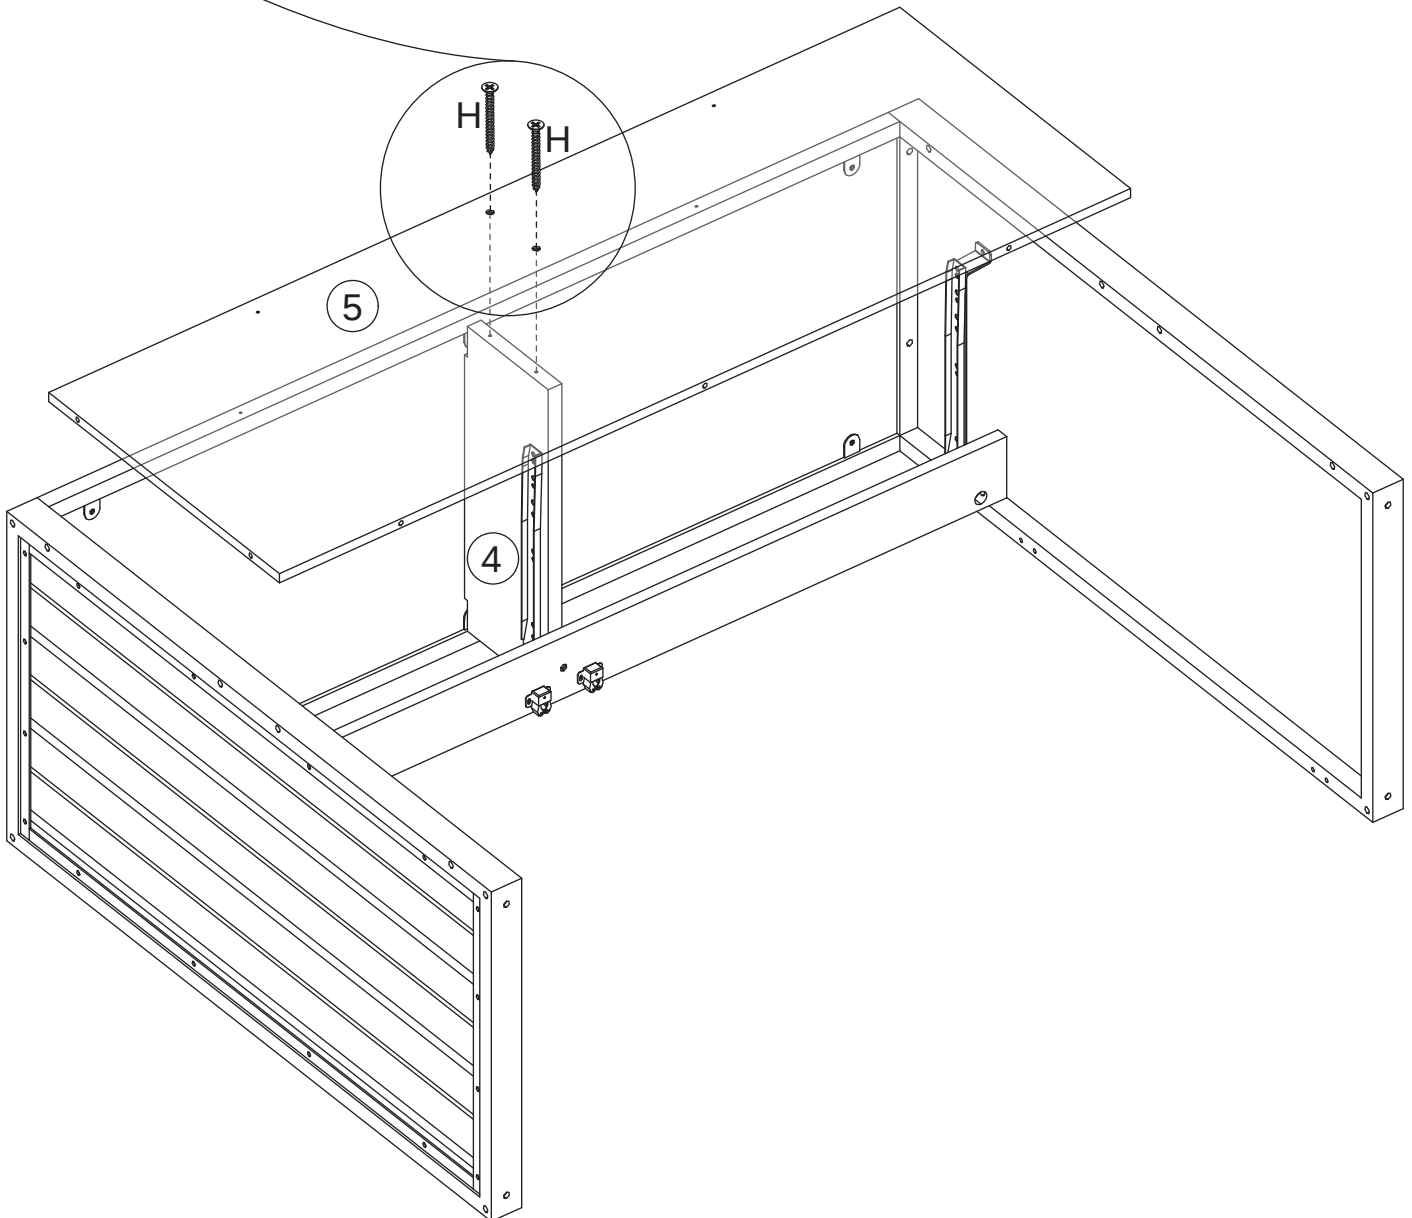



18

 M x 4



M7 x 60 mm

  
L x 1

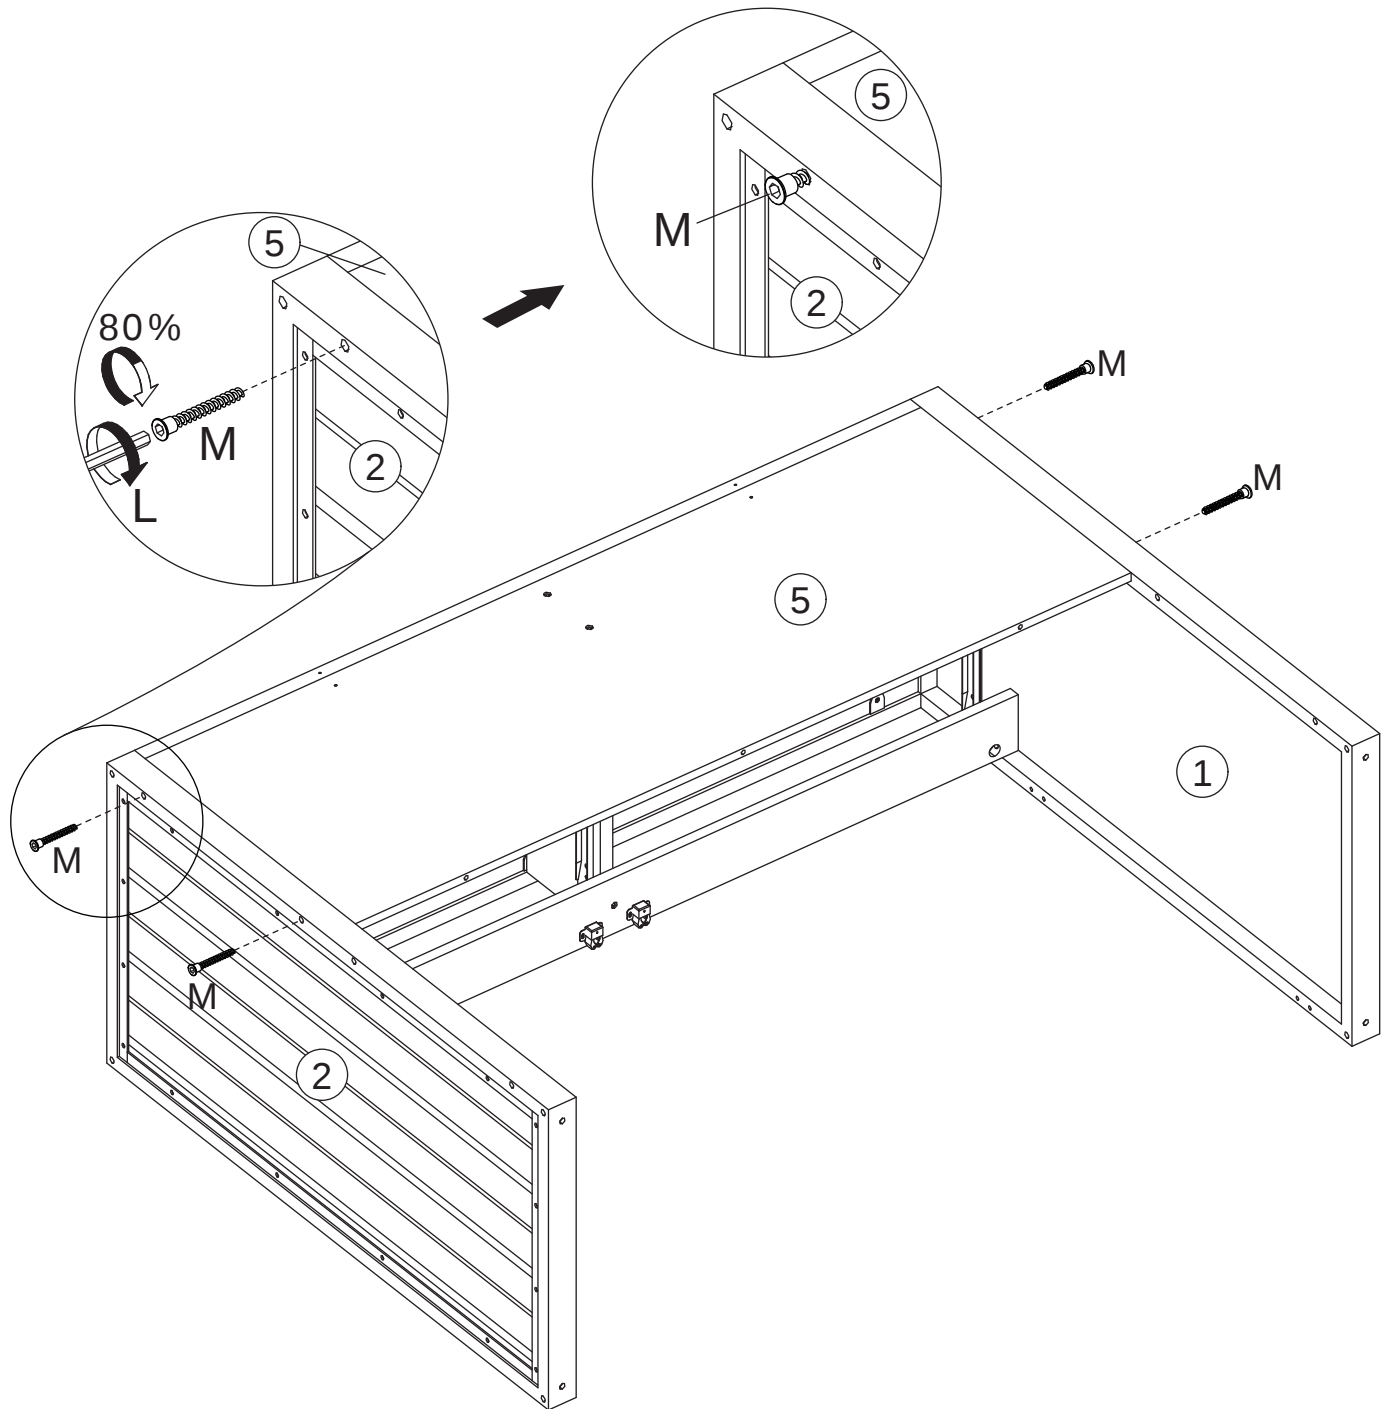



Secure part 1 and 2 to part 5 using screw (M) as shown.

19

 F x 3
M6 x 30 mm

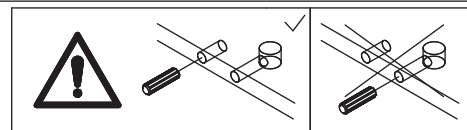


  Connect part 5 and 6 using wooden dowel (F) as shown.

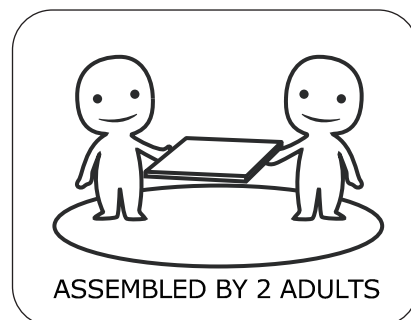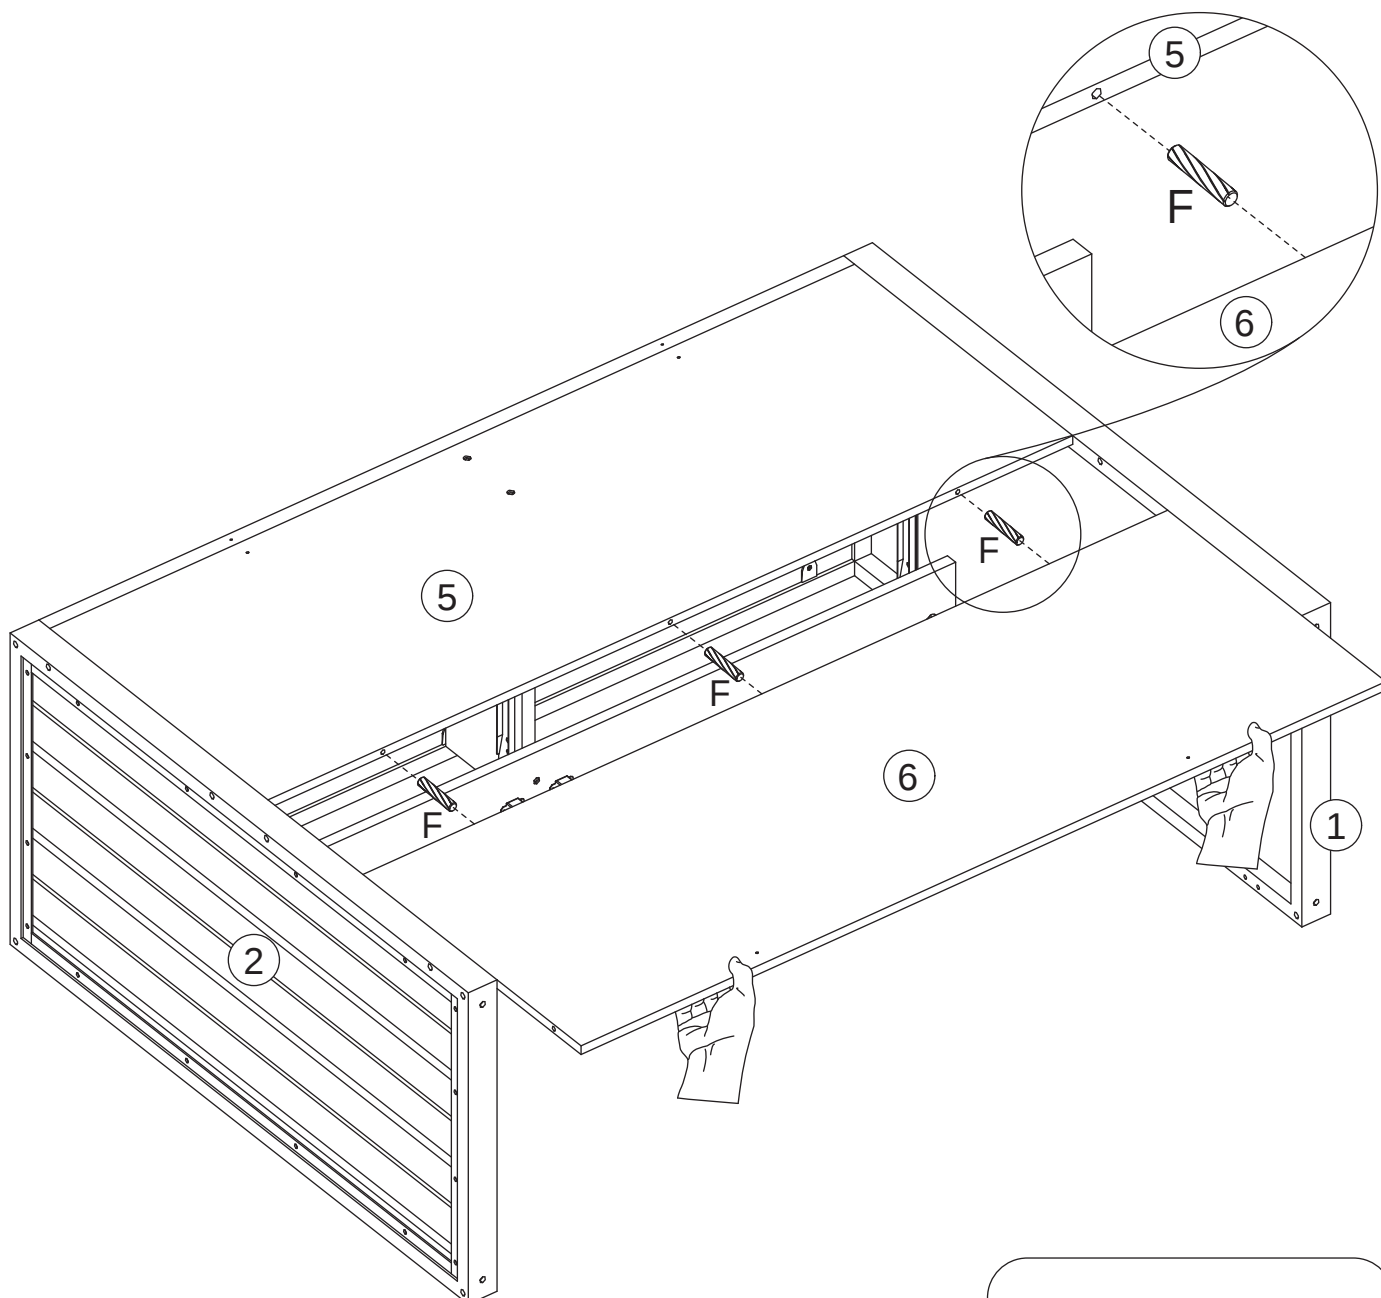


20

 M x 4







M7 x 60 mm

 L x 1





    Secure part 1 and 2 to part 6 using screw (M) as shown.

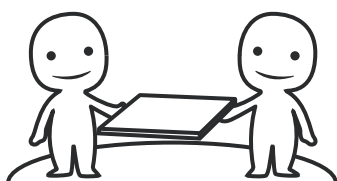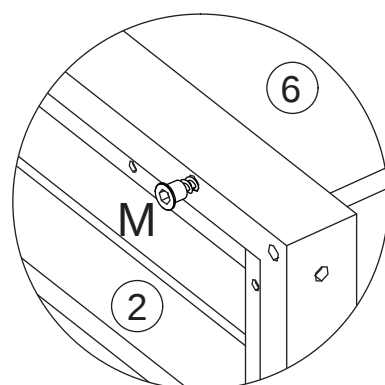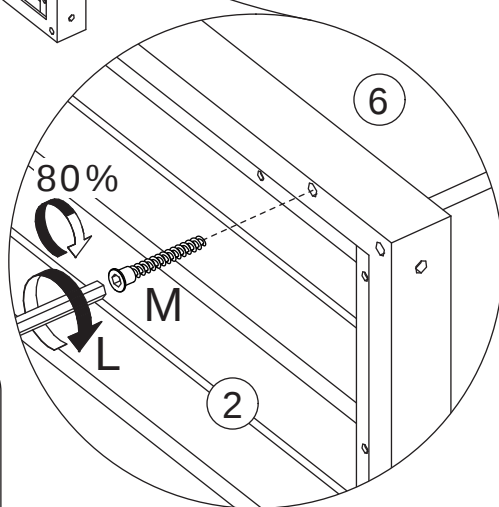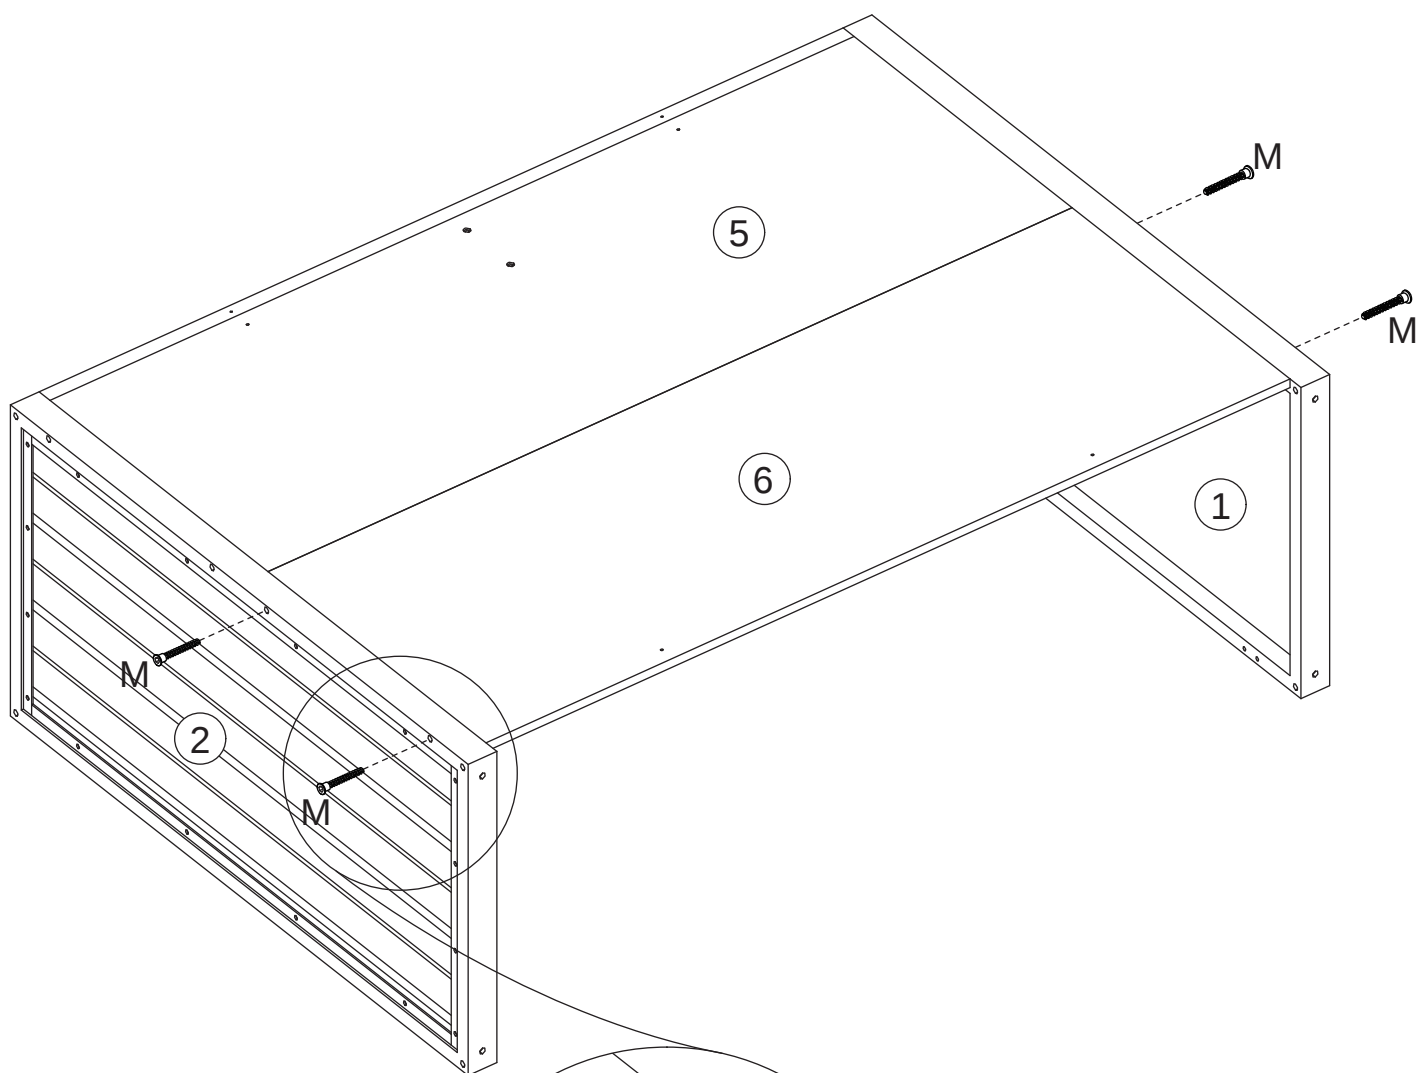


ASSEMBLED BY 2 ADULTS

  21

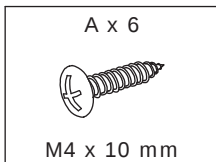

 
Secure part 9 and 10 to part 7 using screw (A) as shown.

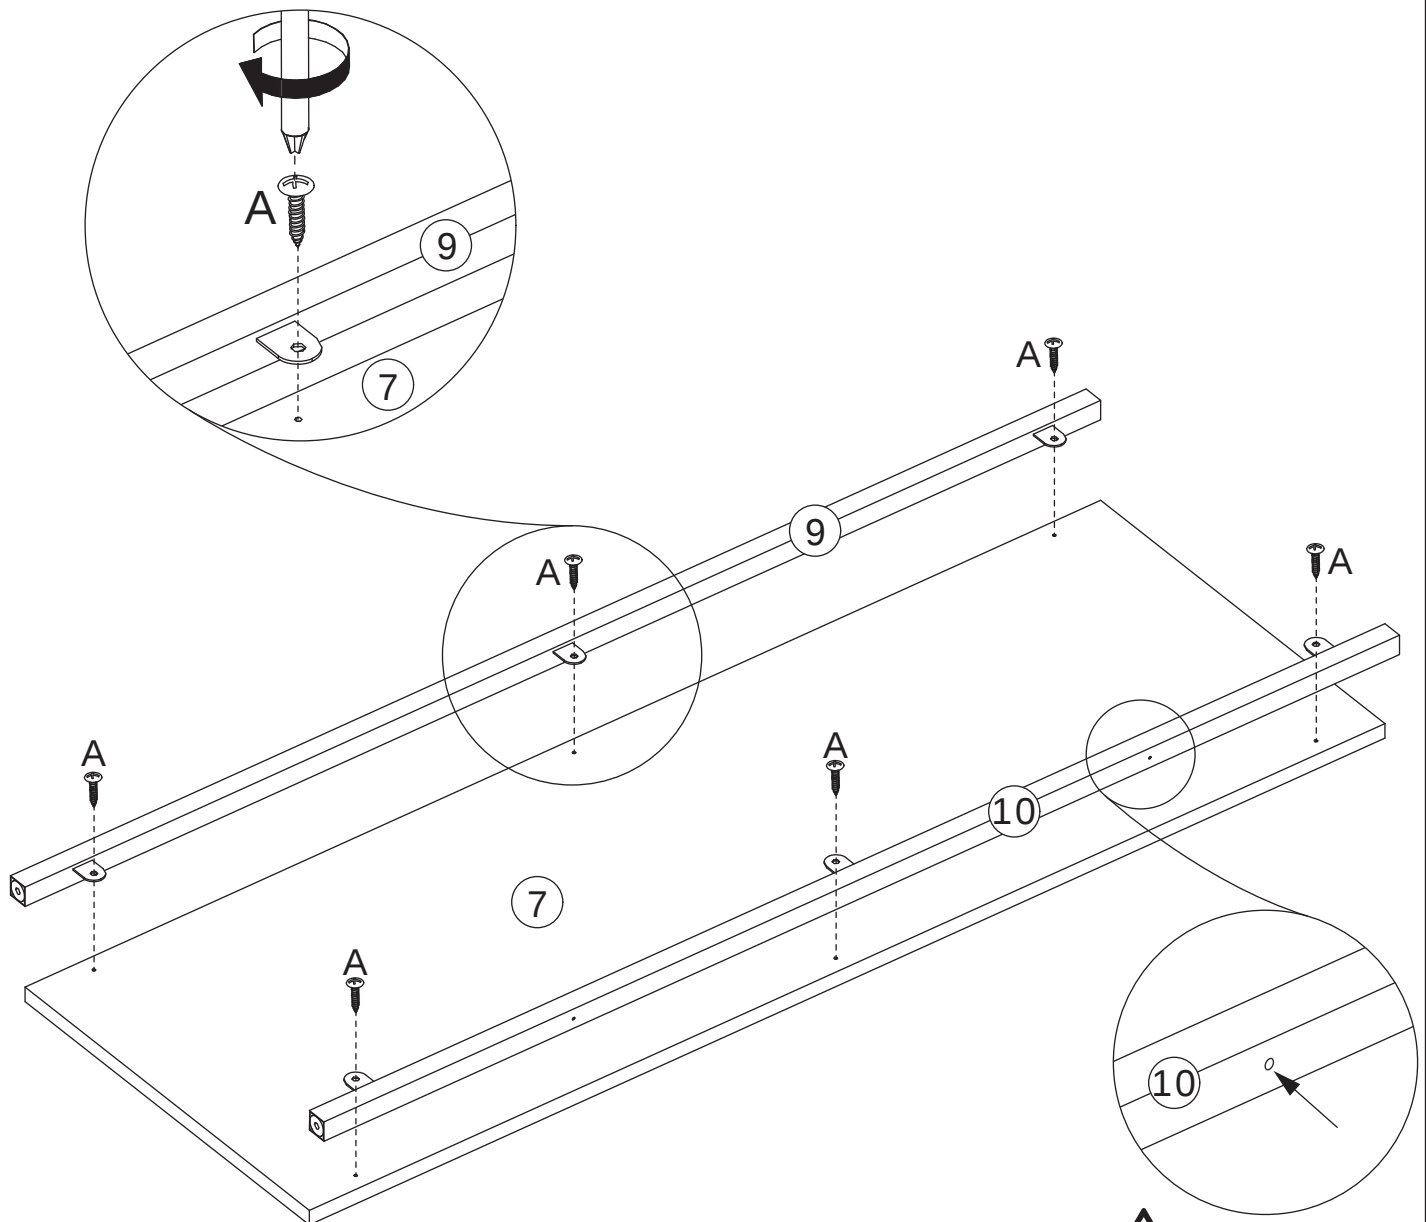

**Be sure to identify
the hole locations**


22

 K x 4




M6 x 50 mm


 
L x 1




 
Secure part 1 and 2 to part 9 and 10 using screw (K), tighten the screws to 80% of its full torque as shown.

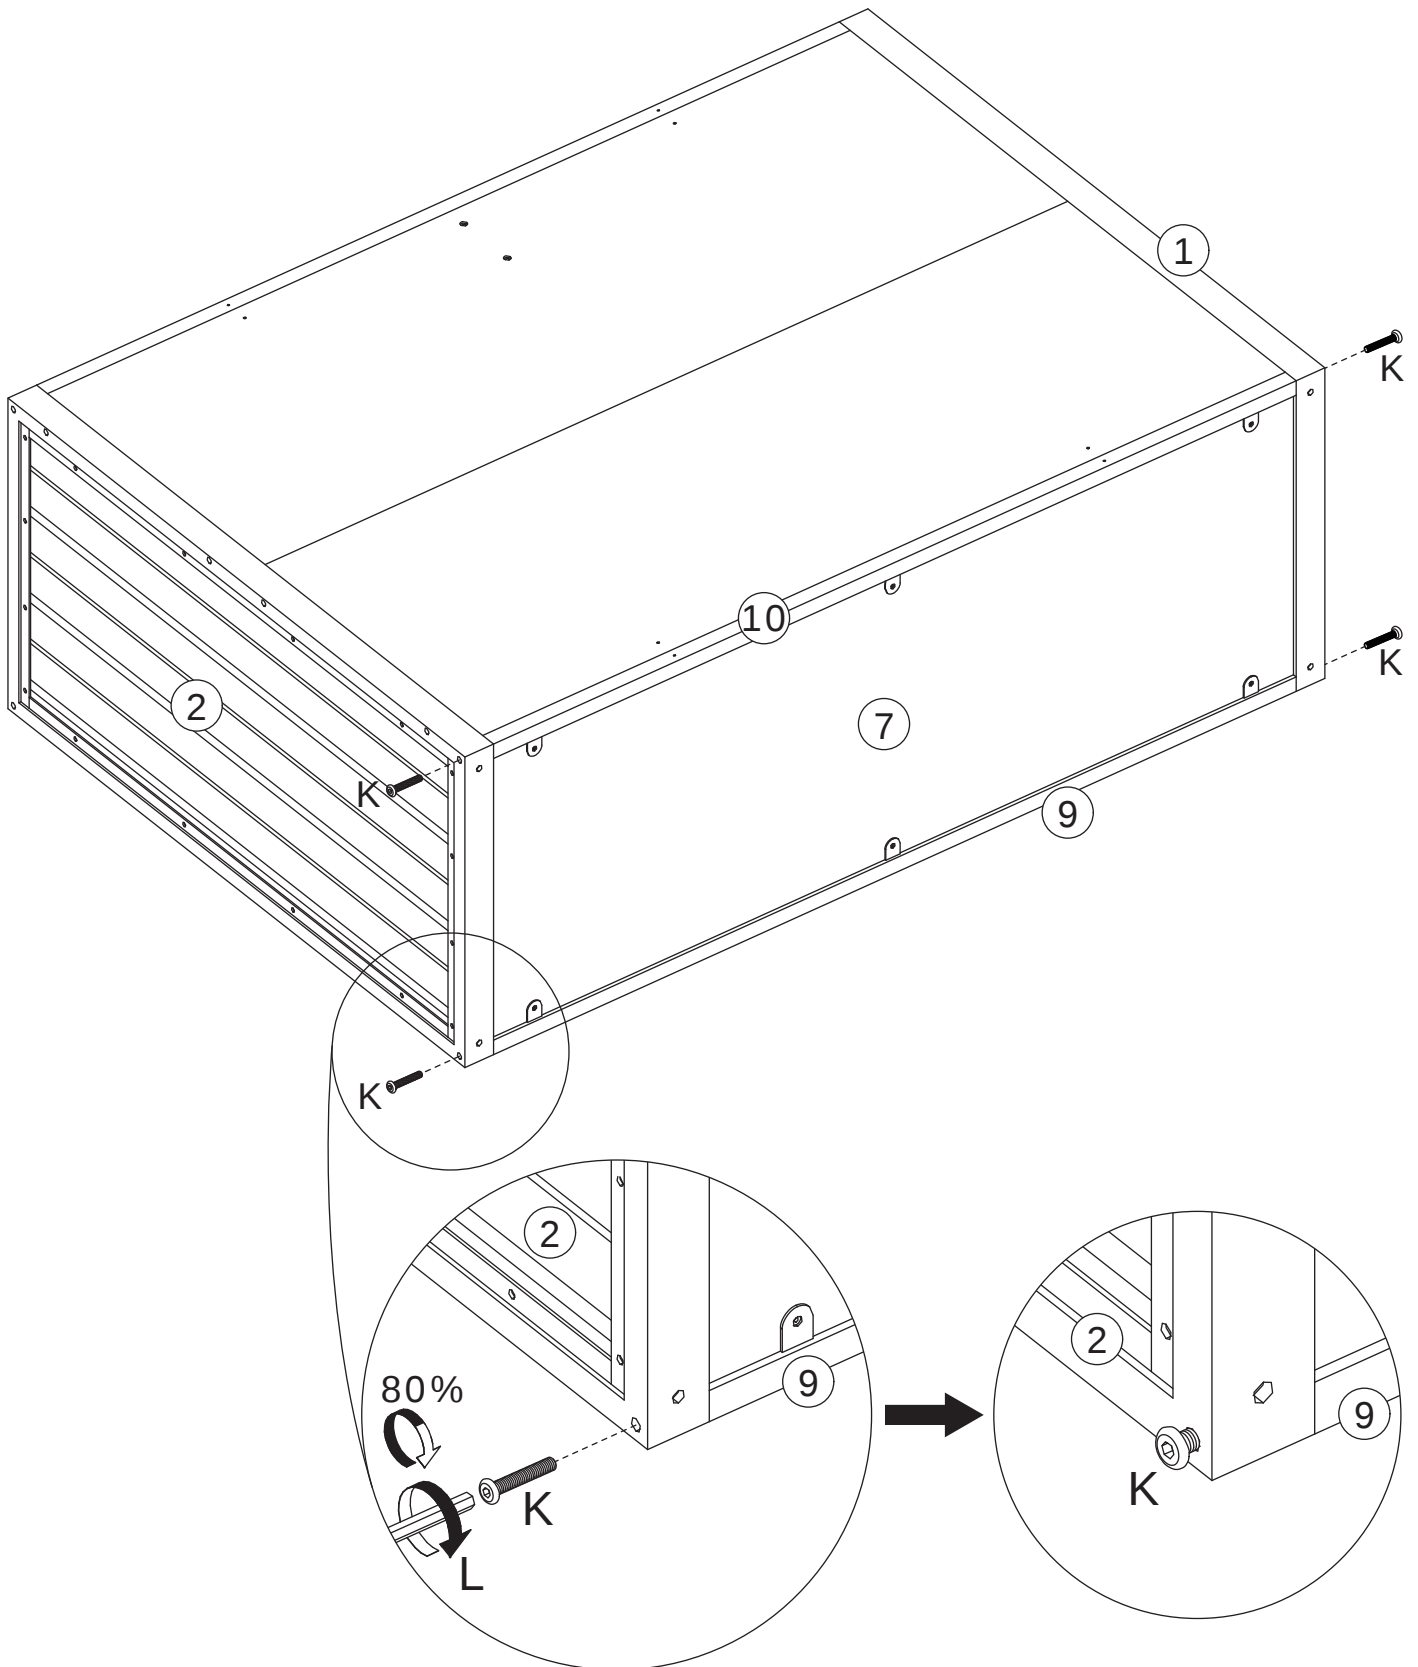

23

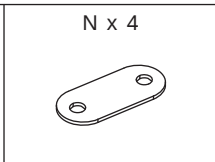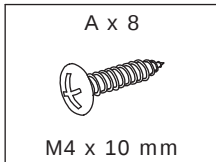  


  Secure part (N) to part 5, 6 and 10 using the screw (A) as shown.


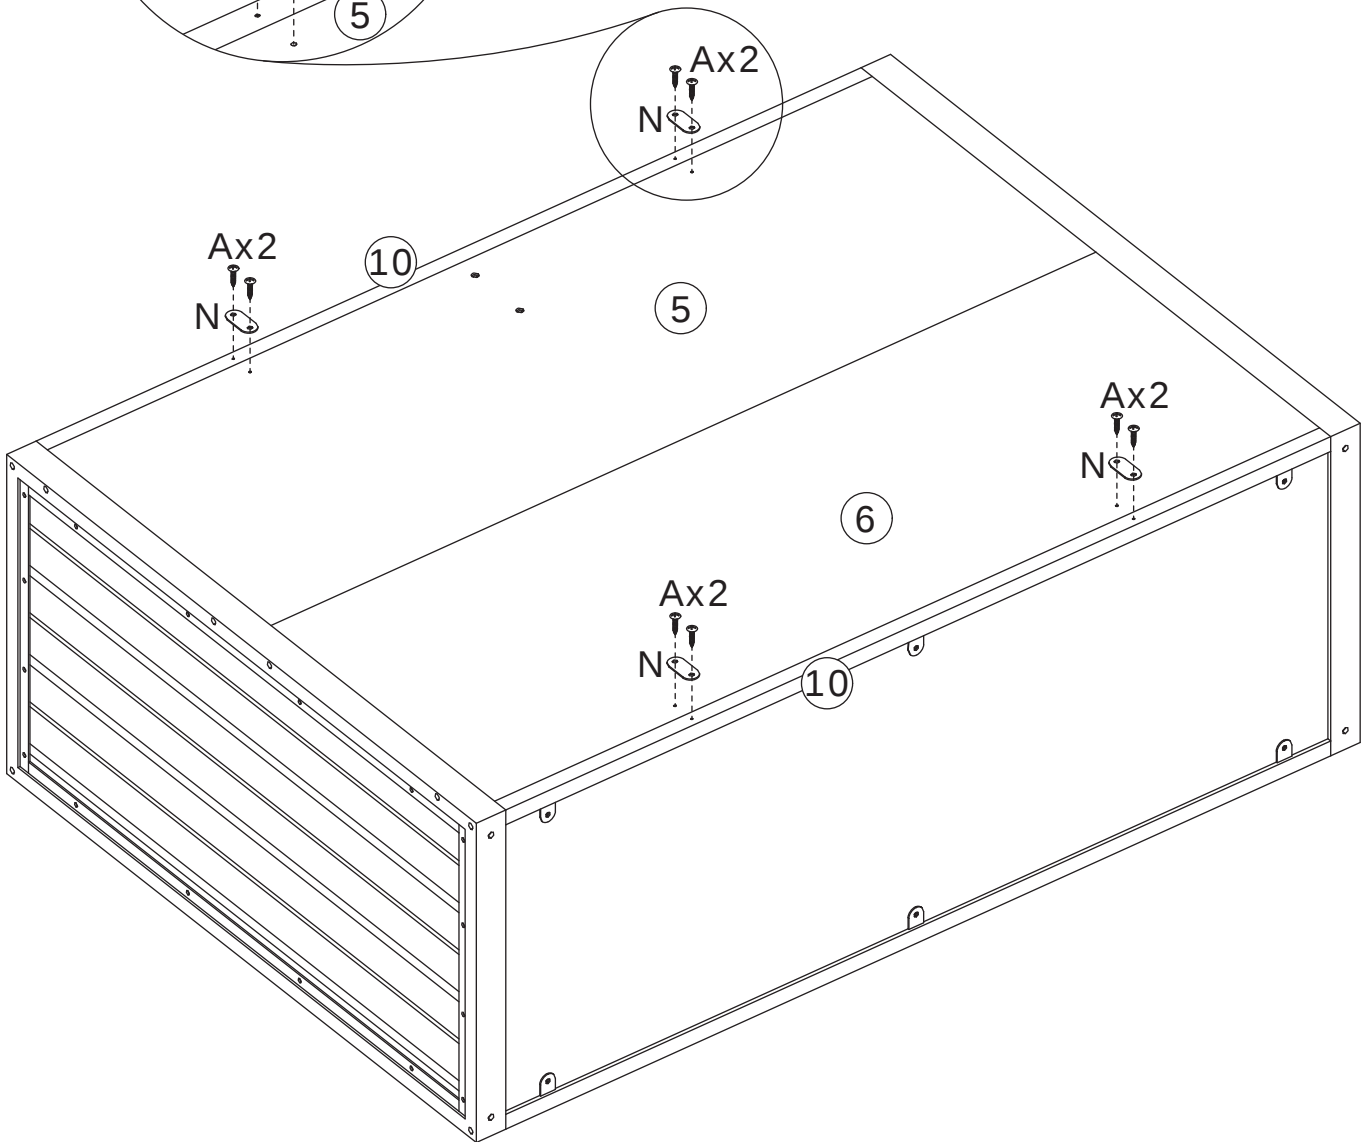
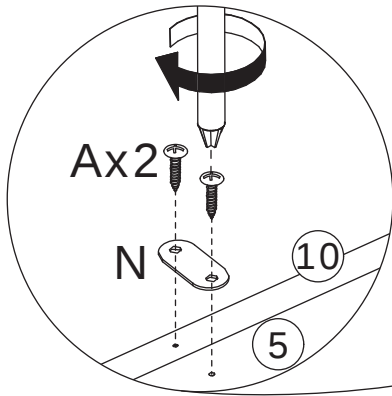


24

 
L x 1




Tighten screw (K) fully as shown.

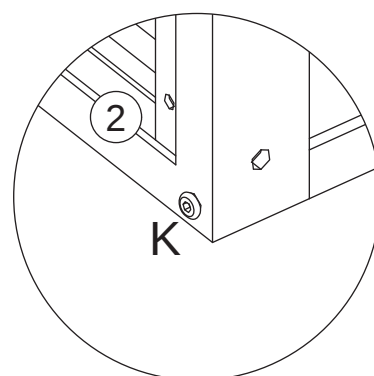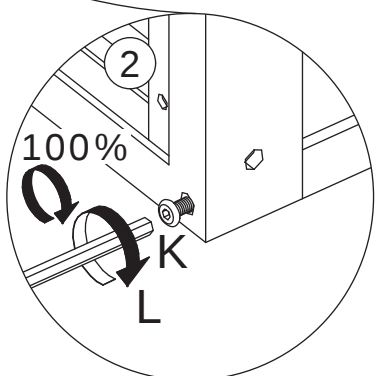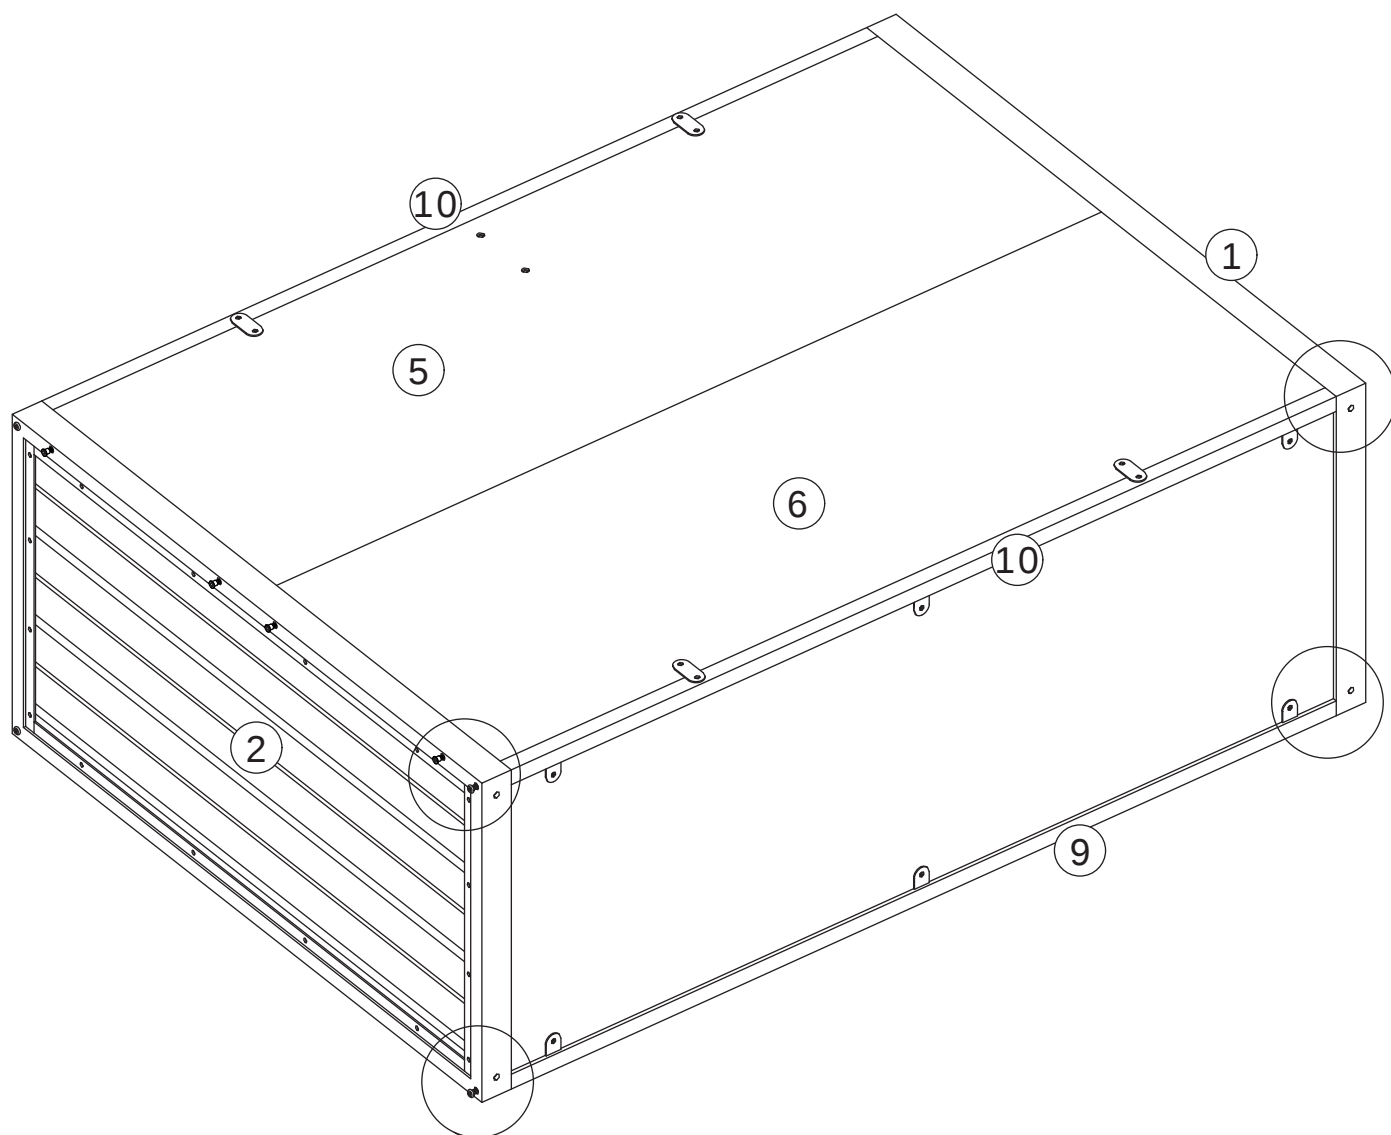   

25

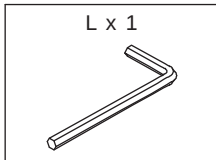 

Tighten screw (M) fully as shown.

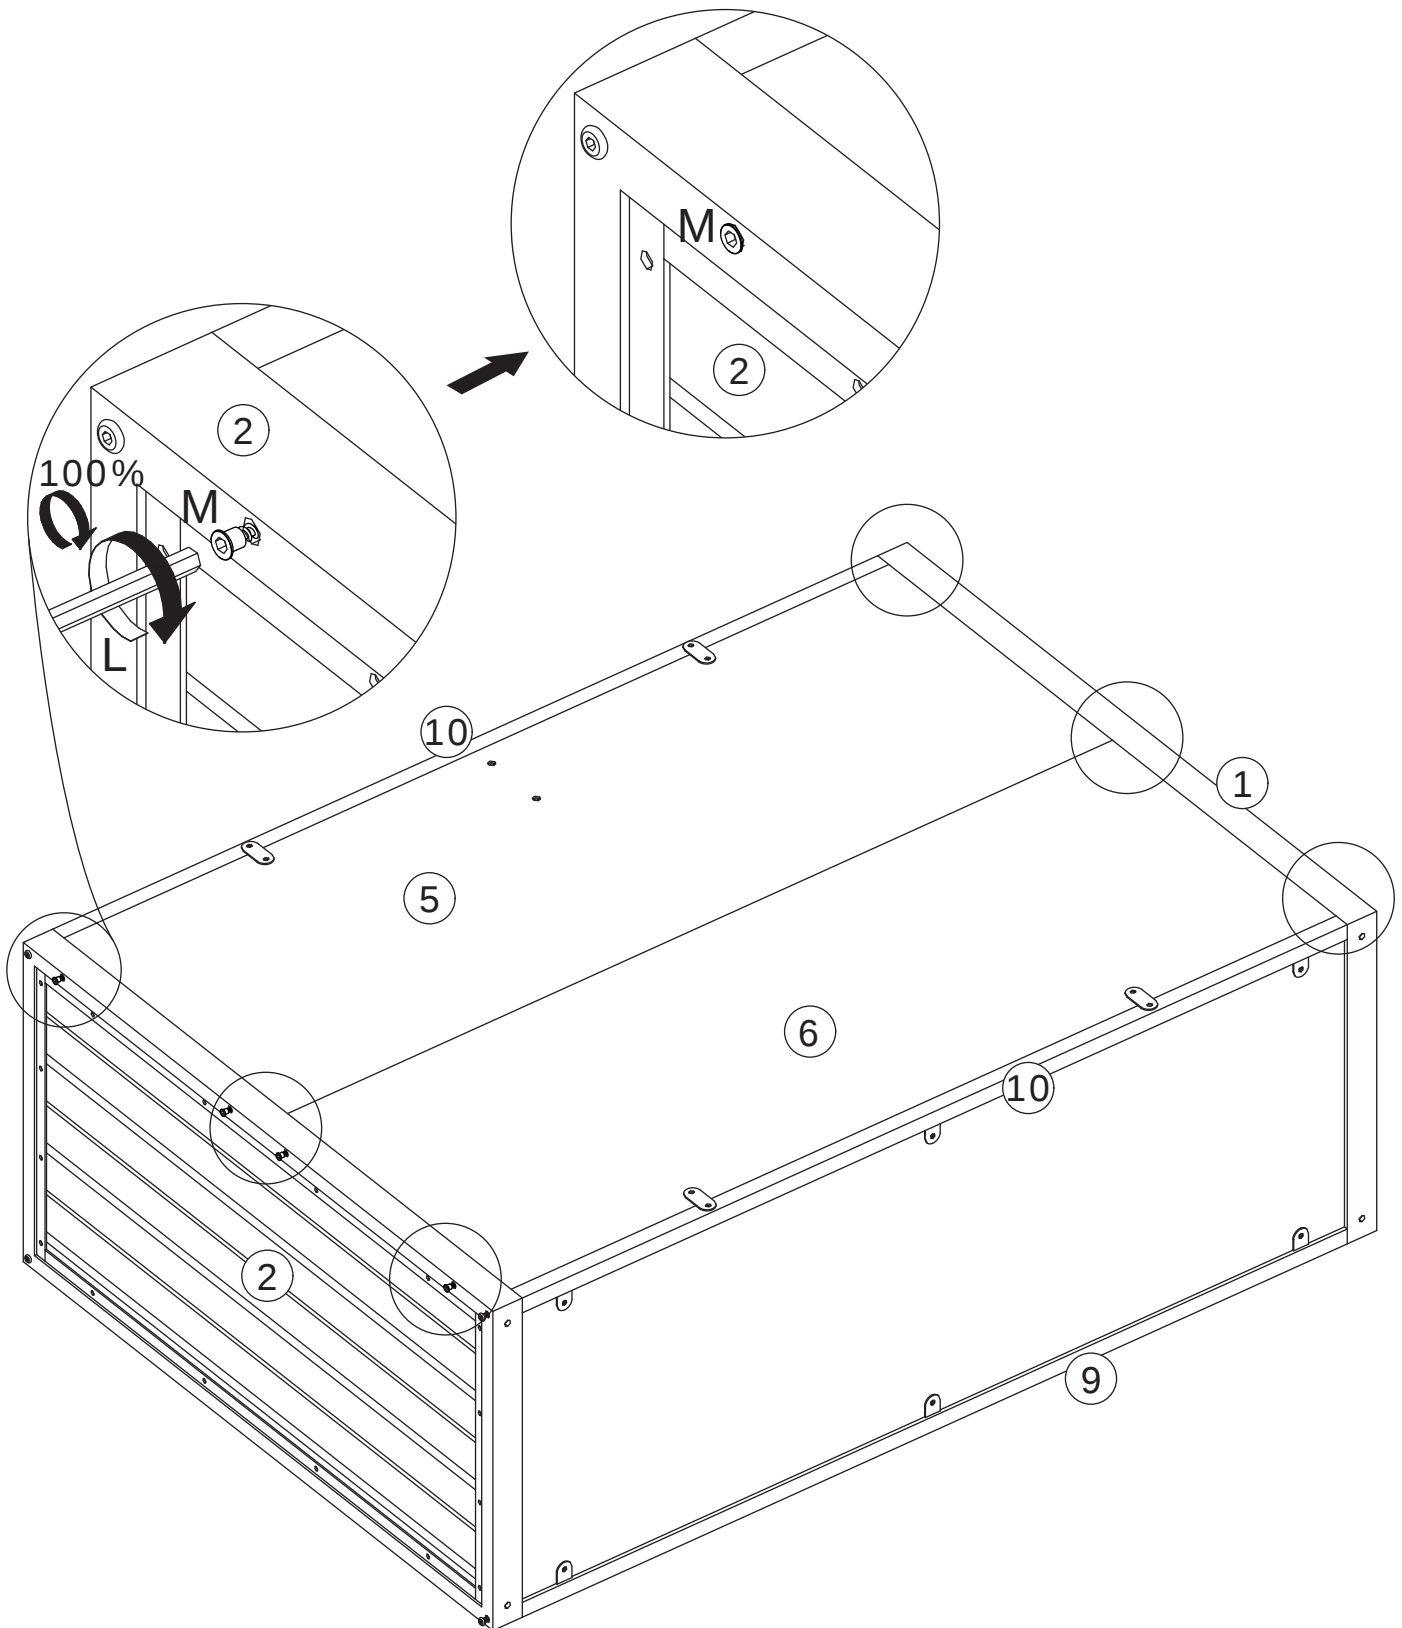 

26

 
O x 4



P x 1



Screw part (O) to part 1 and 2 as shown.

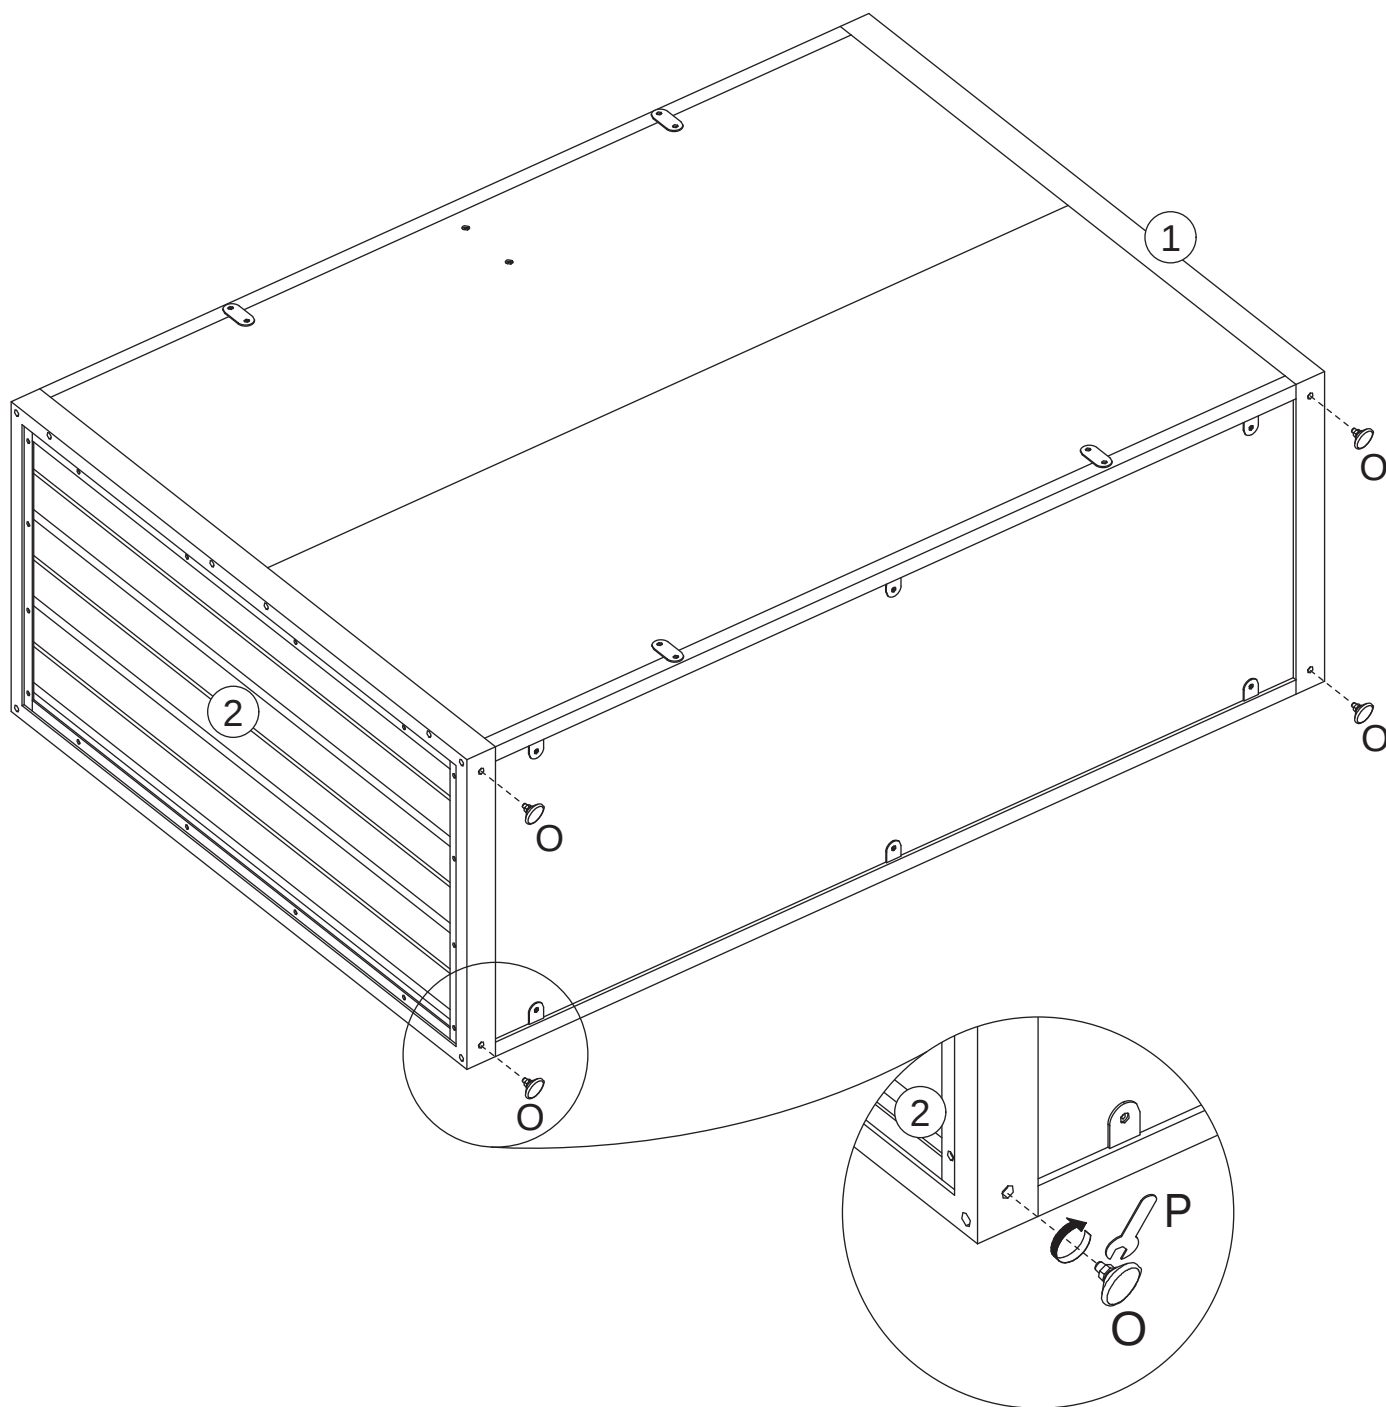

27

 
G x 2






Q x 4



M3 x 6 mm




   Secure part (G) to part 24 using screw (Q) as shown.

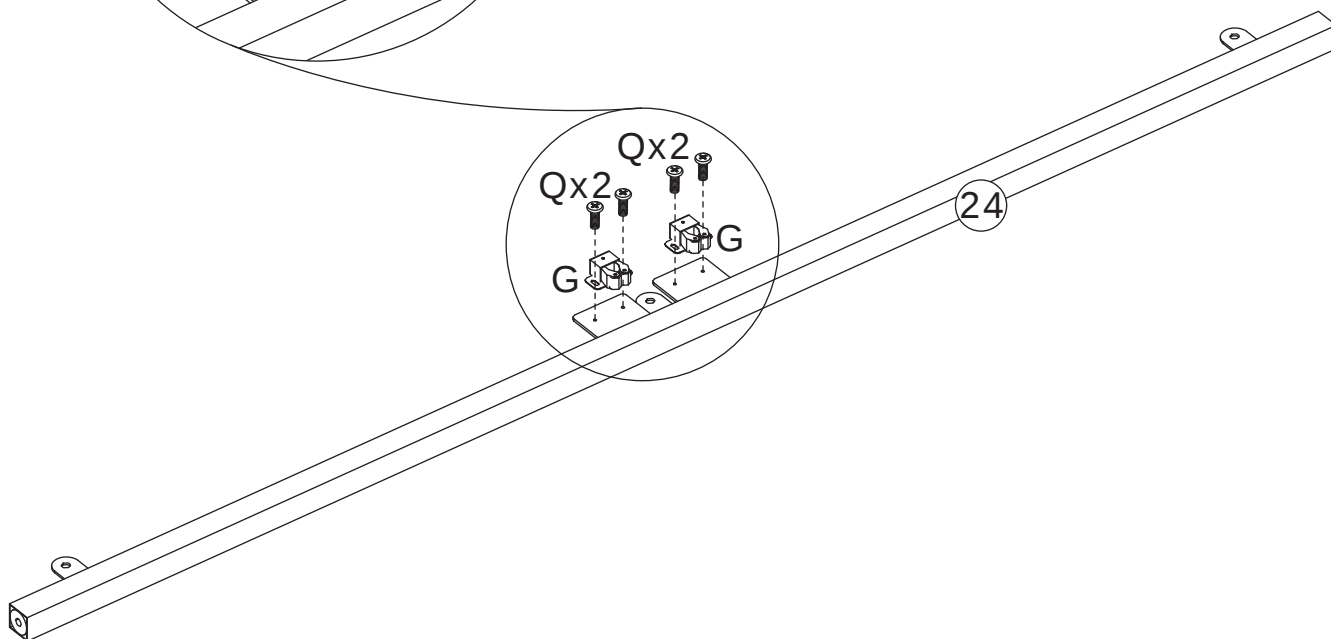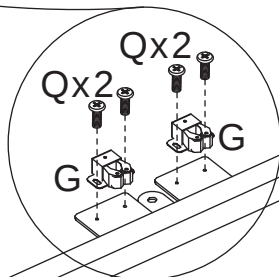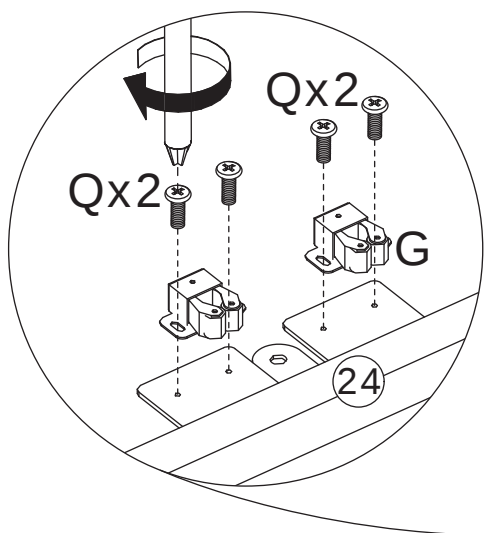


28

 
A x 6



M4 x 10 mm

 


 Secure part 10 and 24 to part 21 using screw (A) as shown.

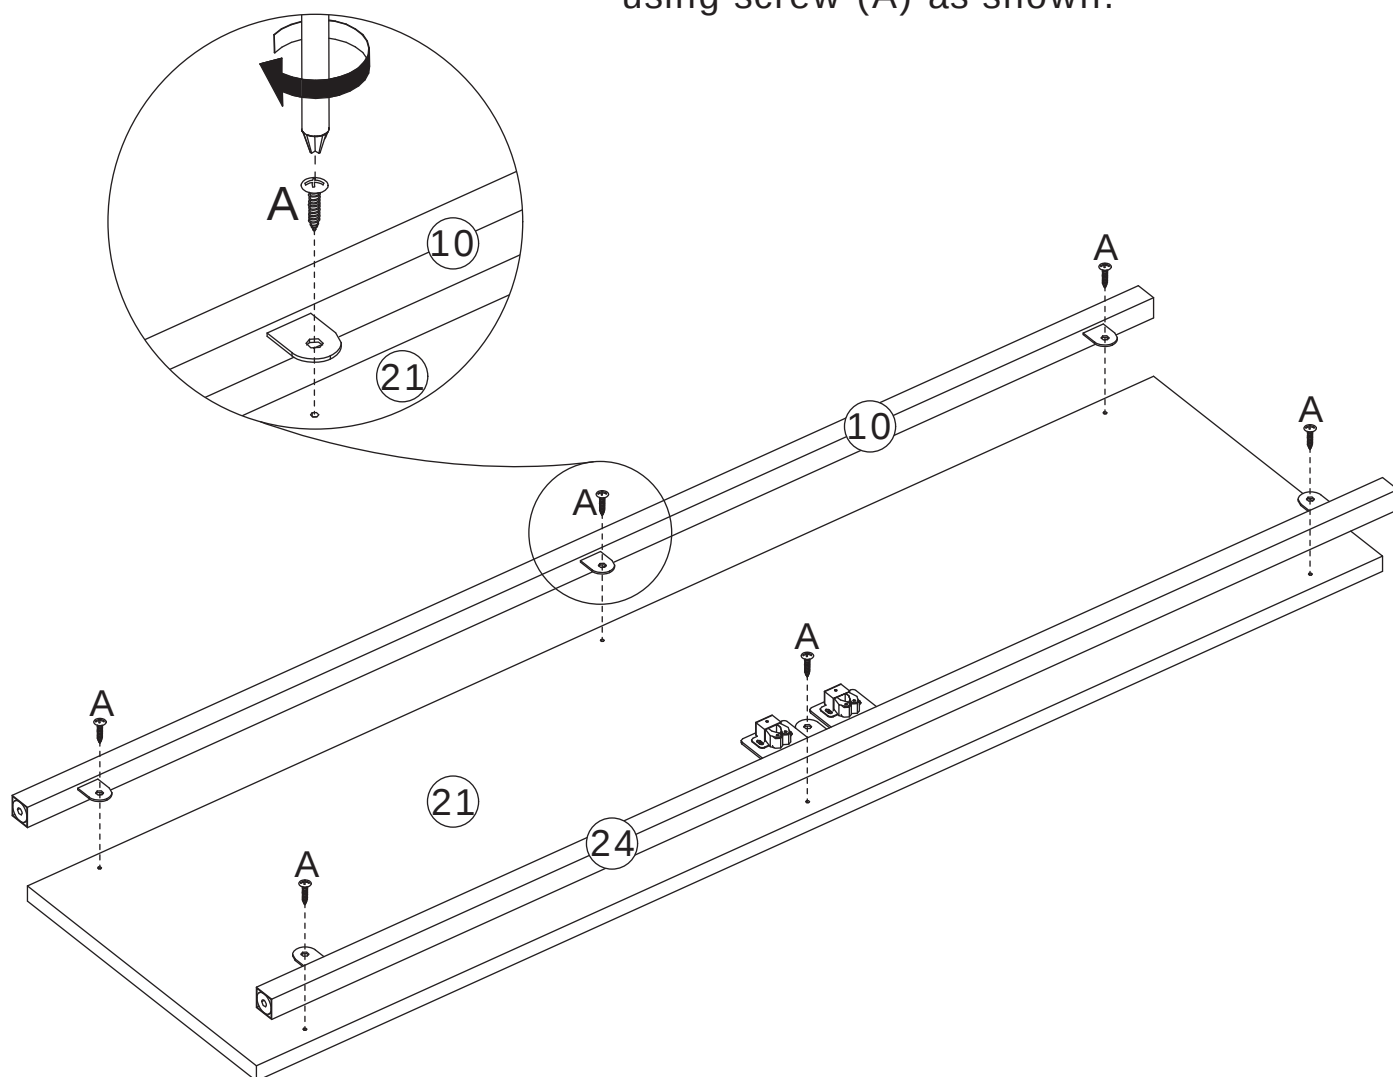


29

 K x 4




M6 x 50 mm

 L x 1




 Secure part 19 and 20 to part 10 and 24 using screw (K), tighten the screws to 80% of its full torque as shown.

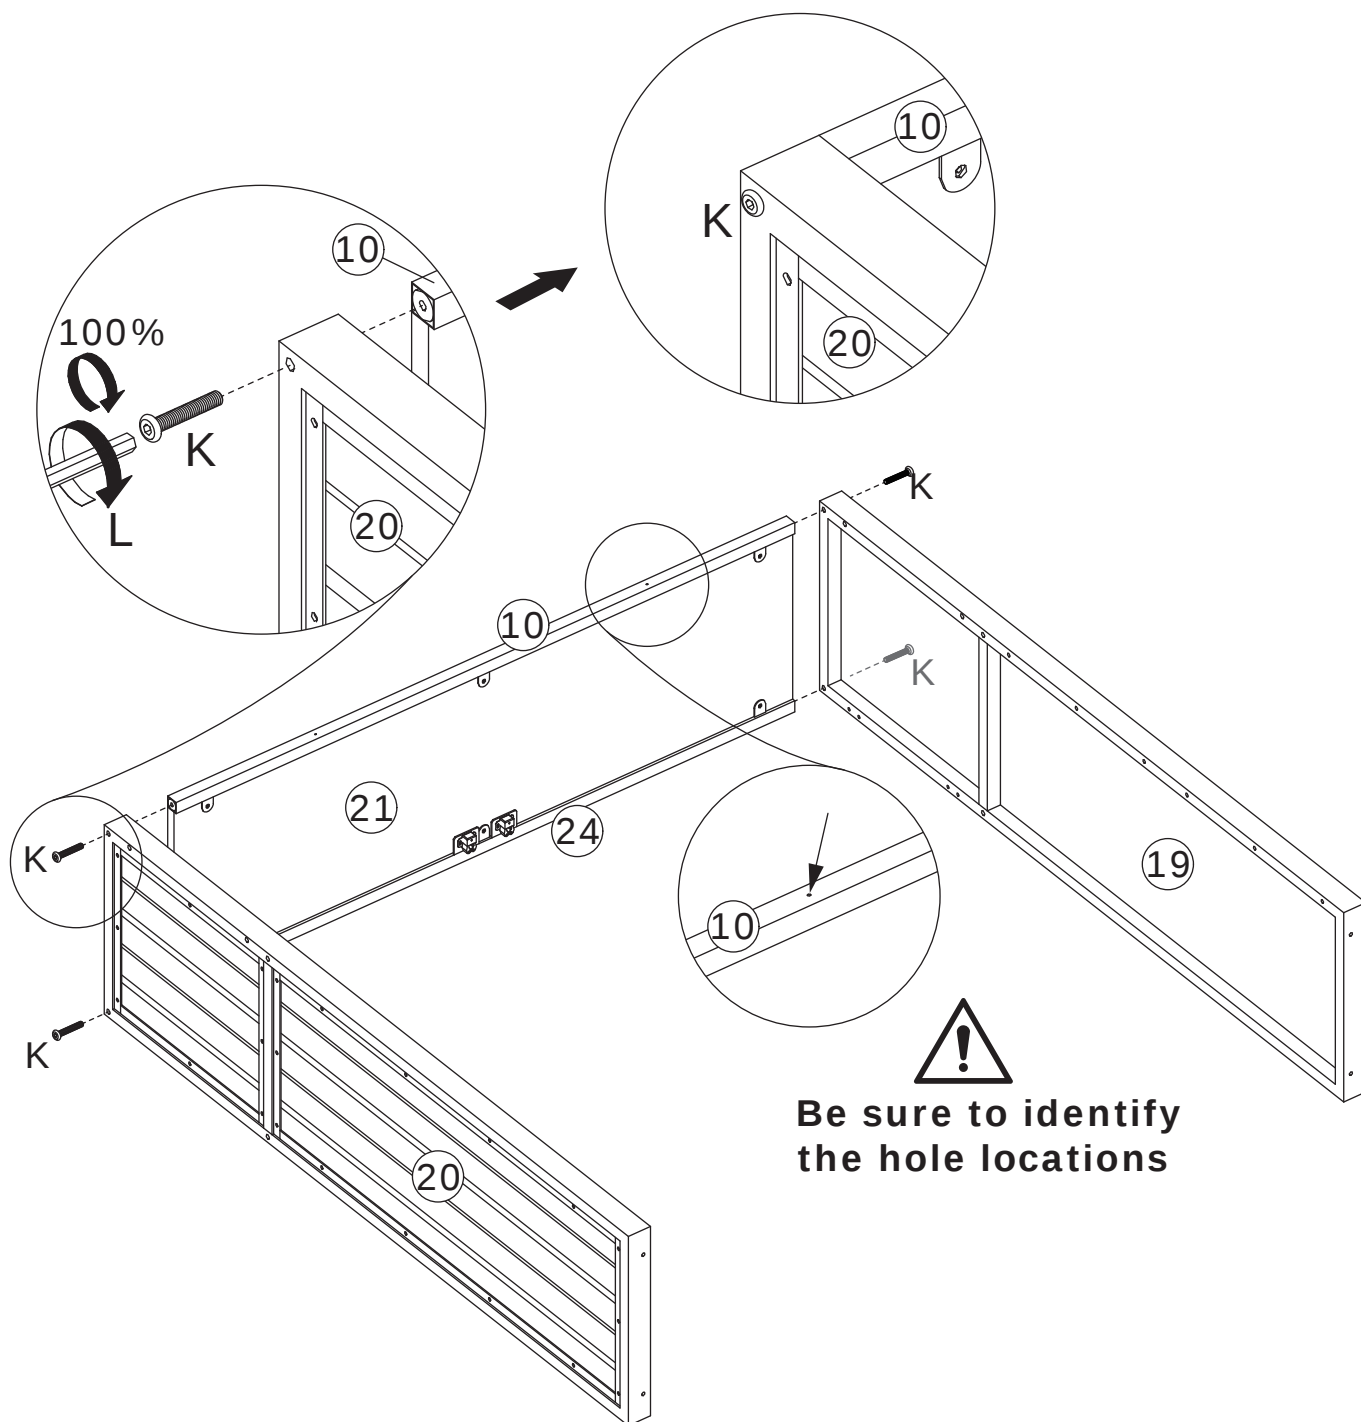



30

 M x 4




M7 x 60 mm

  L x 1

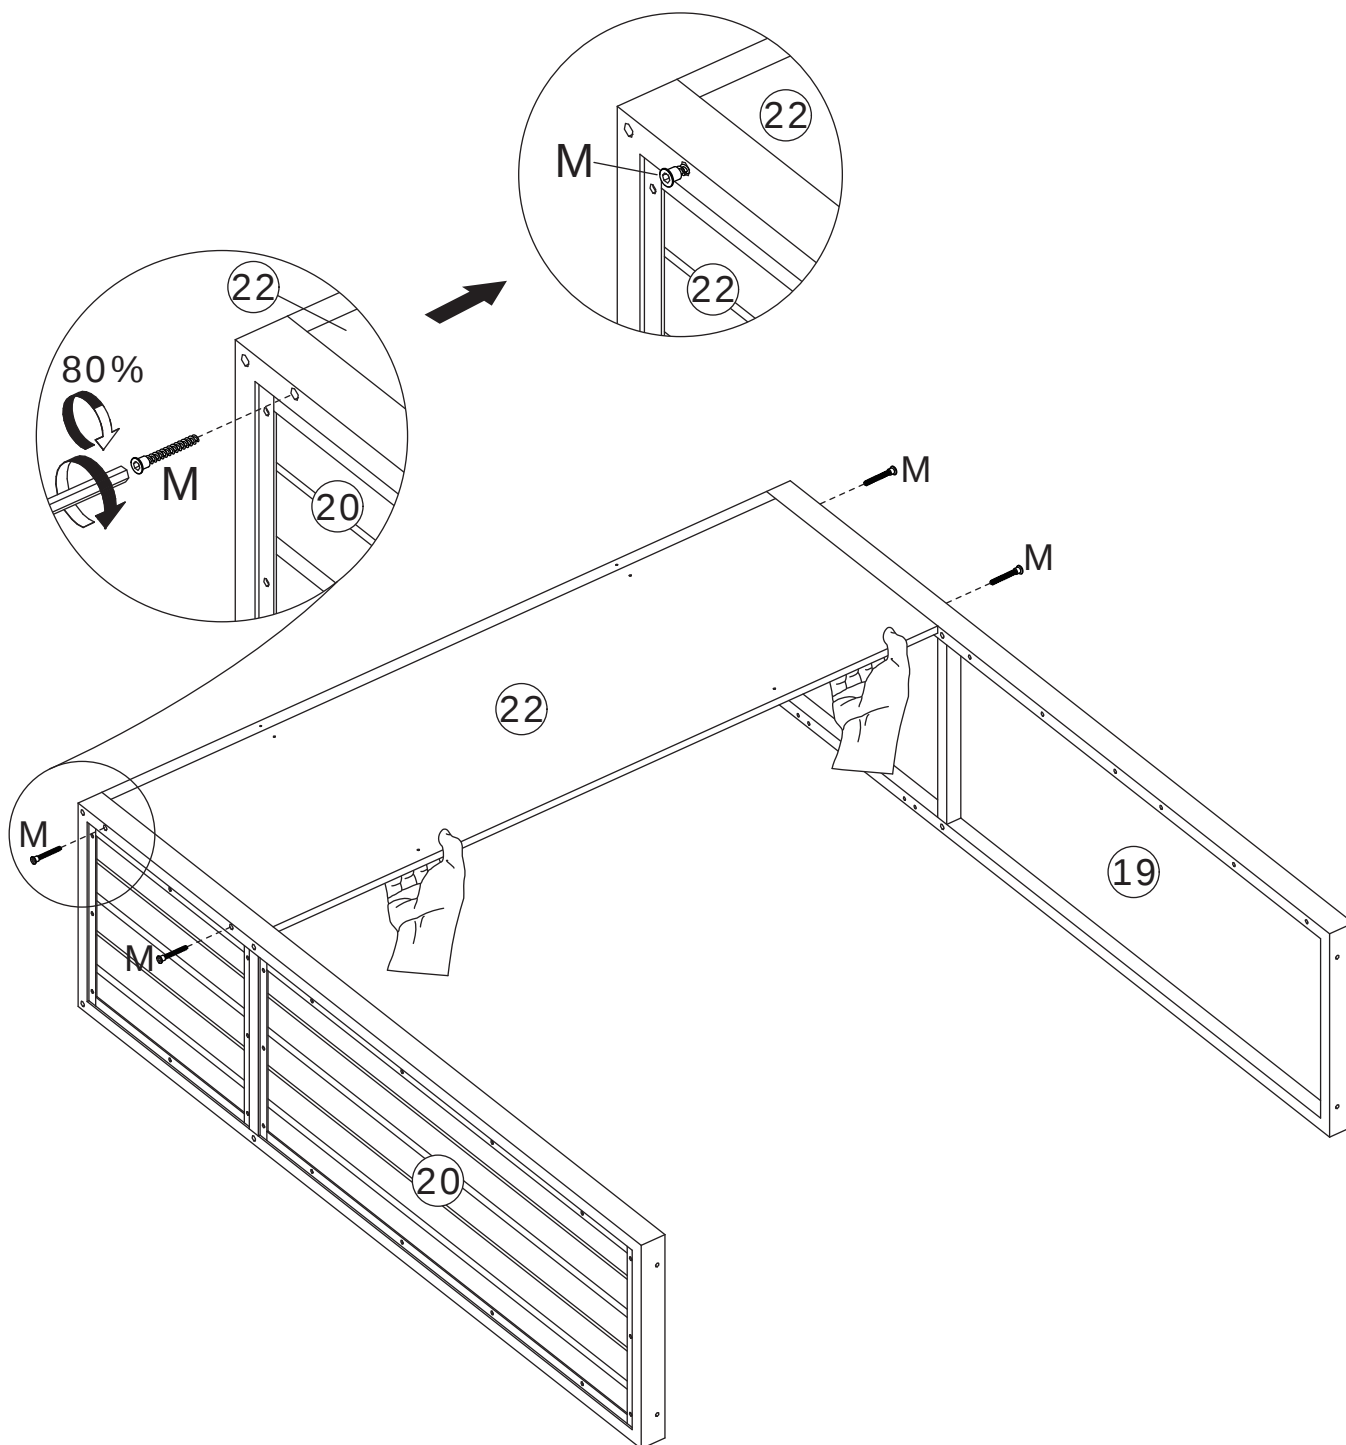

 
Secure part 19 and 20 to part 22 using screw (K), tighten the screws to 80% of its full torque as shown.

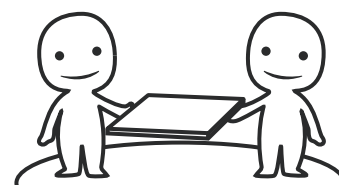


ASSEMBLED BY 2 ADULTS

31

 
A x 6



M4 x 10 mm

 

 
Secure part 9 and 10 to part 21 using screw (K) as shown.

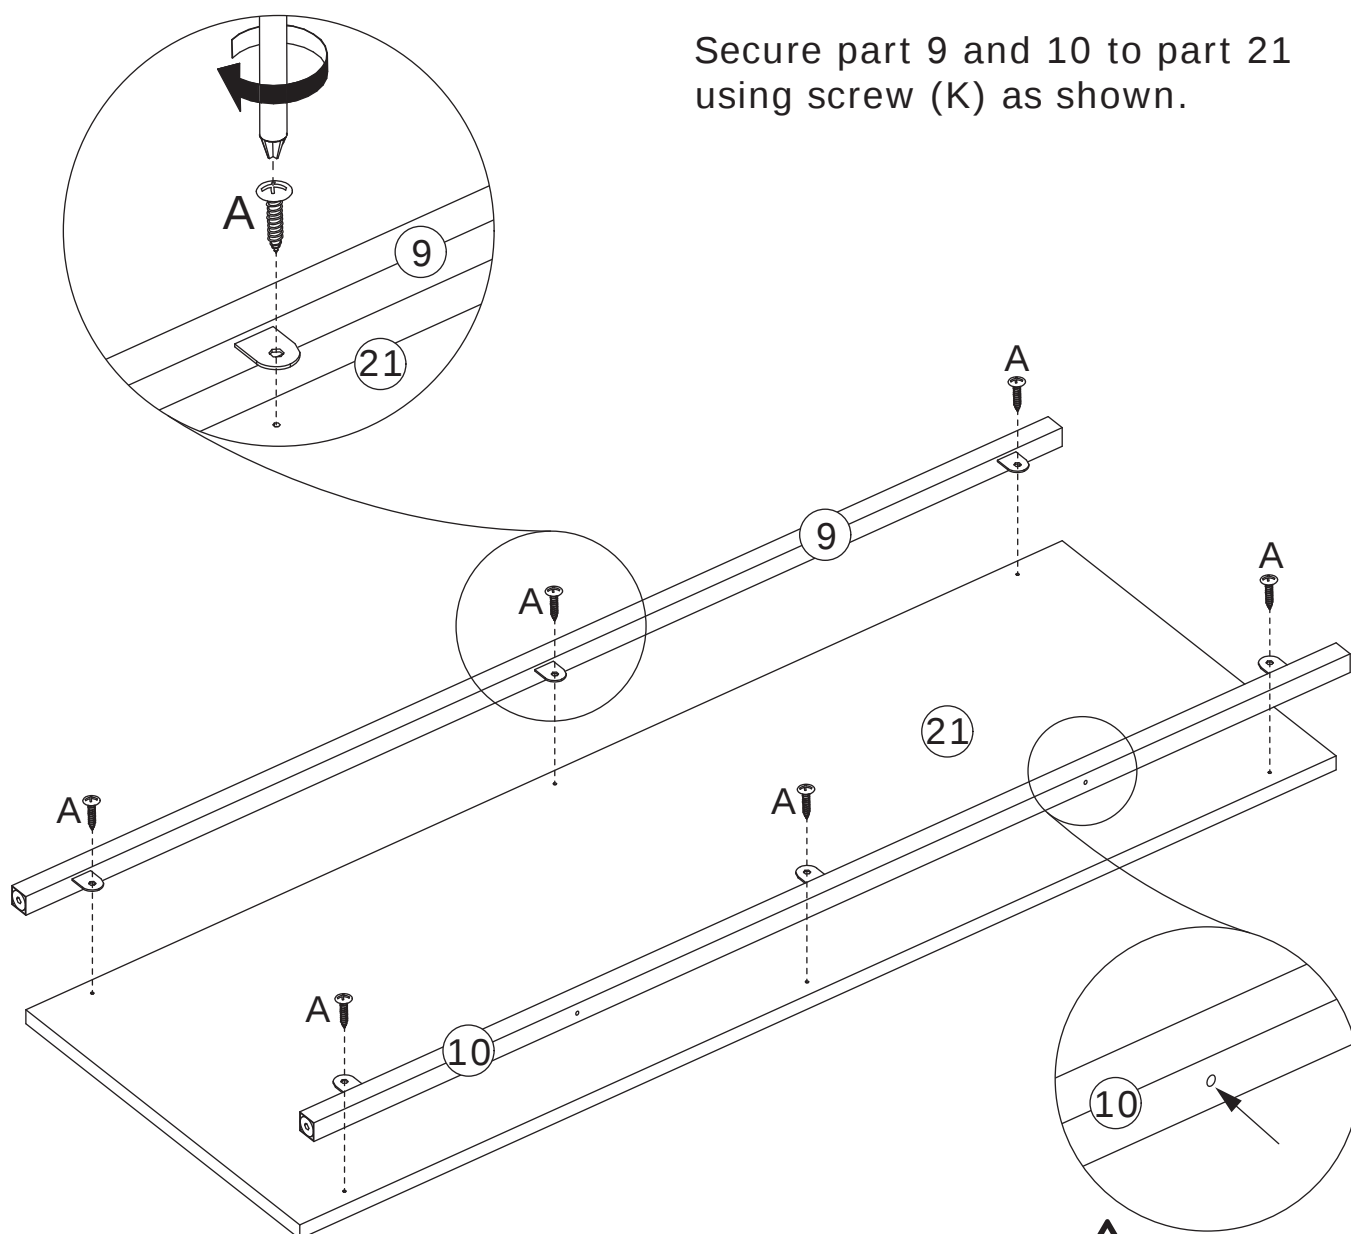

Be sure to identify the hole locations





32

 K x 4



M6 x 50 mm

    
L x 1

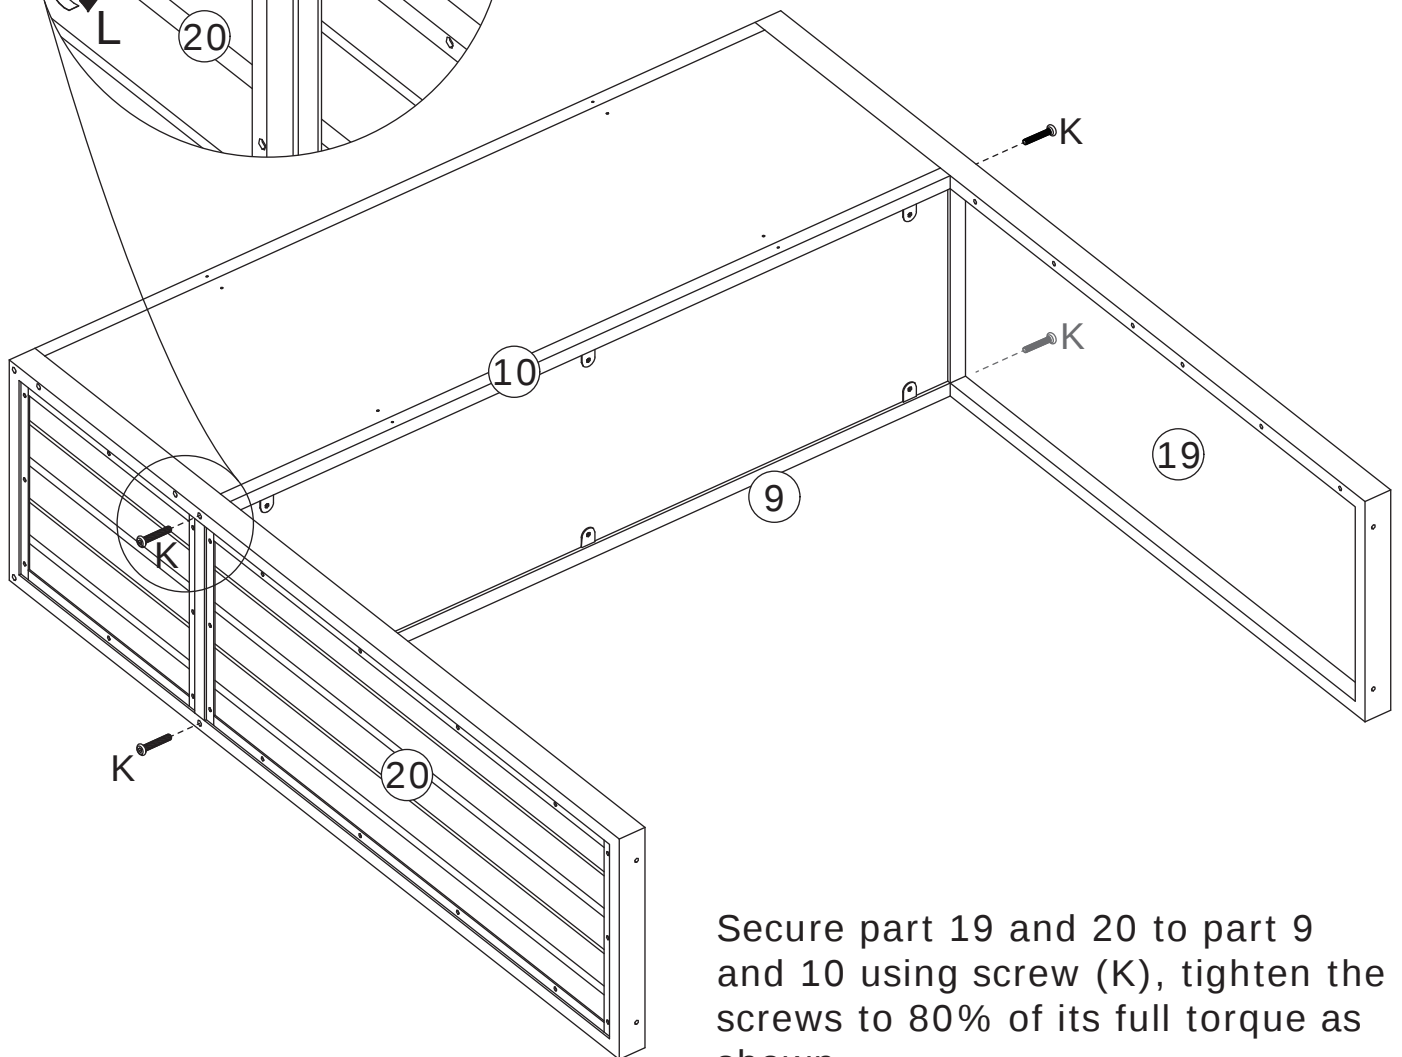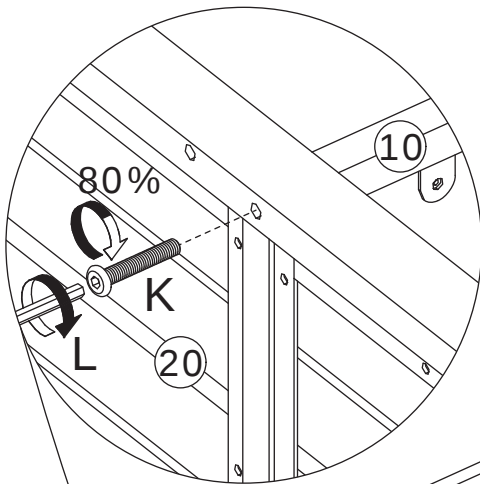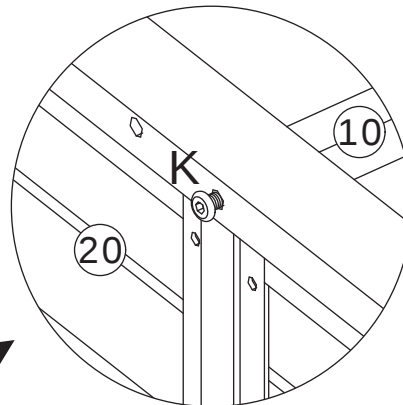

Secure part 19 and 20 to part 9 and 10 using screw (K), tighten the screws to 80% of its full torque as shown.

33

 L x 1





R x 6



M6 x 12 mm

  
Secure part 19 and 20 to part 23 using screw (R), tighten the screws to 80% of its full torque as shown.

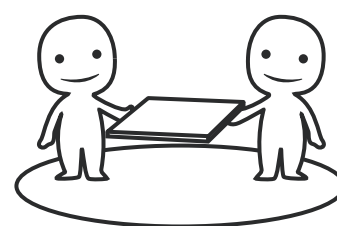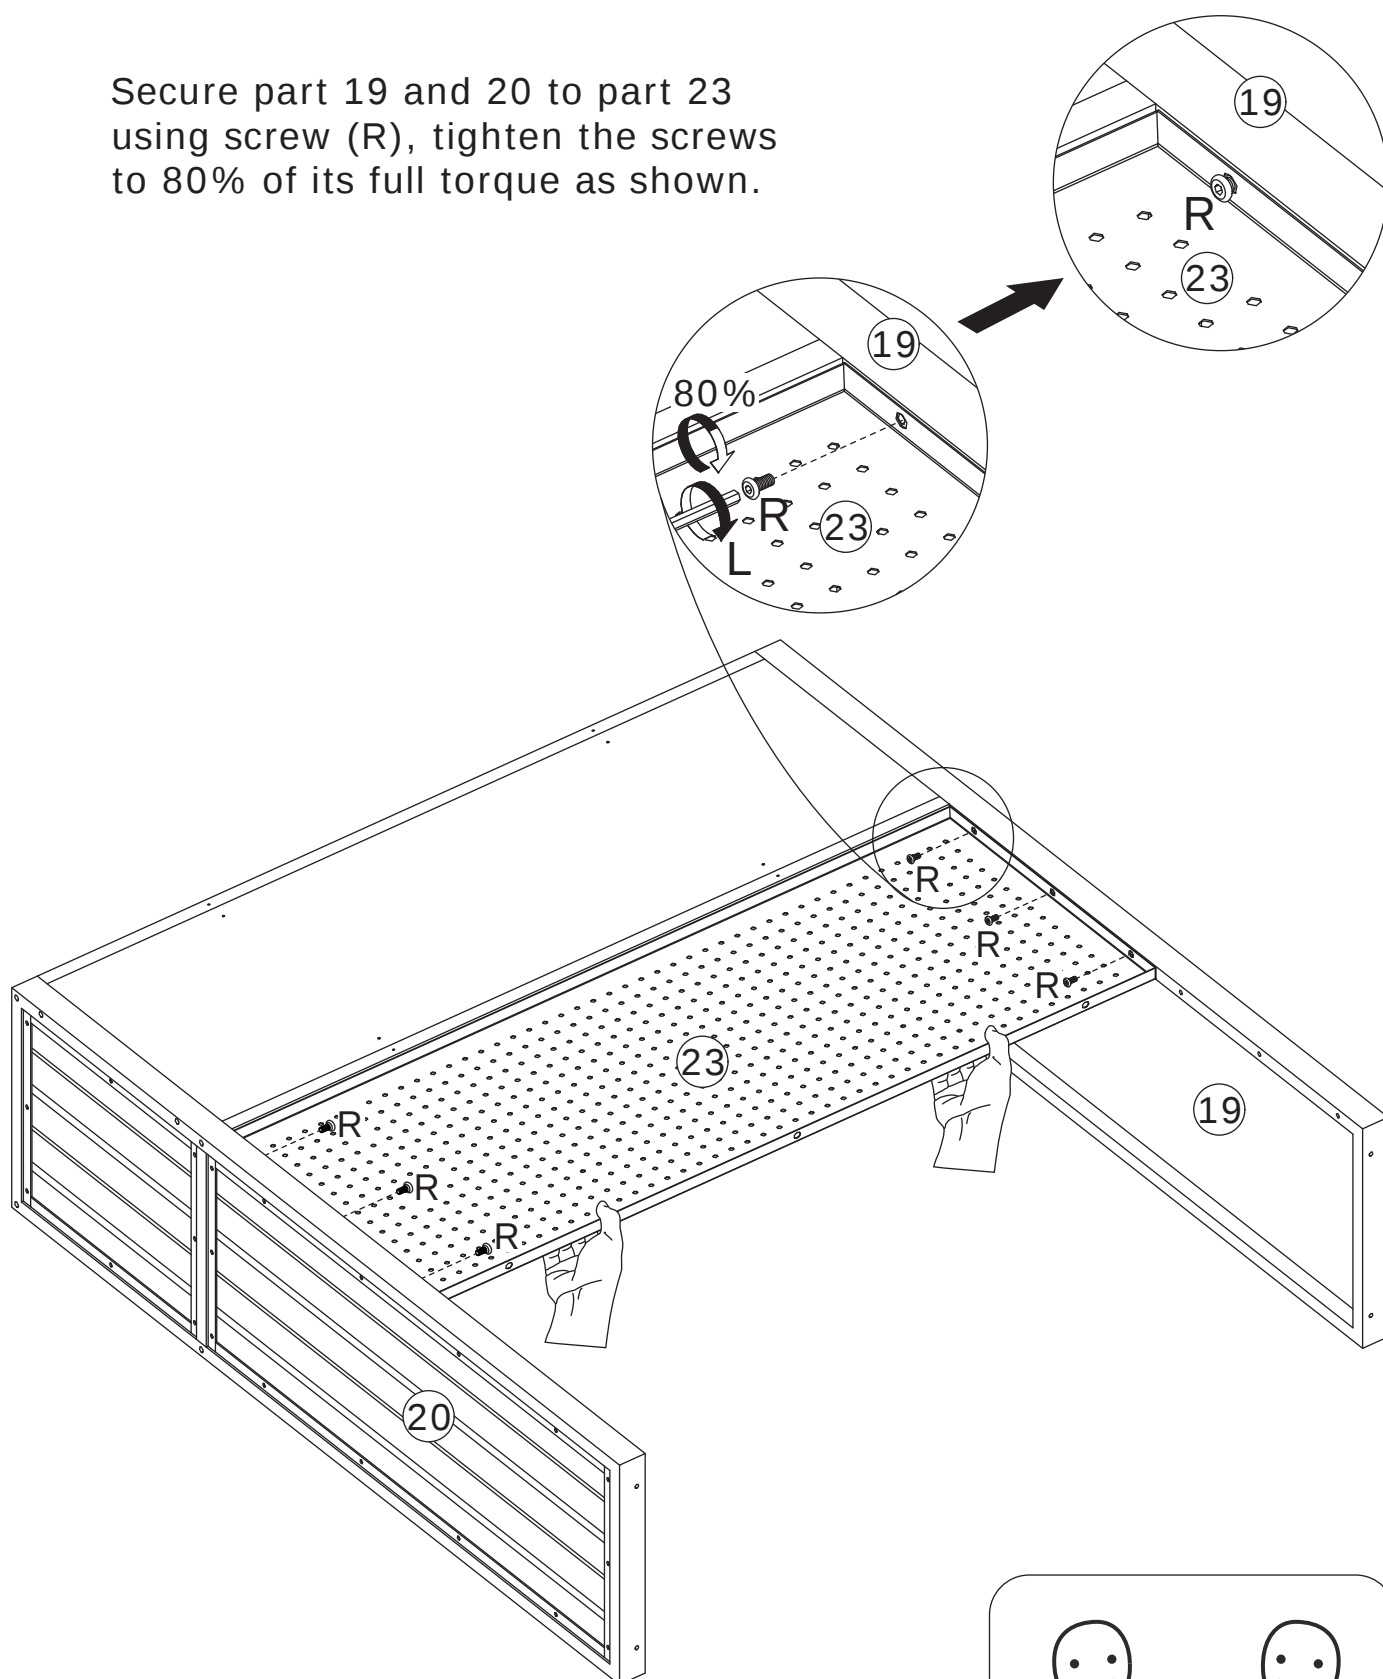

ASSEMBLED BY 2 ADULTS

34

 L x 1



P x 1



R x 9



 
 
M6 x 12 mm

S x 3



Secure part 19 and 20 to part 23 using screw (R), tighten the screws to 80% of its full torque as shown.


Then secure two part 23 using screw (R) and nut (S) as shown.

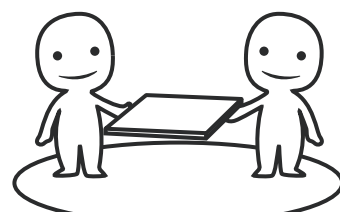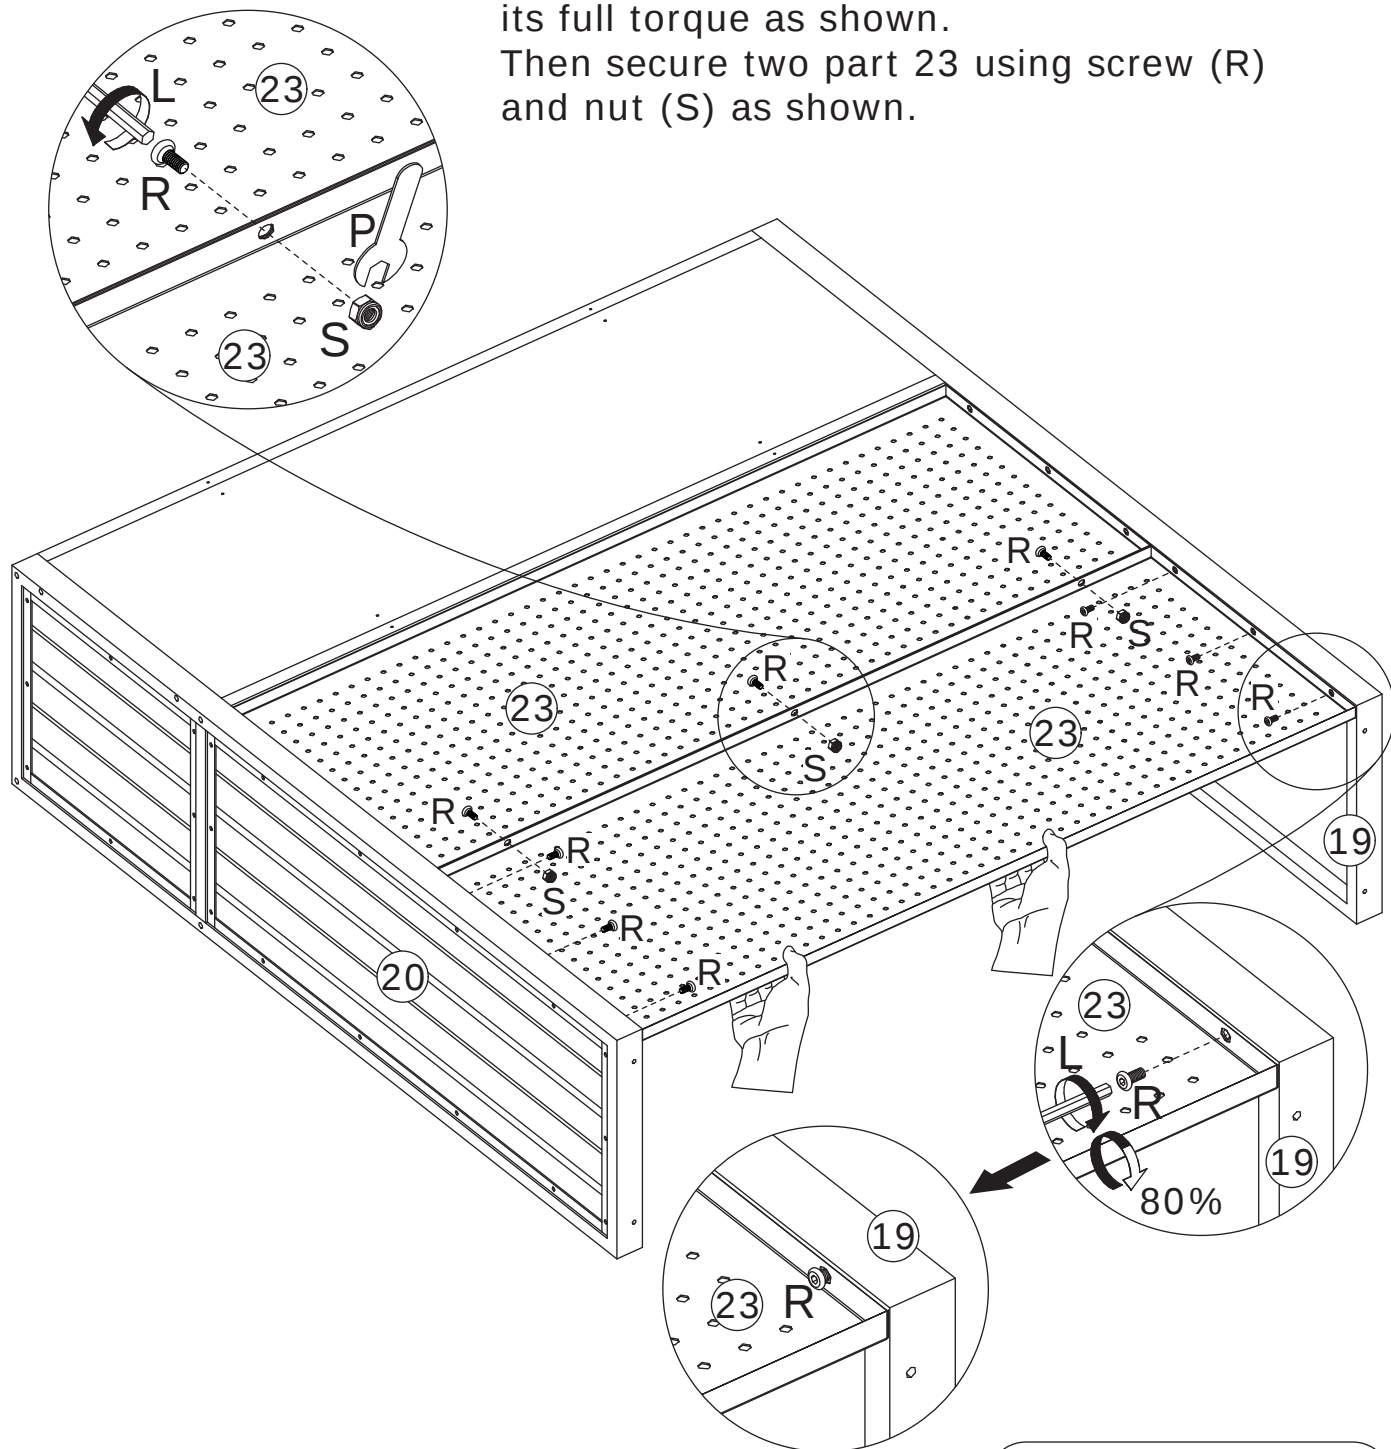

ASSEMBLED BY 2 ADULTS



35

 A x 8




M4 x 10 mm

  N x 4

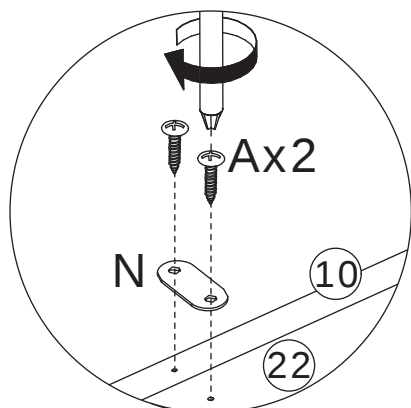


 Secure part (N) to part 10 and 22 using screw (A) as shown.

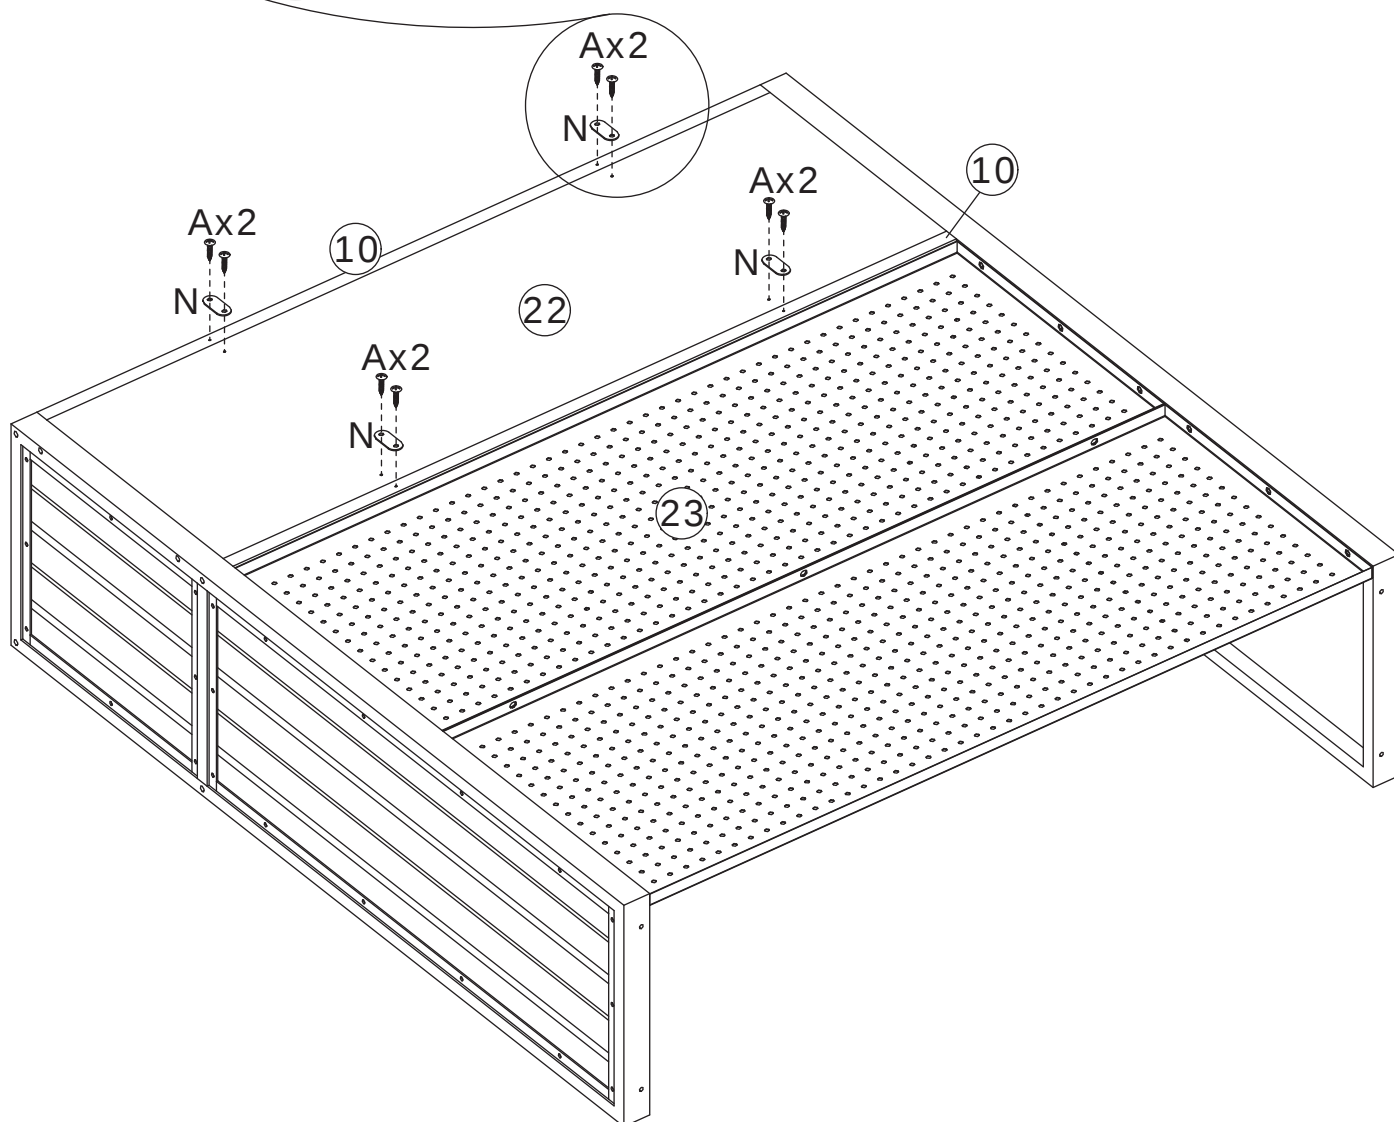


36

 L x 1



 
Tighten screw (R), (K) and (M) fully as shown.

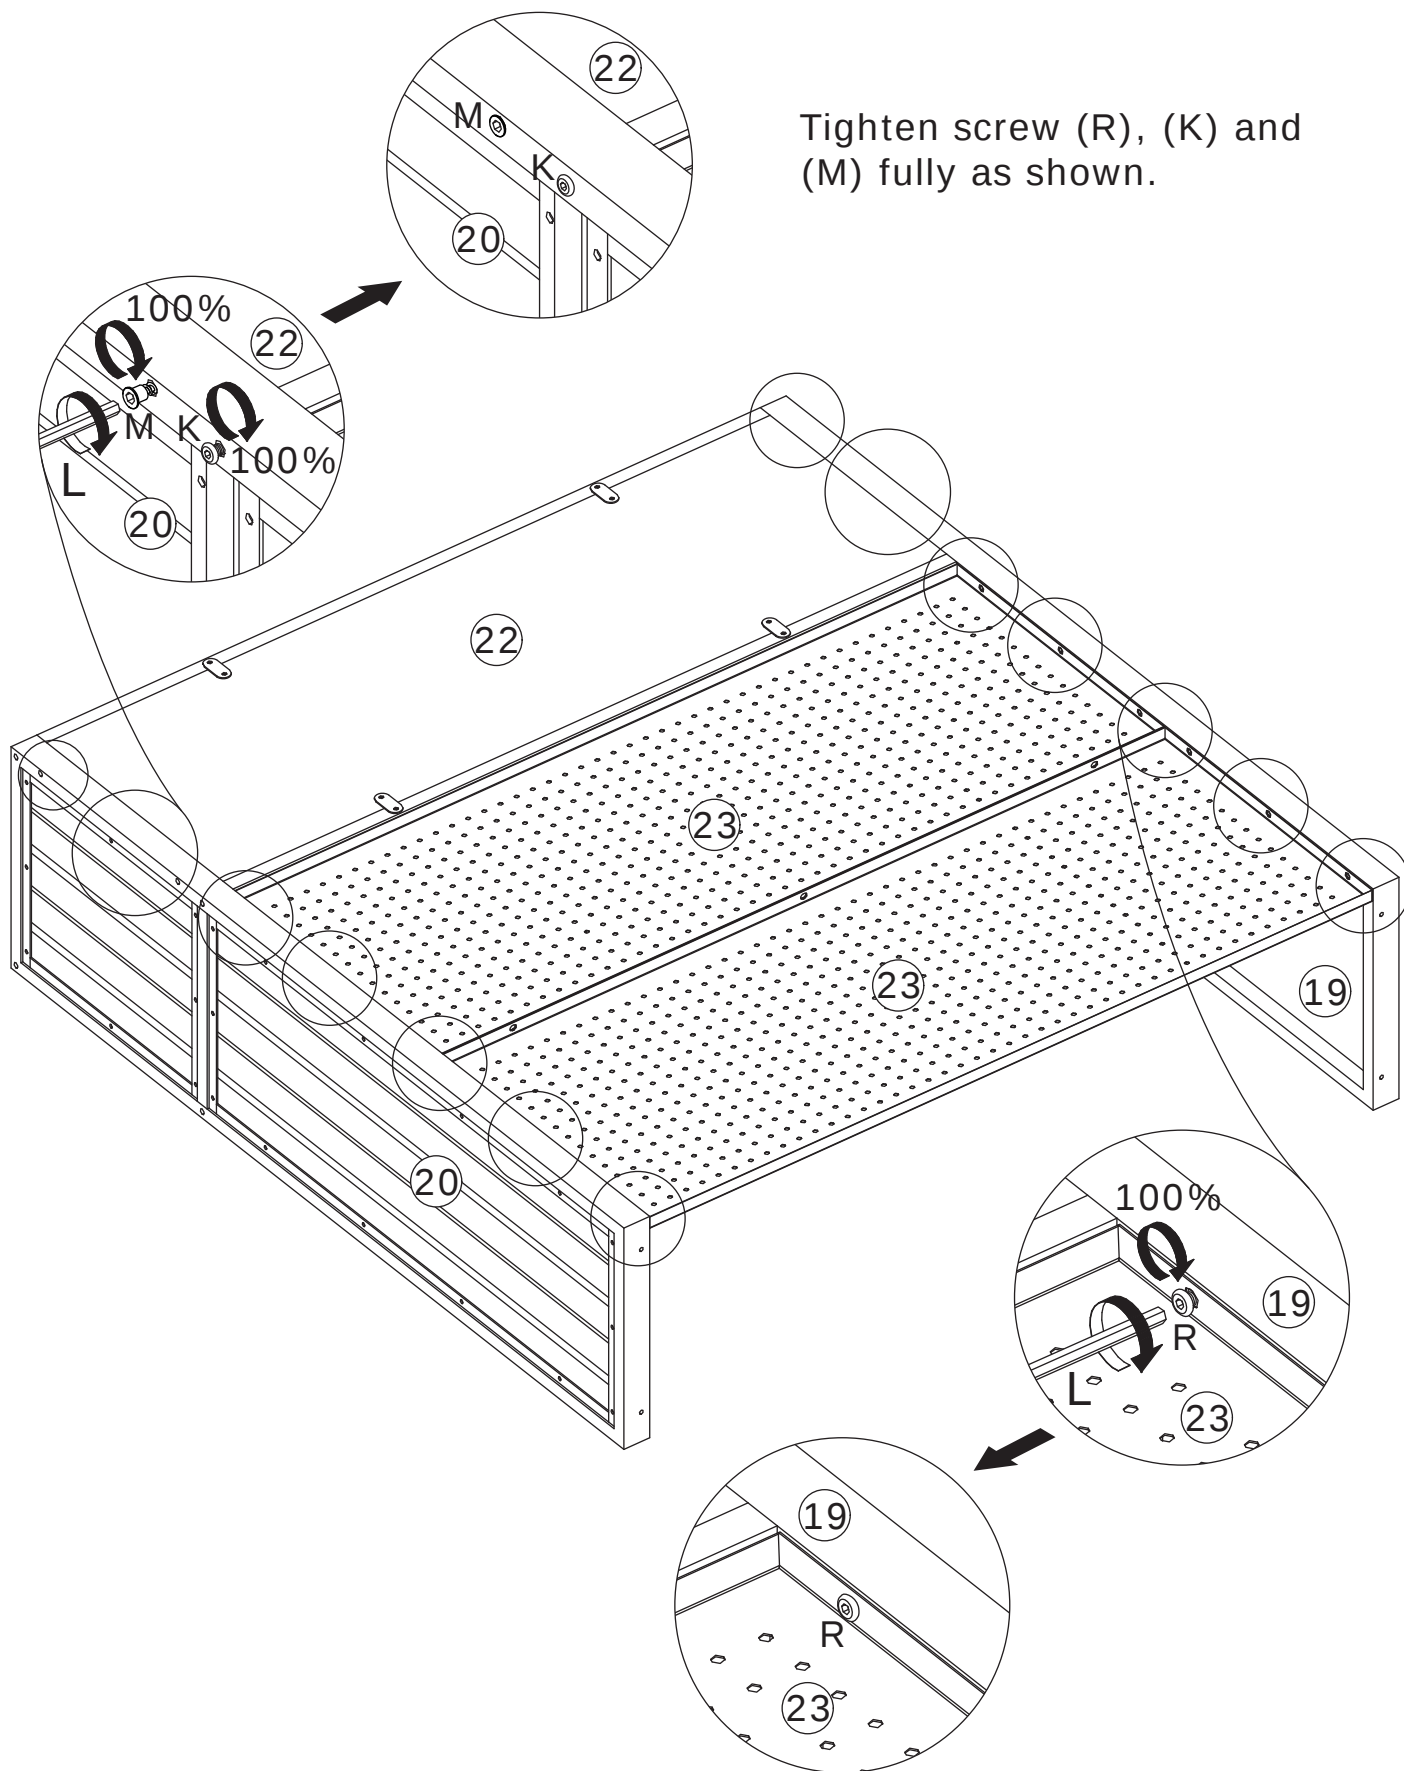


37

T x 4
M6 x 35 mm

 L x 1



 Connect the two components using screw (T) as shown.

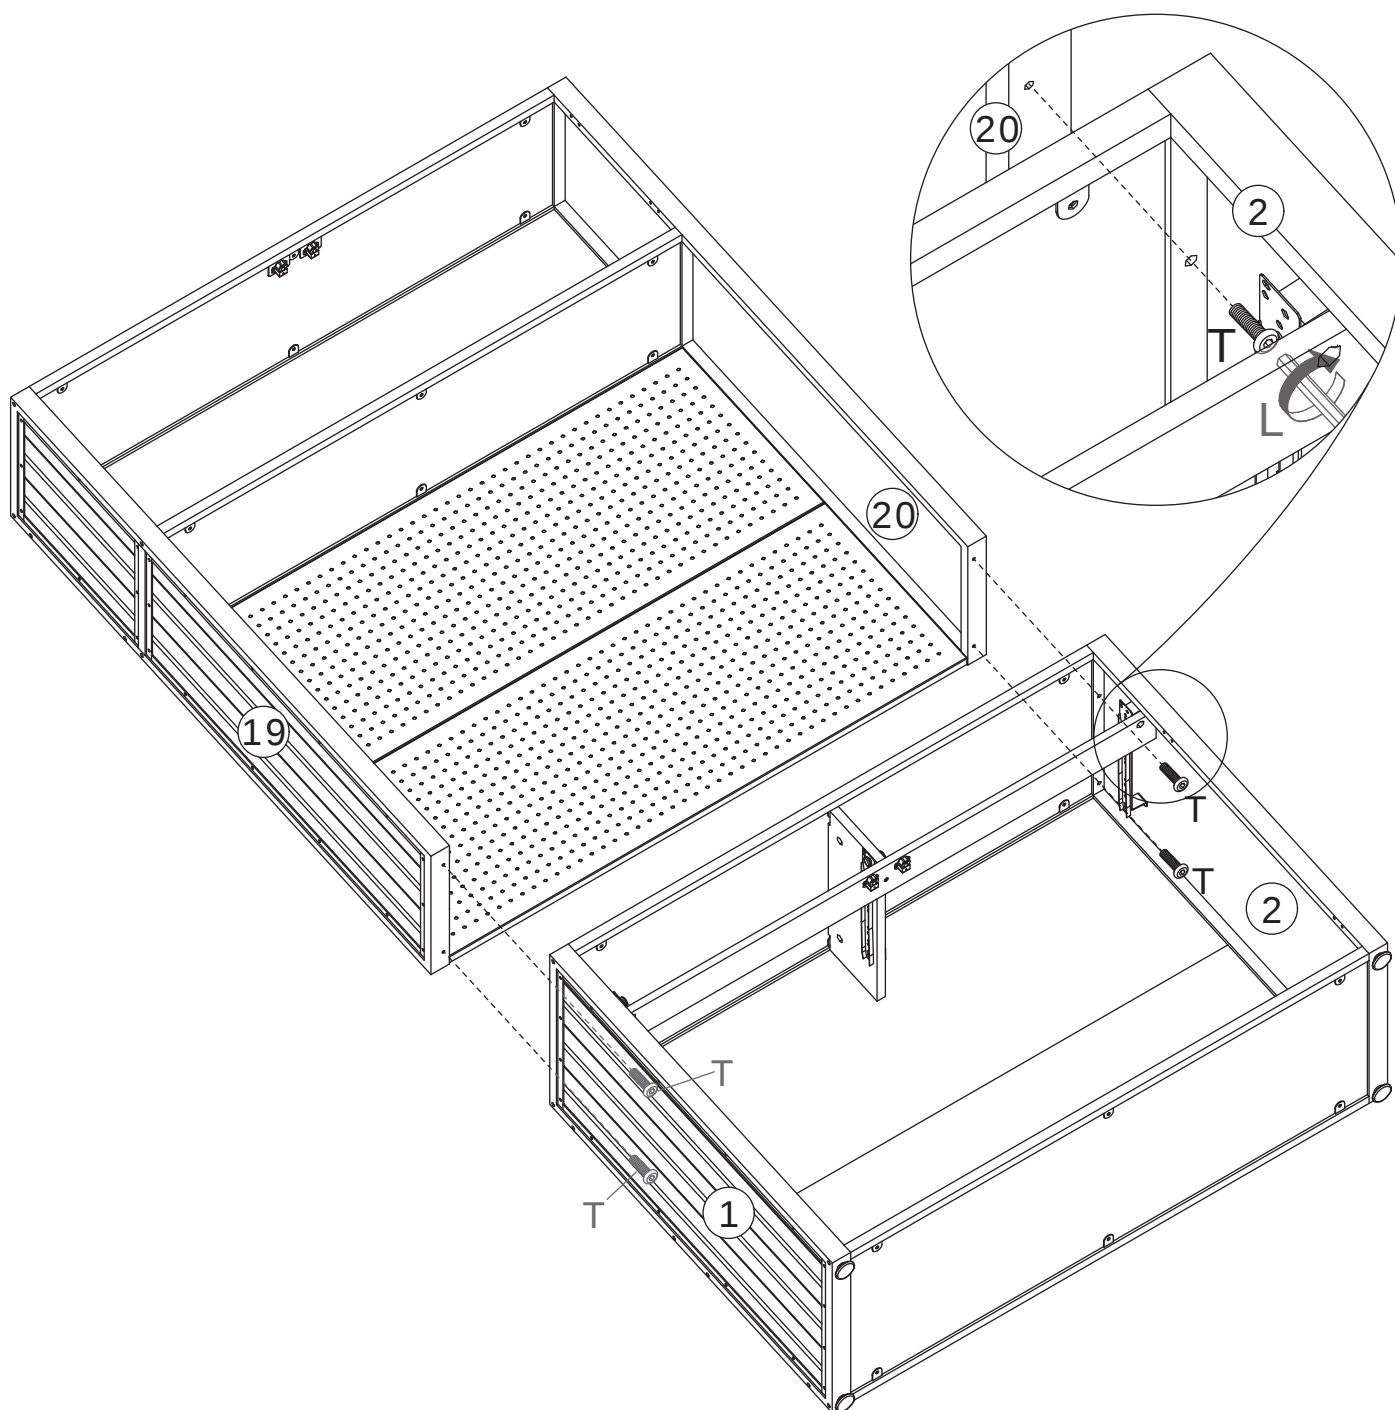

38

Q x 4



M3 x 6 mm

U x 4

 
 
 


M4 x 25 mm

V x 2



W x 2

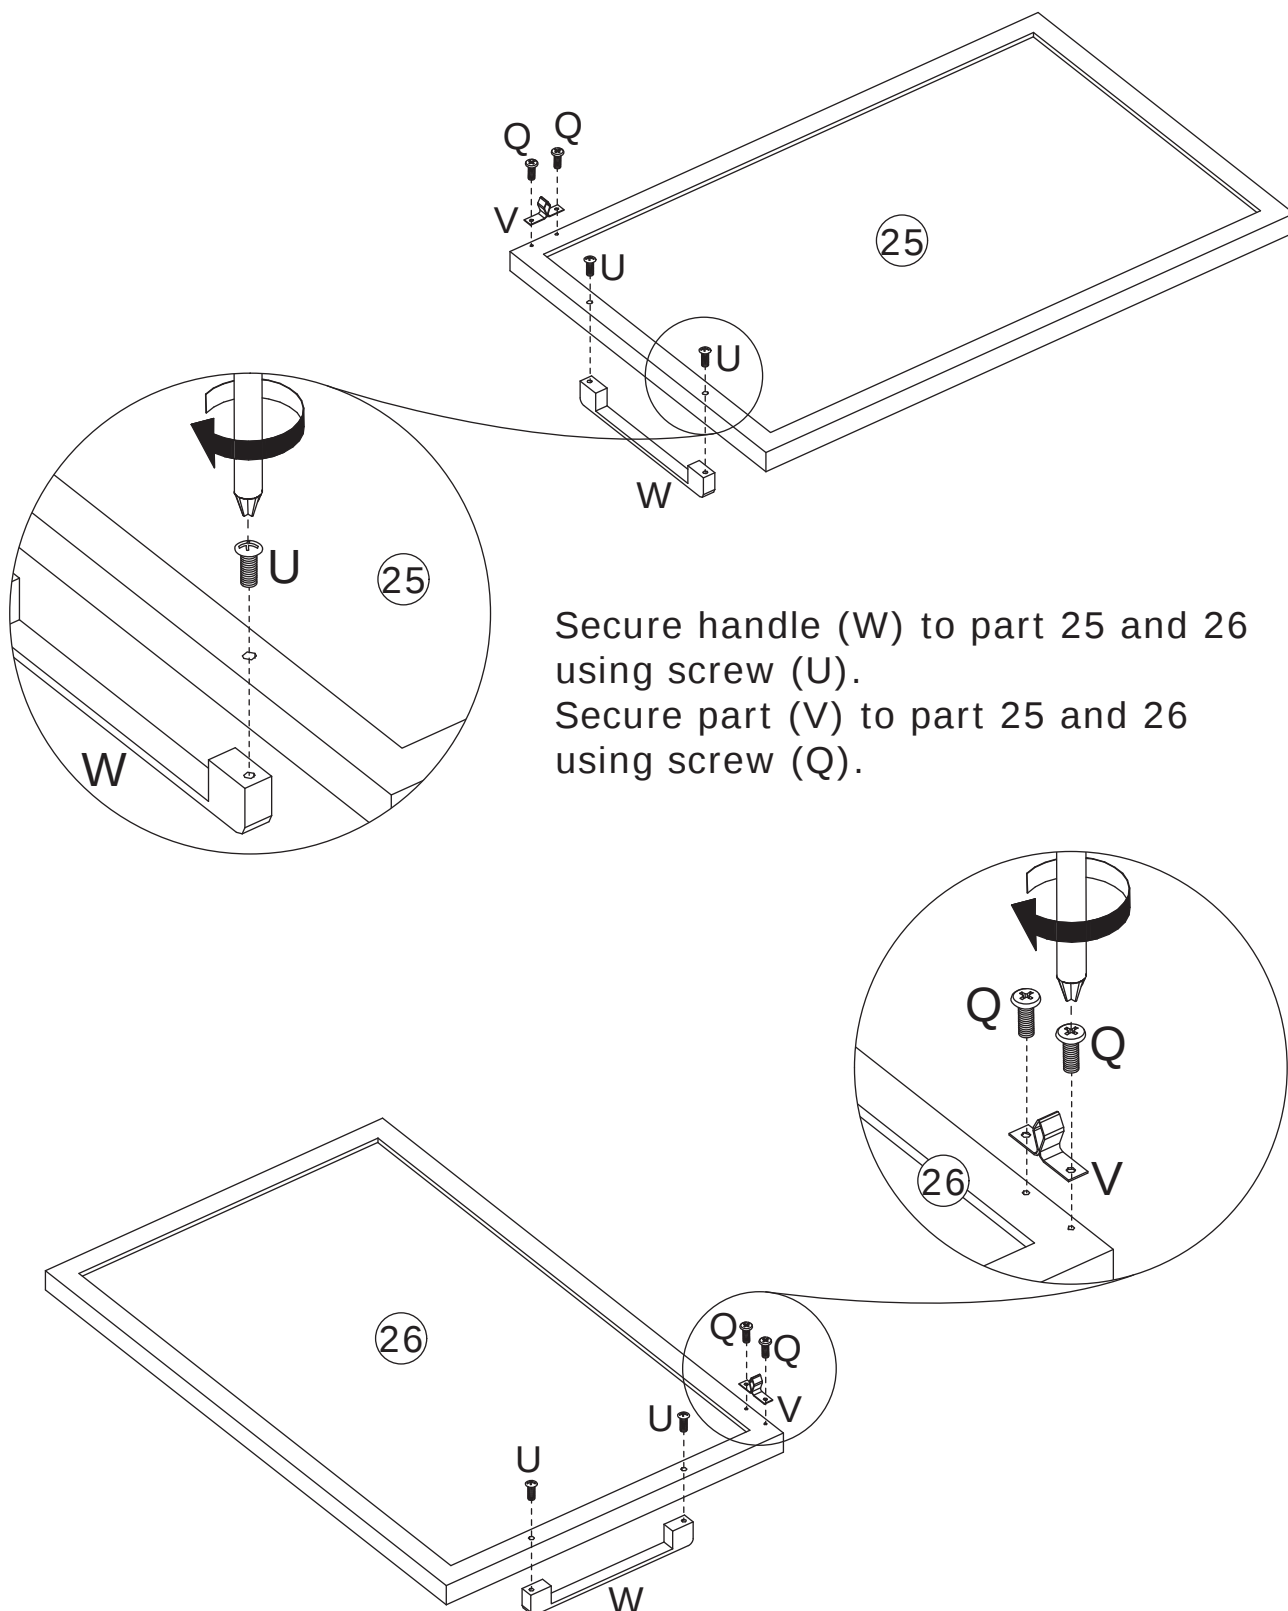

39

Q x 4



M3 x 6 mm

U x 4

 
 
 


M4 x 25 mm



V x 2



W x 2

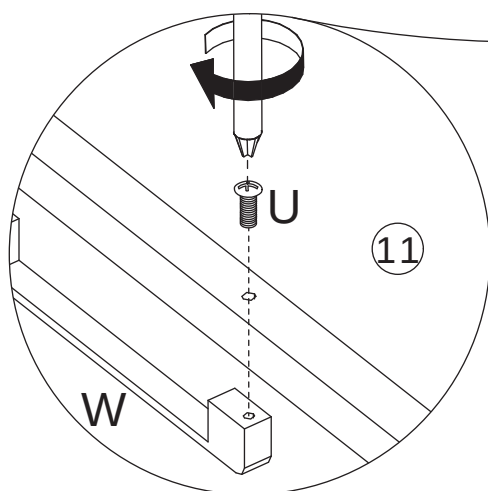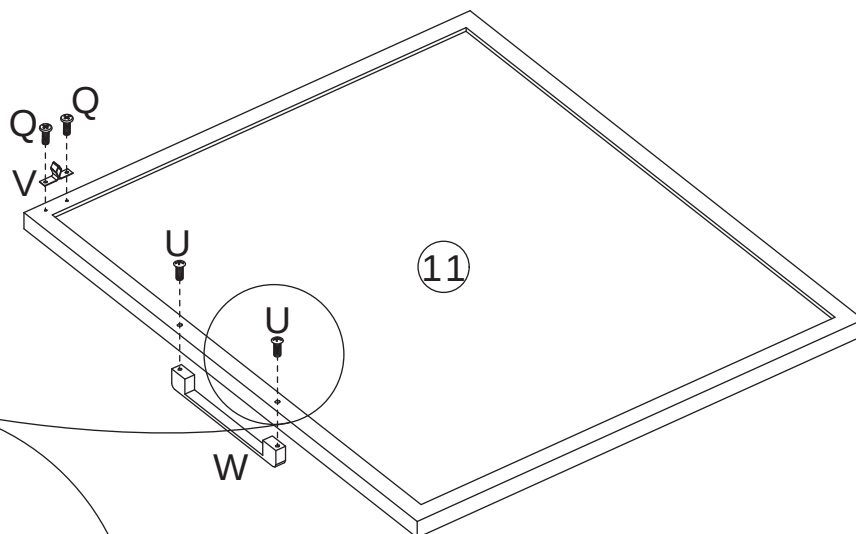


  Secure handle (W) to part 11 and 12 using screw (U).
Secure part (V) to part 11 and 12 using screw (Q).

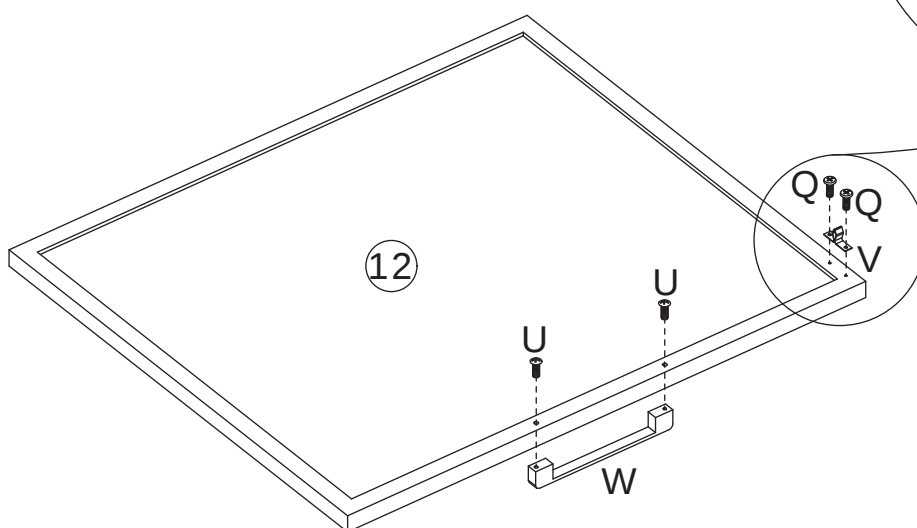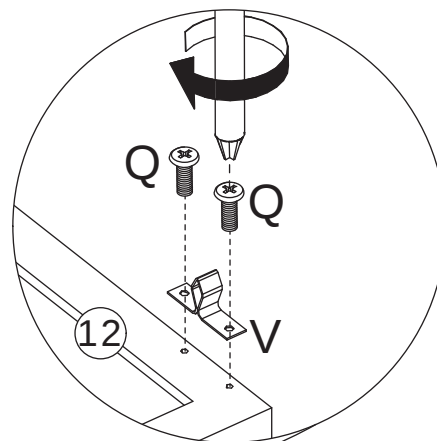


40

 X x 16
M5 x 10 mm





 Secure part 25, 26, 11 and 12 to the unit using screw (X) as shown.

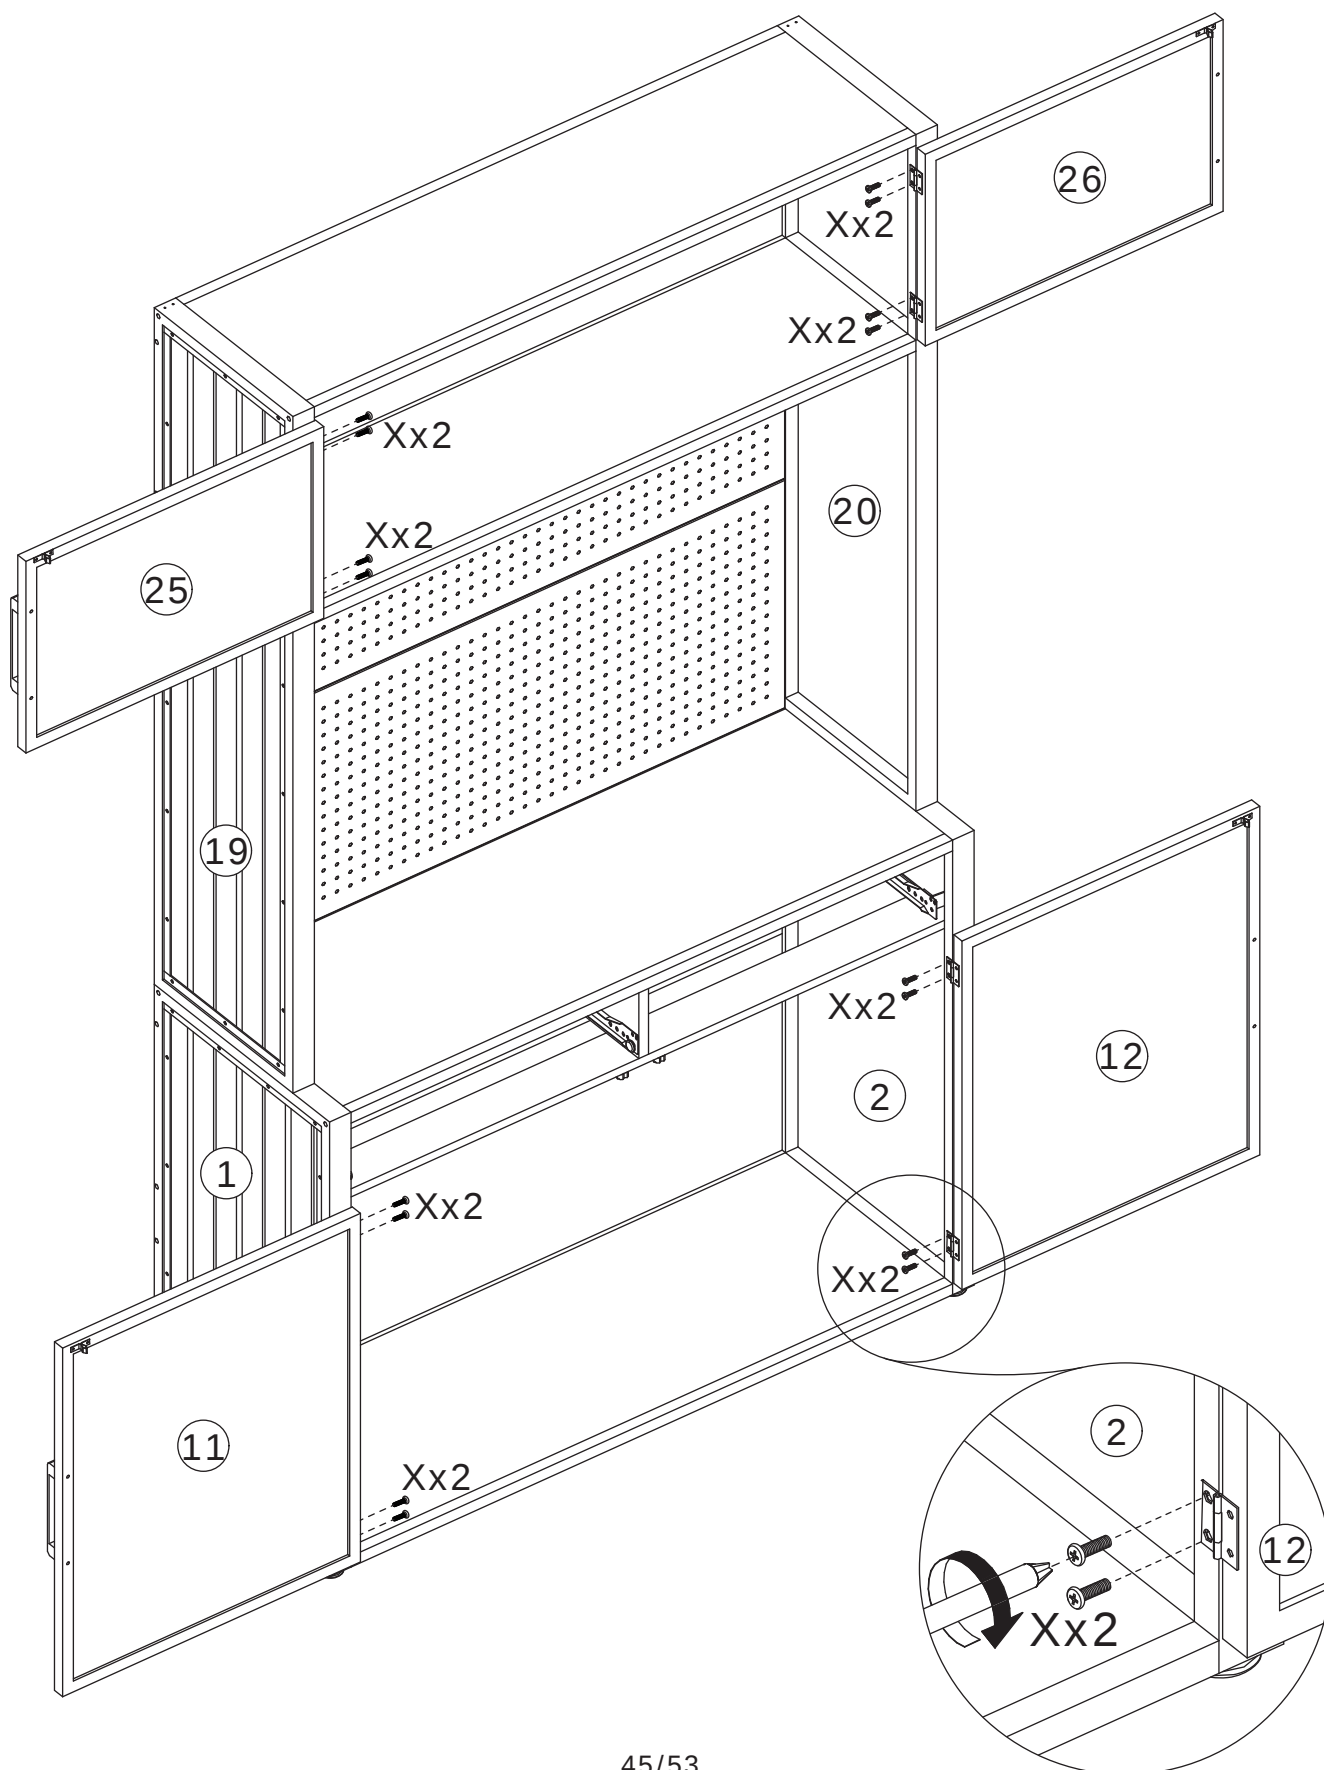


41

  B x 10
M6 x 35 mm

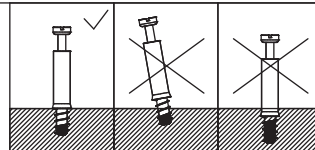


 
Screw eccentric rod (B) to part 13 as shown.

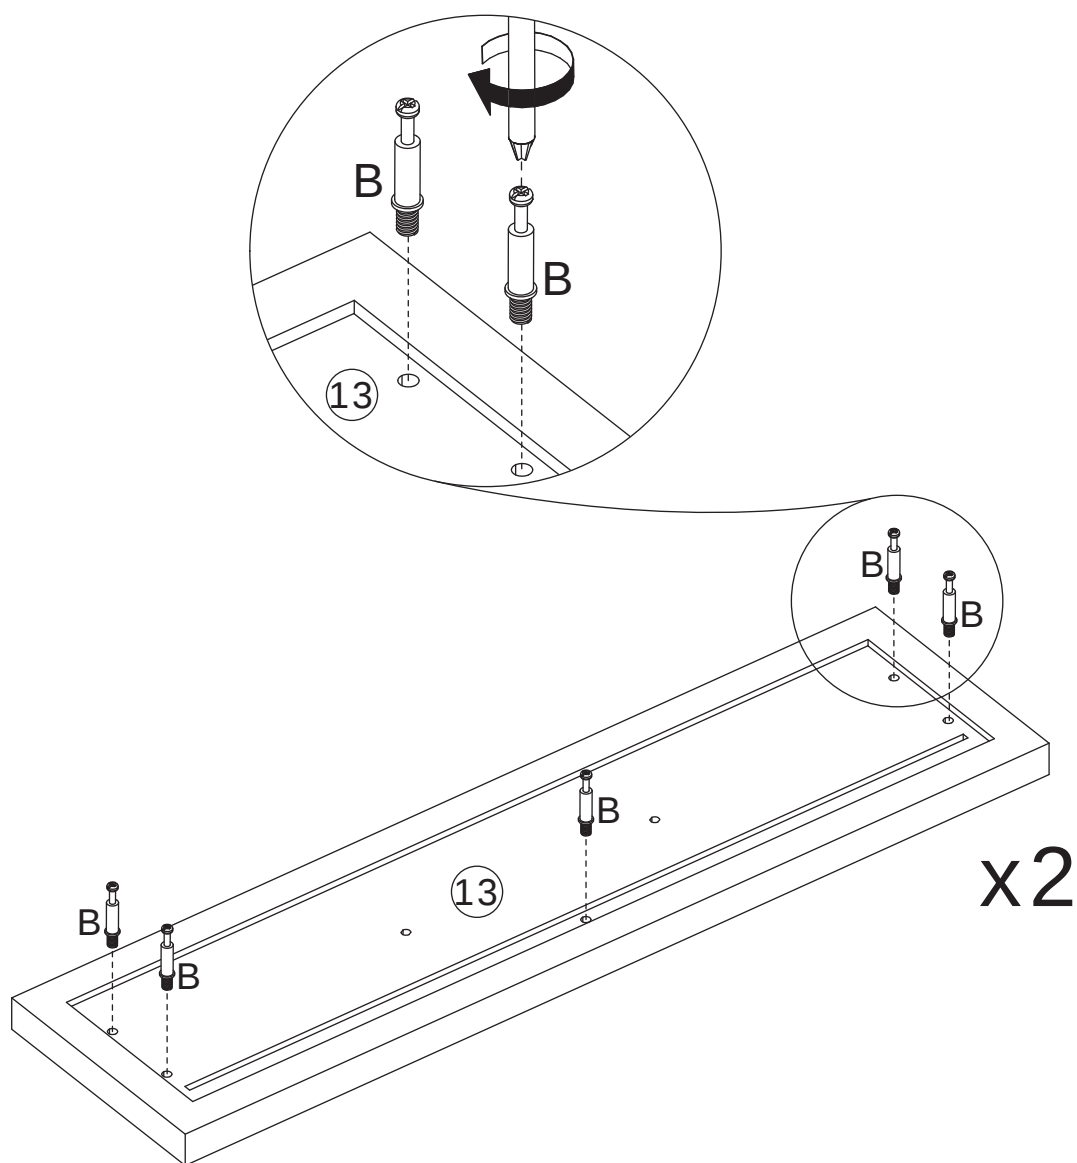



42

E x 10

   Ø 15 x 10 mm

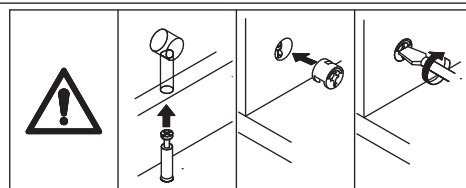


  Connect parts 17, 18 and 16 to part 13,
 tighten by turning cam lock (E) clockwise.

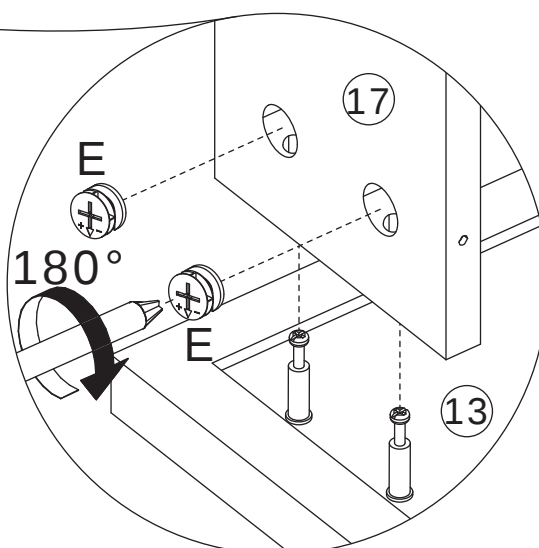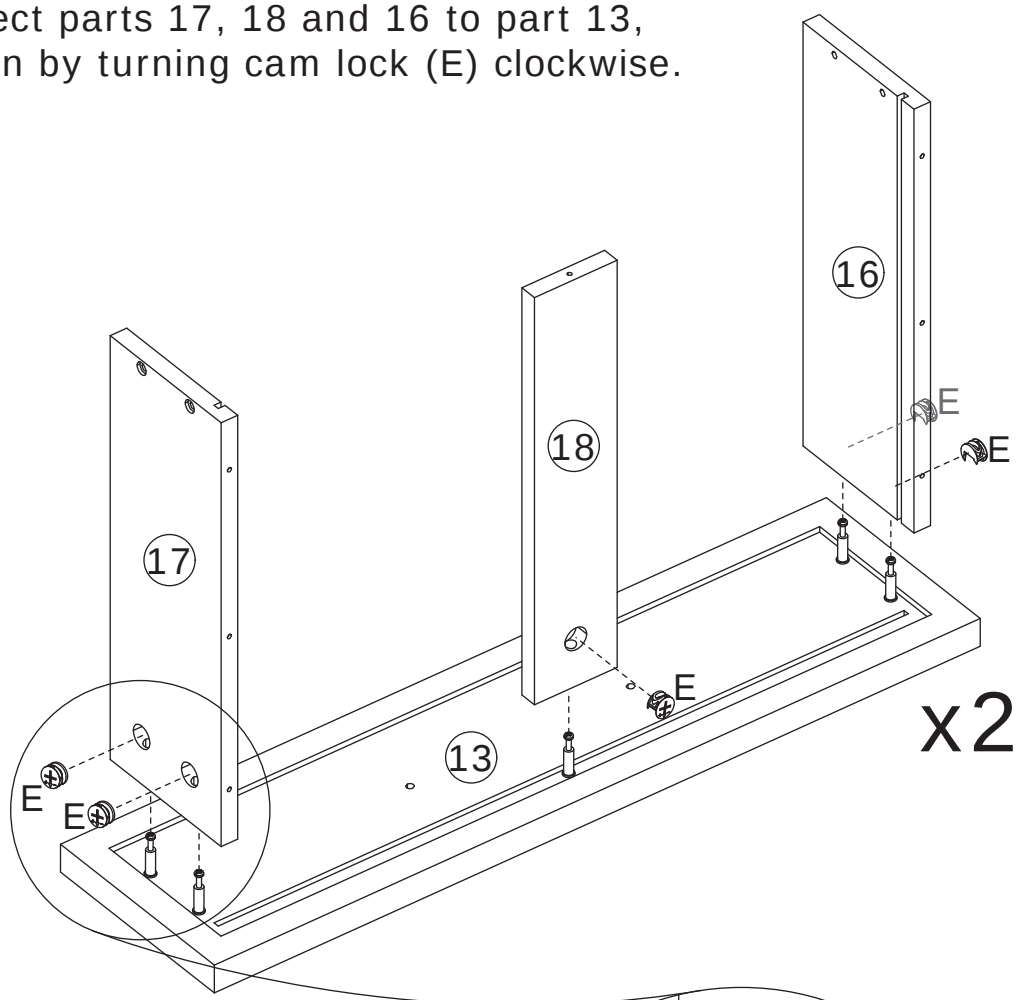


43

 Insert part 15 into the grooves as shown.


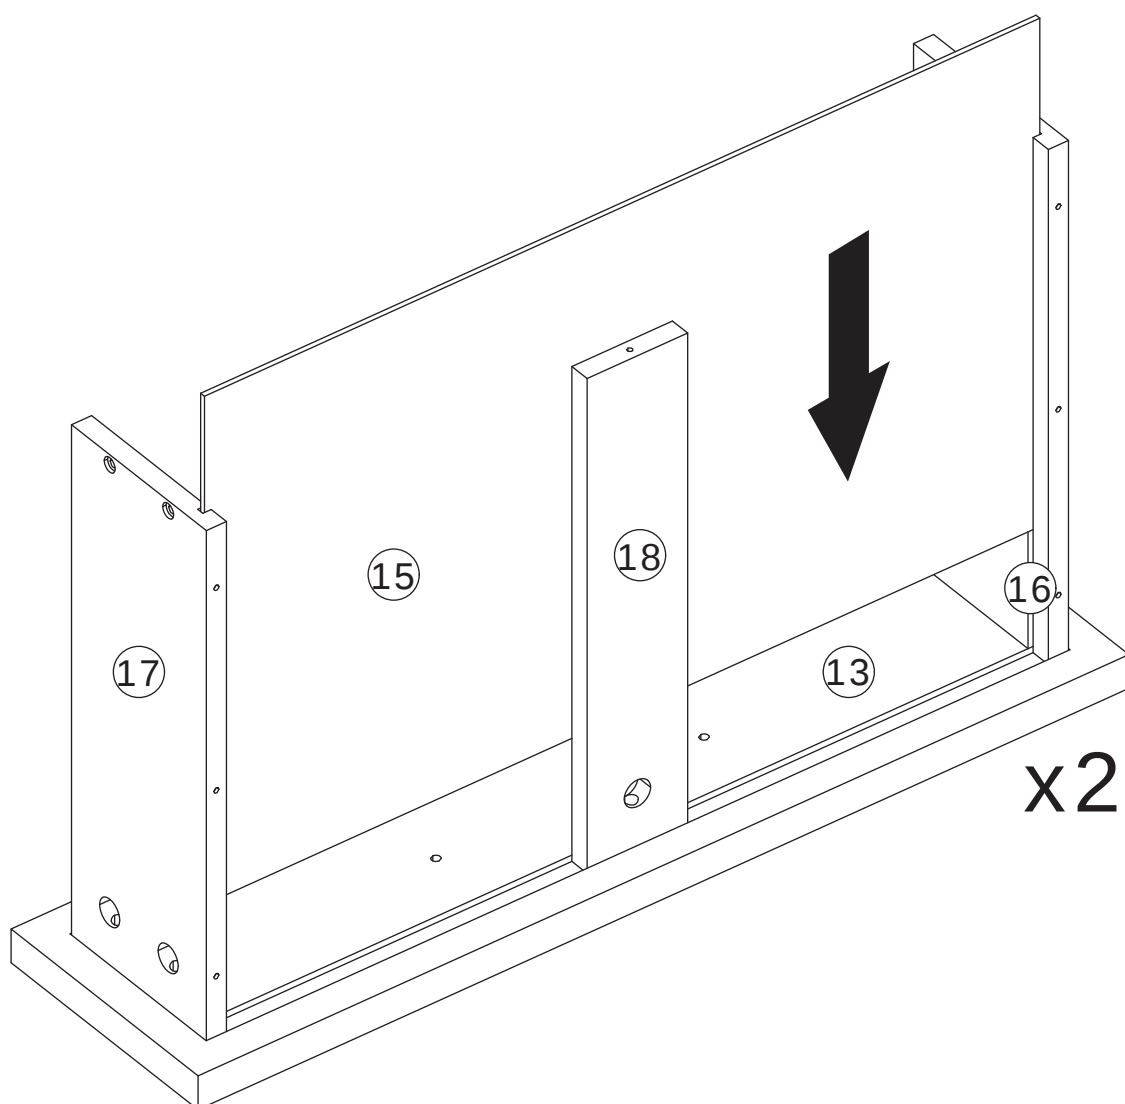


44

 H x 10
M4 x 40 mm



  
Secure part 14 to part 16, 18 and 17 using screw (H) as shown.

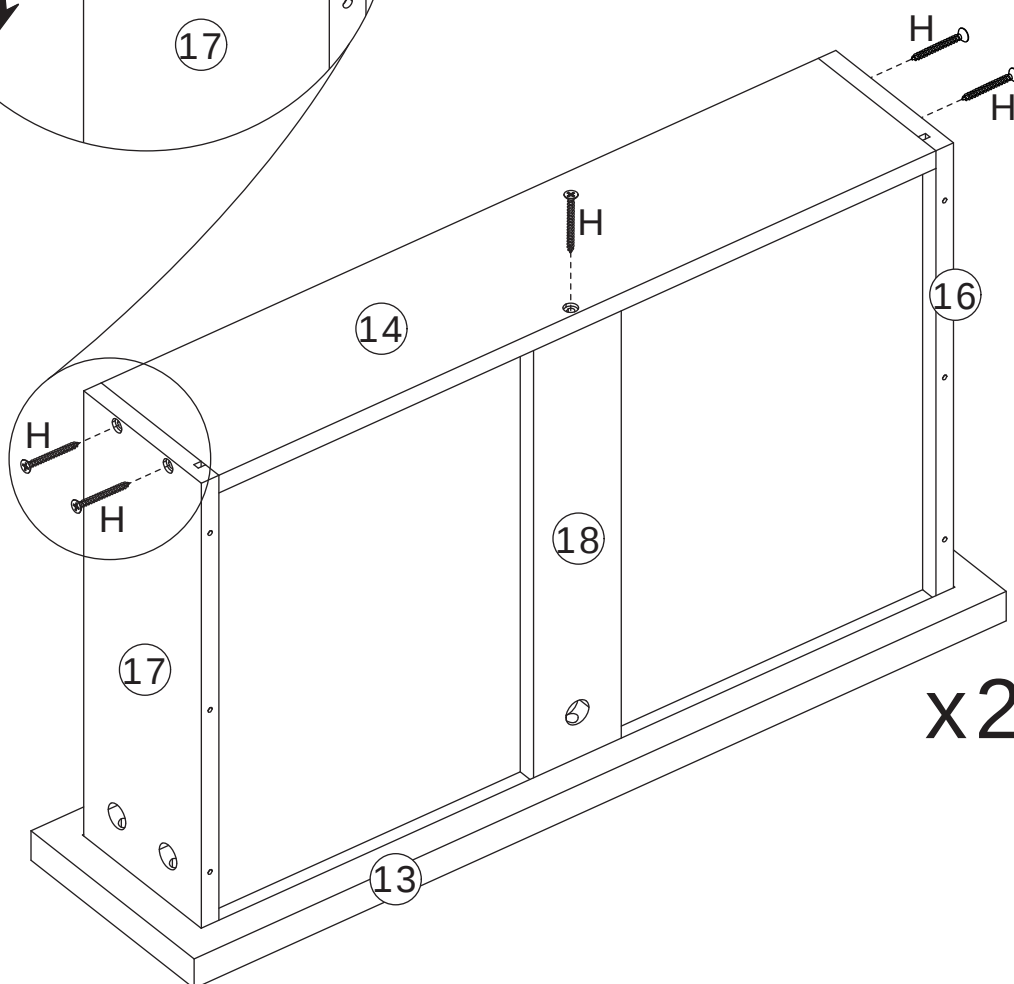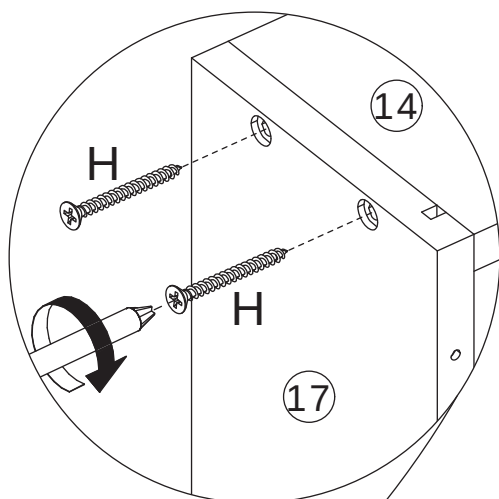

45




 Secure slide rail (D-DL) and (D-DR) to part 16 and 17 using screw (C) as shown.

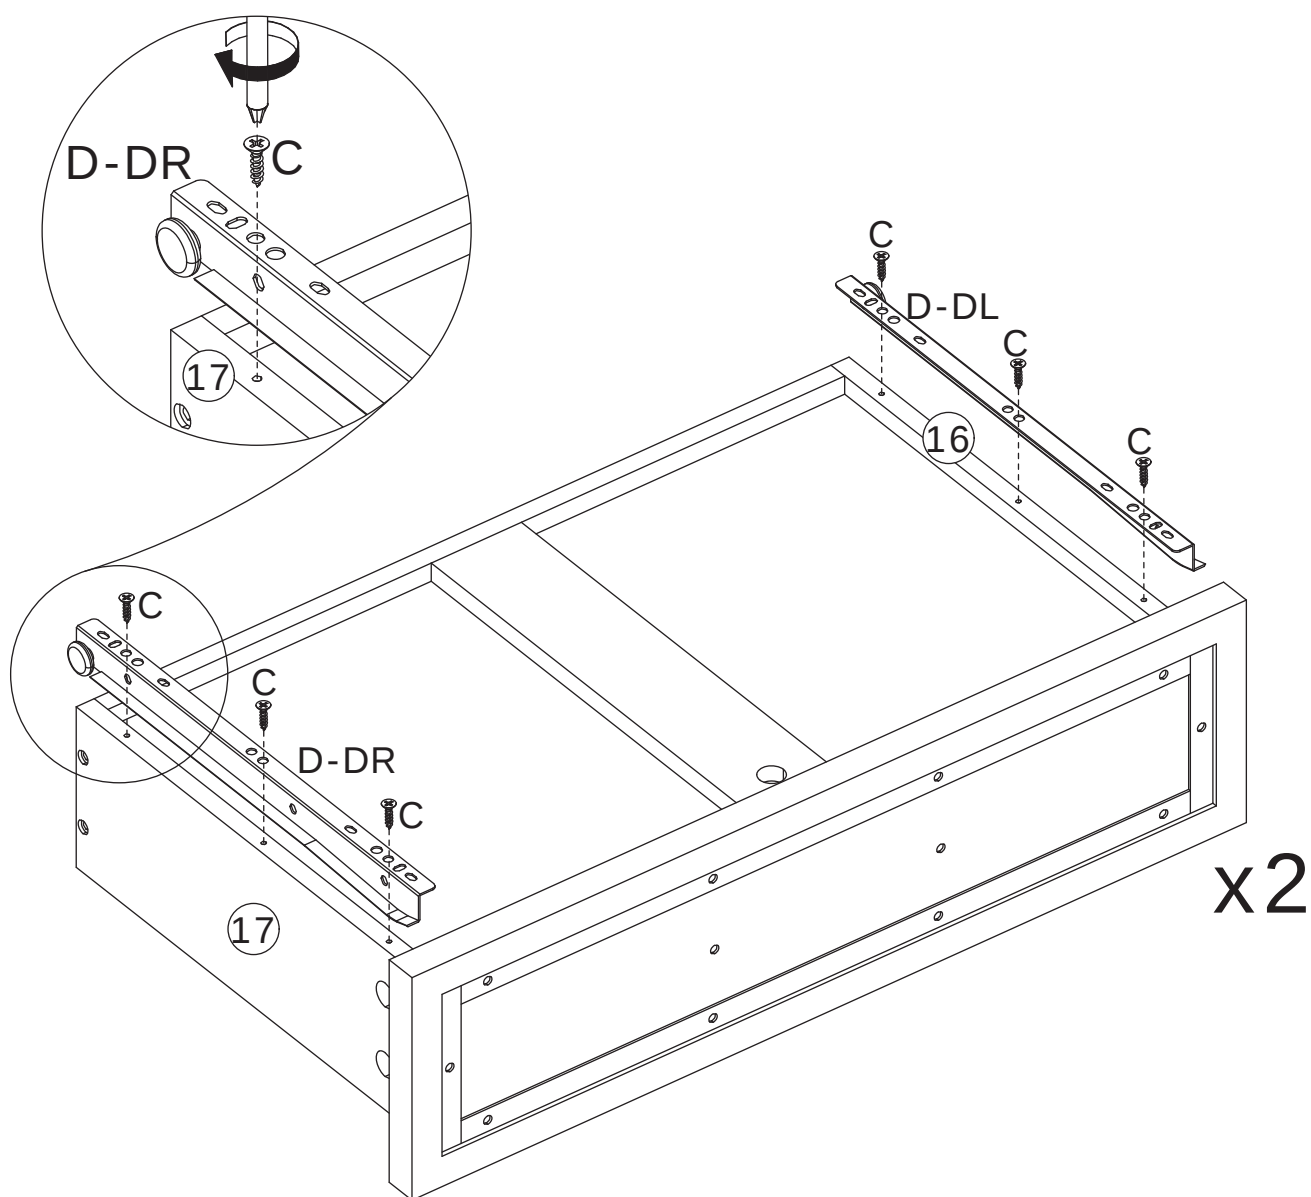

46

 
W x 2




Y x 4



 M4 x 15 mm




 Secure handle (W) to part 13 using screw (Y) as shown.

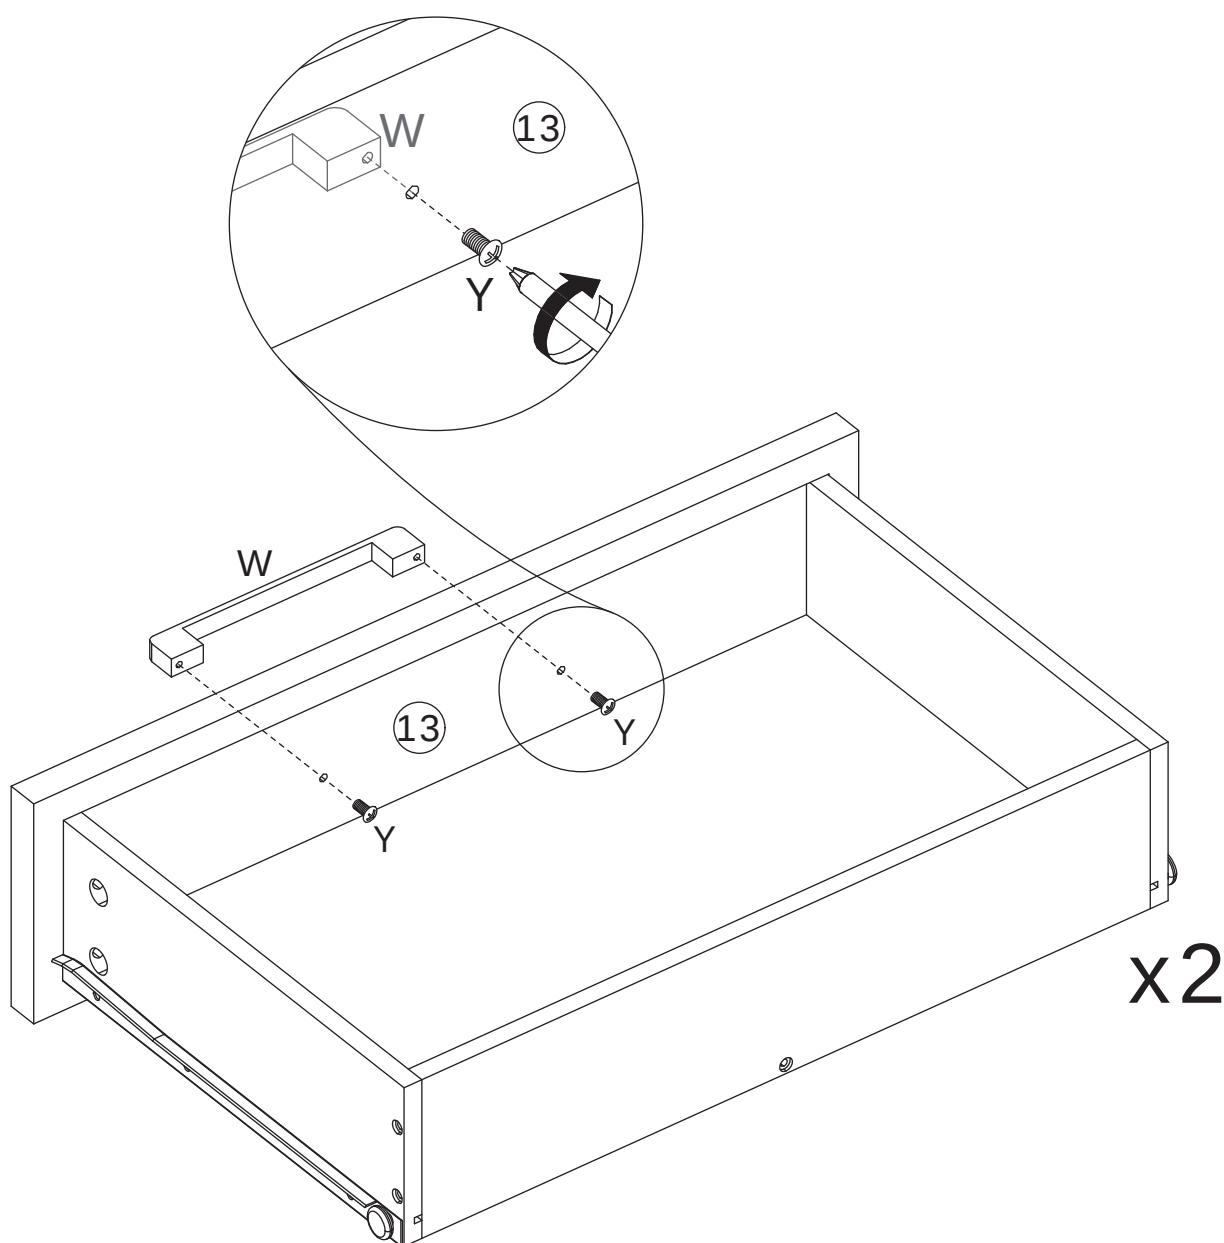


47

 Rotate the adjusting foot pads to stable the unit .

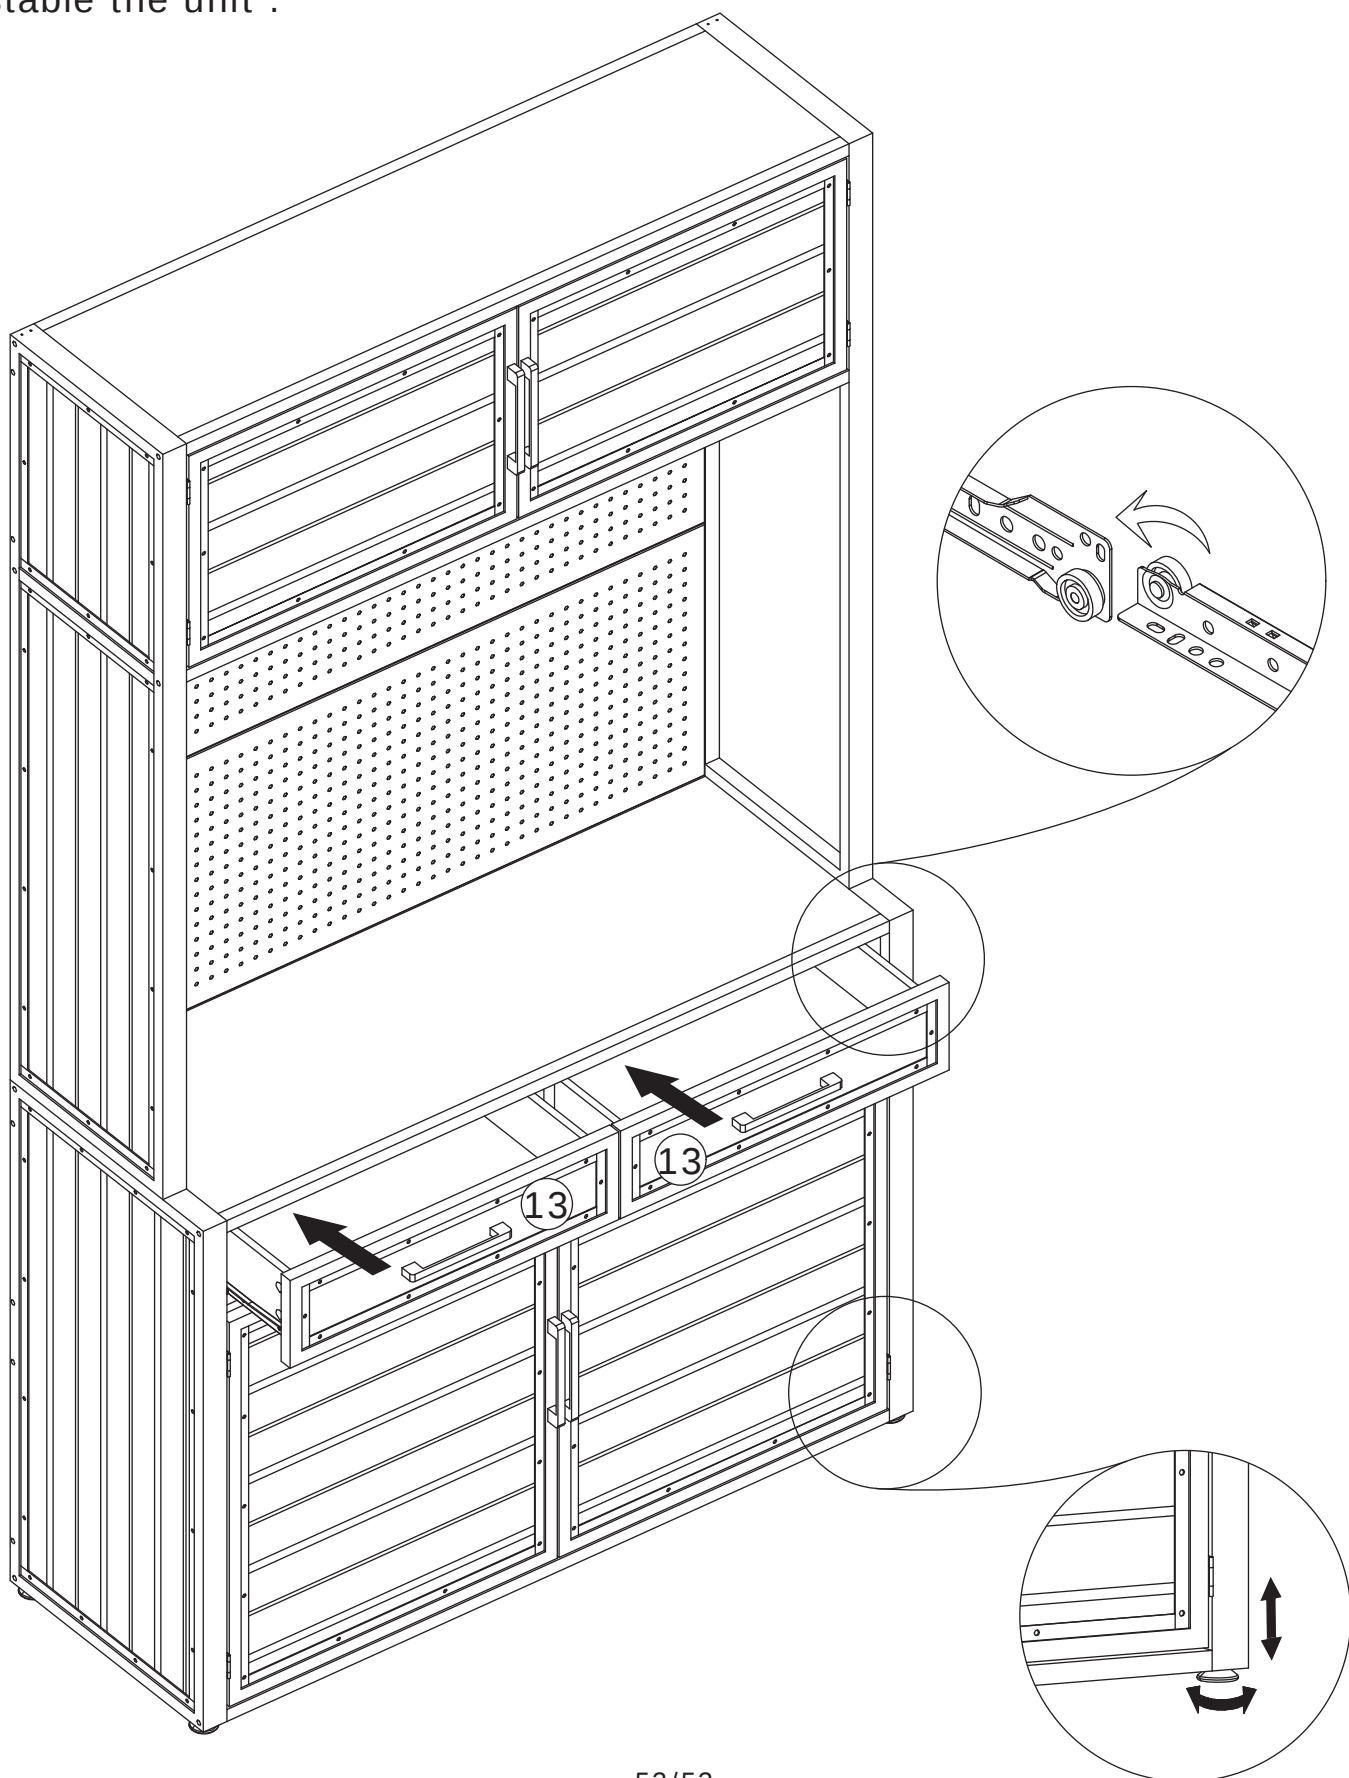

48

 A x 4



M4 x 10 mm

H x 2



 
 
M4 x 40 mm

Z x 2







Ø6 x 30 mm


A1 x 2




Install anti-tipping device as shown.

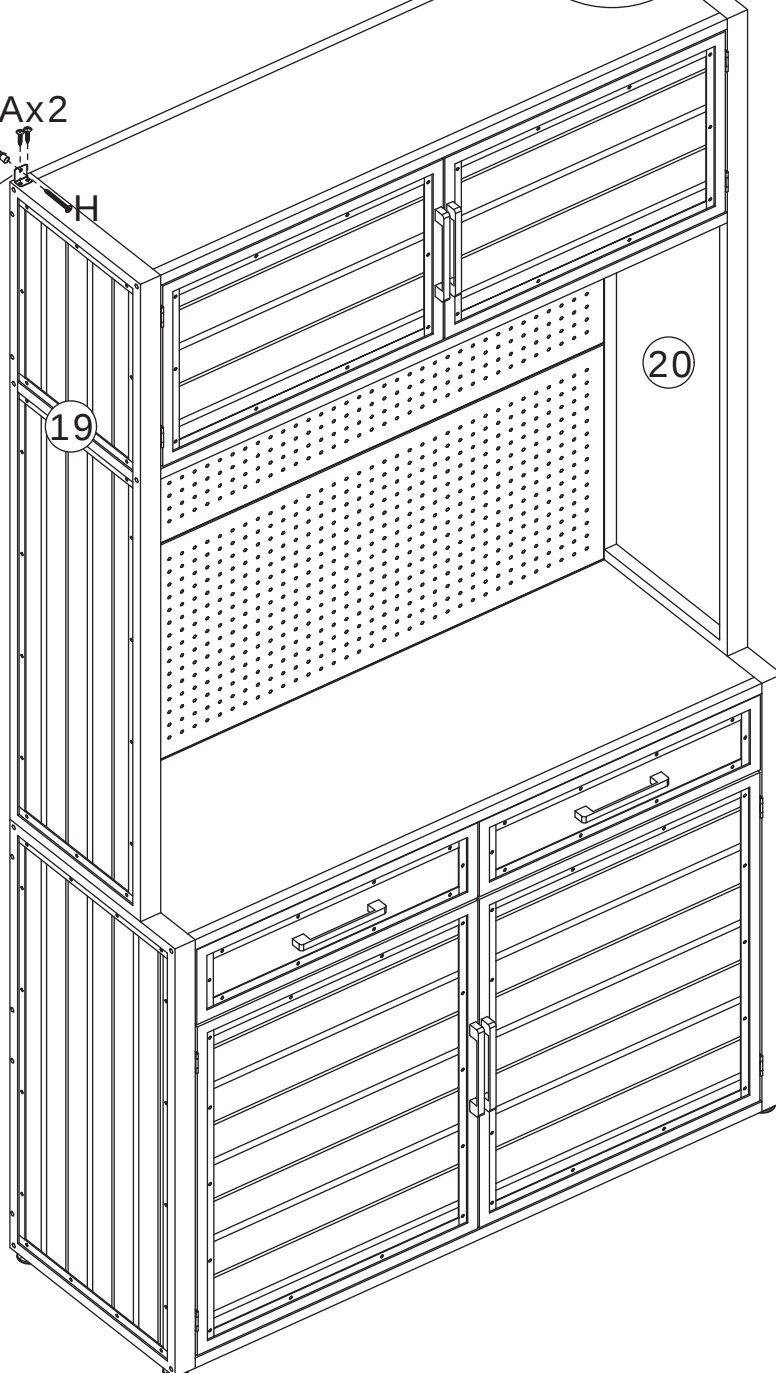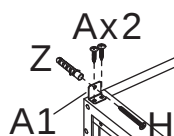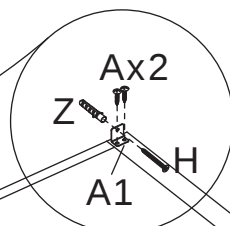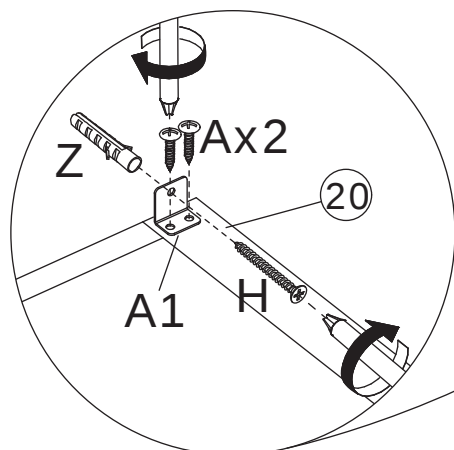    

 
1.

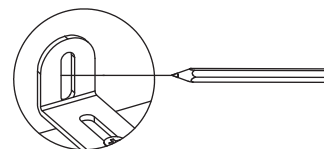

 
2.

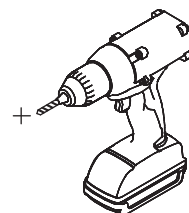

 3.

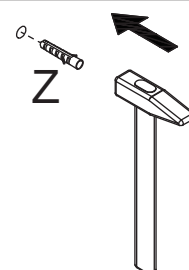

 4.

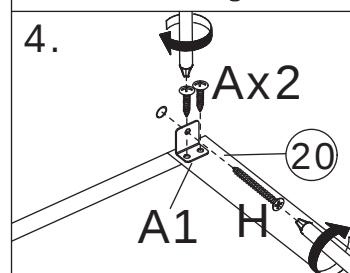

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



01203 310000 or 01203 310001



01203 310000 or 01203 310001