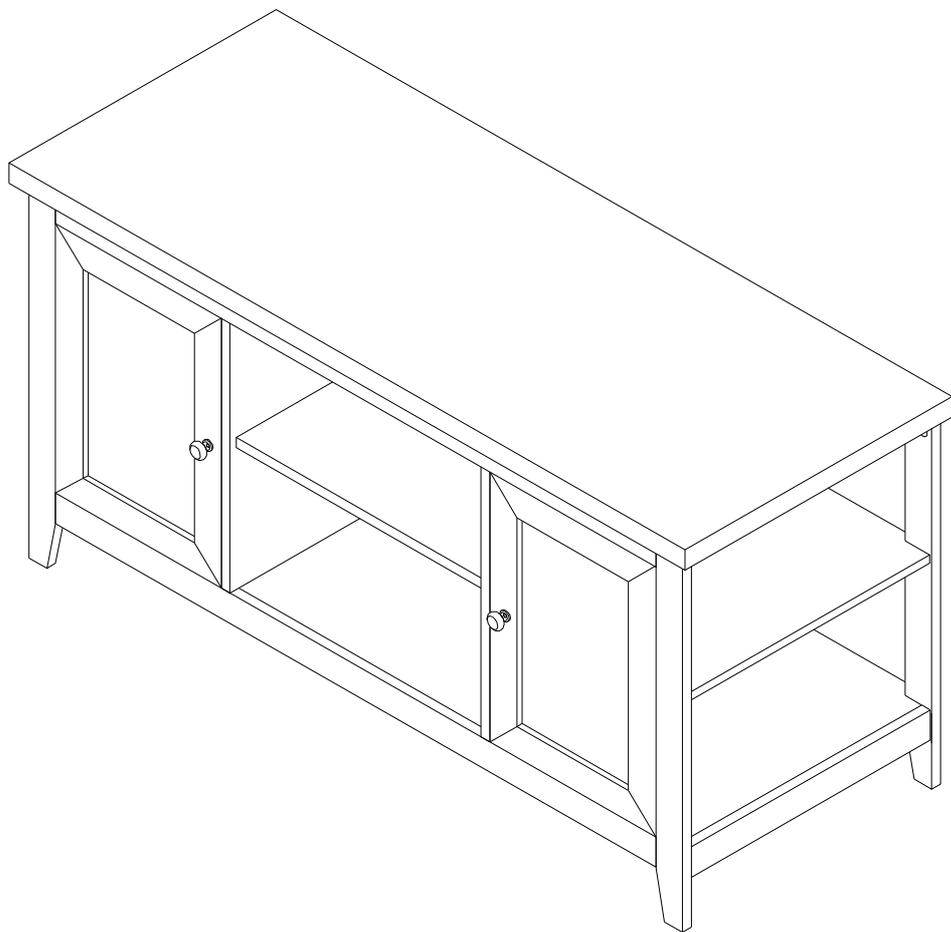
















ASSEMBLY INSTRUCTIONS


Style # E1034 Faux Door TV STAND



It is recommended that this item should be assembled by two adults.

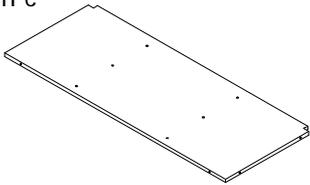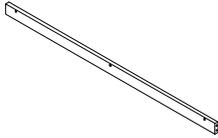 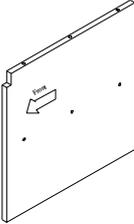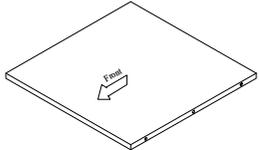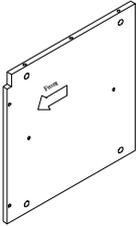  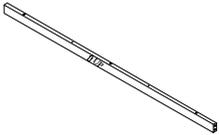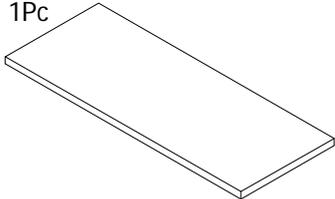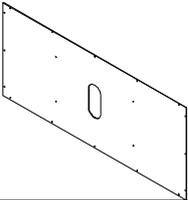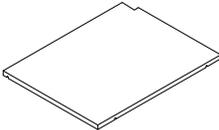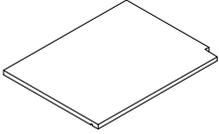 Parts List

A: Bottom Panel 1Pc 	B: Base Front Rail 1Pc 	C: Front Left Leg 1Pc 	D: Rear left Leg 1Pc 
E: Base Side Rail 2Pcs 	F: Front Right Leg 1Pc 	G: Rear Right Leg 1Pc 	H: Middle Left Side Panel 1Pc 
I: Middle Shelf Panel 1Pc 	J: Middle Right Side Panel 1Pc 	K: Left Door Panel 1Pc 	L: Right Door Panel 1Pc 
M: Top Front Rail 1Pc 	N: Top Panel 1Pc 	O: Back Panel 1Pc 	P: Left Side Removeable Shelf 1Pc 
Q: Right Side Removeable Shelf 1Pc 	R: Supptor food 1pc 		

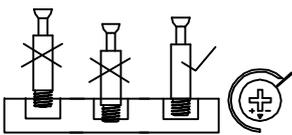


Note: Please don't over tighten all the cam screws .Assure the cam screw just fit in the plastic threaded insert .Otherwise,the cam nut might not be able to catch the cam screws.


Hardware List

a: Wood Dowel 27Pcs 	b: Cam Bolt 27Pcs 	c: Cam Lock 27Pcs 	d: Flat Head Screw 2Pcs  Ø4*35mm
e: Round Head Screw 16 Pcs  Ø3*12mm	f: Shelf Pin 2Pcs 	g: Shelf Pin 2Pcs 	h: Shelf Pin 8Pcs 
i: Glue 1Pc 	j: Flat Metal Bracket 2 sets 		

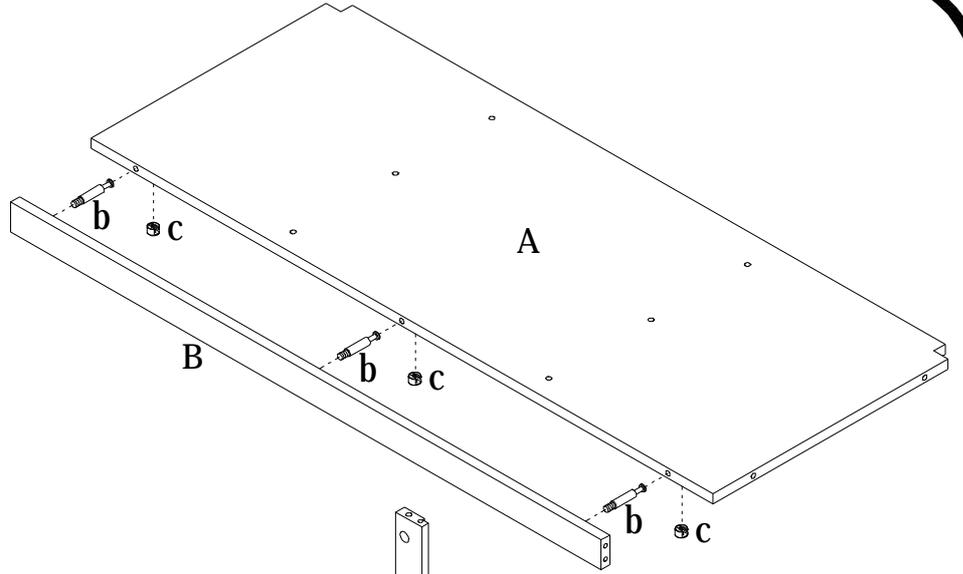
STEP 1



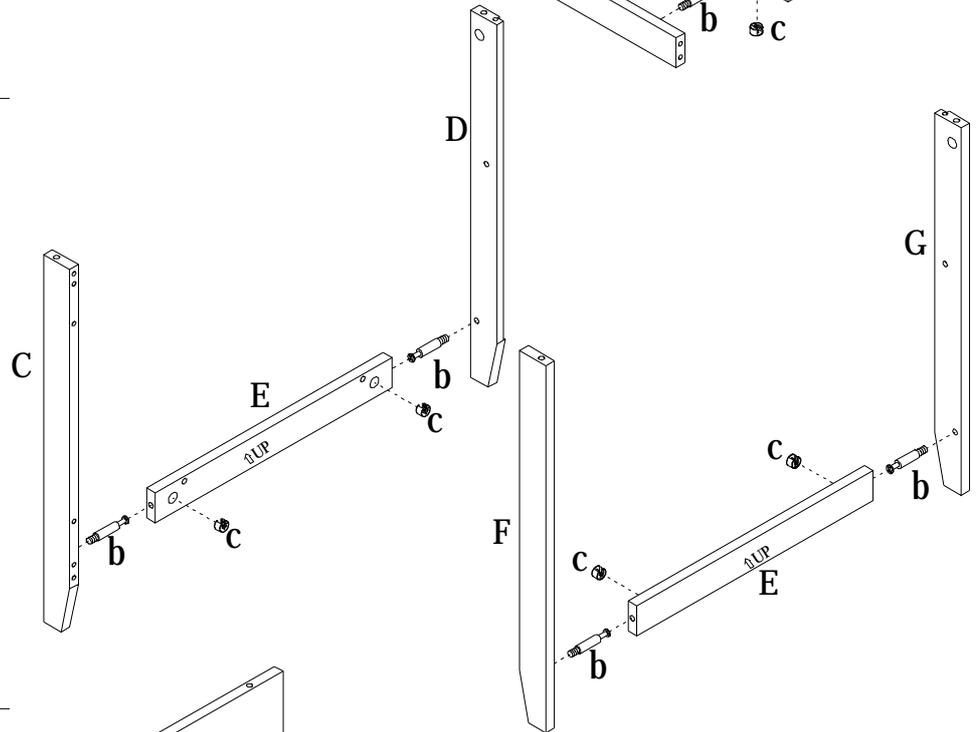
STEP 2



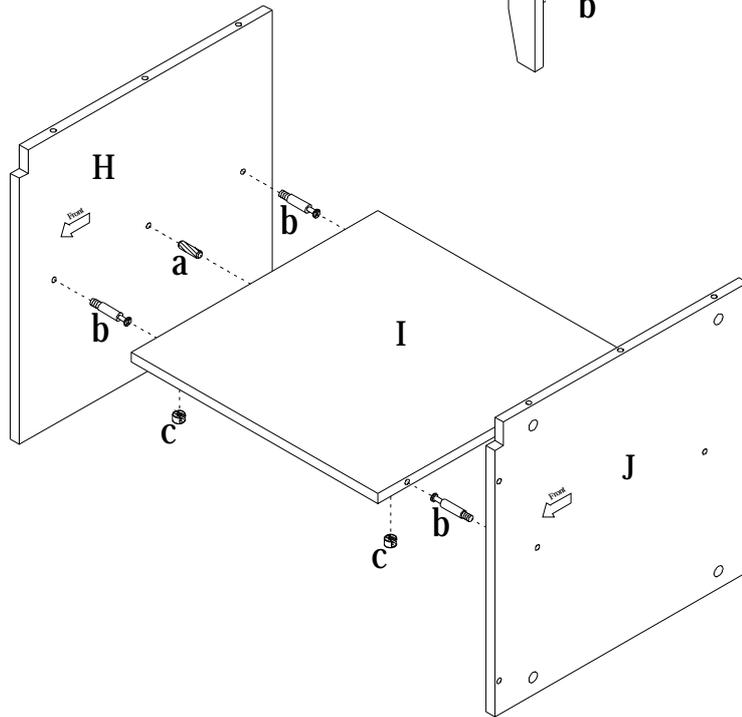
STEP 3



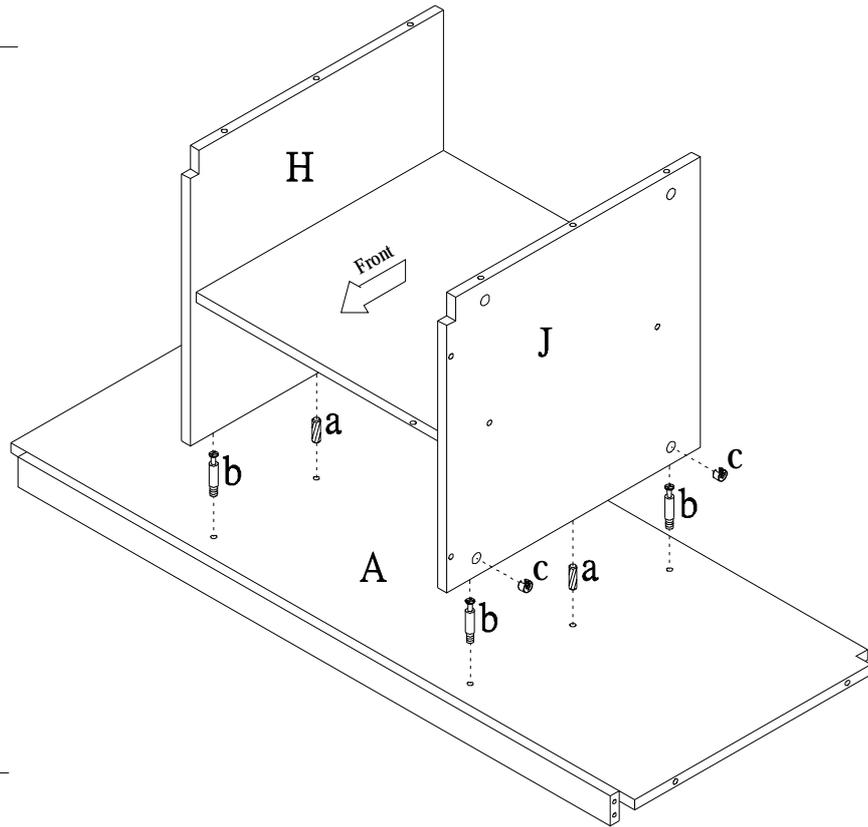STEP 4



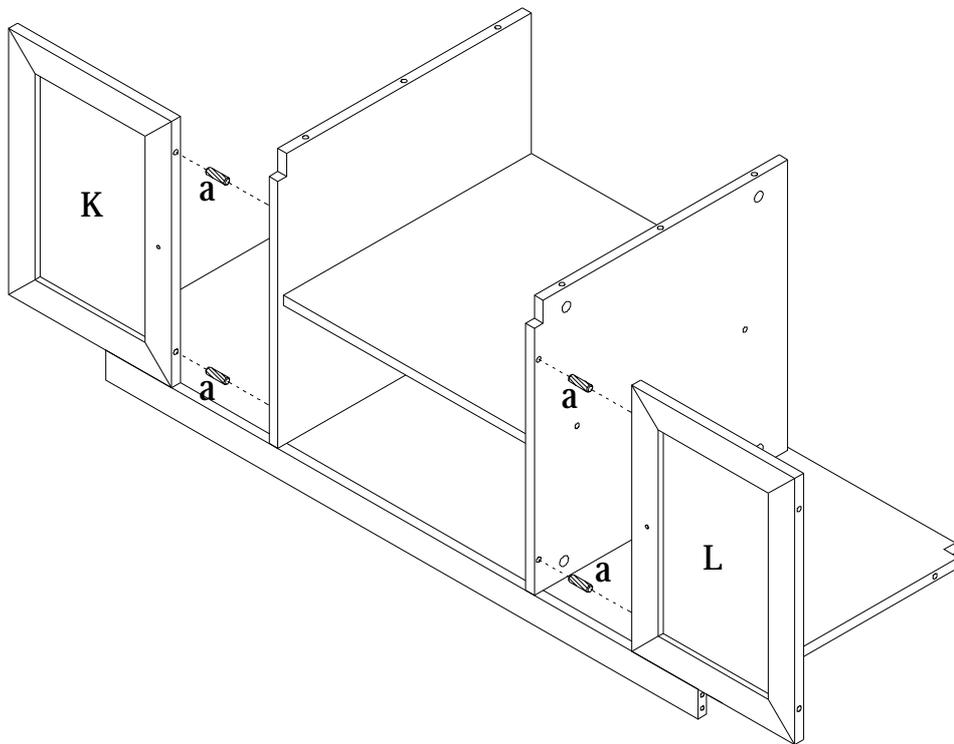
STEP 5




Note: Knob hole on the faux door panel is close to middle side panels.

STEP 6

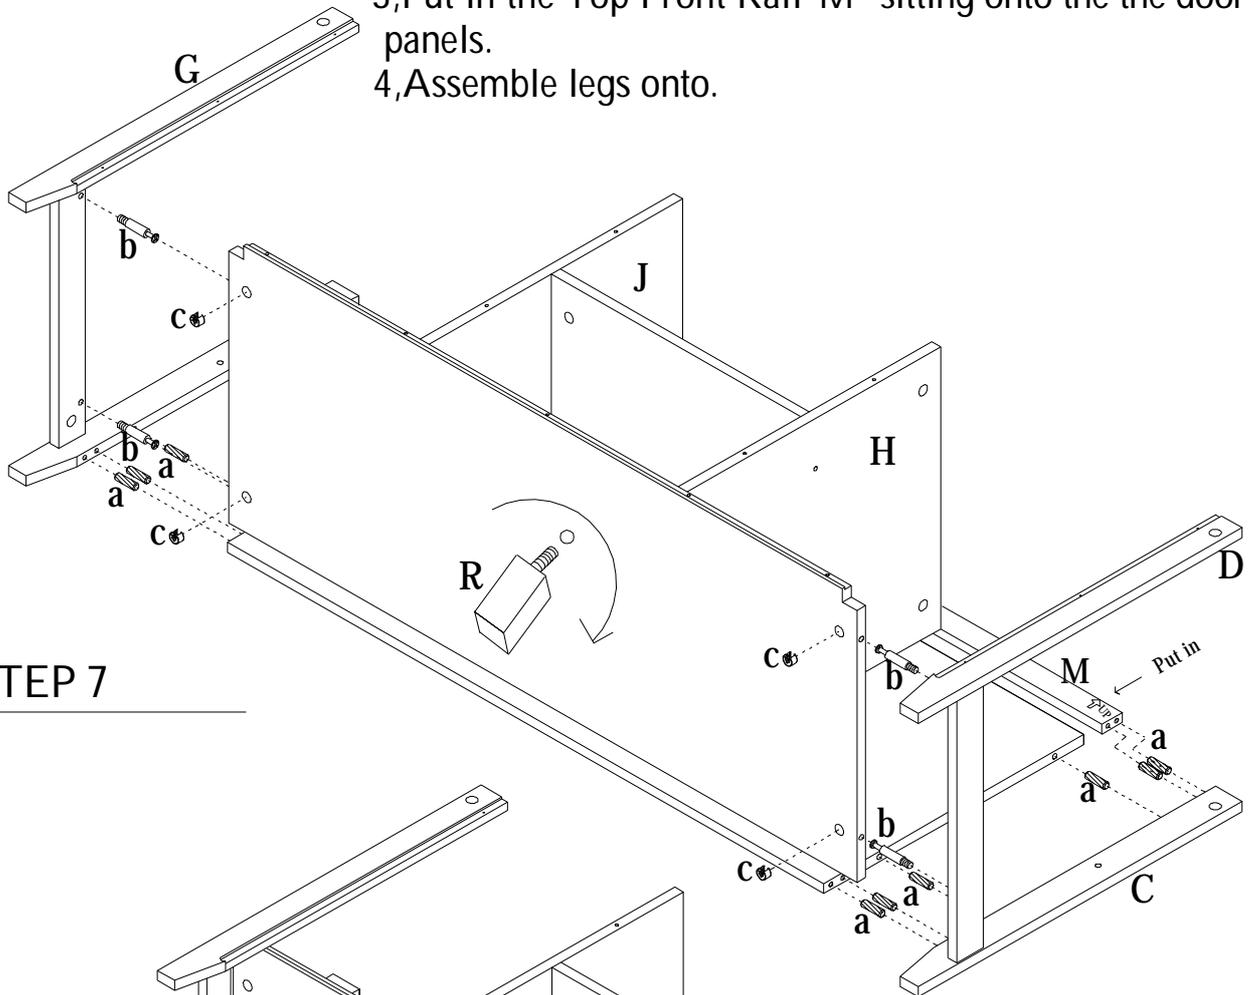- 1, Put a cloth or cardboard on the ground.
- 2, Place the front side with doors onto the cloth or cardboard.
- 3, Put in the Top Front Rail "M" sitting onto the the door panels.
- 4, Assemble legs onto.




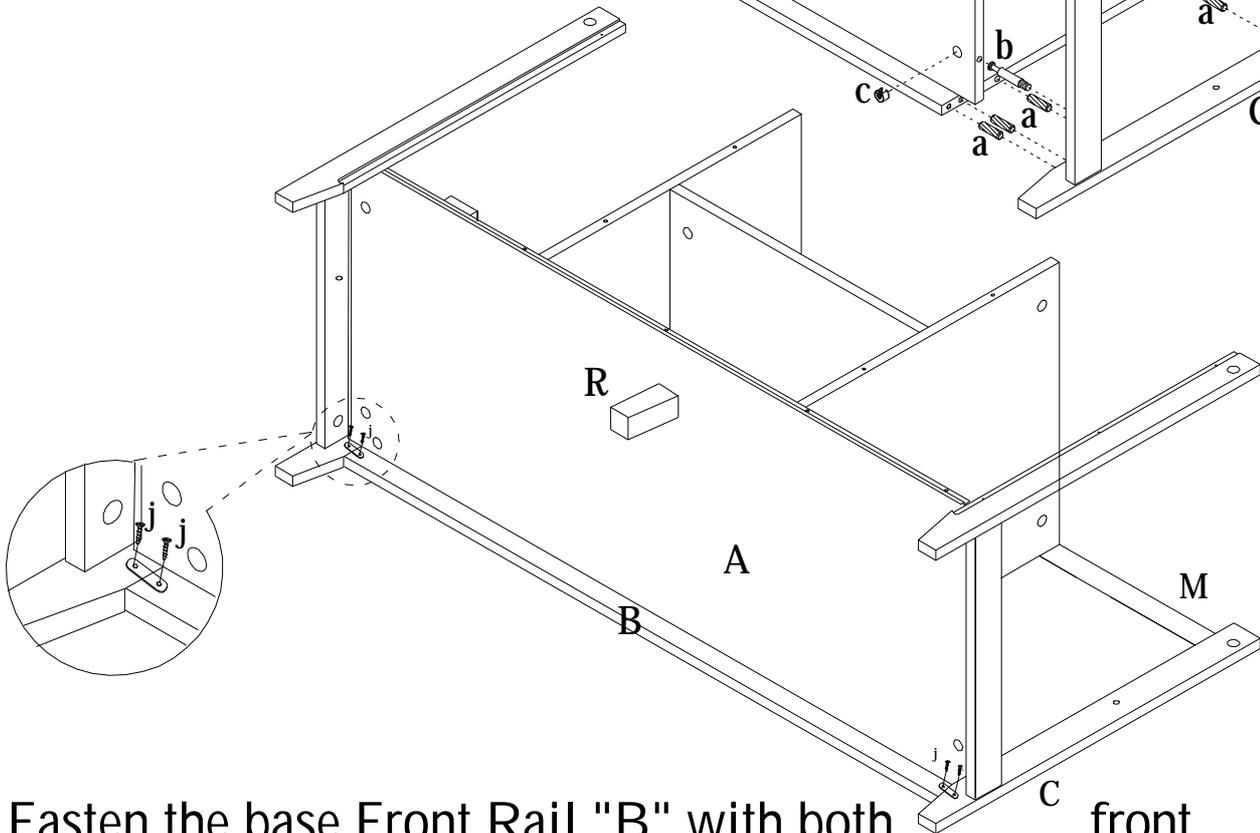STEP 7



Fasten the base Front Rail "B" with both front legs "C" and "F" by flat metal bracket "j".

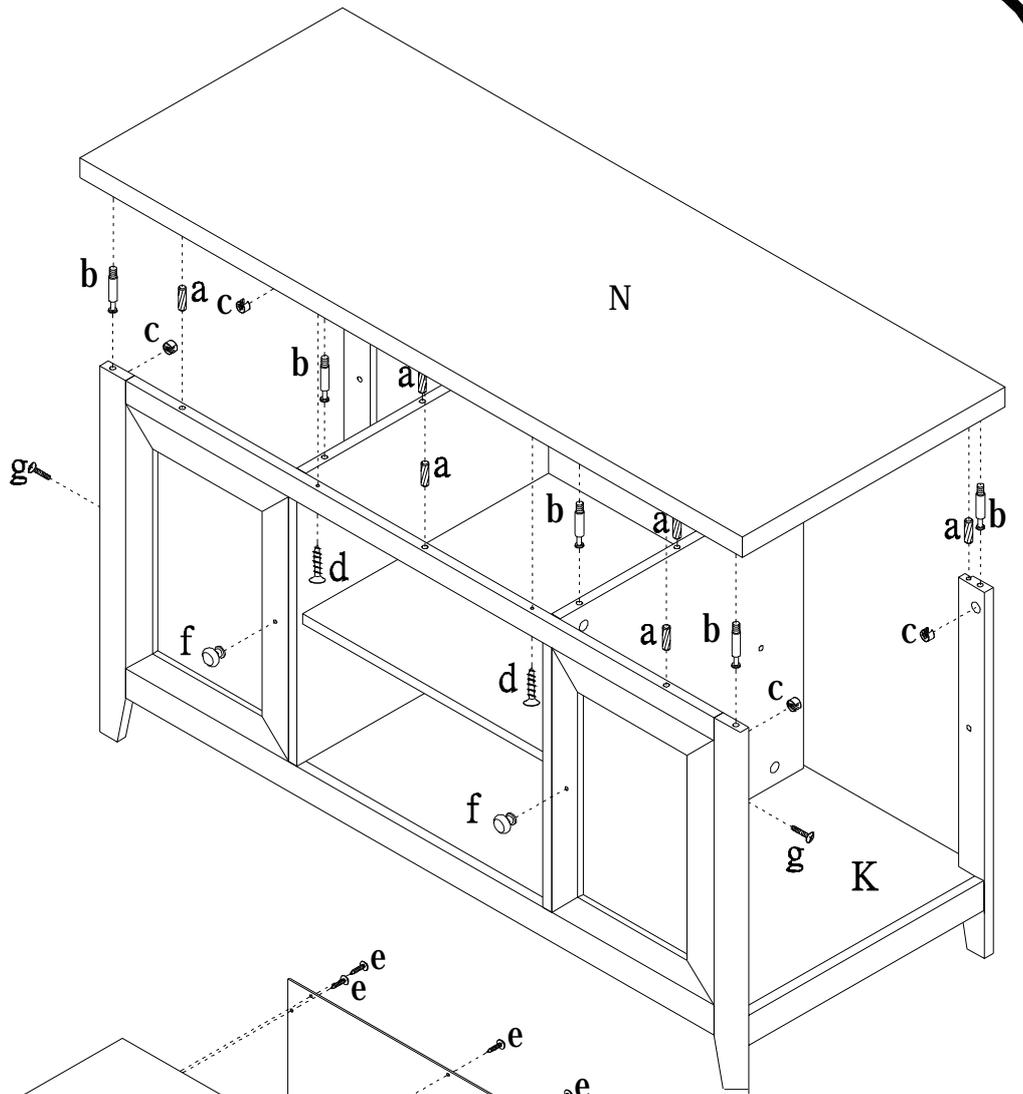STEP 8



STEP 9

