


KYNDWAY®

Looma Dining Arm Chairs

Item # DCH1003

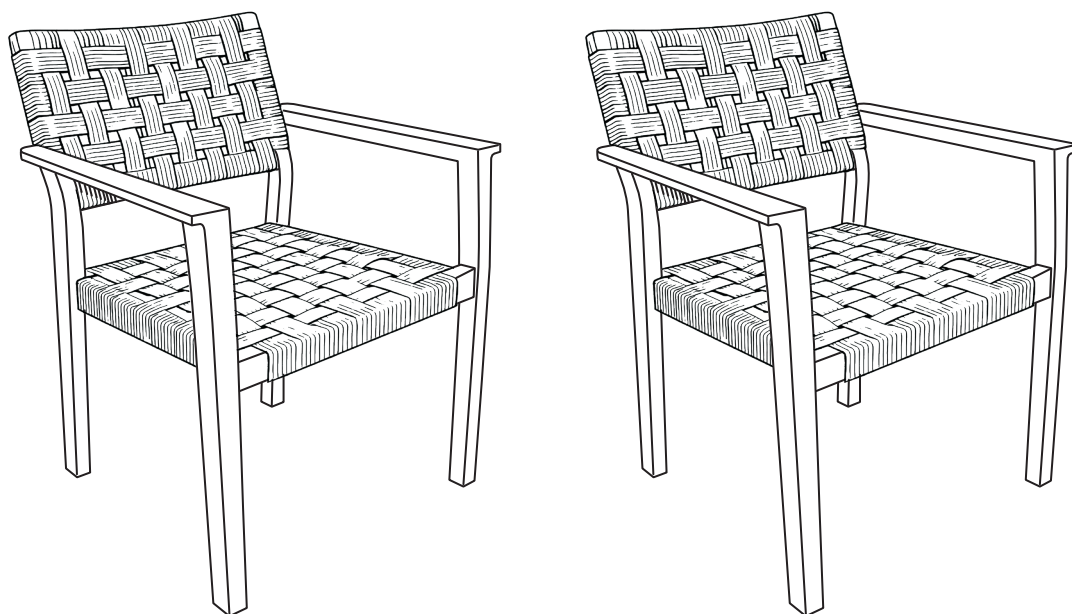

**Thank you for your purchase, please take a moment to read
through this manual before use. If help is needed please
email us at info@kyndway.com or text (888) 869-5558.
Our office hours are Monday-Friday 9am-5pm PST, excluding holidays.**

Care & Cleaning:

Avoid prolonged exposure to direct sunlight and extreme weather conditions.

Store the product indoors when not in use and/or during severe weather. Wooden products may be prone to cracking, warping and become brittle when exposed to moisture and/or too high/low of temperatures.

Always spot test the cleaning solution first on an inconspicuous area to ensure it will not damage or alter the product.

Wood:

Surfaces can be cleaned with a gentle detergent and soft brush or cloth to remove dirt and debris. Allow to air dry completely after cleaning. Do not pressure wash. Do not allow the solution to dry on the surface.

Note: Wood products will weather over time to a soft gray. By nature the grain and color of the wood will vary for each product.

Fabric and/or Rope: Vacuum surface dirt first. Spot clean with a mild detergent and soft bristle brush, test cleaning solution on an inconspicuous area first. Allow to air dry completely. Do not machine wash.

Warranty: Please read carefully

This product is covered by a limited warranty for manufacturing defects for a period of 90 days from the date of purchase. This warranty applies only to the original purchaser using this product in a residential and non-commercial setting. This warranty applies only to items sold in original packaging, from an authorized retail location or website, and does not relate to items sold that have been opened, used as floor samples or demonstration, or models sold "as is".

Consult this manual to ensure that there are no missing or damaged parts. Within 14 calendar days from the date of purchase, any missing parts or damages must be reported to Kyndway LLC. Claims for defects or missing items must be accompanied by the original or an acceptable copy of the sales receipt and clear photographs must be taken to support any and all claims submitted. Additional photographs may be requested.

Here is what the warranty does not cover:

- Merchandise that has sustained weather damage.
- Any damage resulting from being used in a manner other than its intended purpose.
- Exceeding the weight limit of the product and/or placing an unreasonable amount of stress on the product, product components or area of the product.
- Damages resulting from use in a commercial or institutional organization.
- Failures, defects, damages caused by, failure to follow the instructions, abuse, neglect, inclement weather and/or acts of nature.
- Reasonable wear and tear.
- Damage caused by bleach, ammonia, and/or other abrasive cleaners.
- Damages caused by neglect or lack of reasonable care and maintenance.

Disclaimer

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct or indirect or incidental, resulting from improper assembly, improper use, improper maintenance, modification or neglect of the product.