 


Owner Manual



Recommended number of installers: 2

Book Ver. 1.1
Product Ver. sn1.1

(All illustrations are for illustrative purposes only)

TABLE OF CONTENTS

Safety Precautions	01
After-sale Policy	02
Point of Assembly	03
Parts Checking	04
Assembly ^①	05
Assembly ^②	06
Assembly ^③	07
Function Description	08



Safety Precautions

The precautions written here are to prevent harm or damage to you or others. All of these are important contents for safe use, so be sure to observe them.



Ignoring this instruction and using the product incorrectly may result in serious injury.



Ignoring this instruction and using the product incorrectly may result in injury or property damage.



CAUSE OF SUFFOCATION

Do not cover your head with the plastic bag used for packaging.

CAUSE OF EXPLOSION

Do not disassemble or lubricate the gas cylinder.
Do not put the gas cylinder into fire.
Do not incinerate.

CAUSE OF FALL

Do not stand on the chair, use it as a stepping stone, or place it in an unstable position.
Do not sit on the armrests or lean on the backrest, or sit on only part of the seat.
Do not use the chair on slippery floors.

CAUSE OF POISONING

Incineration may produce toxic gases.



CAUSE OF INJURY OR DAMAGE

Be sure to assemble on a stable, flat surface.
Be careful not to get your hands or fingers caught in the casters or reclining parts.
When turning the chair, pay attention to your surroundings.
Do not use it for anything other than its intended purpose.

CAUSE OF DISCOLORATION AND DEFORMATION

This product is for indoor or indoor use.
Outdoor use or getting wet may cause malfunction, rust or discoloration.
Avoid using the product in a place exposed to direct sunlight or heat such as a stove, or in a place with significant humidity or dryness.
※In addition to the above, please be sure to avoid other dangerous behaviors.

Care of Upholstery:

Gently scrub the surface with a soft brush, or use a vacuum cleaner to remove dust from seams and crevices.
If it gets dirty, just dab it with a soft cloth dampened with a small amount of diluted neutral detergent. Then, wipe off the cleaner with a towel dampened with a little water.

Care of Metal and Resin Parts:

Wipe with a soft dry cloth. If it gets dirty, wipe it with a diluted neutral detergent, then wipe it with a wrung cloth, and then wipe it with a dry cloth to completely remove the detergent and water.

After-sale Policy

[Manufacturer warranty]

② The following cases are not covered by the warranty even within the warranty period (paid maintenance).

- a. Damage caused by transportation, movement, drop and other reasons after delivery.

b. Malfunctions caused by failure to observe the precautions or specified conditions stated in the instruction manual, labels, packaging, etc., or malfunctions caused by incorrect use exceeding the limits.

c. Product damage repaired by anyone other than the our company or the designated supplier.

d. Damage caused by natural disasters such as earthquakes, fires, lightning strikes, wind disasters, floods, salt damage, or other external factors.

e. If the warranty card or order number is presented, the warranty period cannot be confirmed.

f. Leather (fabric) wear, synthetic leather hydrolysis or hardening, genuine leather discoloration or cracking, sun fading, etc.

g. Abrasions, scratches, stains, discoloration, etc. caused by daily use.

h. Wear on casters, etc.

i. In the case of other defects caused by the negligence of the customer.

(2) 30-day Return and Money Back Guarantee

[The orders follow the rules of the corresponding platform]

Refunds will be processed automatically upon return of the product to designated location within 30 days of the date of your order, as long as you follow return policy instructions.

※Please refer to the above link for the return method and return conditions.

※Original manufacturer packaging is required for returns. Please do not discard the original boxes.

【Other notes】

- The warranty information on this page promises to repair the product free of charge within the warranty period and conditions specified in the instruction manual.

• The warranty information provided on this page does not limit your legal rights, so if you have any questions about repairs after the warranty period , please contact us by email.

• 365-day quality assurance is a service that provides support (guarantee) for 365 days from the date of your order. After ordering a new replacement product, the warranty period will not be extended again.

• When lending or transferring our products to a third party, be sure to attach the order number and instruction manual together. In addition, we are not responsible for any trouble caused by the act of lending or transferring.

• After-sales service rights such as return and replace are applicable only to the customer who purchased the product. After-sales service rights are not transferred even if the product is lent or transferred to a third party.

• When replacing parts or products, we may use alternatives with a different appearance.

• If the warranty has expired, we will provide after-sales service, but the customer will bear the freight and other costs.

• The warranty information on this page is valid only in NA.

• Except for special circumstances, the warranty provided on this page is valid only for the personal use of the product.

• If you would like to replace the product under warranty, you must return the original product to us. After confirmation by our customer support, you need to return the product within a certain period of time. Please note that if you change the time of return without contacting us in advance, you may not be covered by the warranty.

• We do not provide repair services.

• We do not sell assembled products.

About Your Personal information

The Company and its affiliated companies (hereinafter referred to as "the Company") will handle personal information (hereinafter referred to as "personal information") such as the customer's name and address provided by the customer as follows.

1. We will use your personal information to respond to inquiries about our products, repair and confirm them, develop new products, etc., and keep a record of the contents of your consultation for these purposes. there is.

2. Personal information will not be disclosed or provided to third parties outside the company, except when the company entrusts a cooperative company to carry out maintenance, it is necessary to perform business or exercise the authority stipulated by laws and regulations, or there are other legitimate purposes

3. When the person requests disclosure of personal information, we will disclose it to the person without delay. If you wish to be notified of the purpose of use of personal information, correct, add, delete, stop using, or stop providing to third parties, please contact us at our email address.


Point of Assembly

How to tighten screws


Do not tighten the screws from the beginning

- Tighten all the screws only in halfway at the beginning of the assembly, otherwise the screws might not be aligned with the screw holes and cause further distortion of the chair.

1 Temporarily tighten all screws to 80%

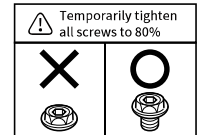

Parts Checking

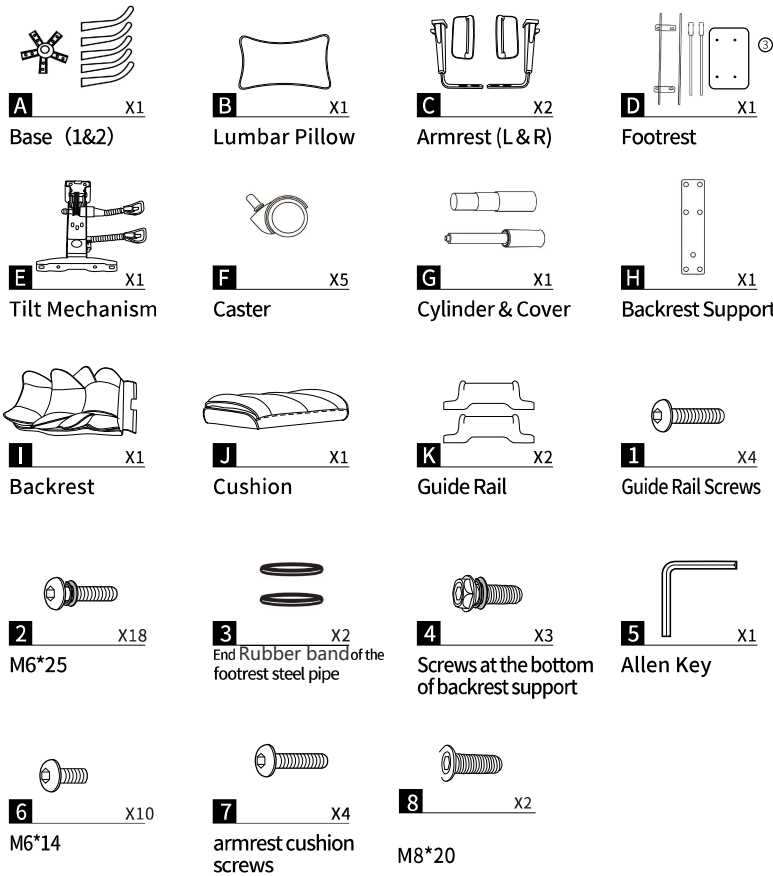


US04

Assembly ①


1 Installation of base

- Insert the Base-2 to Base-1 as shown.
- ※ Base-1: part like a pentagram, Base-2: slender rod
- ※ First, loosely insert the Base-2 into the correct position. Please do not fully insert the Base-2 yet to avoid pinching your fingers. Then press the Base-1 from above and securely install the Base-2.

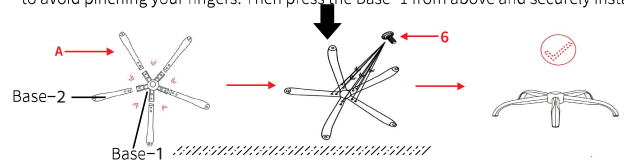


2 Installation of casters, gas cylinder and cover

- Turn the base over and insert the casters firmly.
- Insert the gas cylinder and cover into the base as shown.
- ※ To prevent the wheels from coming off, it is a bit difficult to insert.
- ※ The cylinder coated with lubricating oil. Be careful not to get your hands, clothed, or floor dirty.

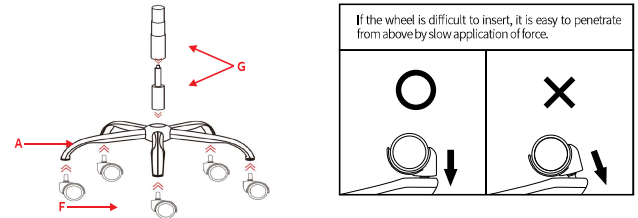

3 Assembled armrest

- First, flip the armrest so the bottom is facing up. Then, attach the armrest bar to the armrest cushion and secure it with screw 7.
- ※ Please check that the screw holes are aligned before tightening the screws.
- ※ The L-shaped bending part of the armrest surface needs to face the seat cushion


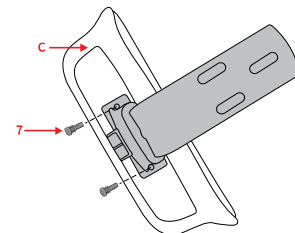


US05

Assembly ②


4 Installation of tilt mechanism

- First, place the seat cushion on a stable surface. Install the tilt mechanism and armrest to the bottom of the seat cushion and secure them with screw 2.
- ※Point the front mark on the base to the guide rail.
- ※Note the distinction between the left and right armrest.

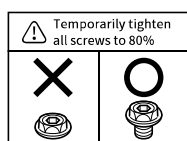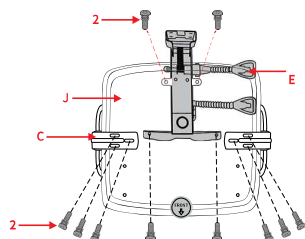



5 Installation of guide rails and footrest

- Turn over the footrest, install the footrest steel pipe, and secure them with screw 1.
- Then install the guide rails, and secure them with screw 1.
- Insert the footrest as shown in the picture.
- ※ If the movement is not smooth, loosen the screw on the guide rail and adjust its angle. After confirming that the movement is smooth, tighten the screws on the guide rail and screw in screw 3 at the end of the footrest steel pipe.
- ※ Please note that there is discrimination between the front and back of the footrest.

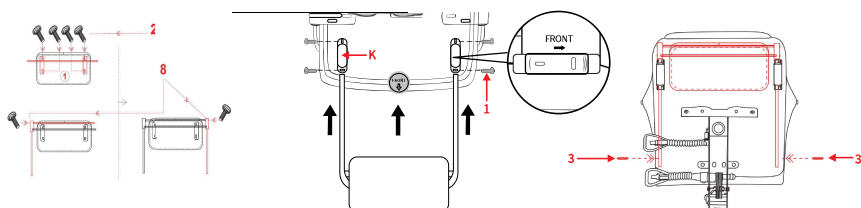


6 Installation of cushion

 - Assemble the upper and lower parts of the chair as shown.
- ※ If you have limited strength or are assembling it by yourself, please place the upper side of the chair on the ground, insert the gas cylinder into the tilt mechanism, and pick up the chair.

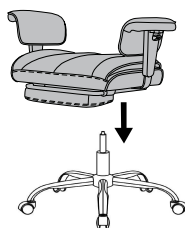


Assembly ③

7 Installation of backrest

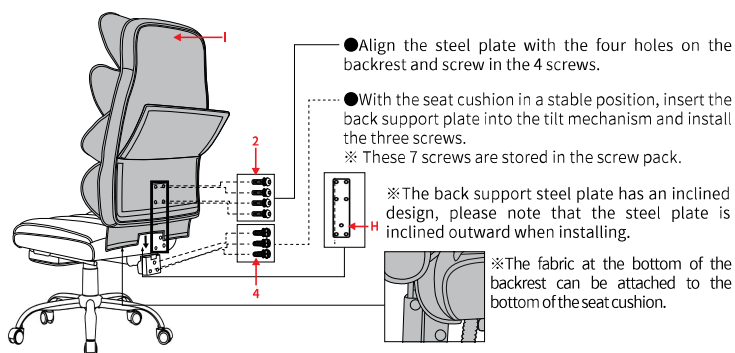


8 Installation of adjustable lumbar pillow

- Fix the lumbar pillow as shown.
- ※ The straps of the lumbar pillow are fastened around the back of the backrest.

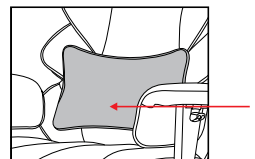


9 Note

- This concludes the assembly. Please confirm whether there is shaking, deformation, etc. Then tighten all screws.

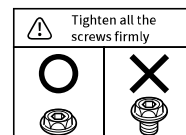


Function Description

height adjustment

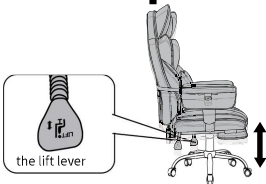

lower the seat height 	raise the seat height 
raise the lift lever while sitting 	raise the lift lever and lift your hips 
Precautions ●light weight people may have difficulty lowering the seat. In that case,please sit on the seat and try a few more times.	

reclining function

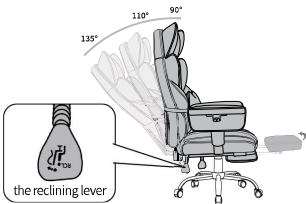

Backrest Angle Adjustment Function When adjusting the angle of the backrest, sit on the chair and operate the reclining lever. •Pull the lever up to release the reclining function, and tilt it back to increase the angle of the backrest. If it is the other way around, it will decrease. •Push the lever down to fix the backrest at the current angle.	
When you lie down 	When you reduce the backrest angle 
Please note ●Do not apply backward force to the backrest until you have pulled the lever. This may cause structural damage. When you adjust the backrest angle significantly, please support the backrest with your hand to avoid hitting yourself with the rotation speed. When using it for the first time, it may be difficult to adjust, please pull the lever upward vigorously once.	

We will get back to you as soon as possible.
Please be sure to provide us with the necessary information above.
※ We will properly handle the personal information we receive, please check the policy (page.02) for details.

If you have any questions about our products or our policies, please feel free to contact us.