



Hi friend, thank you for purchasing me, we finally meet! I am happy to be your firearms guardian. It is my responsibility and my pleasure to keep children away from firearms equipment and to keep your firearms safe.

After you received me, please take a few minutes to read the instruction manual so that you can use me better. If you have any questions, please contact my seller, they are always there. Please do not put the emergency opening accessories in the gun cabinet to avoid unnecessary trouble!

# ELECTRONIC GUN CABINET INSTRUCTION MANUAL

**⚠ Please do not put the emergency key and external battery box in the safe!**

## SCHEMATIC GUIDE

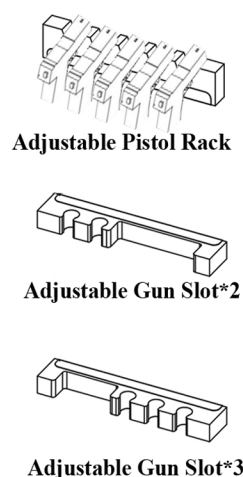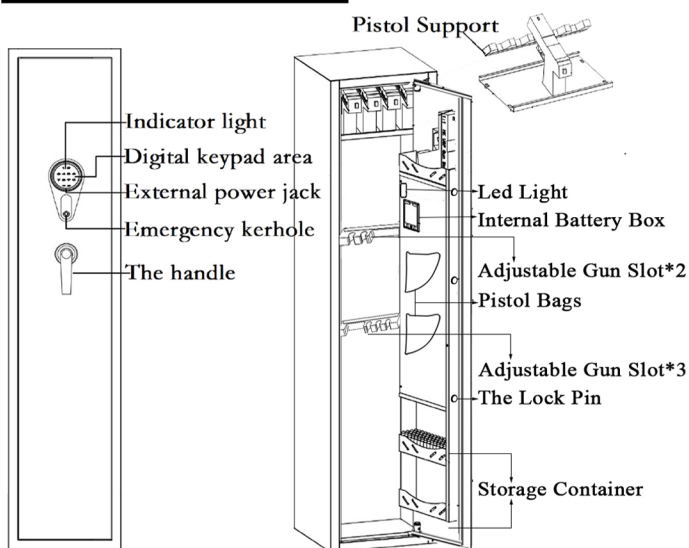

## PARTS LIST

Emergency key*2	
Expansion bolt* 4	
External power box*1	

### Advantages:

1. Gun rack can be adjusted up and down
2. The gun rack can be adjusted back and forth, so that rifle safe with scope can be placed
3. Equipped with two gun racks, so that you can place according to the height of the long gun



### SAFETY TIPS

Not safely reinforced before installation, tipping can cause serious injury to children and adults. Children or adults tipping over the gun cabinet can result in death or serious injury. Children should not be playing near the gun cabinet at any time.

## FIRST TIME OPEN

1. Slide the keyhole cover upward.
2. Insert the key into the keyhole and rotate counterclockwise.
3. Turn the handle clockwise to open the gun cabinet

## BATTERY INSTALLATION

1. With the door open, please open the built-in power box cover.
2. Insert 4\*AA alkaline batteries.

### ⚠ NOTE:

1. Please do not use rechargeable batteries.
2. Please do not use different brands of batteries, the current is different can not energize the panel and may burn the panel.
3. If the panel is not energized after installing the battery, please check if the battery is low.

## SETTING YOUR PASSWORD

### ⚠ NOTE: Original factory password: "1234"

1. In the standby mode, press the setting button. At the same time the indicator light on and beeps.
  2. Enter 1-8 digits password and press #.
  3. Enter the same password again and press #. A long beep indicates that the setting is successful.
- (The password entered for the first time must be the same as the password entered for the second time)

## OPEN THE GUN CABINET

1. In the standby mode, press #.
2. Enter the correct password.
3. Press # again.
4. Rotate the handle clockwise.

(If you enter the wrong password 5 times in a row, the system will be locked for 5 minute. Digital password cannot be used during lockout)

## MUFFLER FUNCTION

Long press the "\*" button (about 3 seconds), The indicator light will be on. The setting is successful .

Press the "\*" button again for a long time (about 3 seconds) ,The indicator light will be on, then hear the long sound, Turn off mute Mode

(NOTE: button is used to switch the mute function, and the normal sound will be restored after power failure)

## UNDERVOLTAGE INDICATION

1. After entering the password in standby mode the green and red indicator lights are light on at the same time, it indicates that the battery is low and needs to be replaced.

2. Replace the battery:

if the indicator light is not on, you can use the emergency key to open the door and replace the batteries.

## TECHNICAL PARAMETERS

1. Battery Type: 4 AA alkaline batteries
2. Operating Voltage Range: 4V-7V
3. Operating Undervoltage Value:  $4.6V \pm 0.2V$
4. Static current less than 5Ua

## INSTALLATION INSTRUCTIONS

1. The gun cabinet can be mounted on the wall or on the floor.
  2. Use the appropriate drilling tool depending on the type of floor (wood, tile or concrete) on which the gun cabinet is to be installed. Aim carefully at the installation location to open the hole. (Please verify the location and distance of the reserved holes before drilling)
  3. Take out the expansion screws from the gun cabinet accessory kit to fix it to a safe position.
- Mounting holes are based on the actual model

## TROUBLESHOOTING

### **Question 1: The gun cabinet does not open when I enter the password.**

1. Please make sure your password is correct.
2. Press the "#" key to confirm after entering the password.
3. May be in self-lock mode due to multiple entry errors. Wait 5 minutes and try again.
4. Open the door with the key, and replace the batteries or change the password.

### **Question 2: Can't close the door**

1. Check if there is no obstacle against the door inside the gun cabinet.
2. Check if the bolt on the door is sticking out on the outside, if so, open the door in the same way as the method of opening the door and retract the bolts then close the door.

### **Question 3: Yellow and green lights are on at the same time.**

1. The system prompts to replace the battery, at this time the weak power state.

### **Question 4: Warning lights are flashing**

1. Make sure you have entered the correct password.
2. Enter the password and press the "#" key to confirm.

## SECURITY AND COMPLIANCE

1. Please read the manual carefully before using the gun cabinet.
2. To reduce risk, the gun safe must be mounted on the wall or floor to ensure security.
3. Please keep the keys carefully. Do not put the keys into the gun cabinet, otherwise the emergency key will not be able to open the safe after the battery runs out.
4. For the security of your property, you need to change the original factory password.
5. Do not place the product in an unsafe height to avoid falling, damaging the product or injuring others.
6. Do not spill liquid on the control panel, otherwise it may damage the internal electronic components and make them not work properly.
7. Please do not disassemble the product by yourself. Unprofessional disassembly and installation may damage the circuit and affect its performance.