 


ASSEMBLY INSTRUCTION

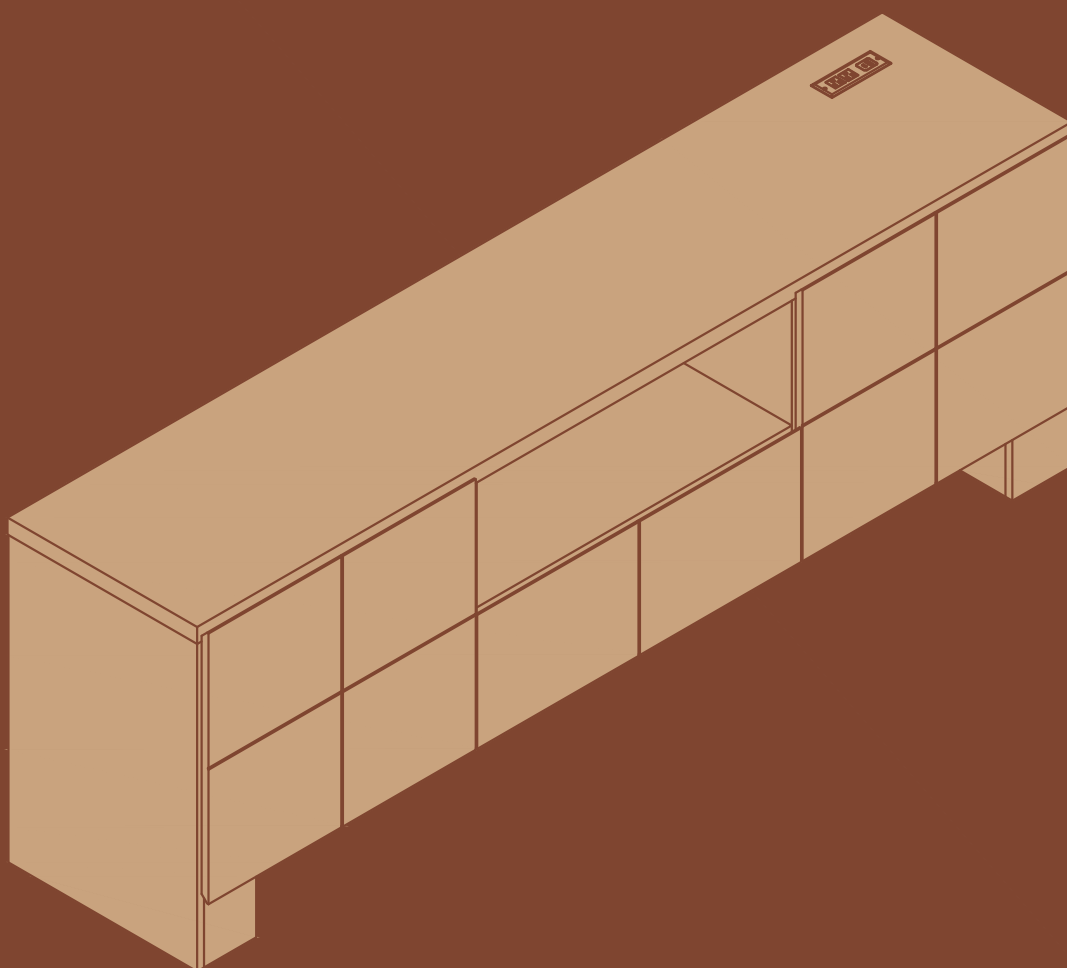

70 Inch Tv Stand

CATALOGUE

Precautions	01
Parts List	02
Hardware List	03
Tool List	04
Assembling Process	05-27

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

This package contains numerous components and hardware pieces. Please identify and verify all parts against the parts list before you begin assembly.

WARNING: Choking Hazard. This product contains small items. Keep all parts and hardware out of the reach of children during assembly.

To prevent scratches, assemble the product on a soft, non-abrasive surface such as a carpet, blanket, or the flattened cardboard packaging.

 
 
 
 
 
 
 
 
 
 
Some components are heavy. For safety, we recommend this product be assembled by two adults.










The unit may be unstable until assembly is fully complete. Do not move the product until all steps are finished.

If you encounter any issues or have questions, please contact our customer service team for assistance.





- * Please be sure to follow the installation steps in the manual to avoid unnecessary losses caused by improper installation.
- * If you need further assistance, please contact the customer service online.


Parts List

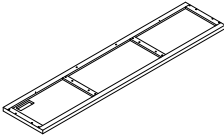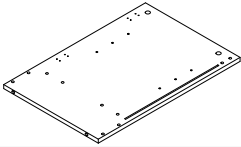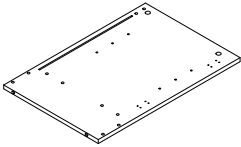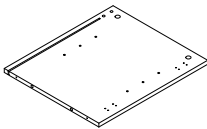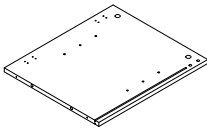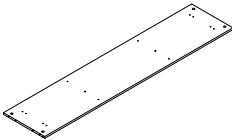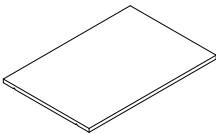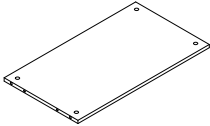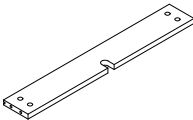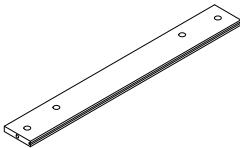ID	Parts	QTY
1		1
2		1
3		1
4		1
5		1
6		1
7		2
8		1
9		2
10		1

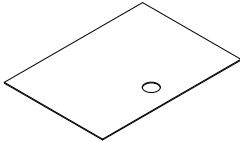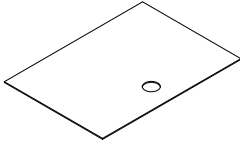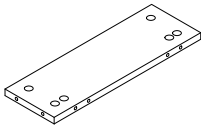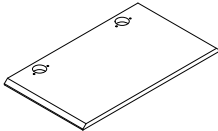         ID	Parts	QTY
11		2
12		1
13		2
14		2
15		2
16		4
17		1
18		1
19		2

    Hardware List


ID	Parts	QTY
A		44+3
B		44+3
C	 Ø6*30mm	28+2
D	 Ø7.5*M5*38mm	4
E		12
F	 Ø3.5*14mm	72+3
G		8
H		18+1
I	 Ø3*16mm	18+1
J		1

 ID	Parts	QTY
K	 Ø3.5*14mm	2
L		2
M	 M3 M1 M4 M2	2
N		44+3


Tool List

ID	Parts	QTY
Z1		1

 
Required Tools (Not Included)

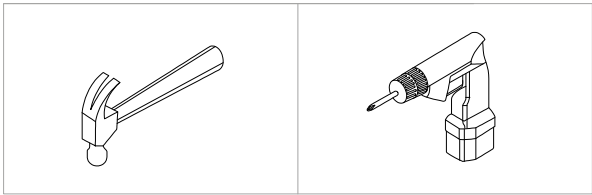


  **Wall mounting only**
These tools are not required for product assembly.

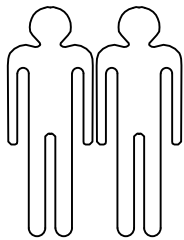


Multi-person installation

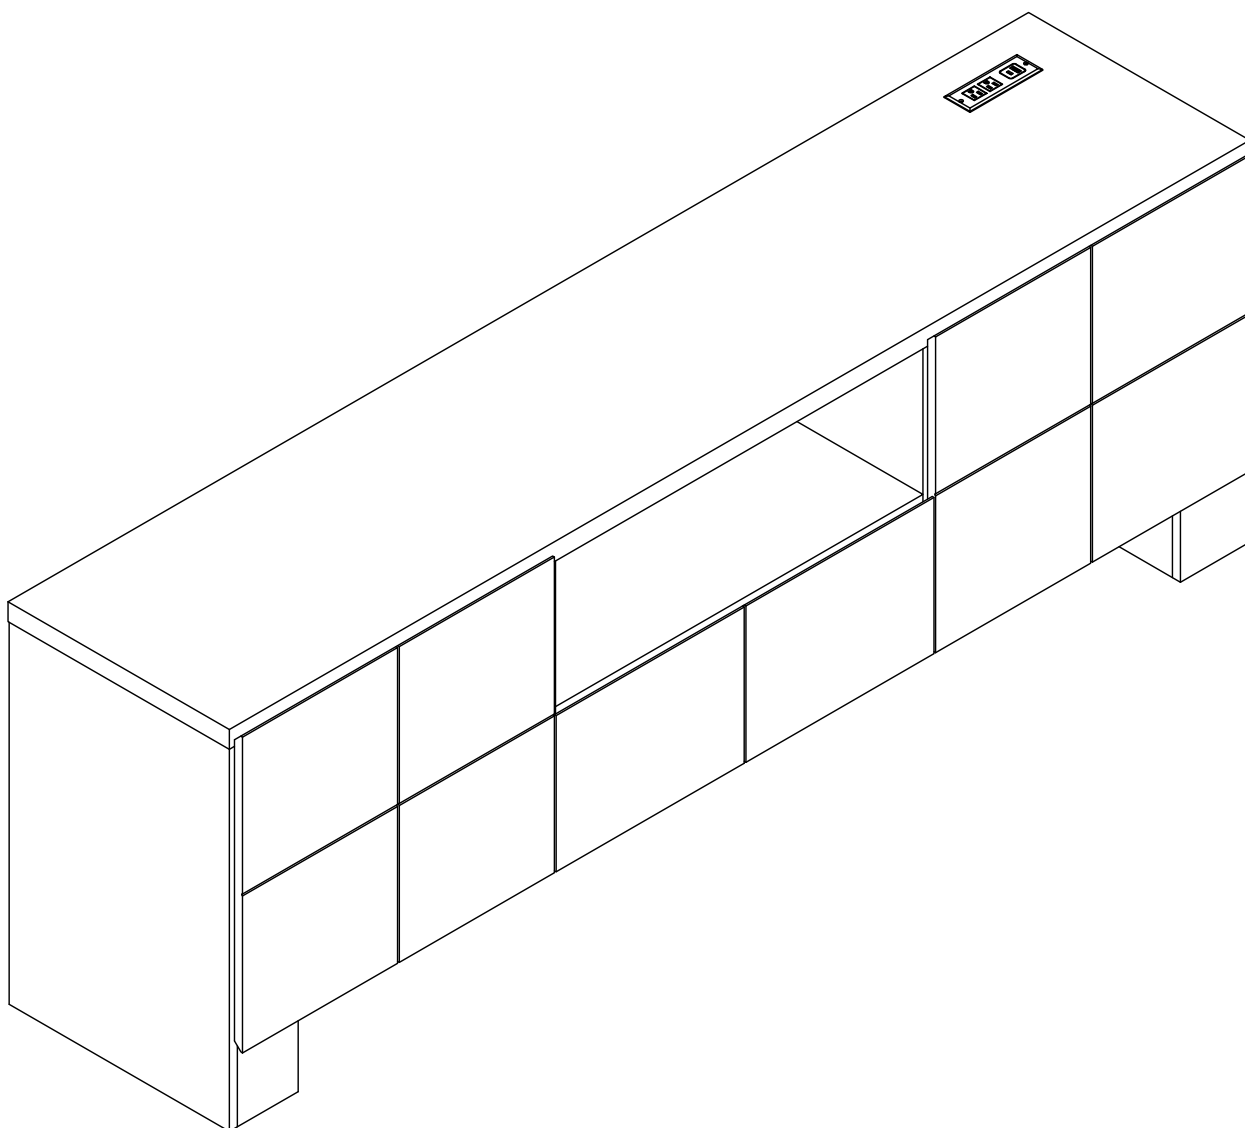 


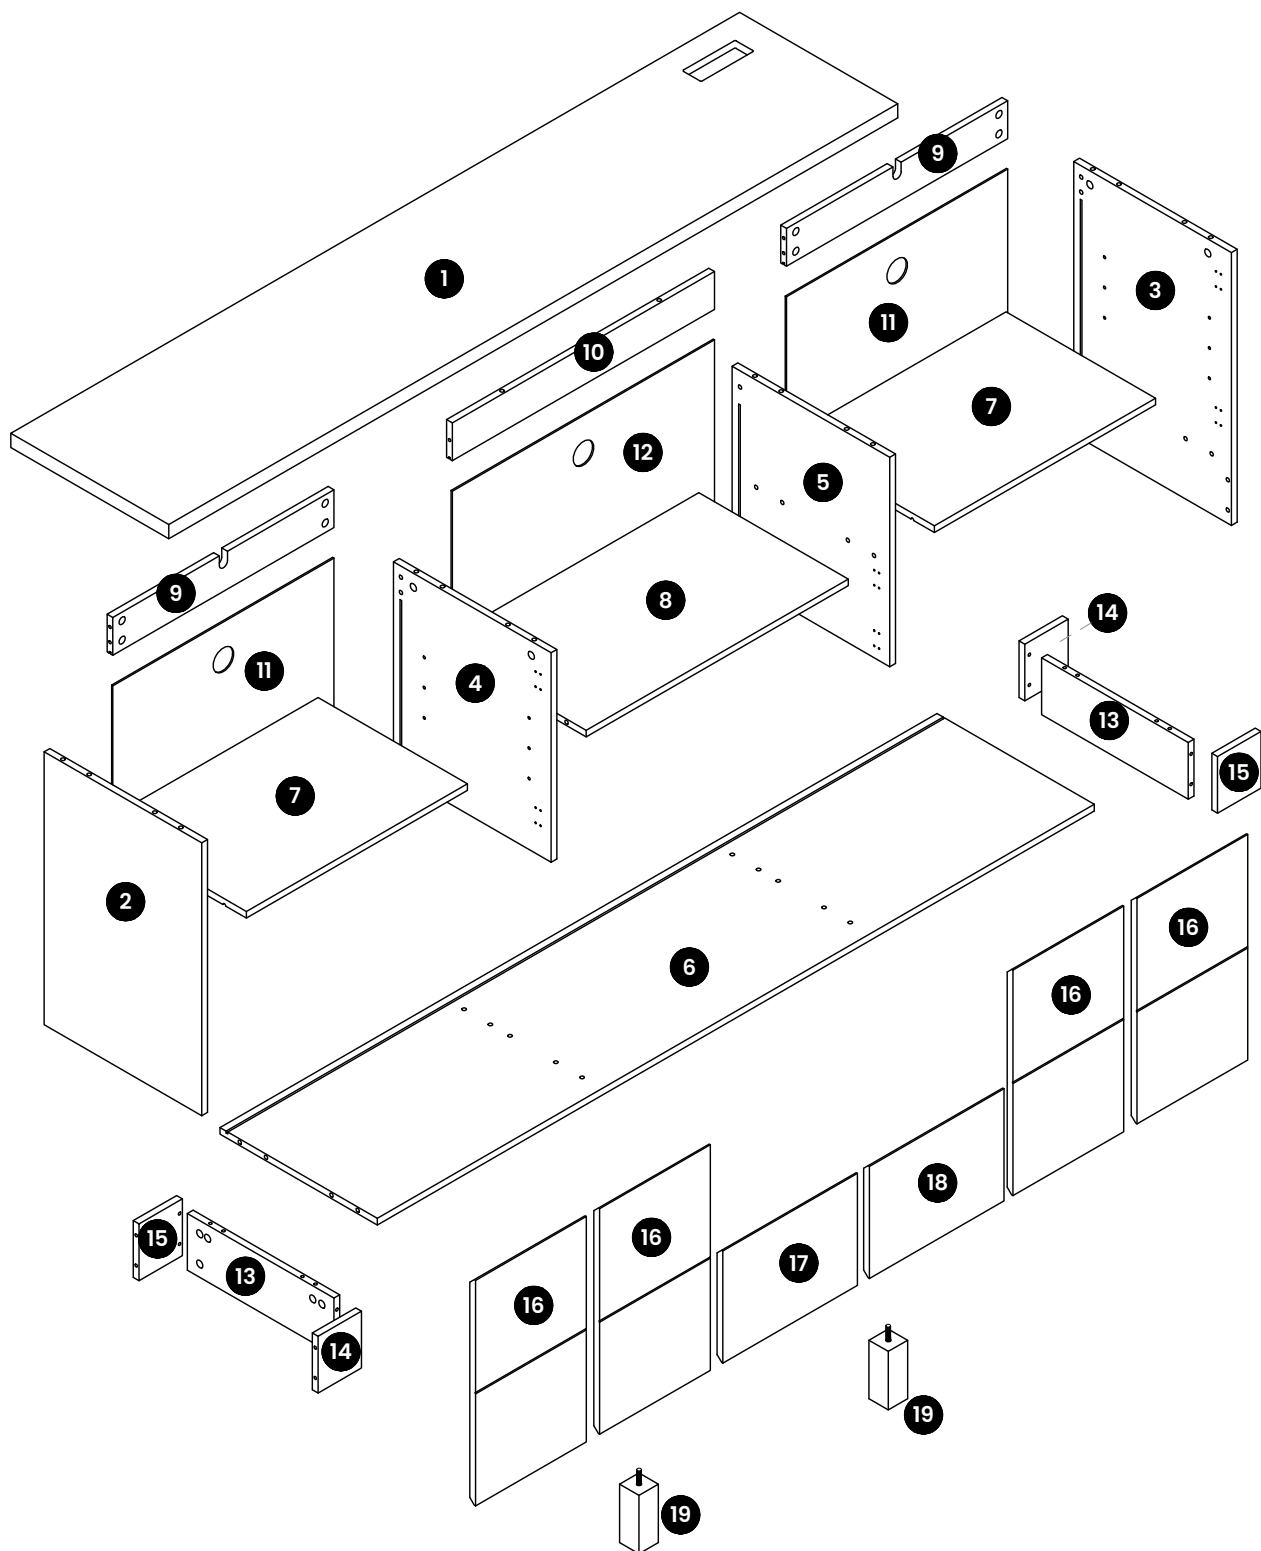 


 
STEP 1



A X26

 


M X2

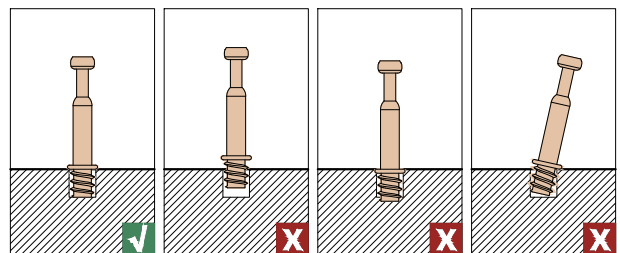 
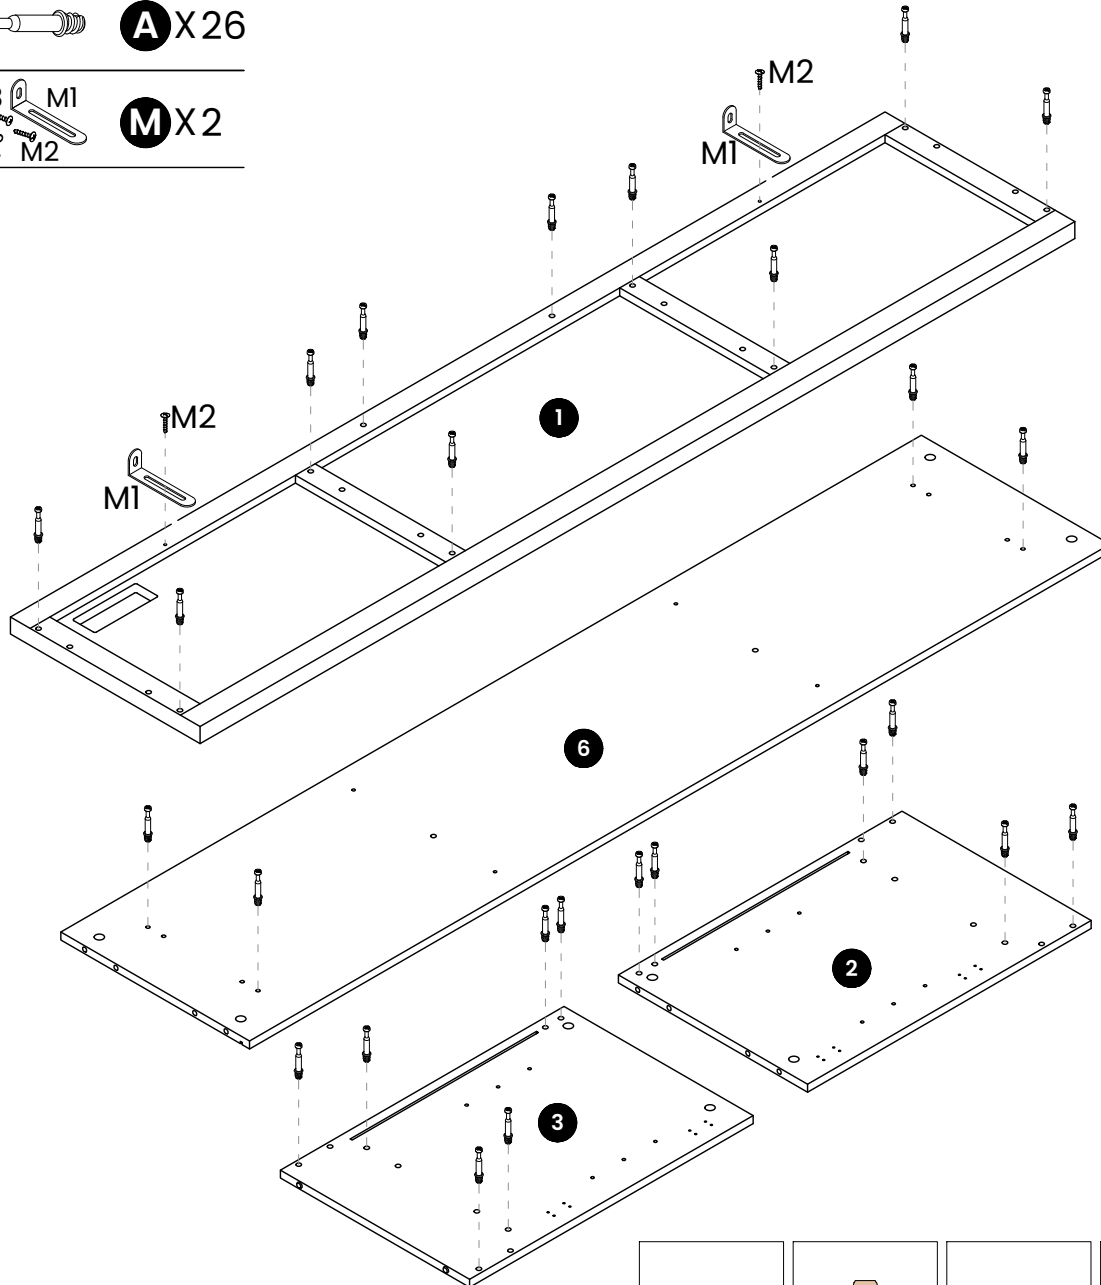 


Install the screw correctly to secure the screw.

 STEP 2



A X18

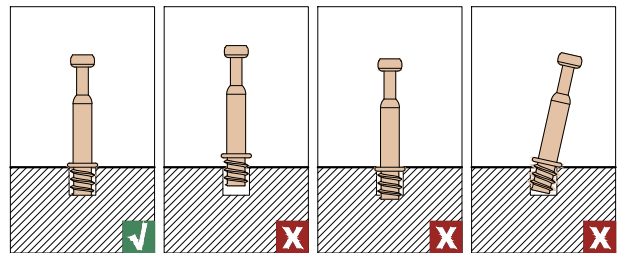 
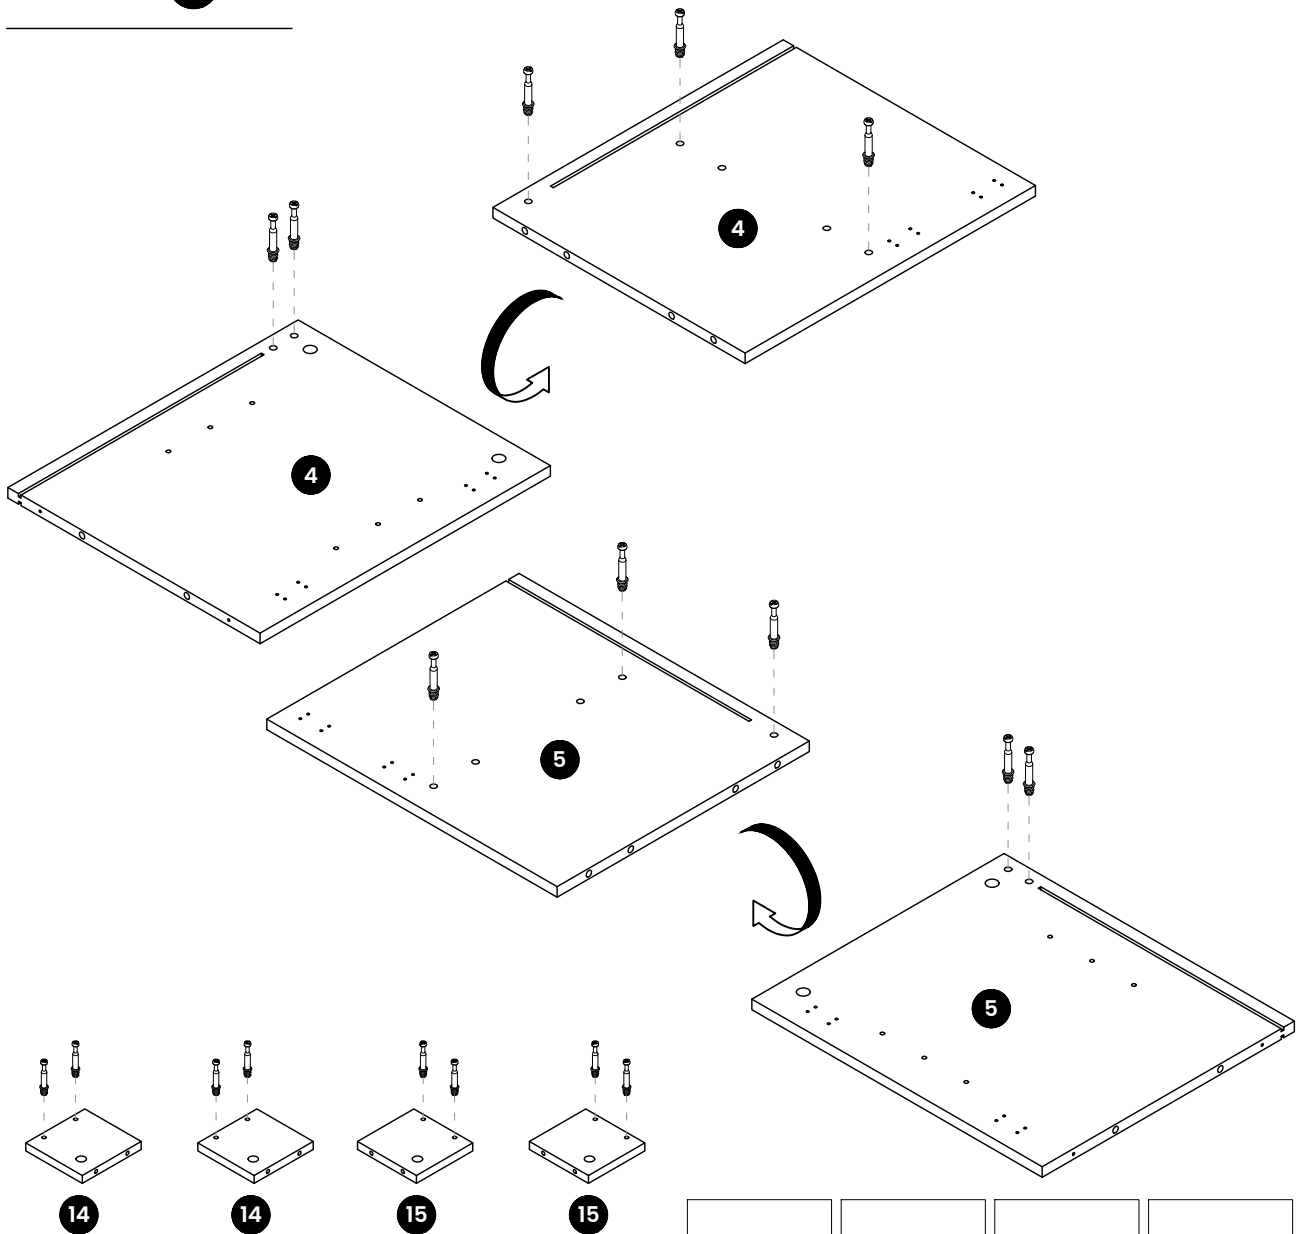 


Install the screw
correctly to secure
the screw.

STEP 3



  B X8

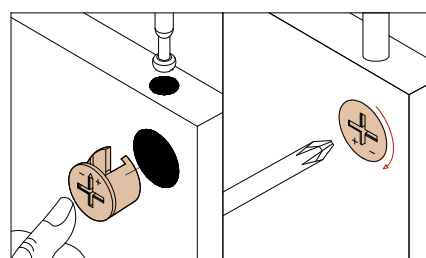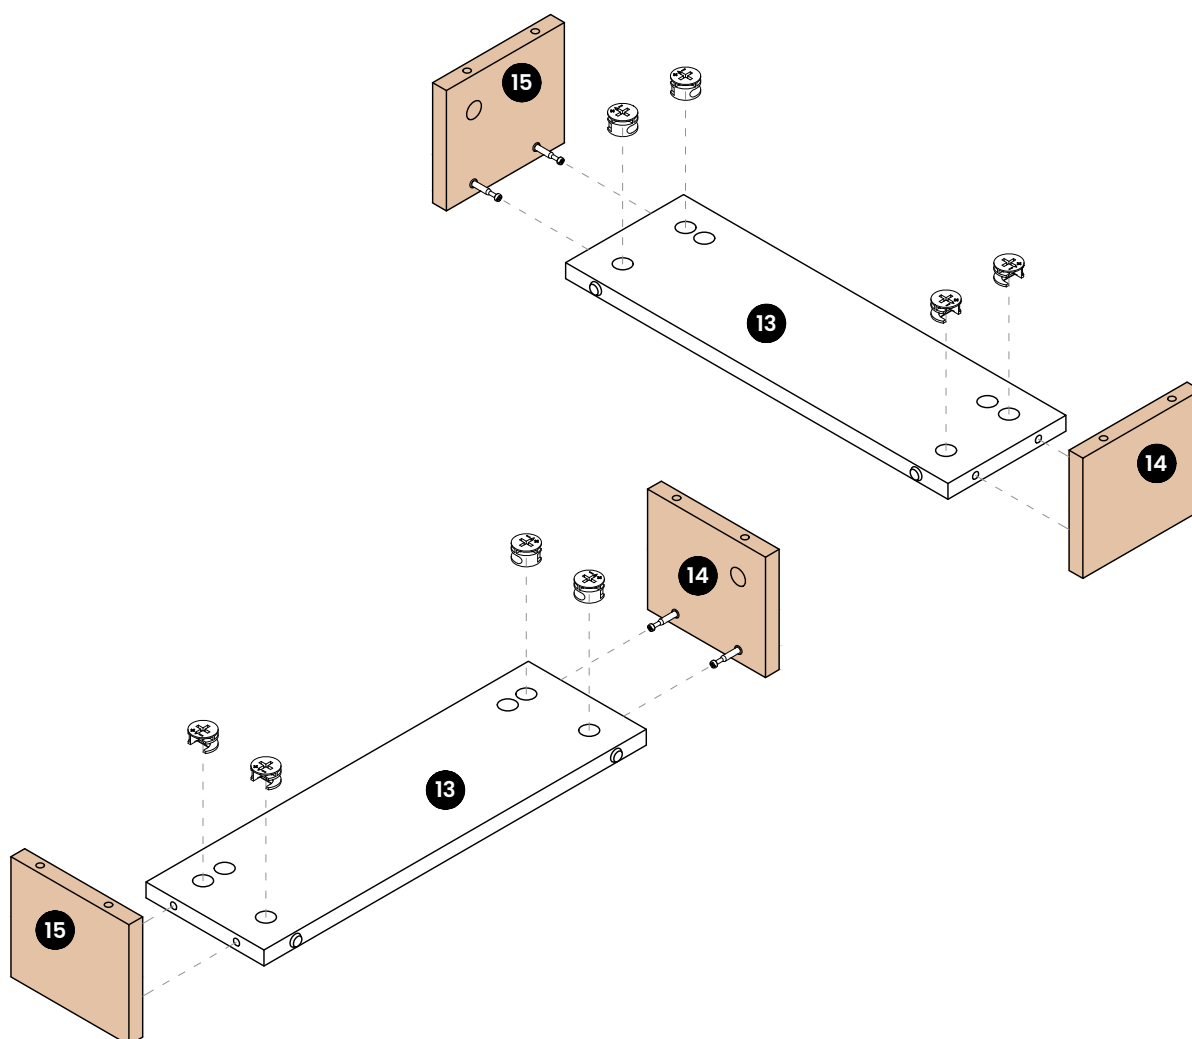



STEP 4



B X4



  C X4

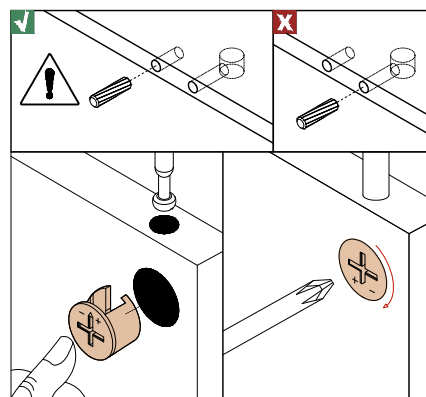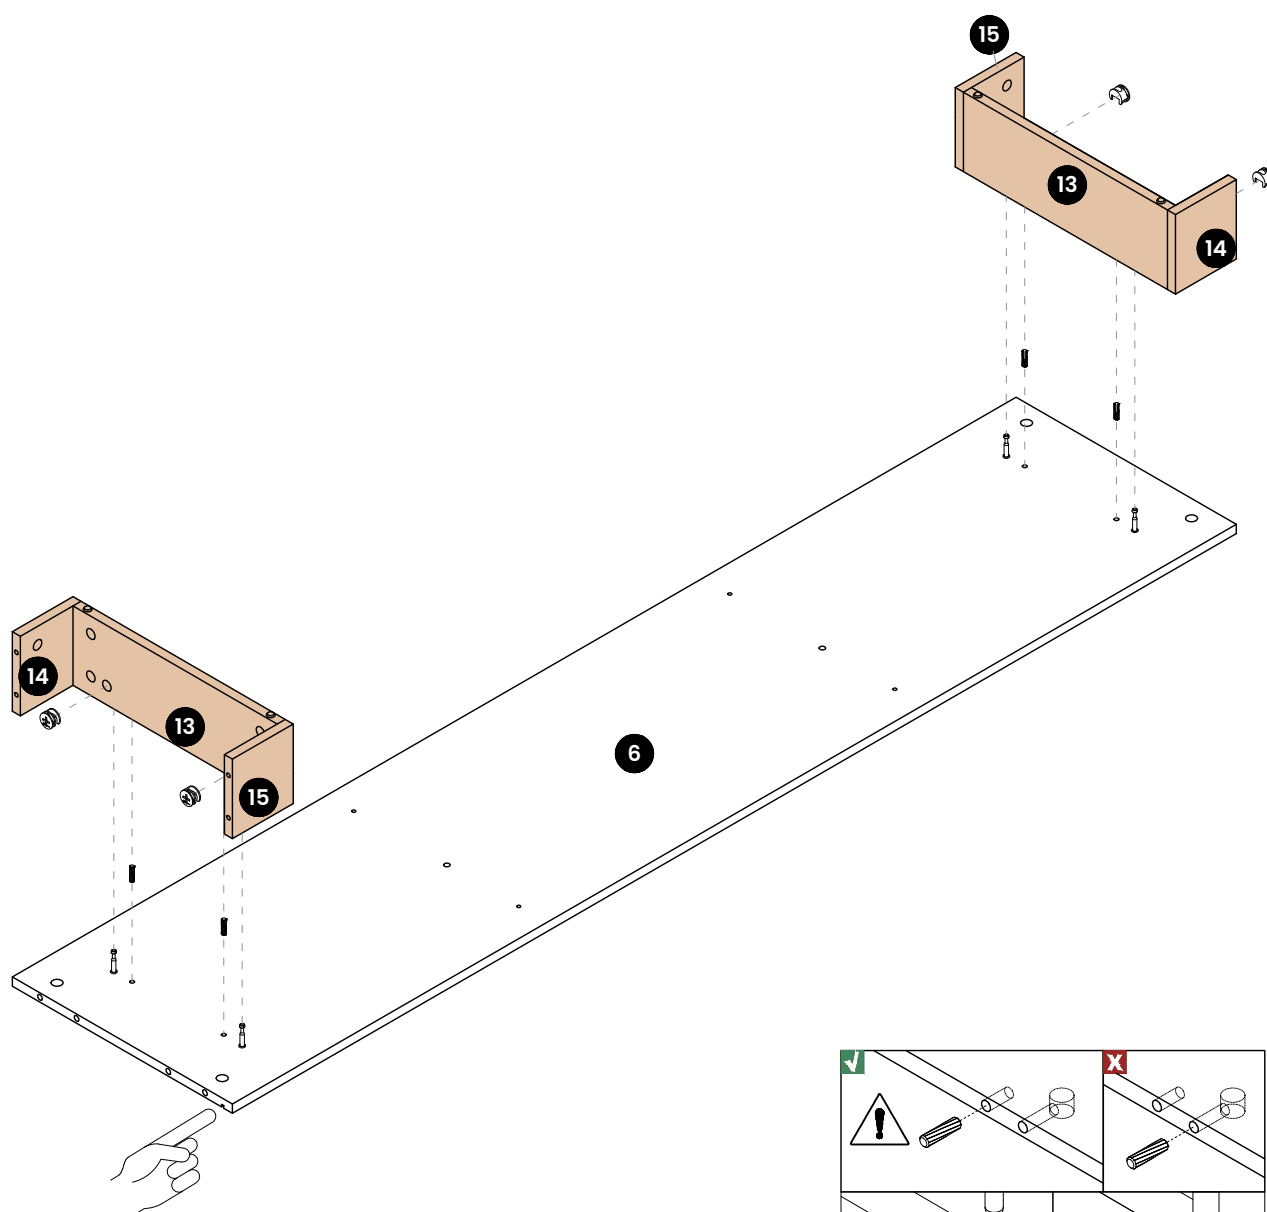



STEP 5




B X6



   C X4

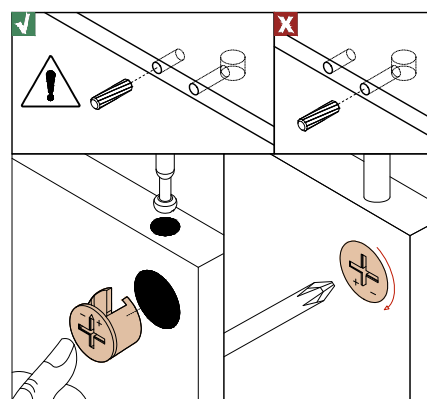
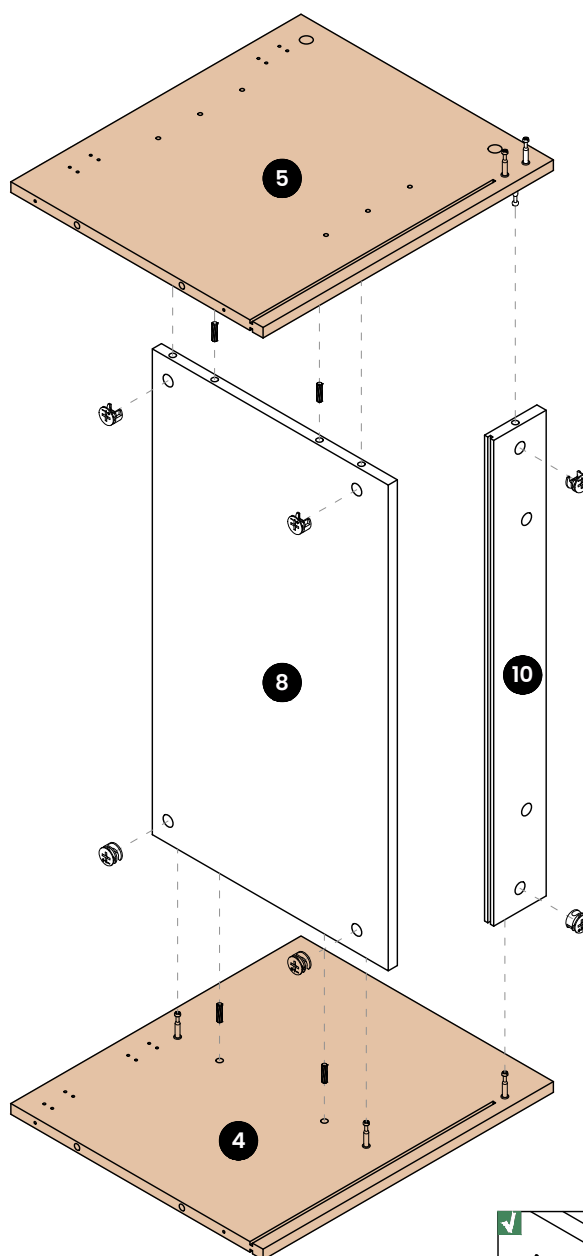


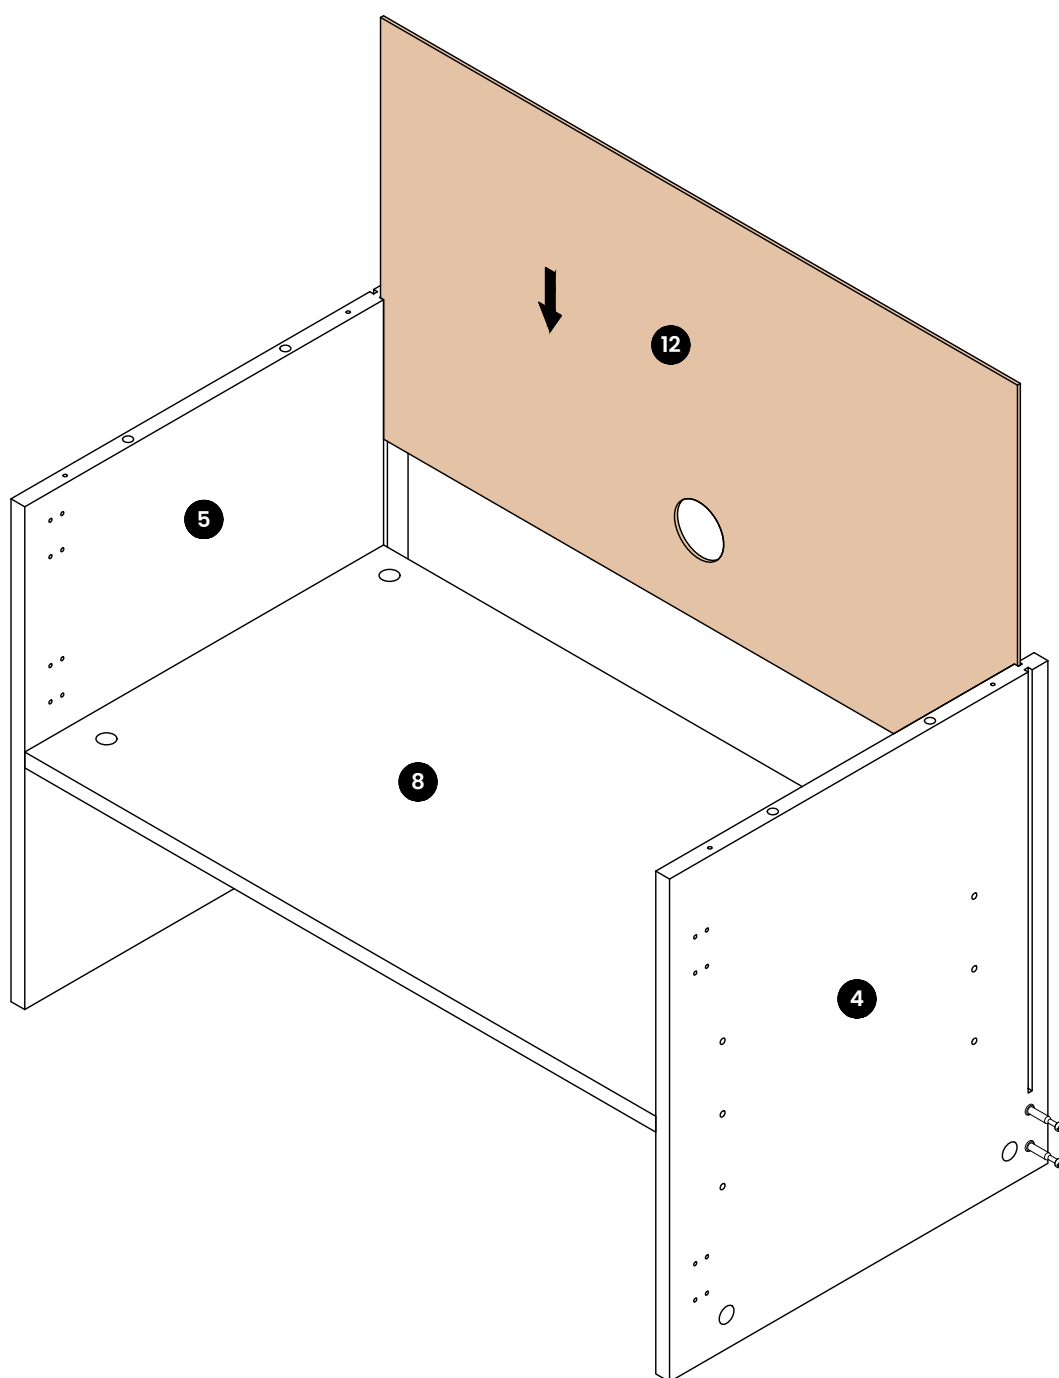STEP 6

STEP 7

 **D** X4

 
 
 **C** X4

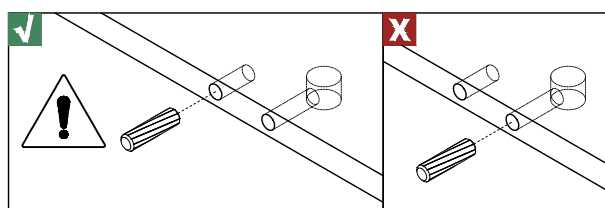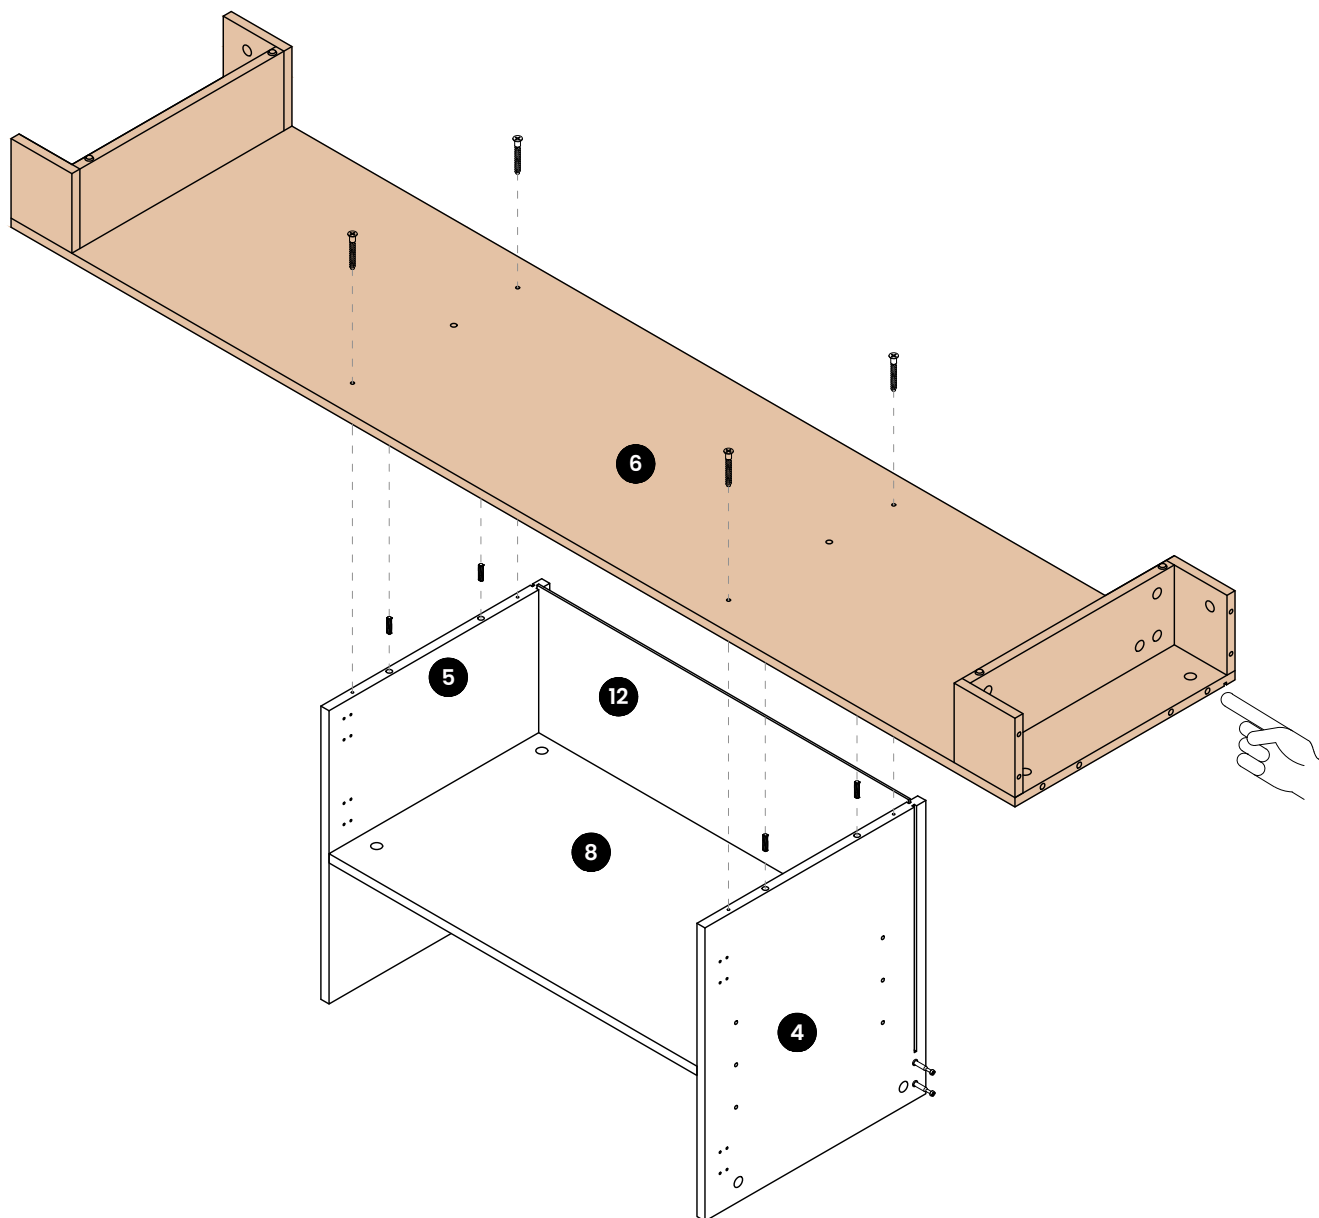


STEP 8



   B X2

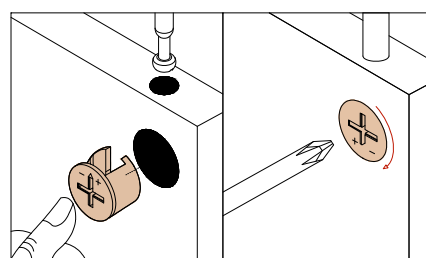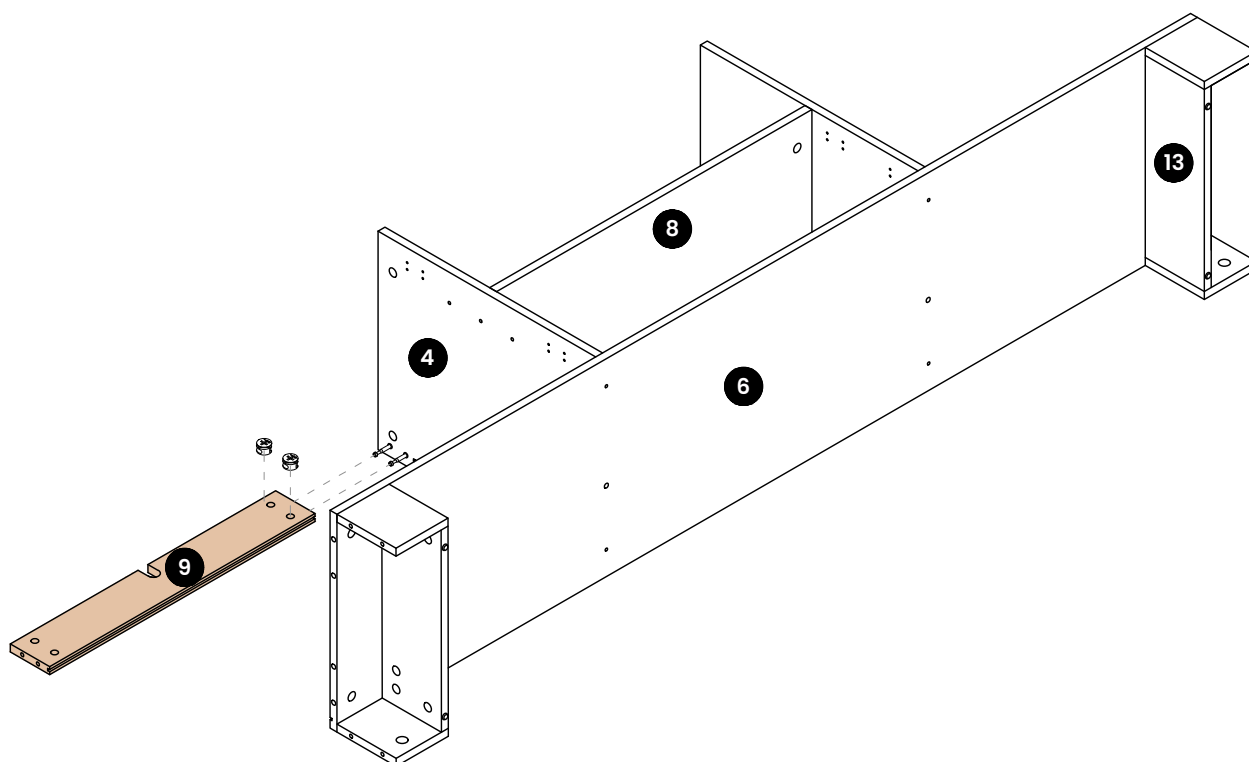

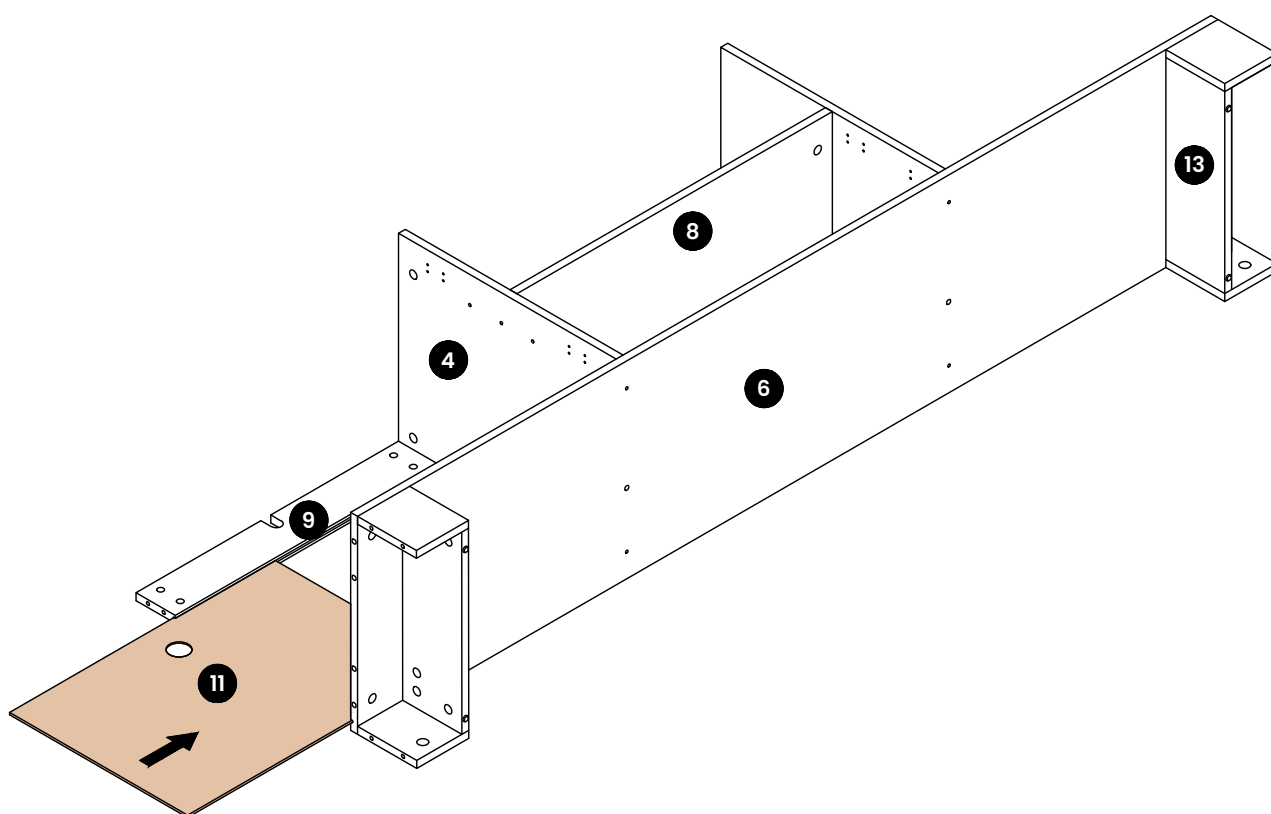STEP 9

 
 
STEP 10



B X6





C X4

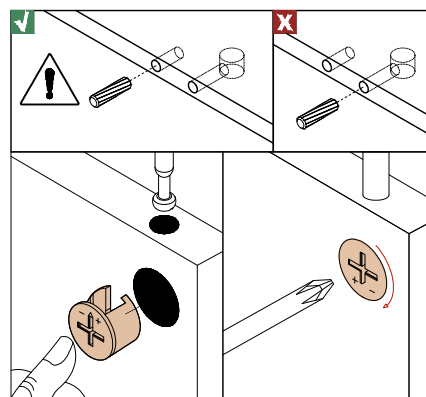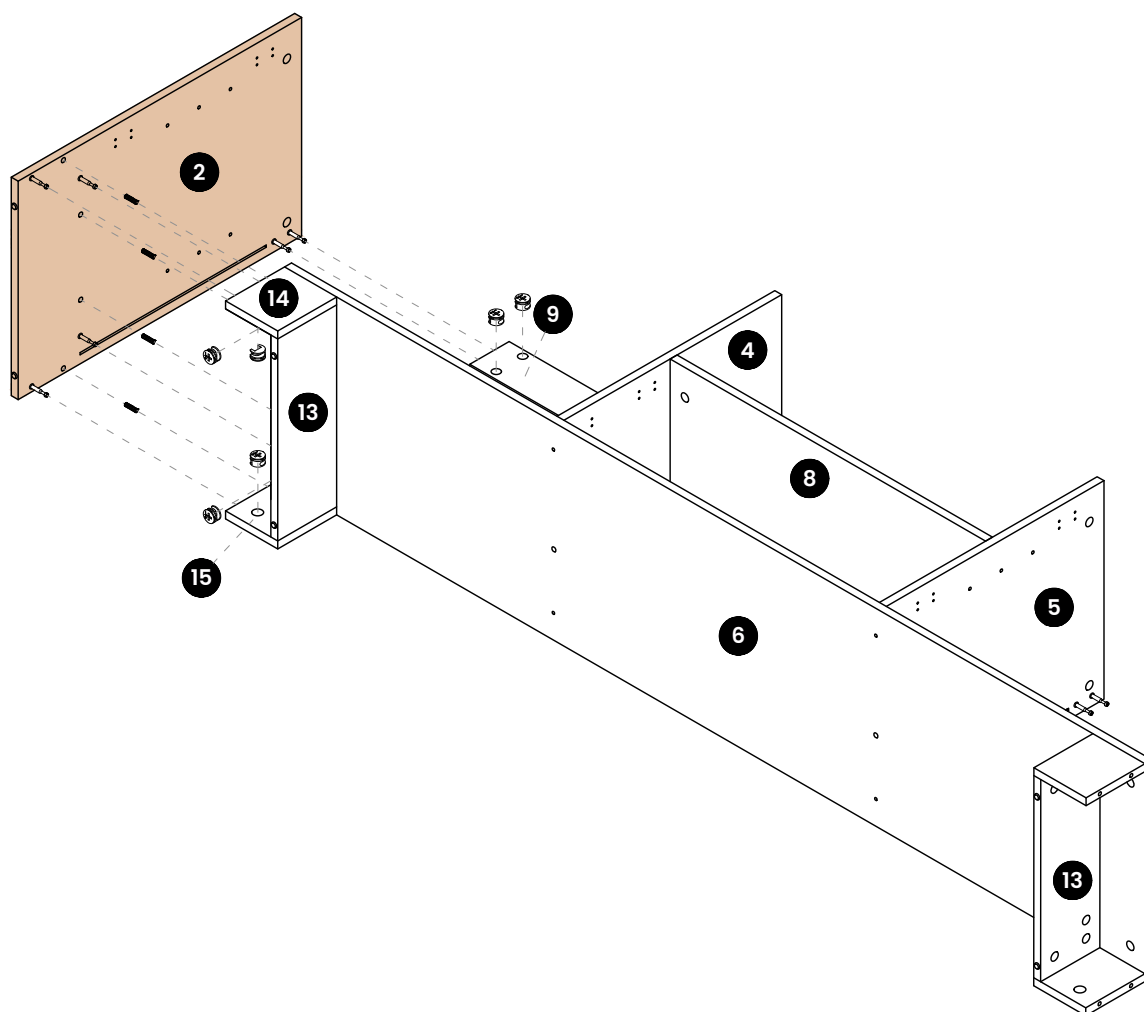


STEP 11



  B X2

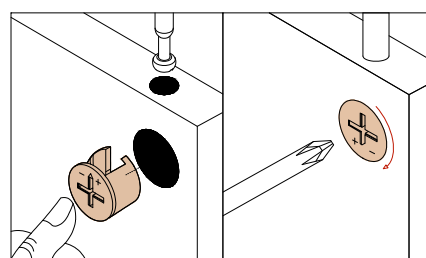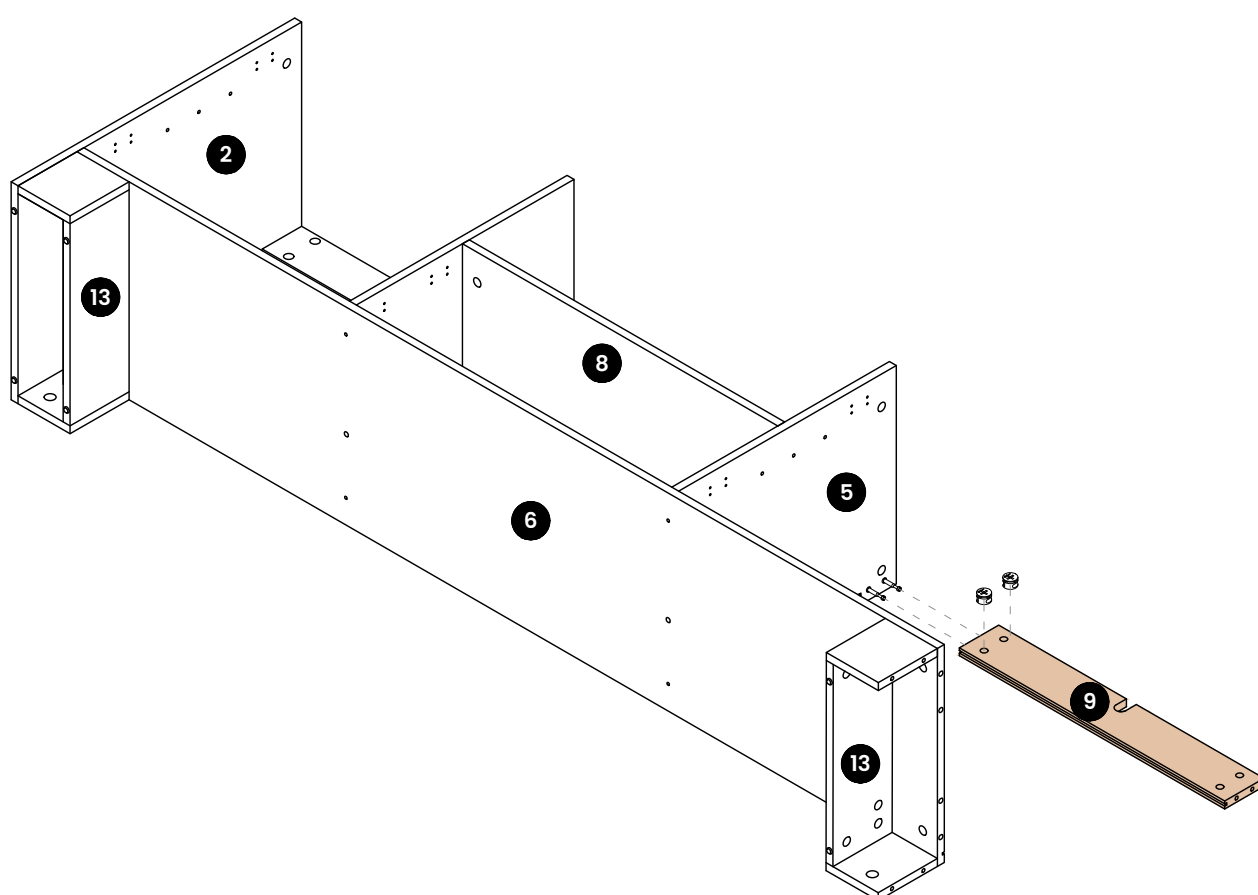

 STEP 12

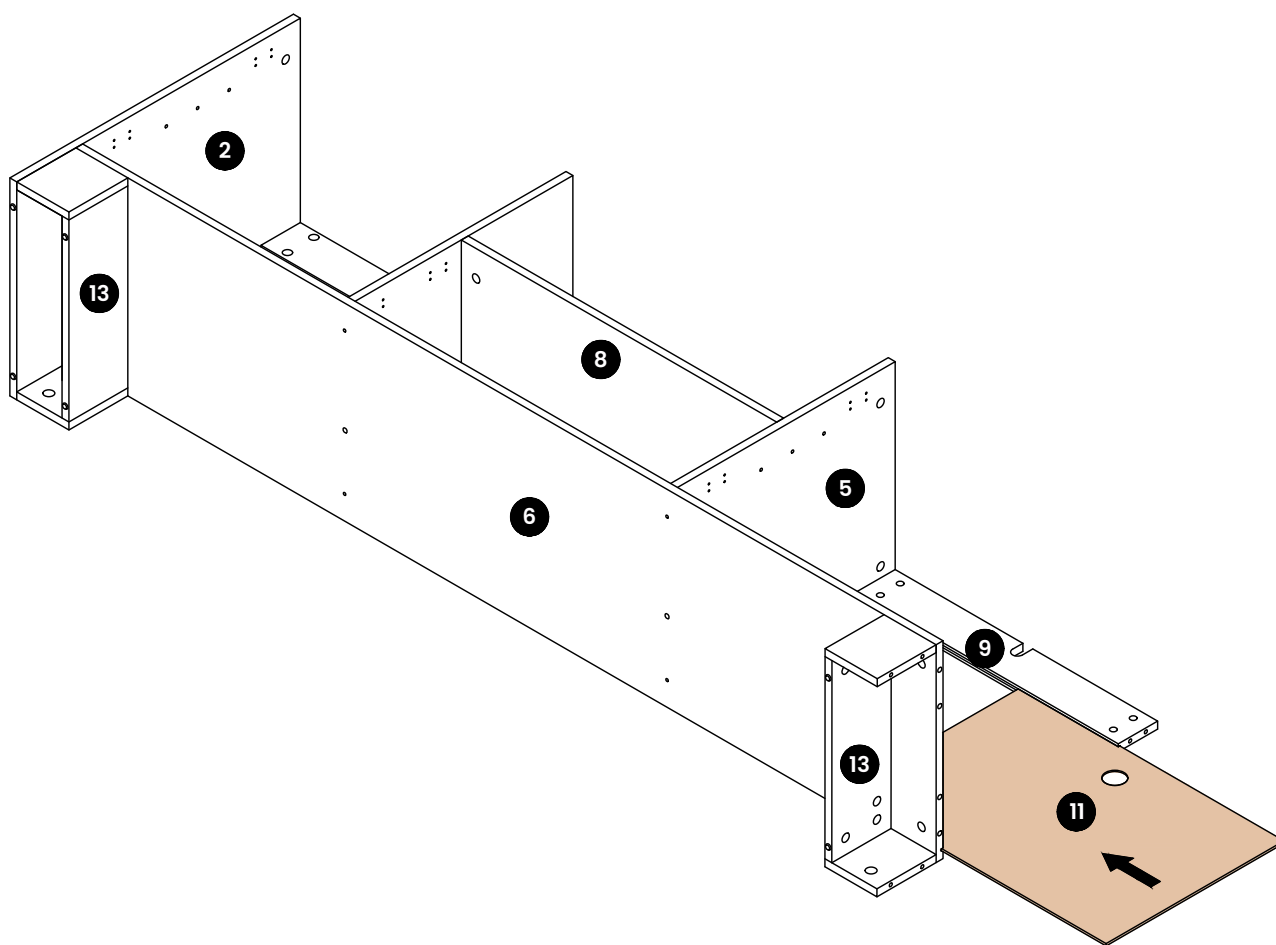

STEP 13



 
 
B X6



C X4



L X2

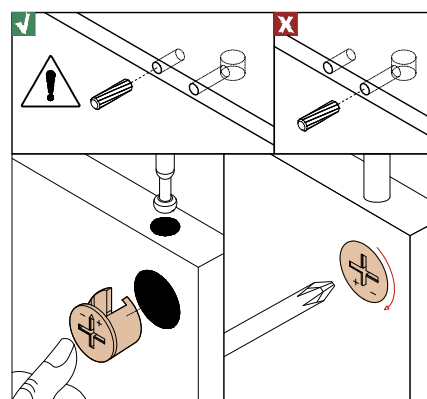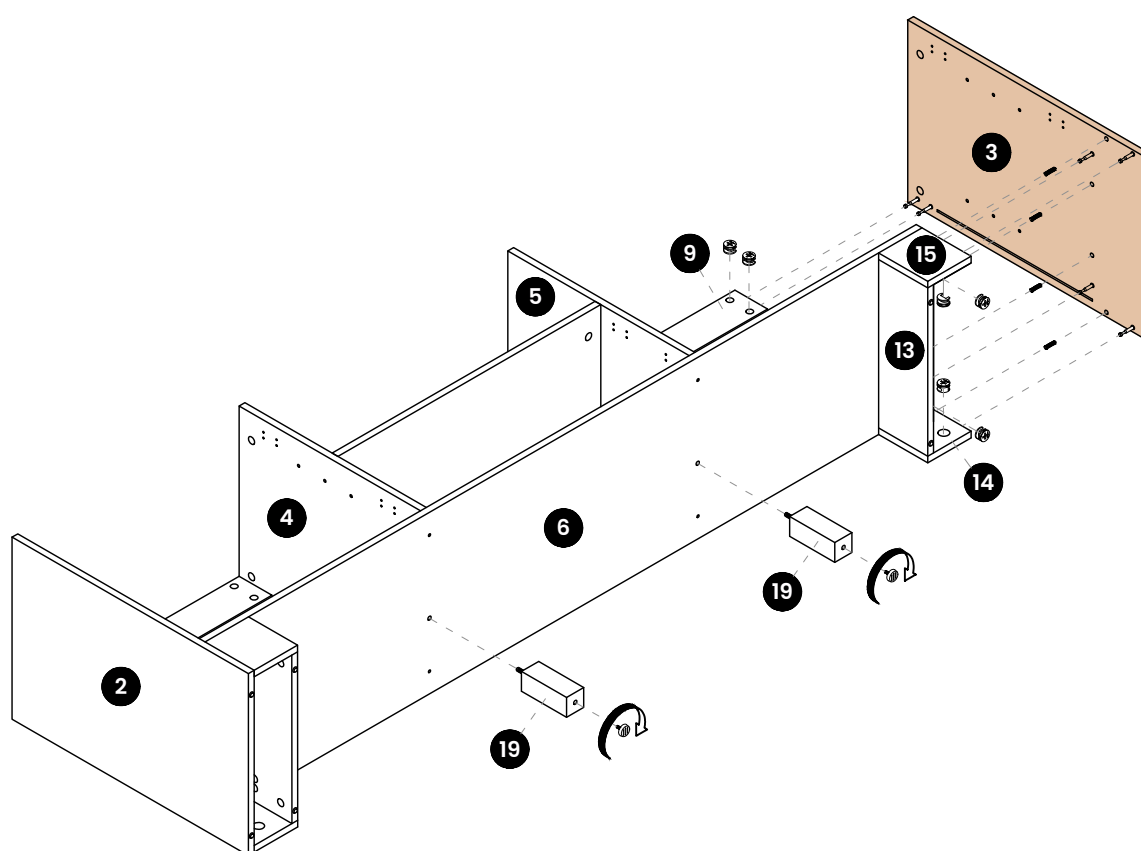



STEP 14



B X10



  C X8

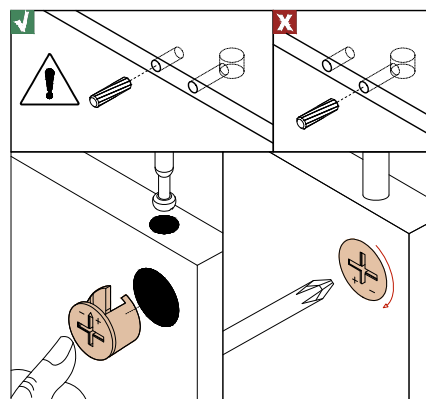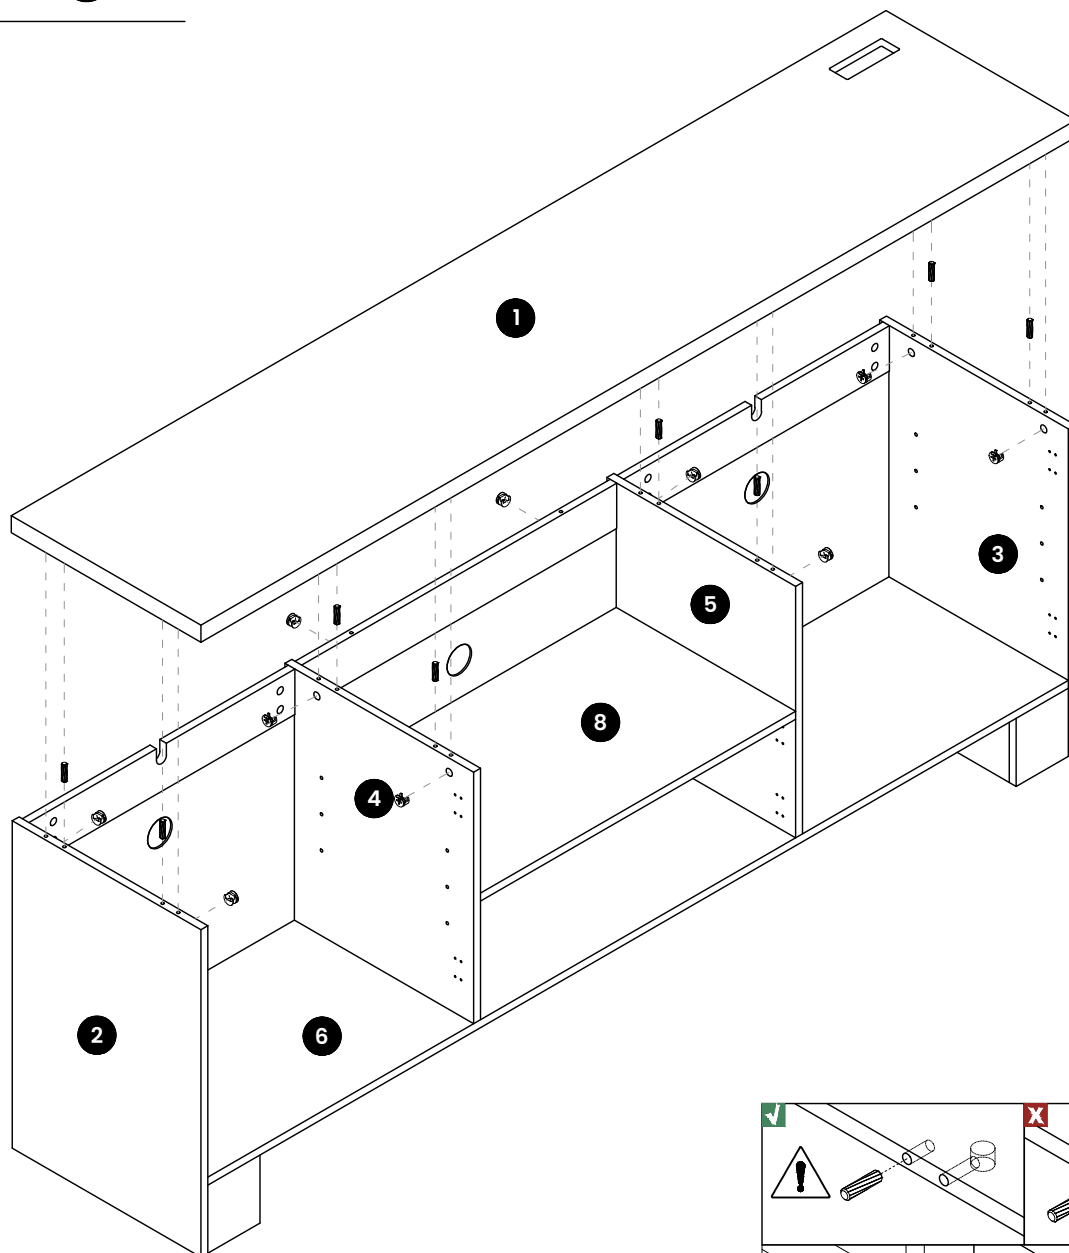


STEP 15





J X1



 
K X2

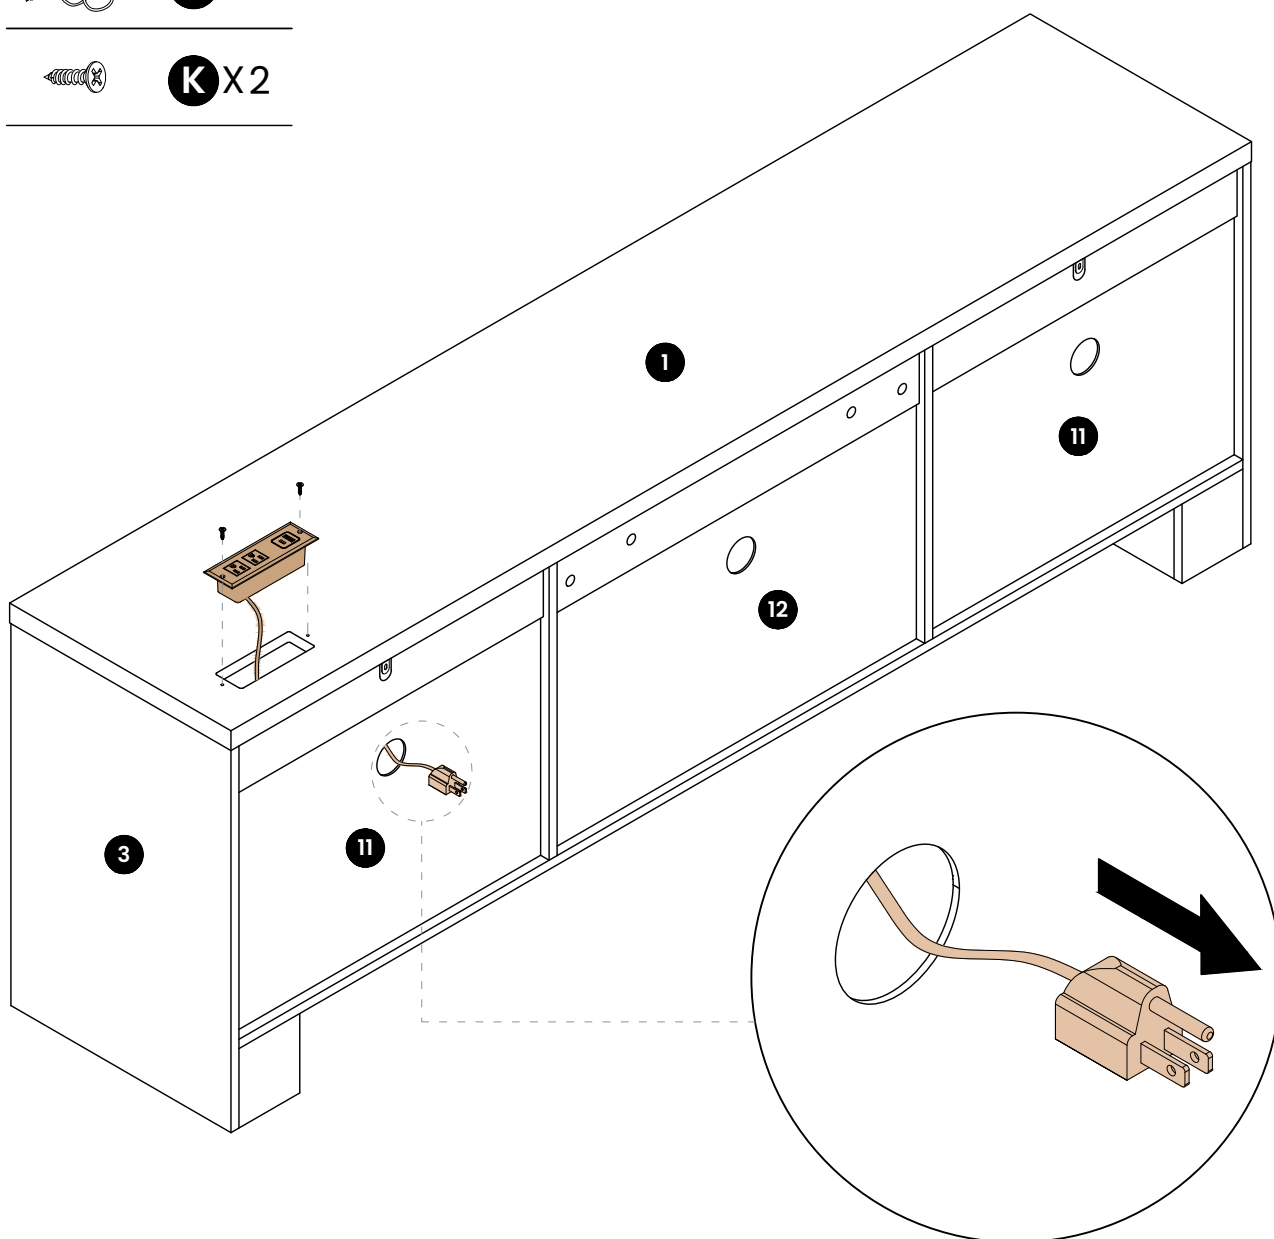

  STEP 16

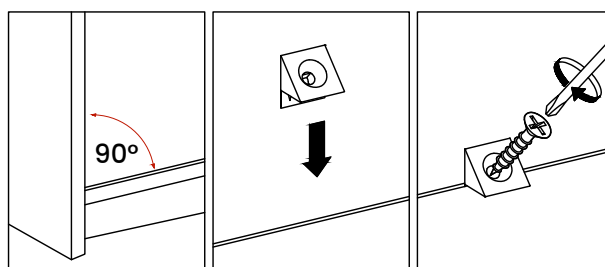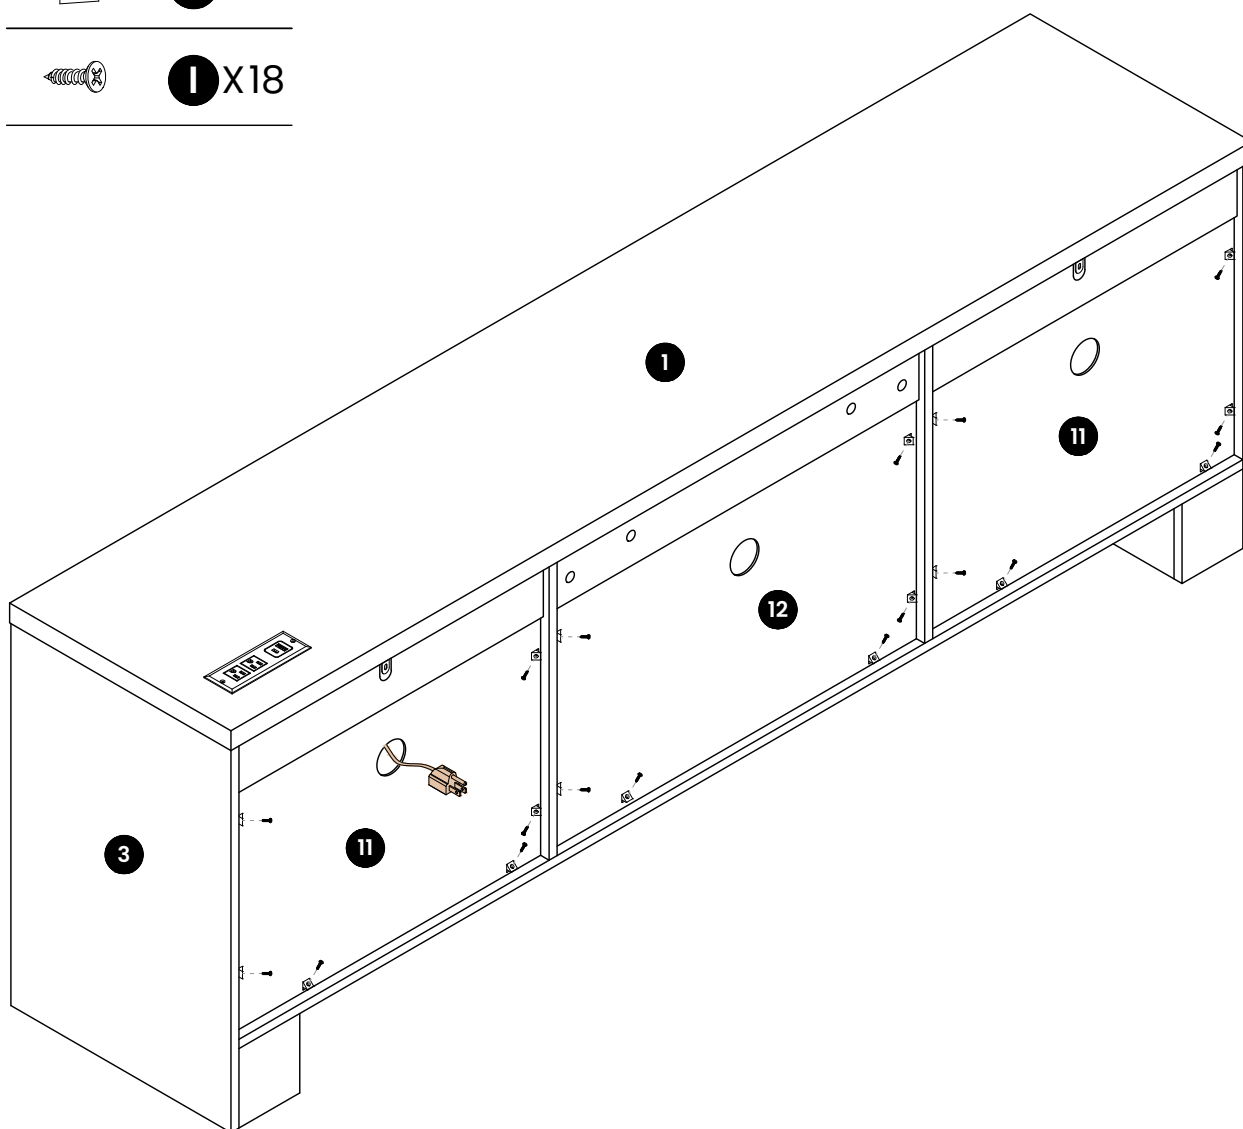**H** X18**I** X18

 STEP 17




Wall-Mounted Installation


Step 1: Identify the correct location for the anti-tipping device on the wall and make a clear mark.

Step 2: Drill a hole, then fix the expansion plug firmly in the wall.

 Step 3: Use screws to attach the L-shaped angle bracket to the wall.

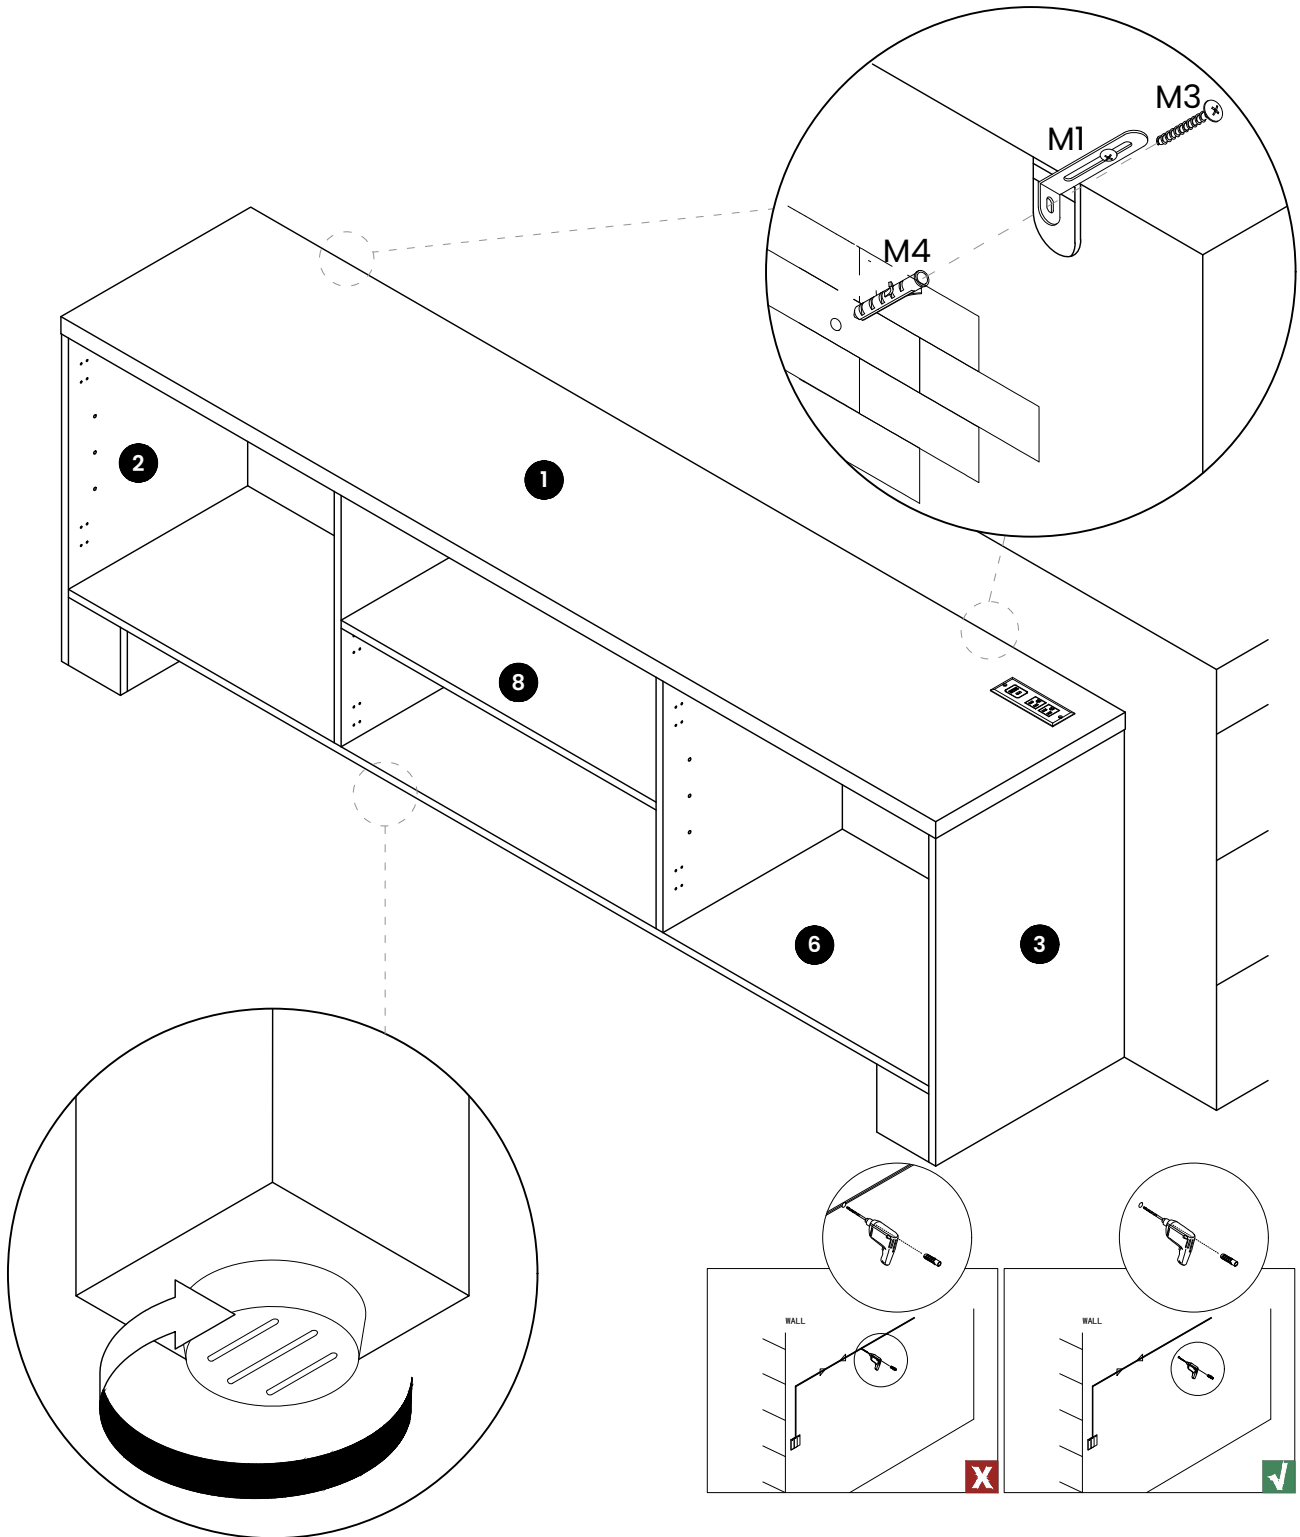







 
STEP 18



E X12



       
F X24

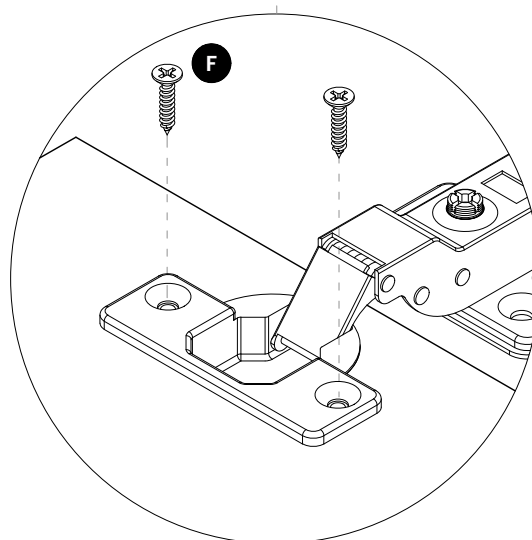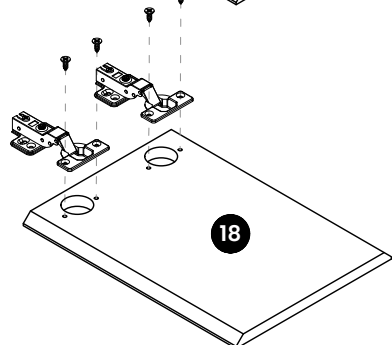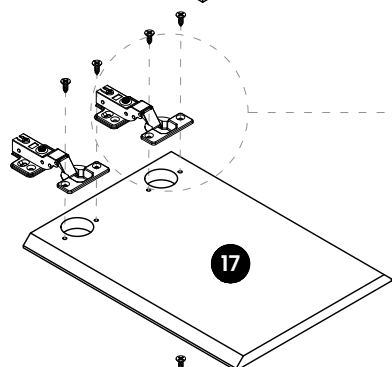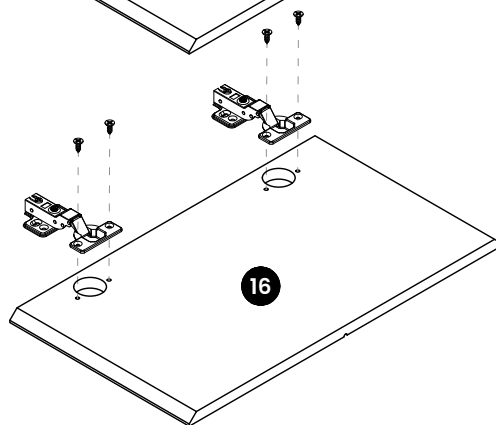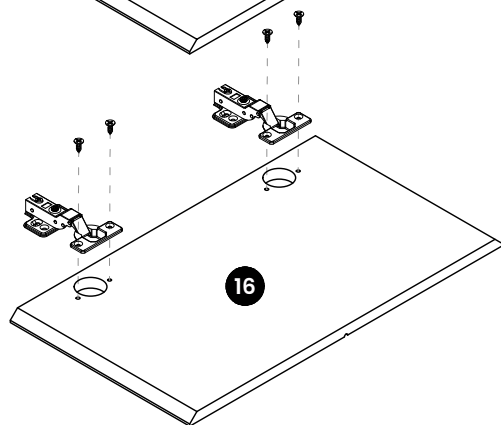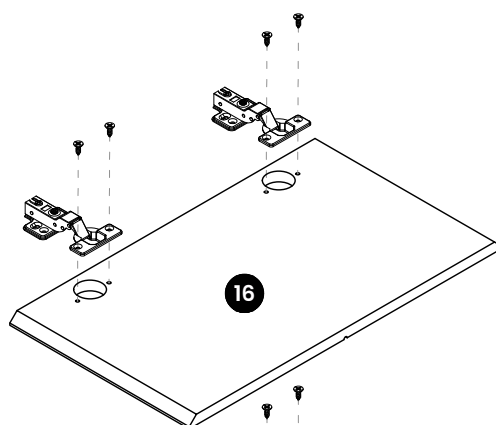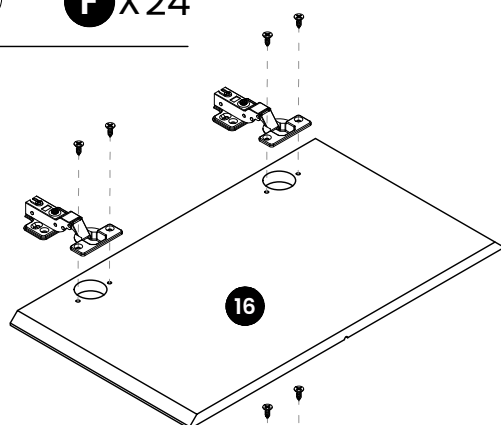

STEP 19



 F X48

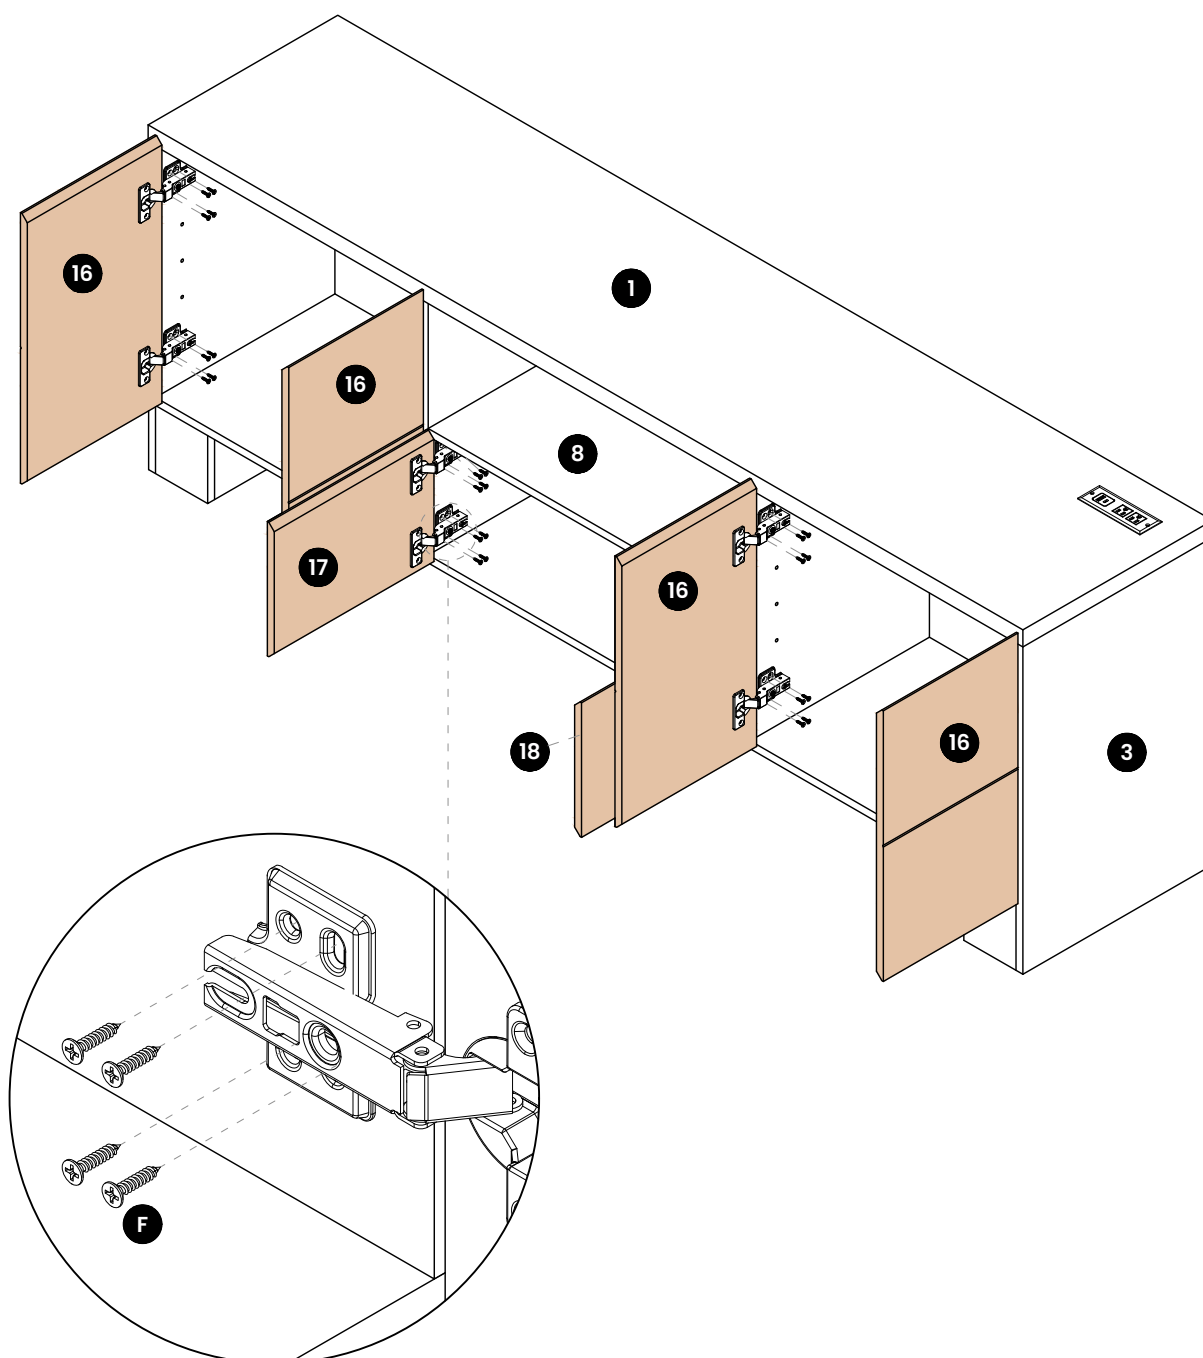




STEP 20



G X8




   N X44

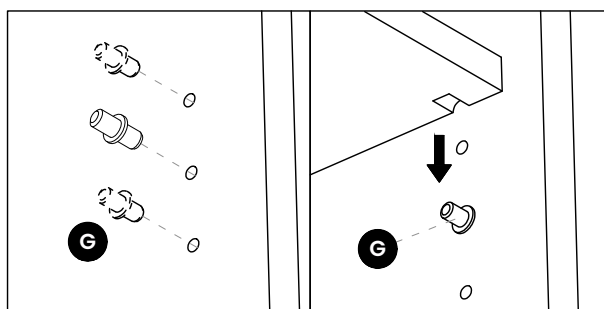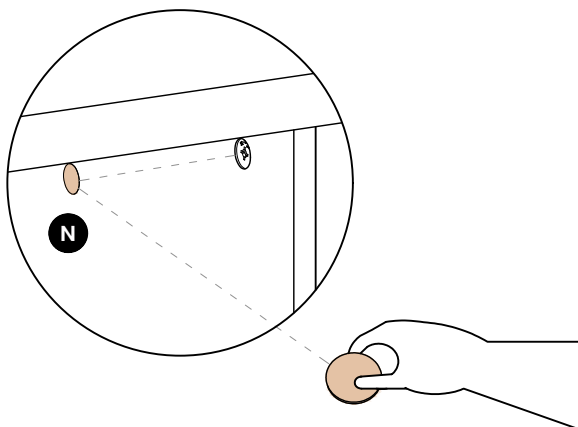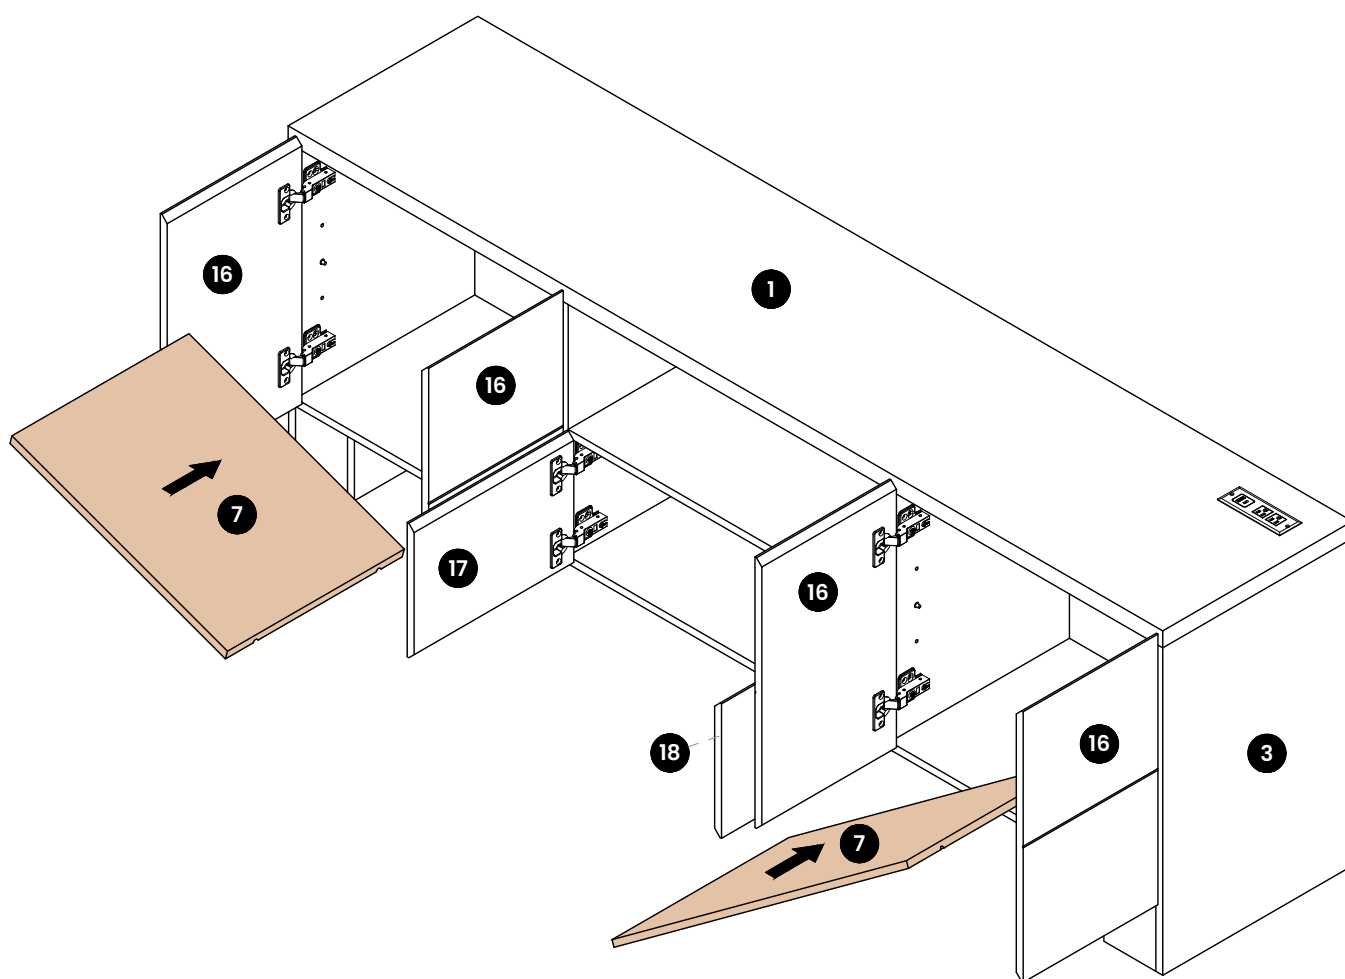


The ways to adjust the door

 - Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.

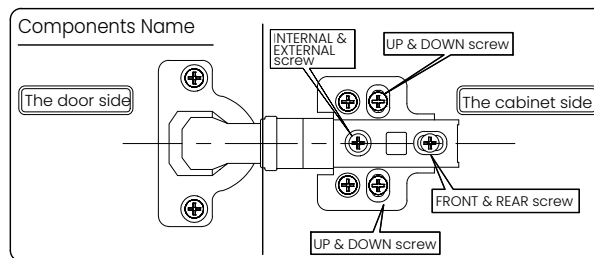


When door is crooked

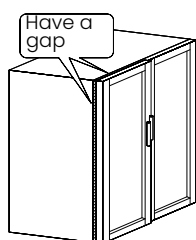 


Please take the following steps to adjust first.

 - 1 Rotate the "front and rear screws" to the left

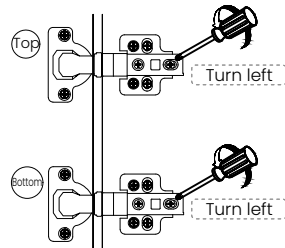


※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.

 
- 2 Push the door to the cabinet

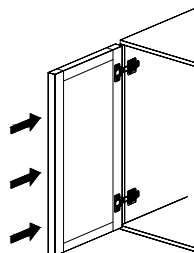

 
- 3 Rotate the "front and rear screws" to the right

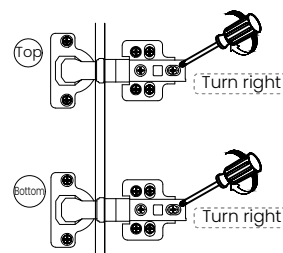


When door is leaning

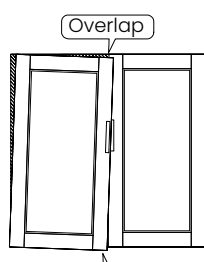 

 
- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

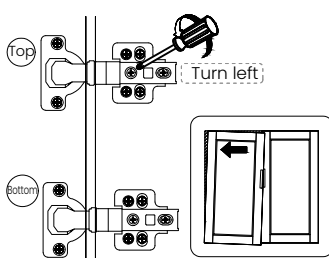


Protruding to the upside

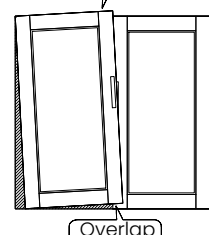 




 
- 1 Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

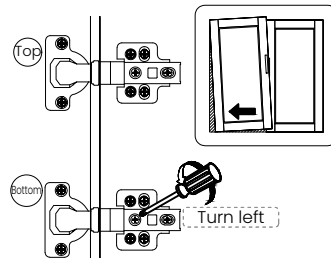

When 2 doors are not tight

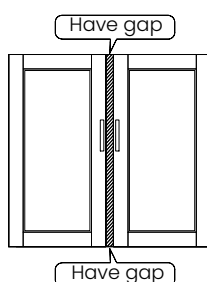 


    - 1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

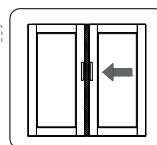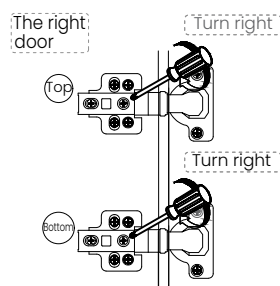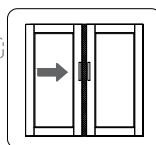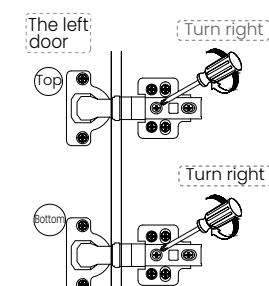


※ If the 2 doors are overlap, please turn the "internal & external screw" to the left.

 
When the door is higher on top

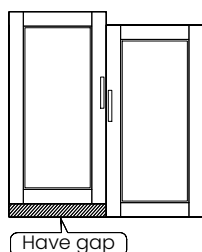


- 1 Turn "up & down screw" to the left

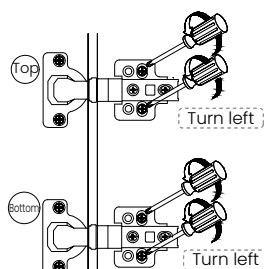 

 - 2 Lower the door's height so that 2 doors are of the same height.

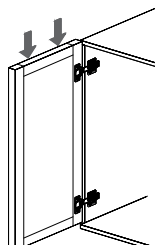

- 3 Turn "up & down screw" to the right

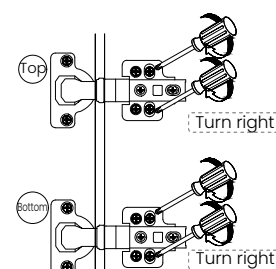 

※ If the door is lower on bottom, please lift up the left door slightly on step 2



After-Sales Service Hotline: (800) 661-5928