
Assembly Instructions

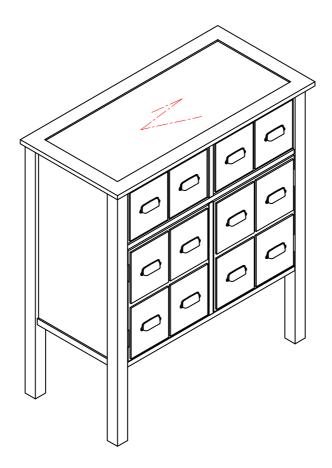

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY O O O O DIFFICULT

Tools Required For Assembly:

Allen Wrench

(Included)

Phillips Screwdriver




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

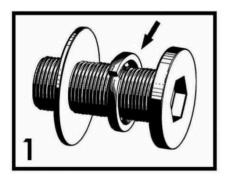


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

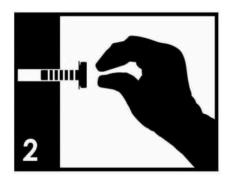


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

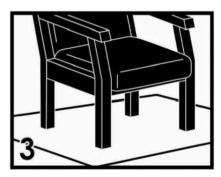


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

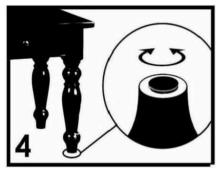

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

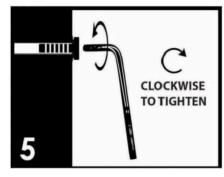

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

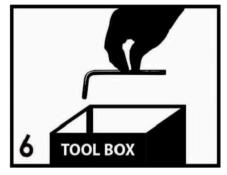


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

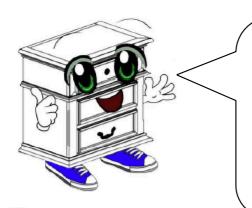


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

MD

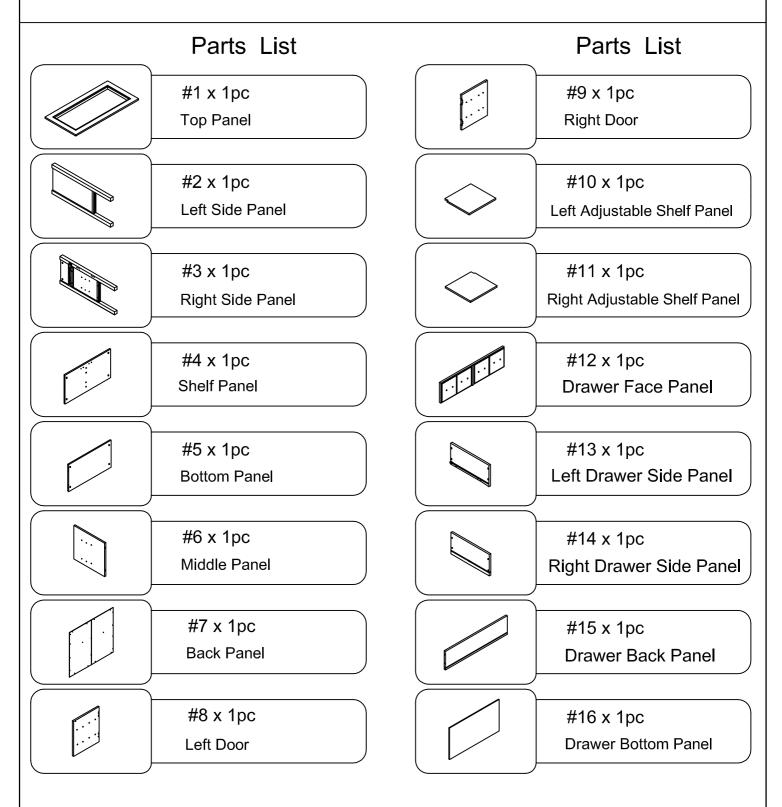

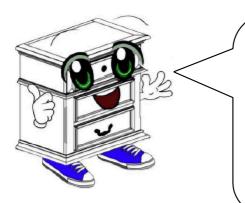


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

MD

 Parts List



#17 x 1pc Glass Top

Hardware List



#A x 16pcs Cam bolts



#B x 16pcs Cam lock



#C x 16pcs Wood Dowel



#D x 28pcs Screw (ϕ 1/8" x 12)




#E x 8pcs Screw (\$\phi 5/32" x 25)



#F x 12pcs
Knob



#G x 24pcs Bolt \$5/32"x3/4"

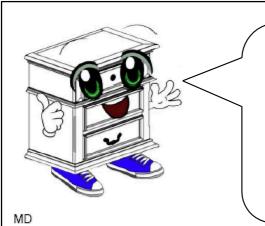

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List

#H x 2pcs Magnet Plate

611111

#I x 30pcs Screw (Ø1/8" x 12)



#J x 8pcs Shelf Pin



#K x 4pcs Hinge Hardware List




#L x 2pcs Magnet




#M x 8pcs Adhesive Pad




#N x 2pcs
Tilting Prevent Screw

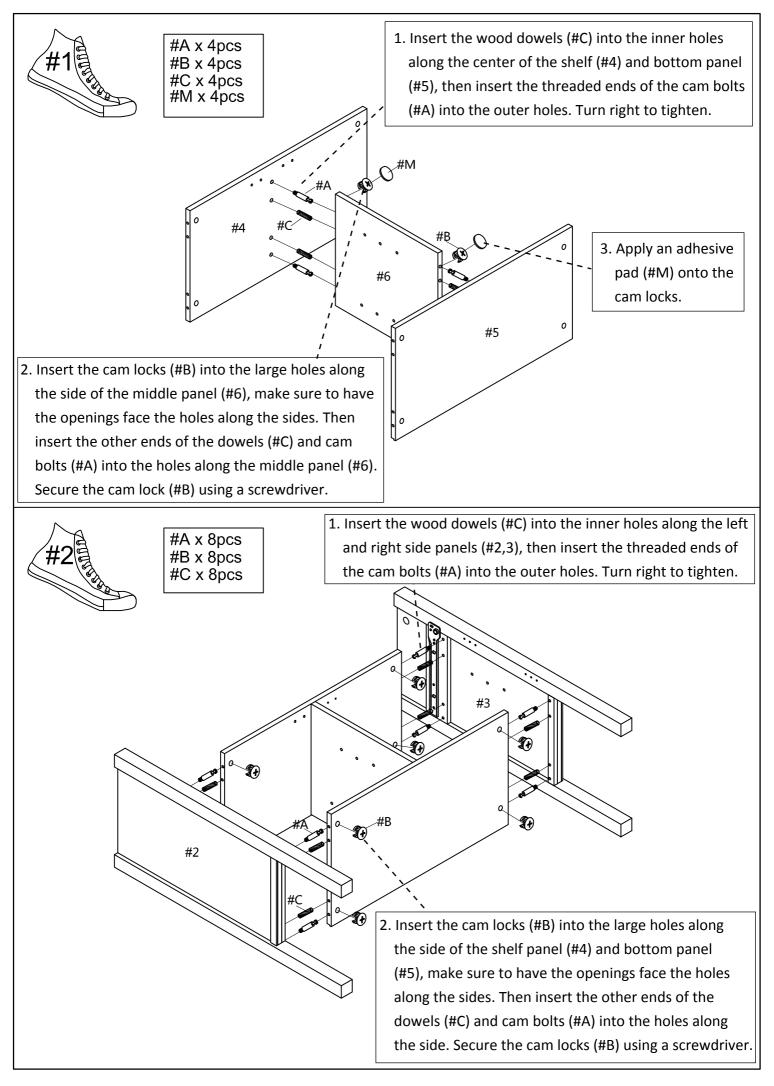


Page 6 of 10

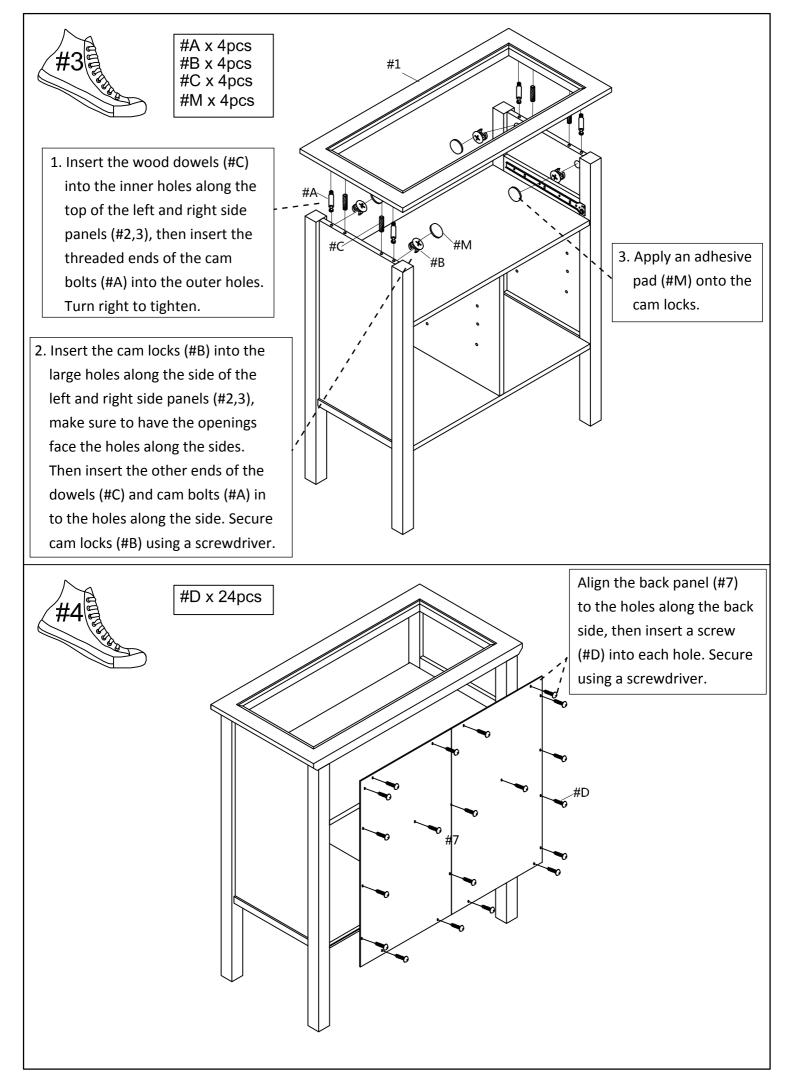


Page 7 of 10

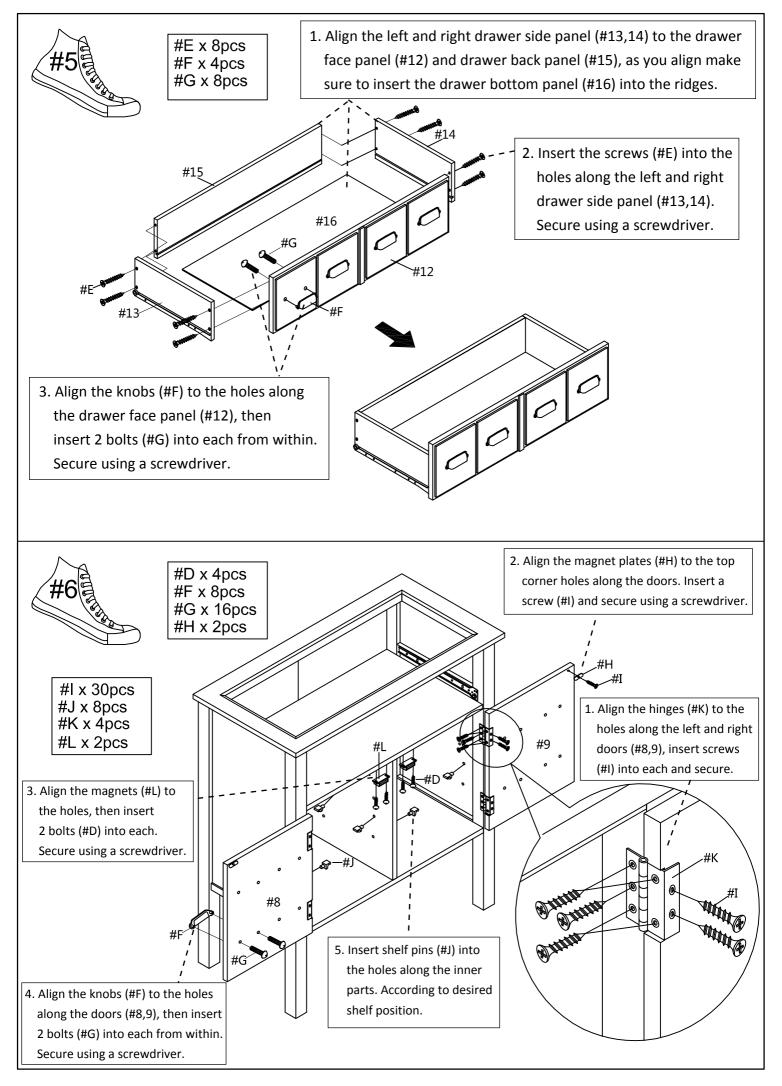

Page 8 of 10

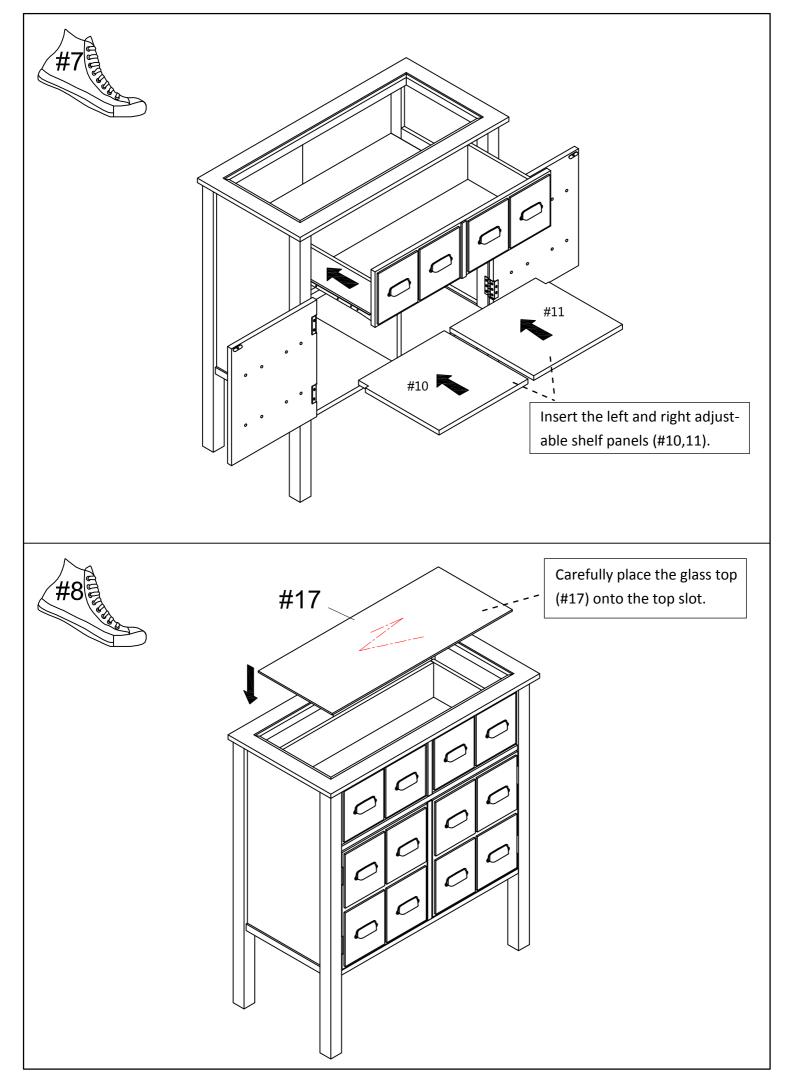

Page 9 of 10

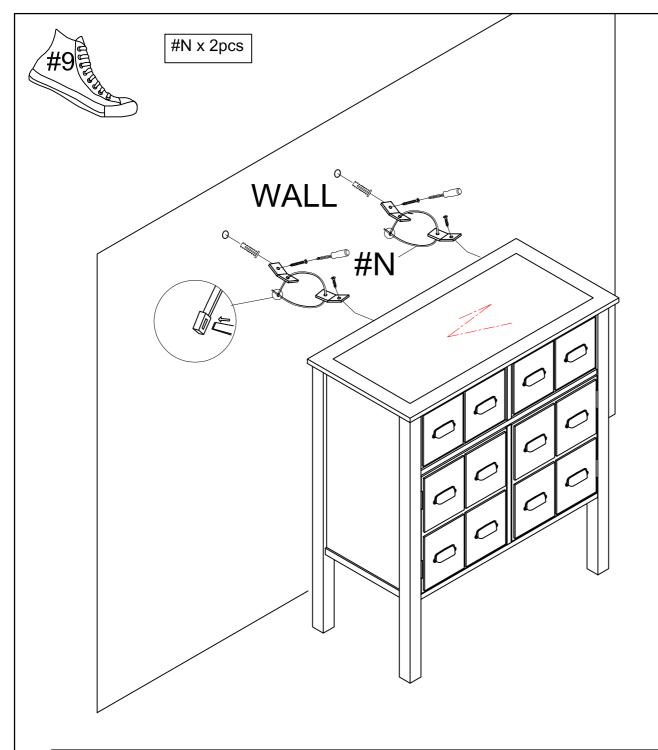

- 1. Drill a hole along the wall slightly smaller than the plug, then insert the plug until fully secured.
- 2. Align a bracket to the plug, then insert a long screw and secure. After that align the other bracket to the back of the assembly and insert a small screw. Secure using a screwdriver.
- 3. Secure the strap accordingly.

x2

ASSEMBLY IS COMPLETED