

ASSEMBLY INSTRUCTION

LED ROUND DINING TABLE

A Sheet Iron



1 pc
14.5 cm

B Glass Top



1 pc
Ø 90cmX0.8cm

C Electronic Box



1 pc
13.5 cm

D Metal Tube



1 pc
660cmX50cm

E Metal Plate



1 pc
Ø 60cm

F Steel with thread on both ends



1 pc
72 cm

G Washer



1 pc
60 cm

H Nuts





1 pc
5/8"

I Wrench




1 pc

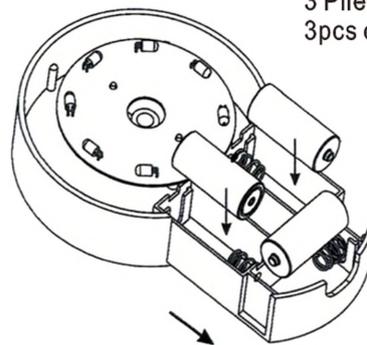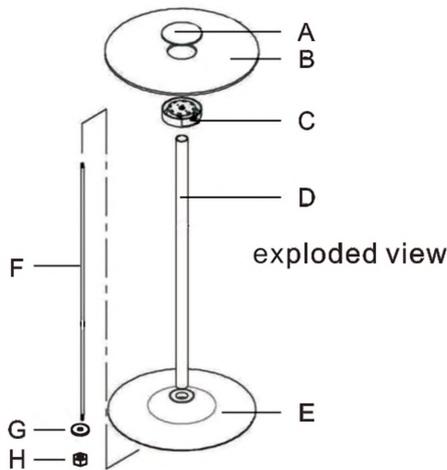

3 Piles:C1.5V
3pcs of battery: C size - 1.5V


❖ **Battery is not included**

(Battery Type : 3 of C size - 1.5v battery are needed)

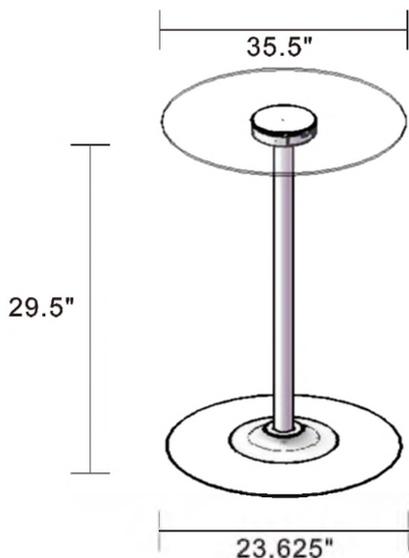


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** To screw Steel with thread on both ends (F) to Sheet iron (A).

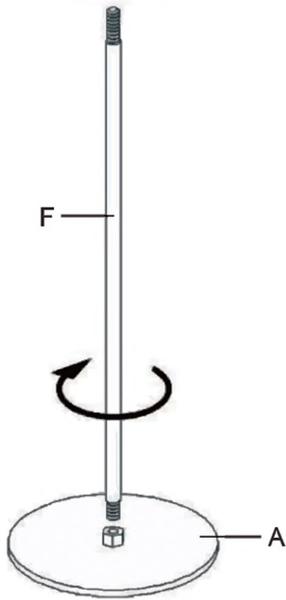


- 2** To inset Glass top (B) and Electronic box (C)

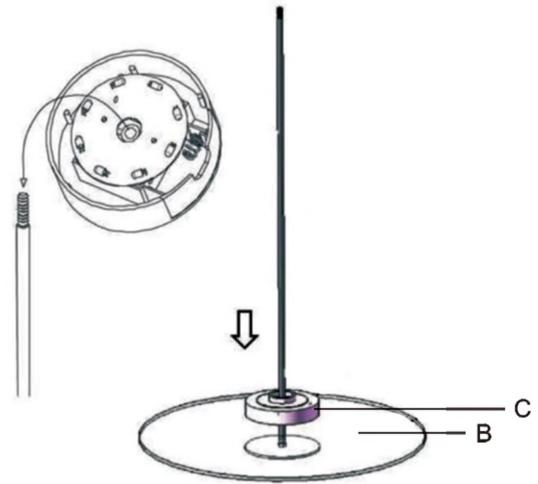

- 3** To inset Metal tube (D) to the finished portion as the 1st stage, then mount Metal plate (E).

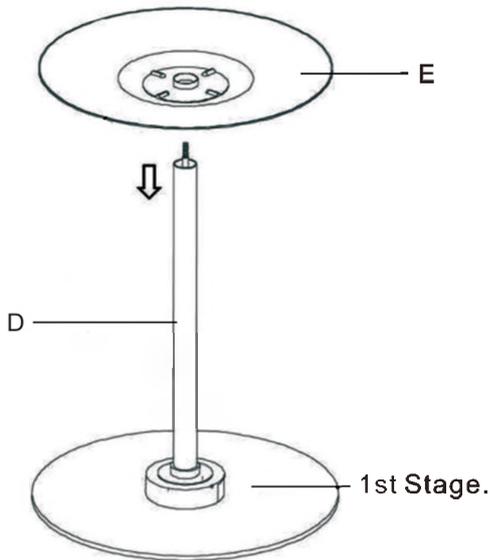

- 4** To put Nut (H) then tighten Washer (G) with Wrench (I).

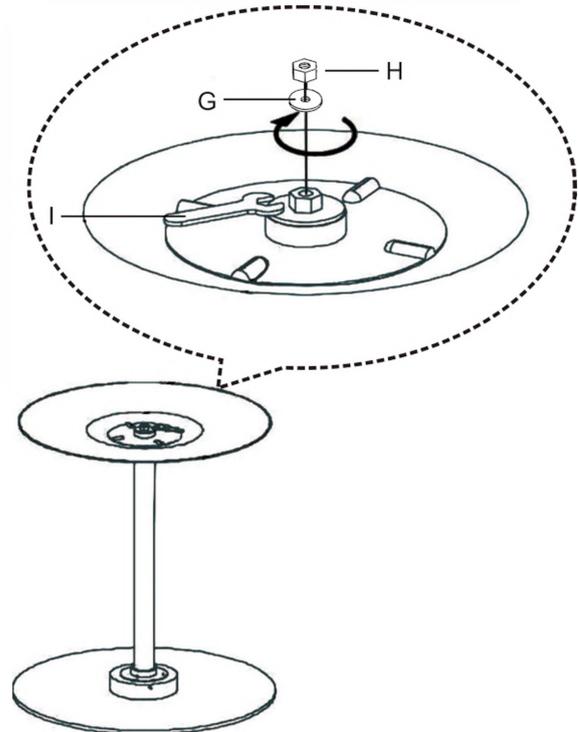

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.