




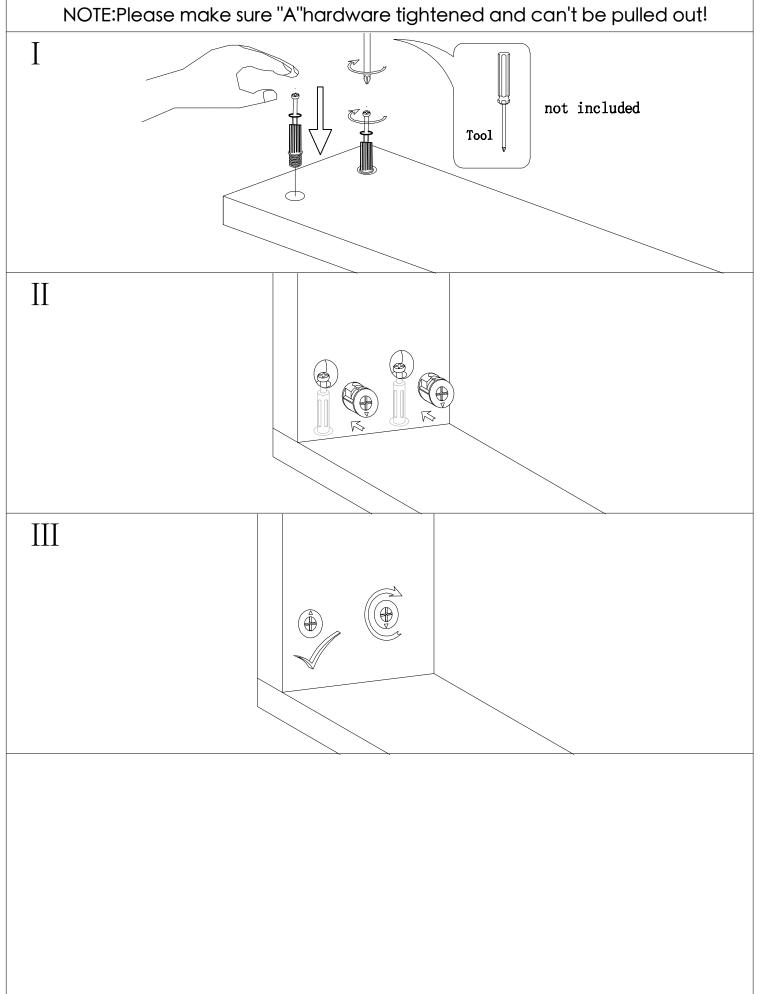



Hardware installation demonstration

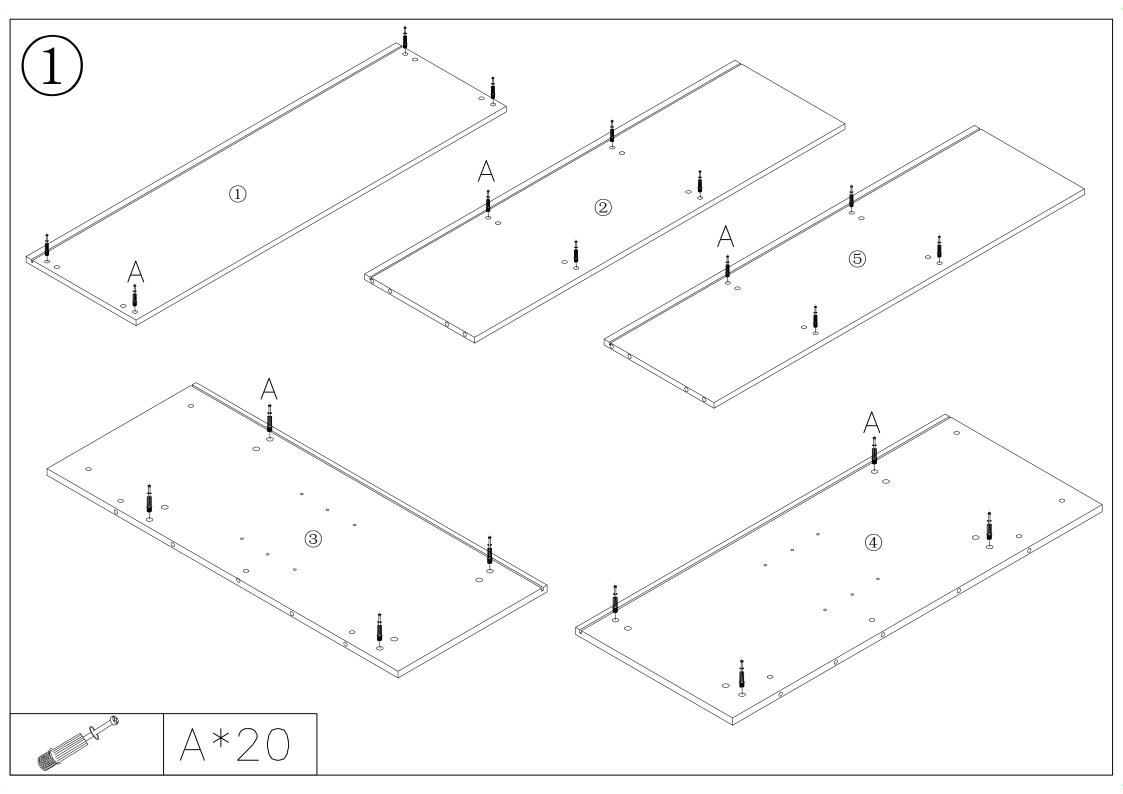


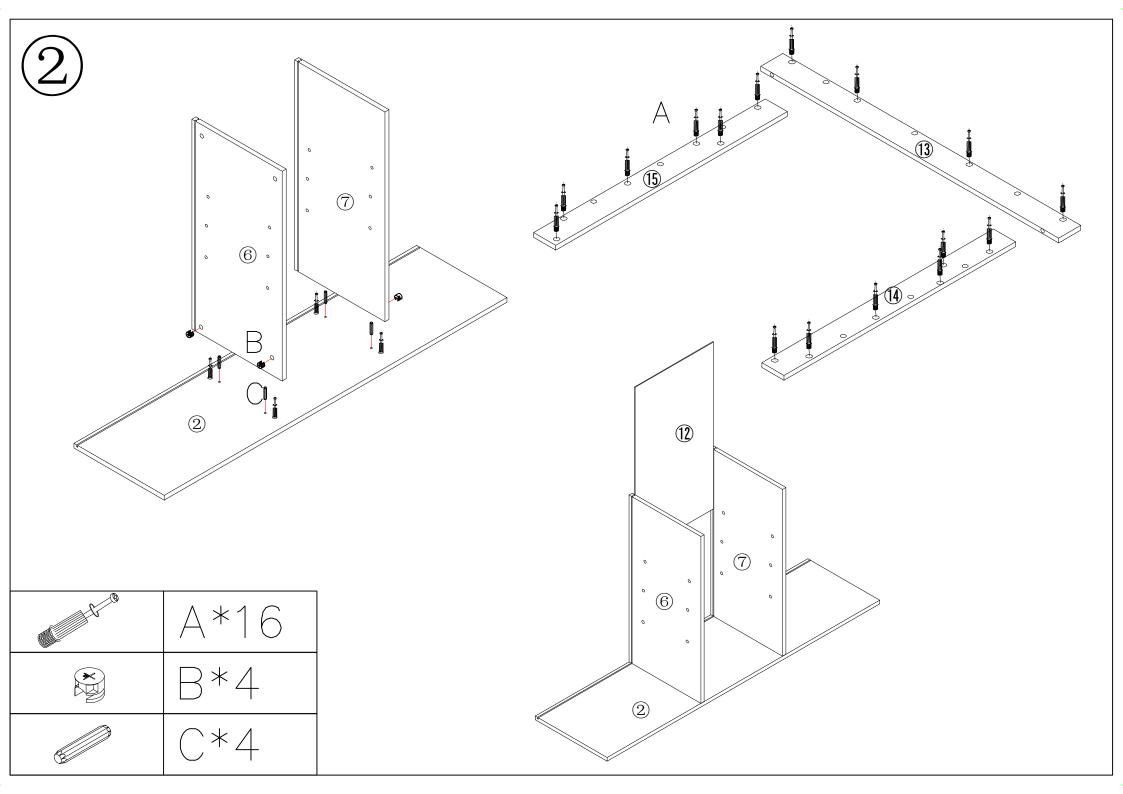





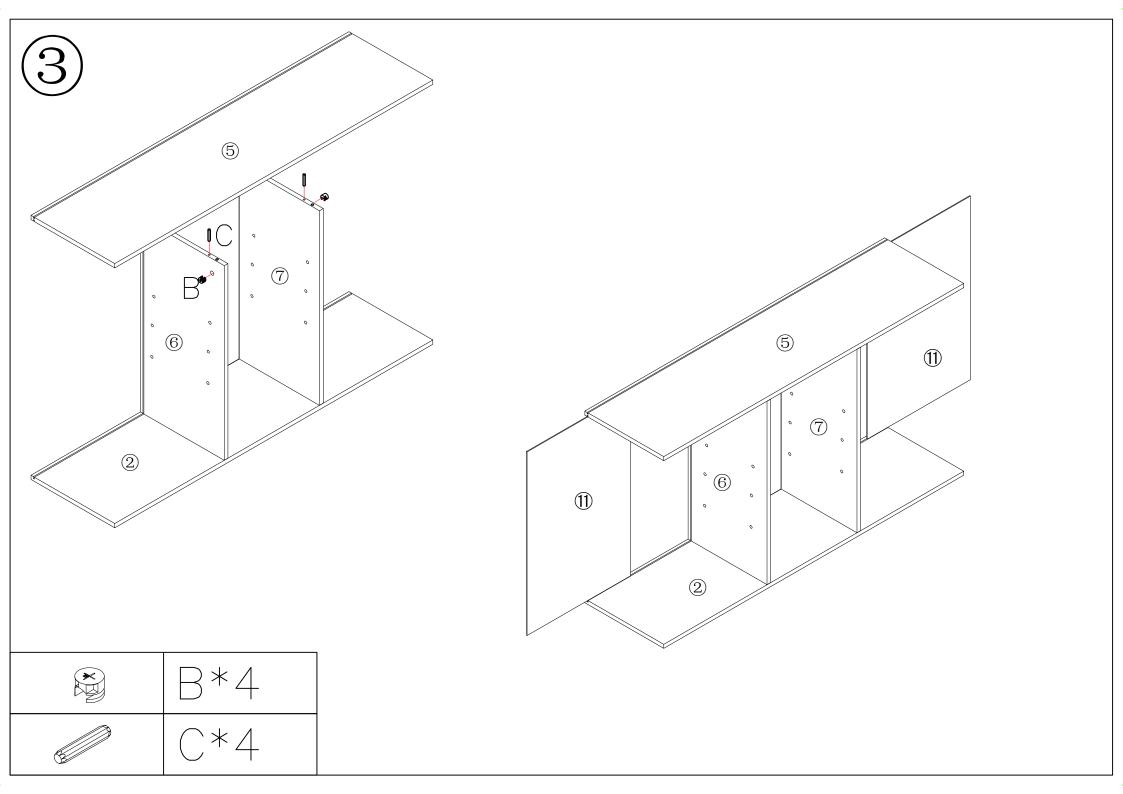


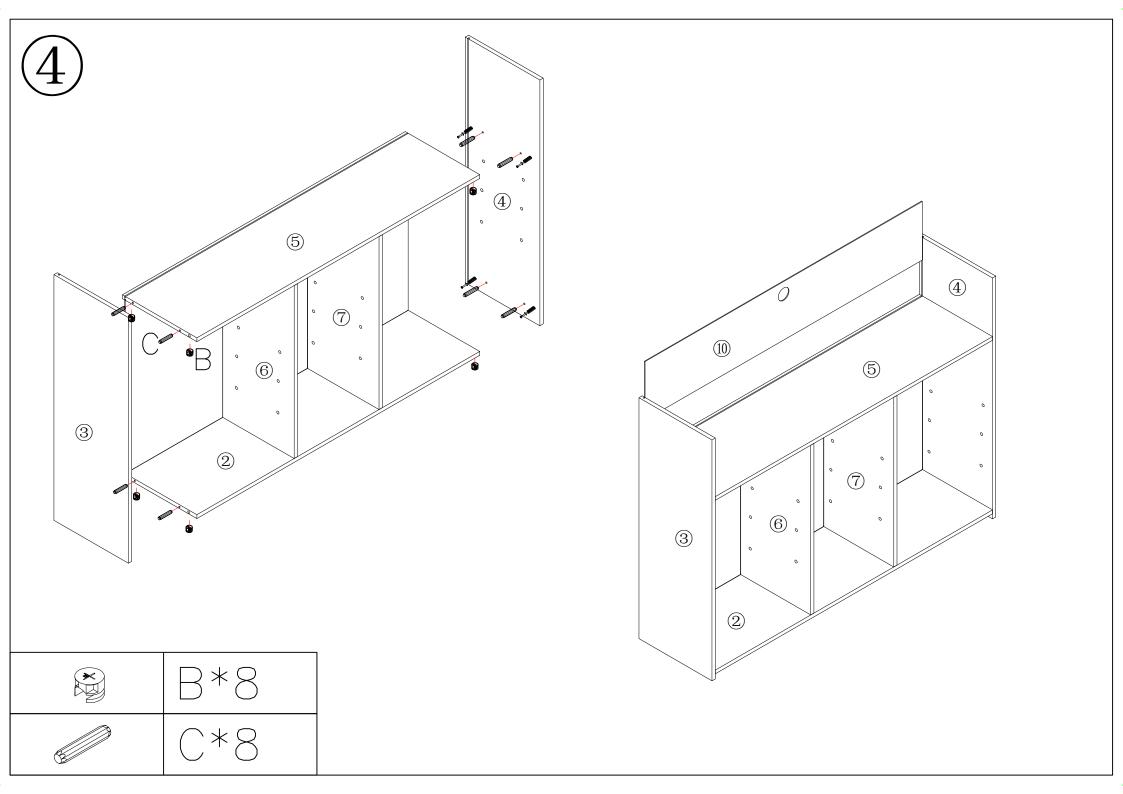

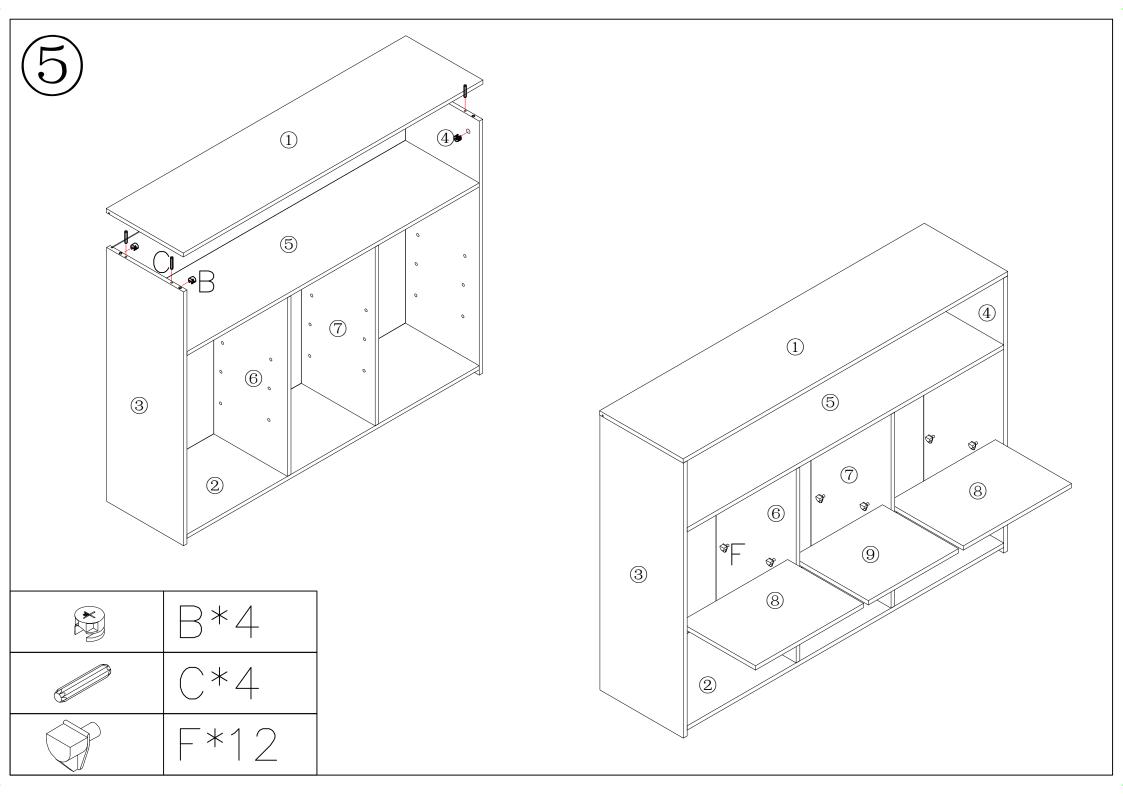

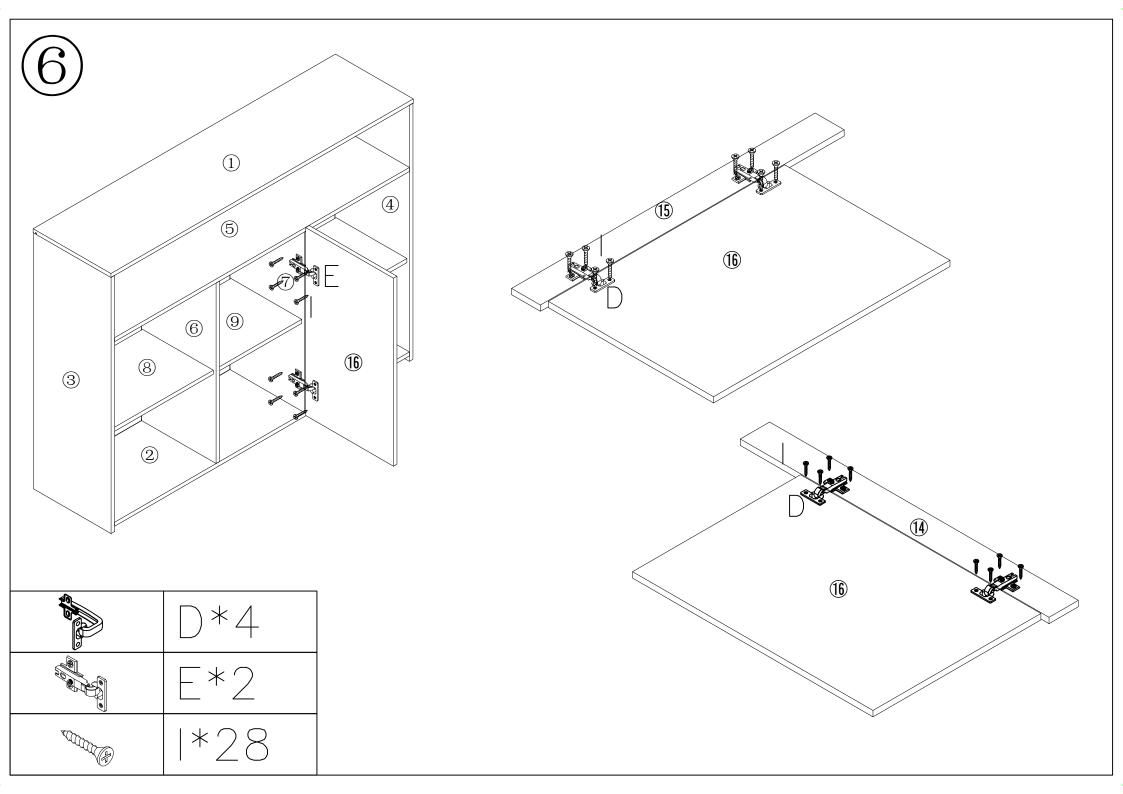

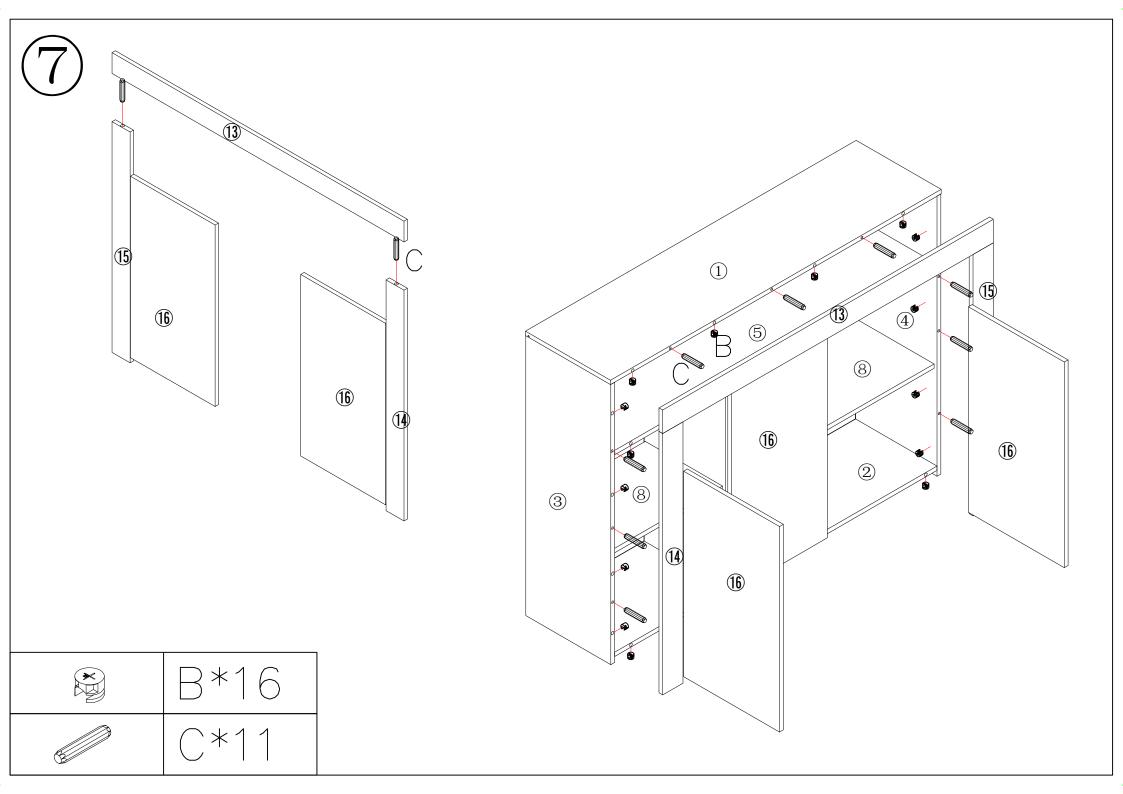

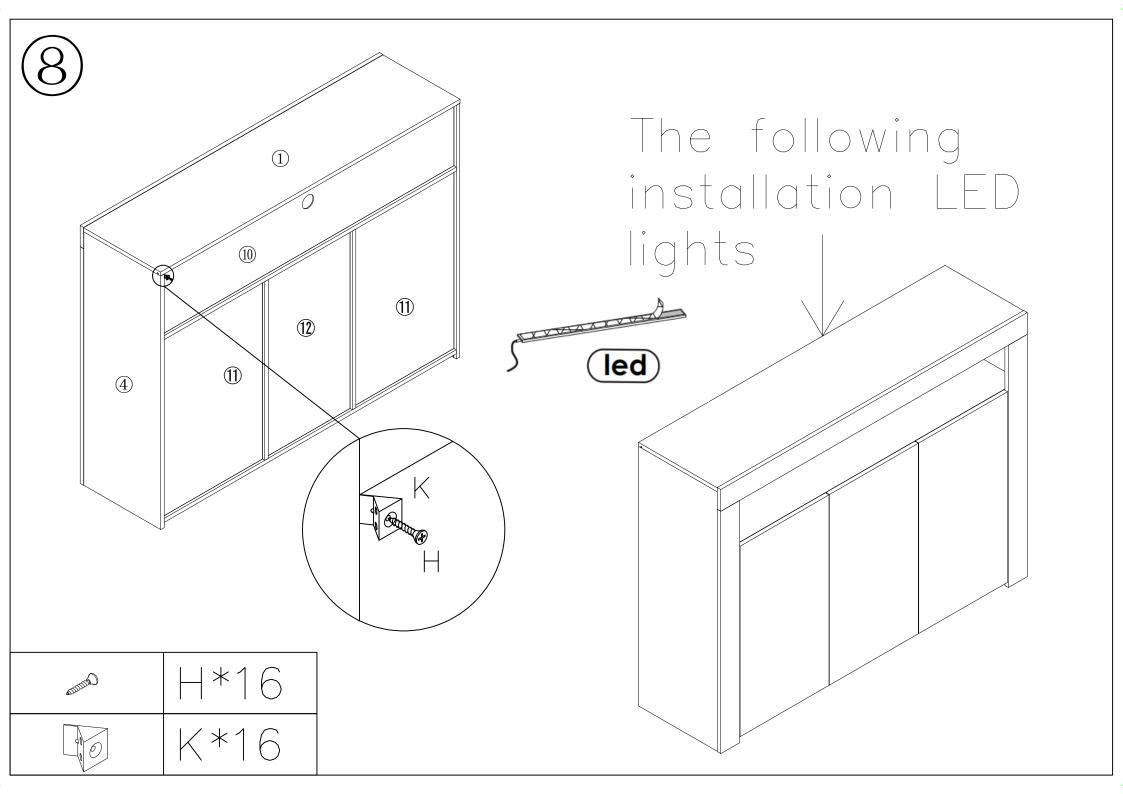

LED Light

If you can't let the lights work successfully, please check the following:

- 1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
- 2. Please check the remote control, it need you to tear down the plastic septum before use it.
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

