



WARNING

FIRE AND EXPLOSION HAZARD.
SEVERE BURNS OR DEATH CAN OCCUR.
NEVER ADD FUEL TO A HOT DEVICE.

WARNING

- 1- Remember fire pit fuel is highly flammable and extremely dangerous if not handled according to instructions. Be sure to read this safety instruction prior to operate the fire pit.
- 2- The decorative fire pit should be placed on a level ,stable and suitable surface,so that it will not tip over.
- 3- Use 91% or higher isopropyl alcohol or more than 97% ethanol as fuel, Never fill the reservoir higher than 1 inch from the edge.
- 4- Do not use gasoline or other flammable vapors and liquids in the fire pit.
- 5- Keep a safe distance from the inflammable materials, The minimum distance to loose the textile ,such as curtains, should be 40inch and there should be 59inch free space above the burner opening.
- 6- Flame follows fuel, spilled fuel should be cleaned with a dry paper towel or a rag **before** lighting.
- 7- Use only an extended lighter or long match to ignite
- 8- Never touch the glass shield while in use, Hot glass will cause burns and injuries , Never refill, move or touch the fire pit while burning or when it is still hot.
- 9- Never leave children or pets unattended near the fire pit during use.
- 10- If lit fuel spills, suffocate to extinguish or spray with a fire extinguisher. Cover to extinguish out, Do not attempt to blow out.
- 11- Any cracked or broken glass shield must be replaced .Continuing use under this condition may cause injury.
- 12- The fire pit should never be activated, handled, or filled by minors.
- 13- Never leave a burning fire pit unattended.