

|                      |                                                                    |
|----------------------|--------------------------------------------------------------------|
| <b>Product Name:</b> | Snowman Family Trio on Sled with Lights Outdoor Holiday Decoration |
| <b>SKU #:</b>        | WHHD2128                                                           |

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

**CARTON CONTENTS:**

| Description        | Quantity |
|--------------------|----------|
| Set of 3 Snowman   | 1        |
| Set of 3 Bow Decor | 1        |
| Tool Bag           | 1        |

**Before You Start**


1. Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
2. Retain the instructions for future use and save the carton for storing your snowman decoration.

**Assembly and Instruction Procedure:**

Remove all packaging (i.e., cardboard or plastic) before beginning. We suggest unpacking the snowman decoration on a large cloth. Some of the snow flocking may come off during unpacking and assembling.

1. Assemble the sleigh sleds to the sleigh top by fixing the hooks, then attach it with the zip ties to make it steady.
2. Assemble the hands and hats to each snowman as shown.
3. Insert the giftbox and tree to the 2nd & 3rd snowman as shown.
4. Now finished as shown. Make sure the final assembly stable enough. For outdoor display, please secure with the garden stakes.

|                      |                                                                    |
|----------------------|--------------------------------------------------------------------|
| <b>Product Name:</b> | Snowman Family Trio on Sled with Lights Outdoor Holiday Decoration |
| <b>SKU #:</b>        | WHHD2128                                                           |

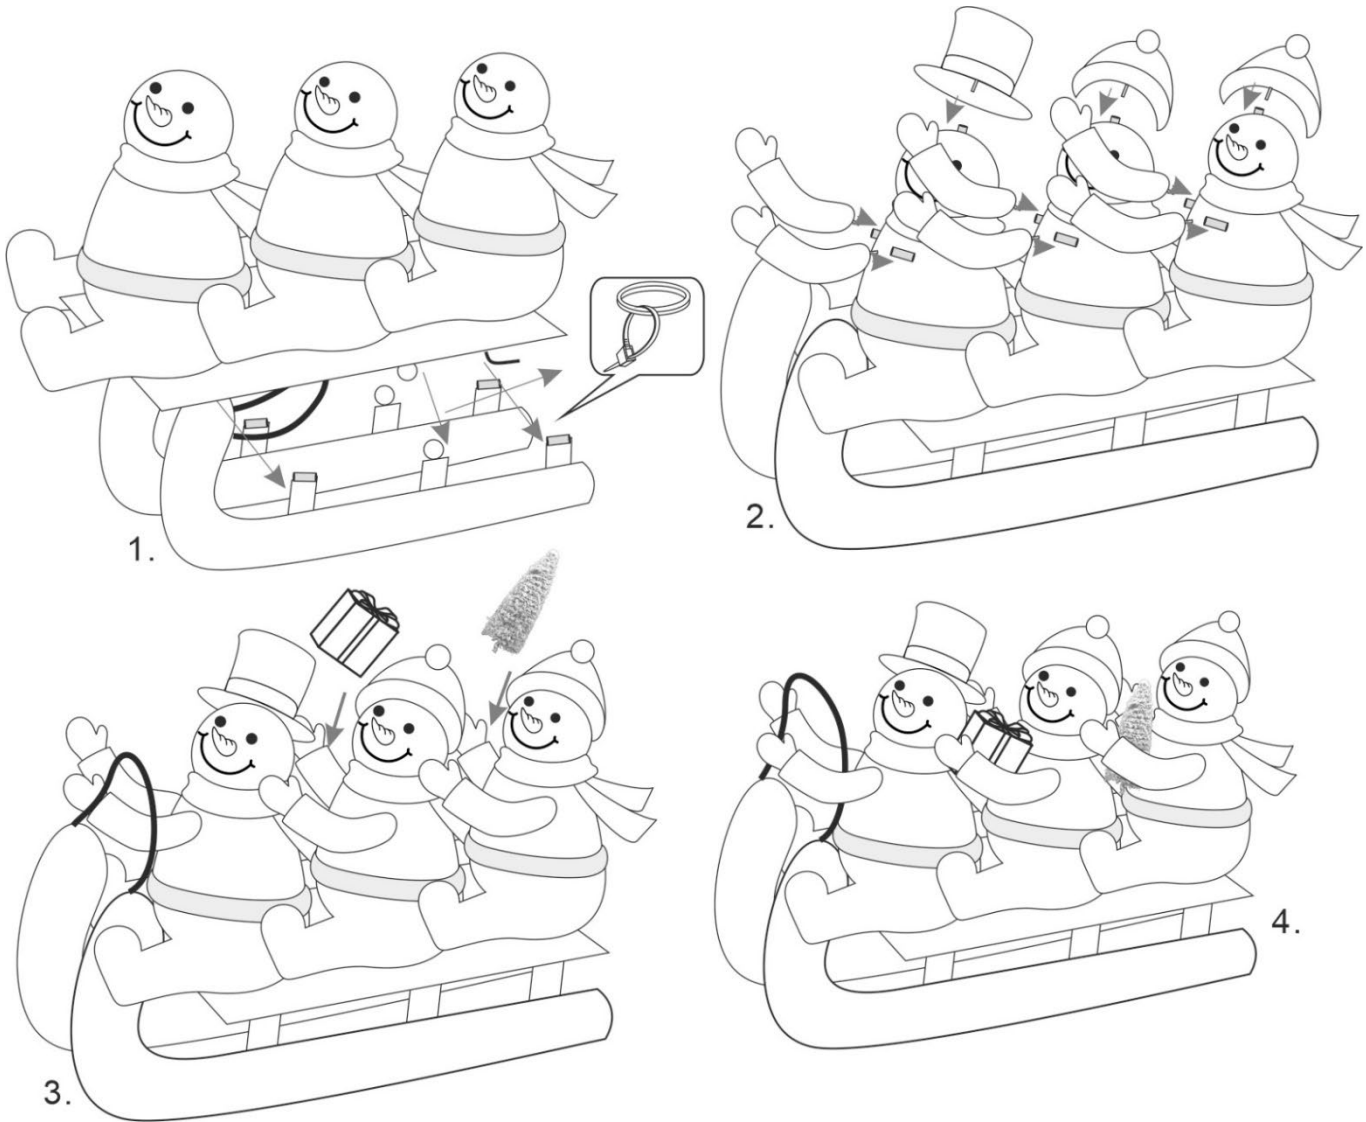

### Warnings:

1. Do not place the snowman decoration near fireplaces, candles, outdoor heaters, or other similar sources of heat.
2. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the snowman may fall or blow into.
3. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

### Storage:

1. Disassemble each part by reverse steps of the assembly.
2. Place the snowman back into the carton.
3. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).