

Installation and Operation Manual

Ceiling Fan with Lights



BEFORE YOU BEGIN

Read this manual carefully and completely, and keep it for future reference.

WARNINGS

To reduce the risk of electric shock, make sure electricity has been turned off at the circuit breaker or fuse box before installing.

All wiring must be in accordance with national and local electrical codes. Electrical installation should be performed by a qualified electrician.

The outlet box and ceiling support structure must be securely mounted and capable of supporting the fan.

 

To reduce the risk of personal injury, do not insert objects between rotating fan blades.



WARNING

- Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch.
- Doing so could result in damage to the ceiling fan's remote control unit.

Package Contents

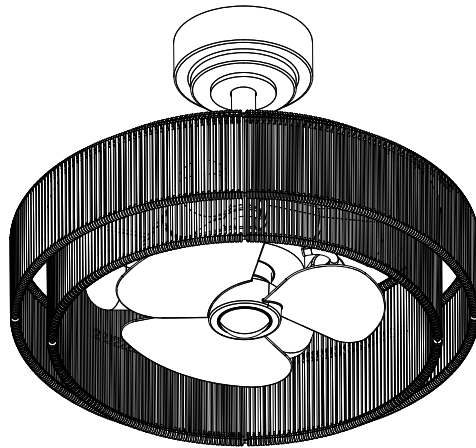


X2




X1



 X1




X2

 


X4

Installation Step


- 1** Open the package and check if all parts are included.

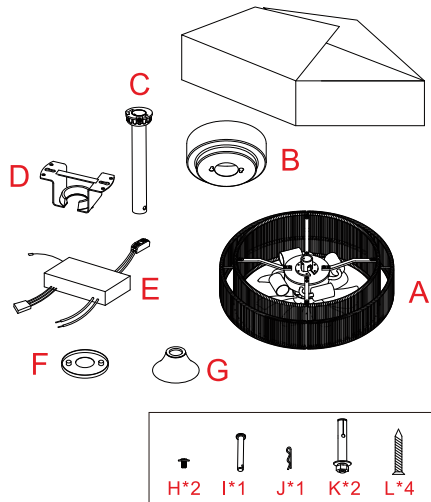


- 2** Combination suspension rod kit, as shown in the figure.

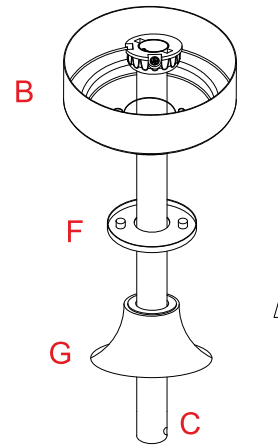


- 3** Thread the main line through the sling rod, then insert the sling rod into the sling head.

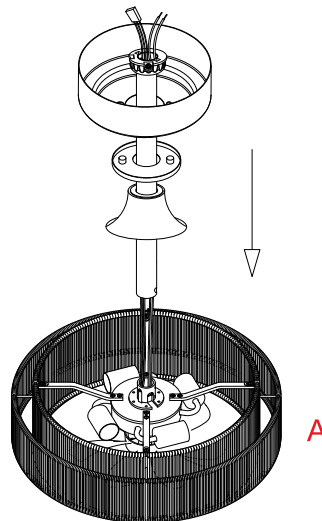


- 4** Insert the pin and tighten the screw

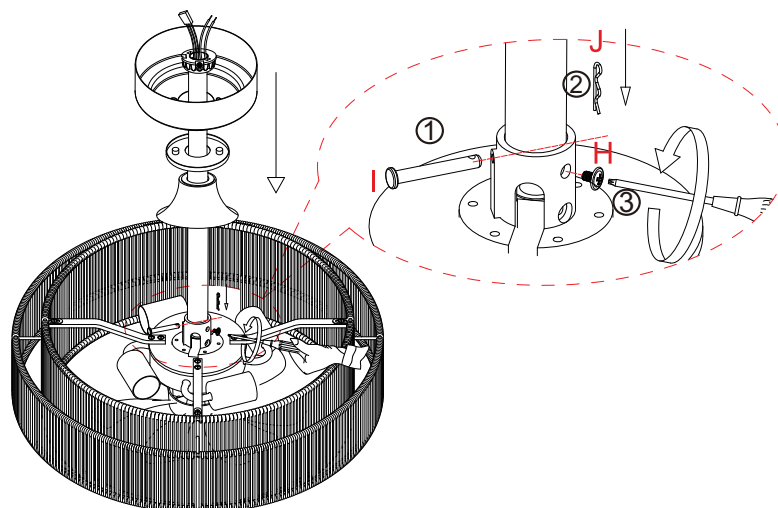

5 Fixed Bracket.

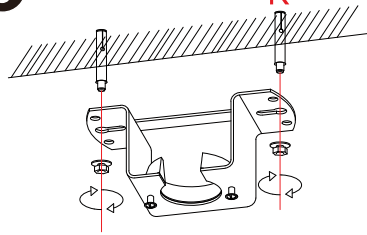


Concrete Ceiling

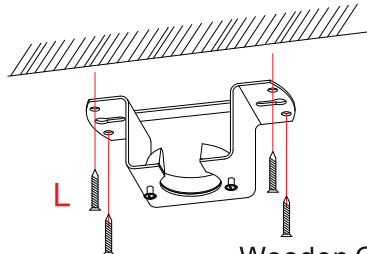


Wooden Ceiling


6 Hang the bracket in the corresponding slot.

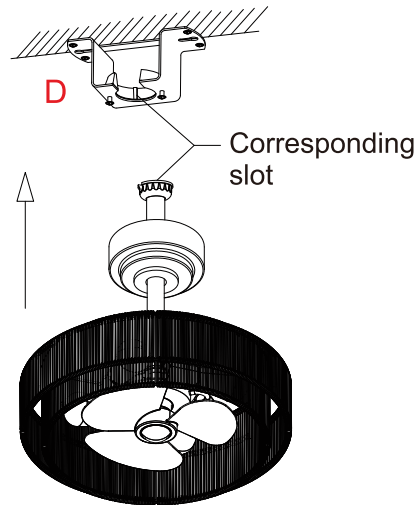


7 Connect the driver and the power supply as in the figure.

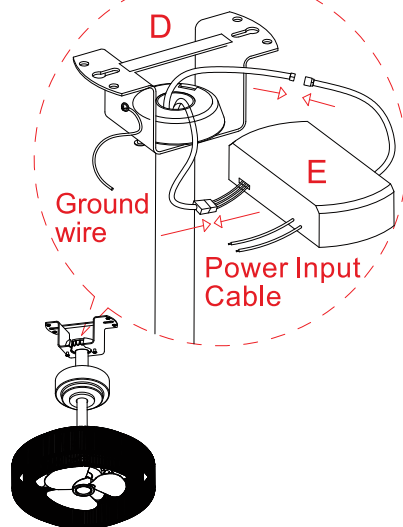


8 Secure the suspended bell

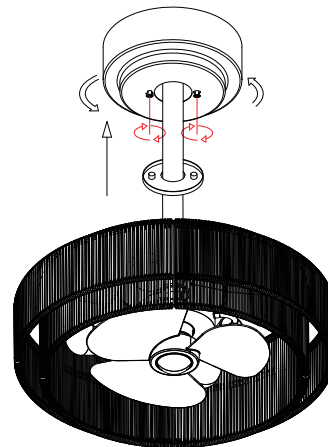



9 Twist on the bulb.

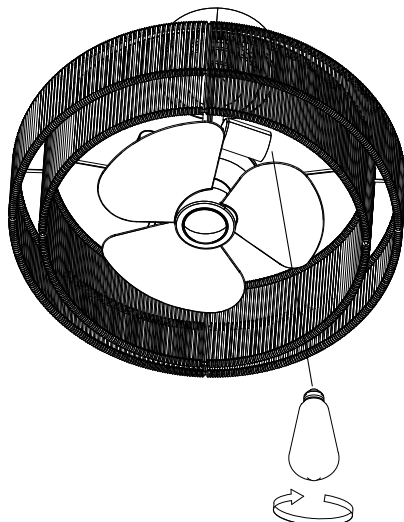

10 Installation Complete

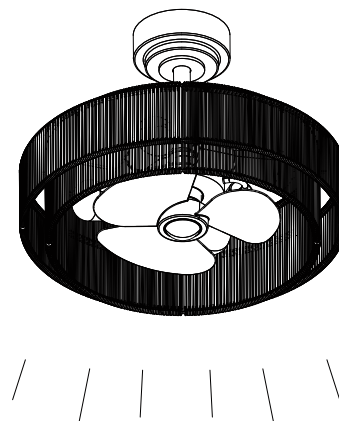

Remote Control

 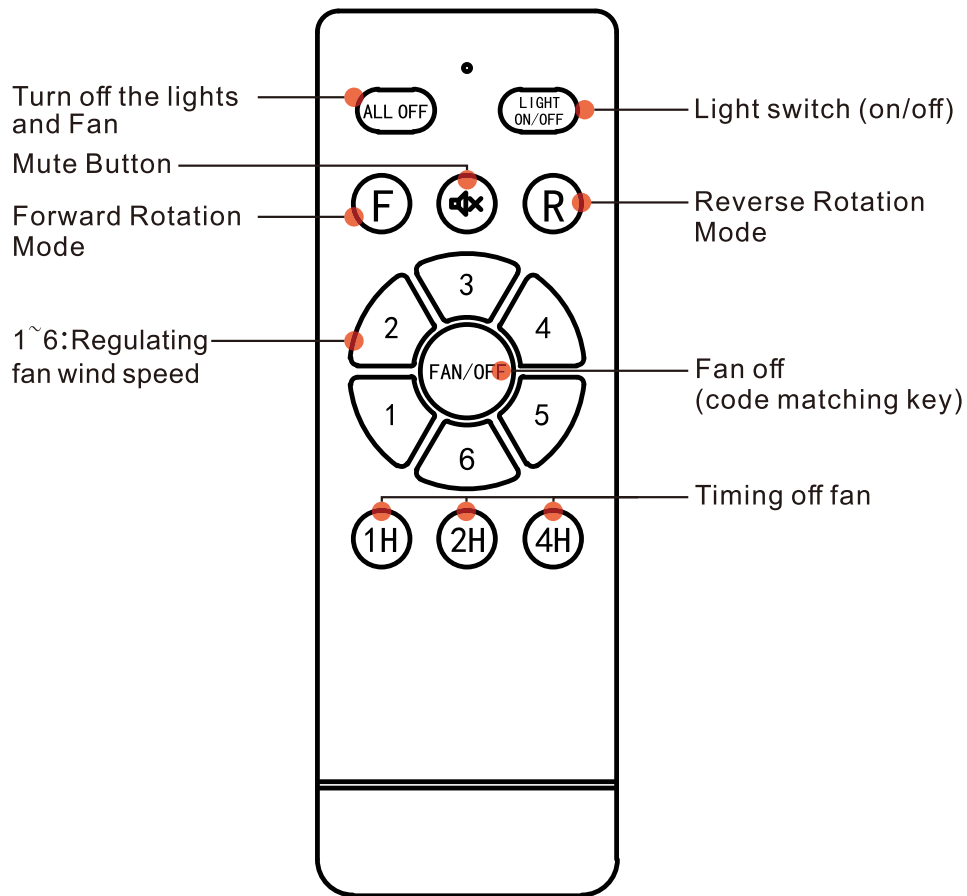

NOTICE:

This remote control does not contain batteries.
Please insert 2x1.5V batteries before use.

OPERATING INSTRUCTIONS

CONTROL MATCHING CODE:

If the remote control loses signal, turn on the power switch at the same time long press the code matching key  button within 3 seconds. When hear the "Beep" twice, the pairing is successful.

If the remote control cannot be effectively controlled: please check the battery, and remove the battery if it is not in use for a long time.

NOTE: Both the fan and the light will be controlled by the remote. The wall switch (if applicable) is not able to control all functions of the fixture.

REVERSE DIRECTION

Wait for the fan to stop and reverse blade direction after pressing the Forward or Reverse button.