



Please read these instructions and warranty information carefully before use and keep them properly for future reference.

## OPERATING INSTRUCTIONS

## Part List

<p>① x1 12x110x803mm</p>	<p>② x4 12x105x581mm</p>			
<p>④ x1 12x110x803mm</p>	<p>⑤ x1 12x110x803mm</p>			
<p>⑥ x18 5x479x37mm</p>	<p>⑦ x1 12x168x803mm</p>			
<p>⑧ x1 12x168x803mm</p>	<p>⑨ x1 12x190x760mm</p>			
<p>⑩ x1 12x190x760mm</p>				
<p>Ax3</p>	<p>Bx20</p>	<p>Cx22</p>	<p>Dx18</p>	<p>Ex36</p>
<p>Fx6</p>	<p>Gx6</p>	<p>Hx2</p>	<p>Ix8</p>	<p>Jx1</p>

# Assembly Instructions

