

TULIP-LQ




Ax1		Fx1	
Bx1		Gx4	
Cx1		Hx5	
Dx1		Ix1	
Ex2		Jx4	

SPARE (Ersatzteile)


Ex1		Hx1	
Gx1		Jx1	

STEP 1

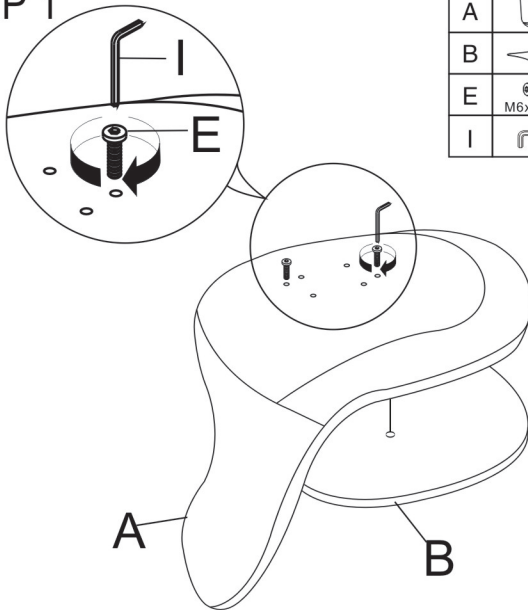


A		1
B		1
E		2
I		1

STEP 3

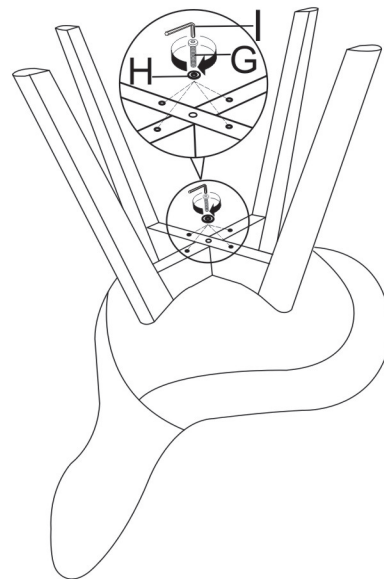


G		4
H		4
I		1

STEP 2

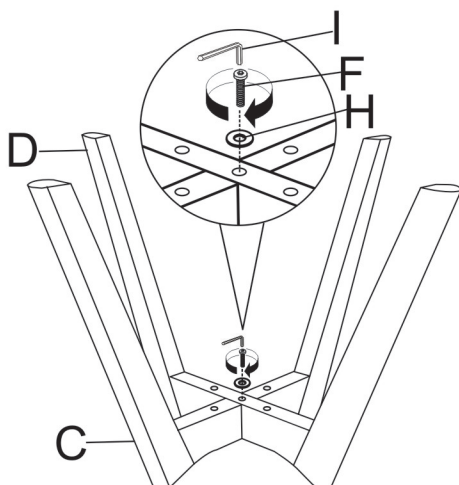

C		1
D		1
F		1
H		1
I		1

STEP 4

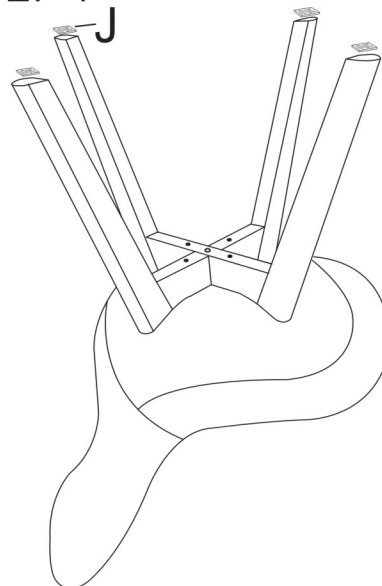

J		4
---	--	---

FG		1
----	--	---