

Assembly Instructions

 
Caution : You must read this before you proceed

Care & Maintenance



- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in chair seat for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

Club Chair

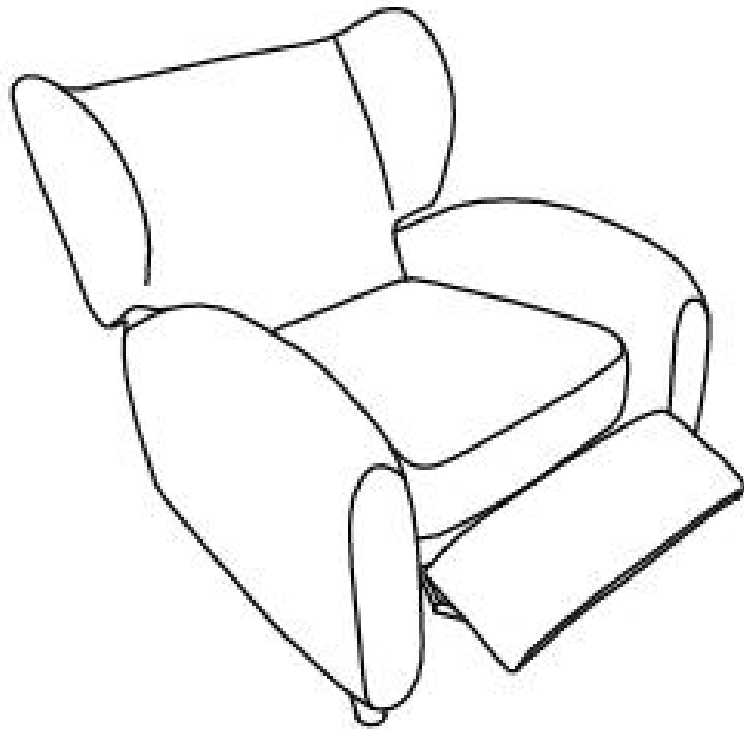



Parts List

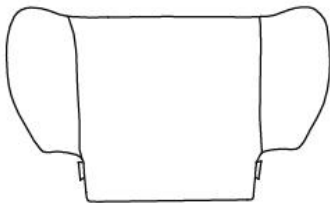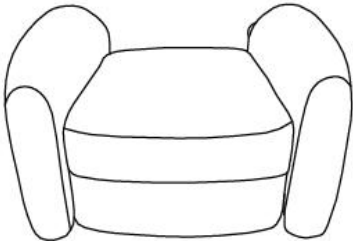  Label	Picture	Description	QTY
A		Backrest	1
B		Seat	1
C		Leg	4

Hardwares

Label	Picture	Description	QTY
①		Gasket	7

  Assembly Preparation

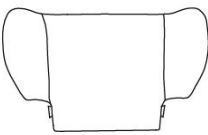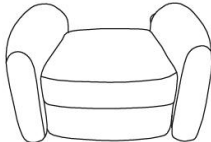Before Beginning Assembly:	A  B  C  ①  x7
----------------------------------	---



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-

 


- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps

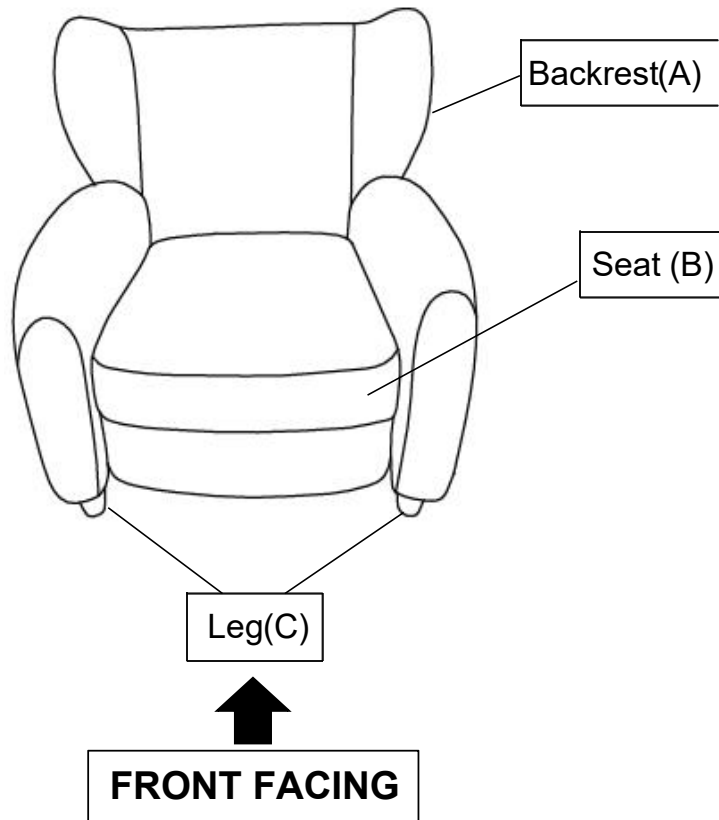




This Club Chair has multiple parts and may require up to 30 minutes to assemble.

To give you an overview of the Chair, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.

   Step 1

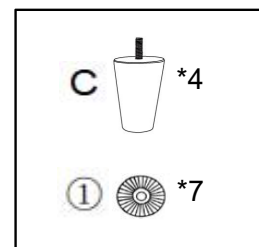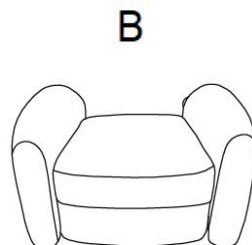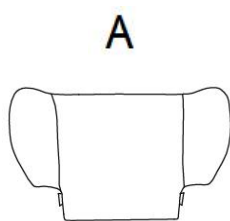


Position the Backrest(A) and Seat(B) on a clean, non-marring surface, as shown.

Do not place on surface that can scratch or damage the upholstery.


Take out the 4 legs and Hardware from the bottom of Seat(B).

 Step 2

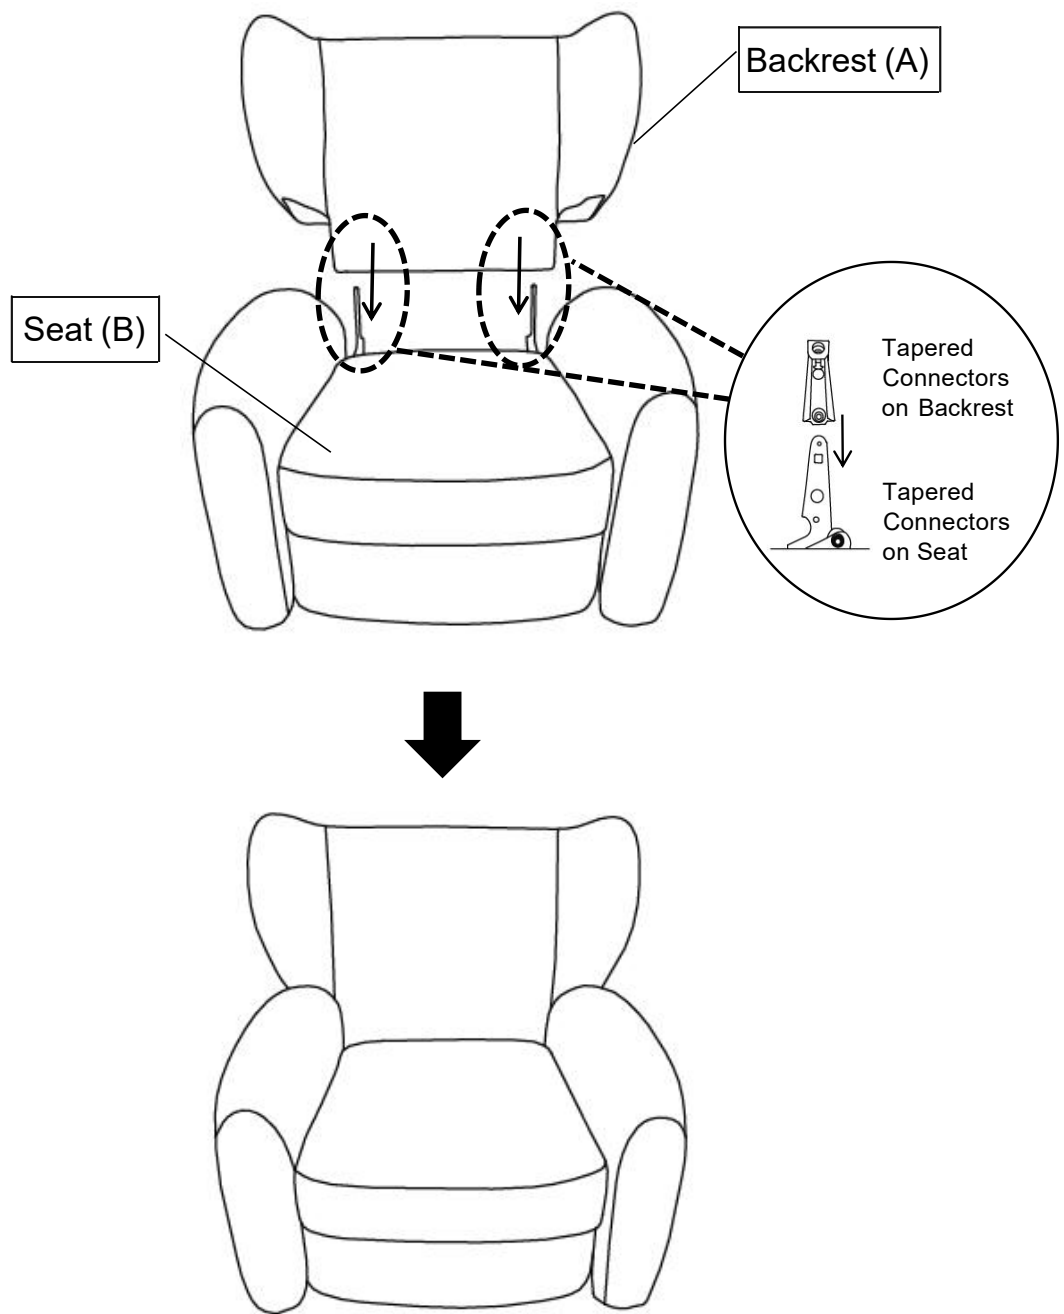


With assistance from an adult partner, lift the Backrest(A) up.
Align the Tapered Connectors on the Backrest(A) and the Seat(B).
Push down on the Backrest (A) until it is fully locked into the Tapered Connectors.
Note: Make sure the Tapered Connectors on the Backrest(A) fully lock into the Tapered Connectors on the Seat(B).

 Step 3

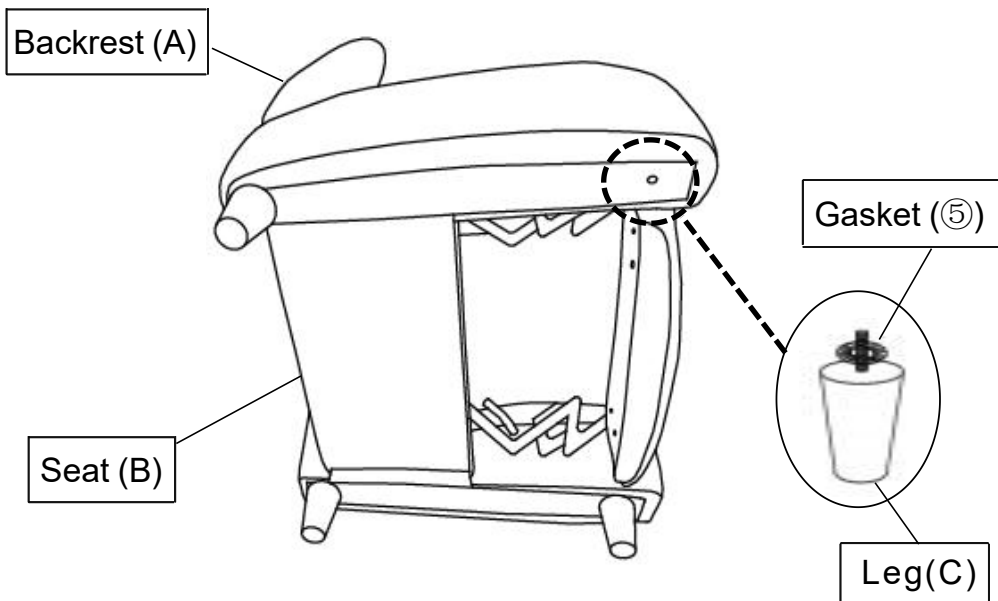


Install the Leg(C) onto the bottom of the loveseat by placing one Gasket(5) on the threaded stem.

 Step 4

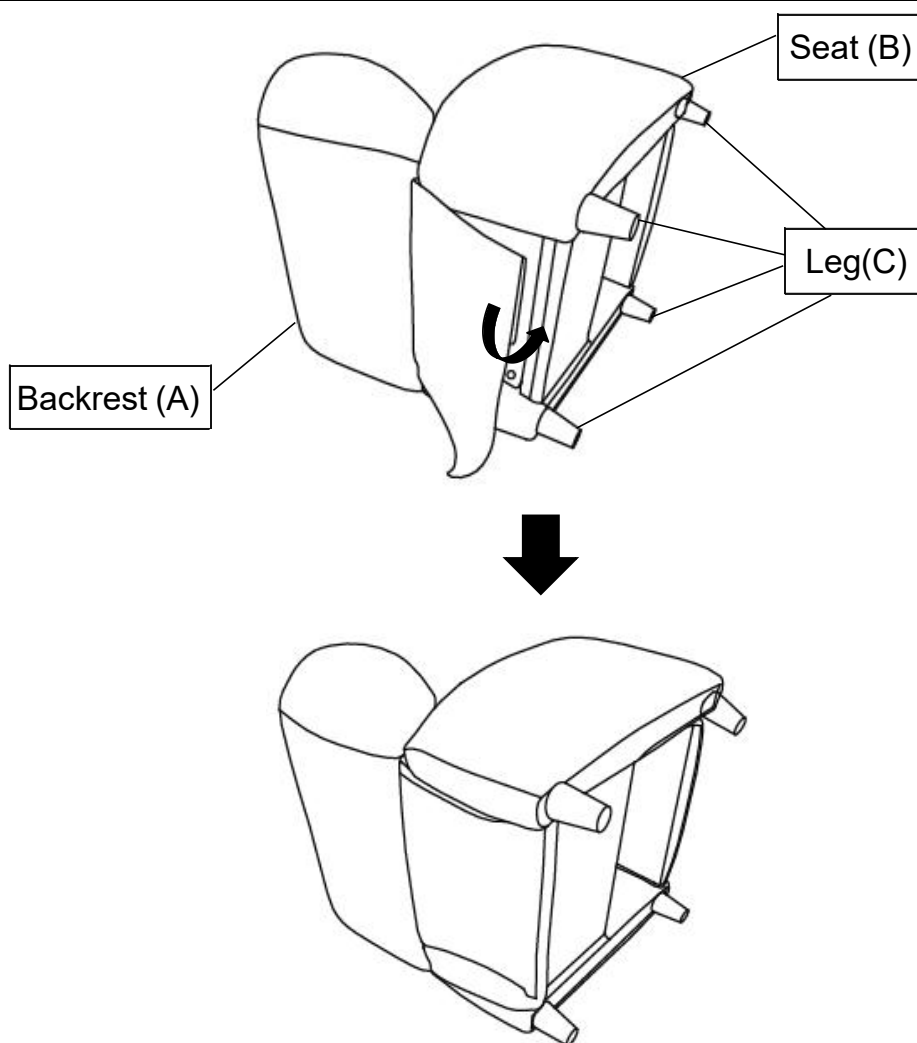


Attach the Backrest(A) coving onto the Seat(B) bottom via velcro.

 
Step 5

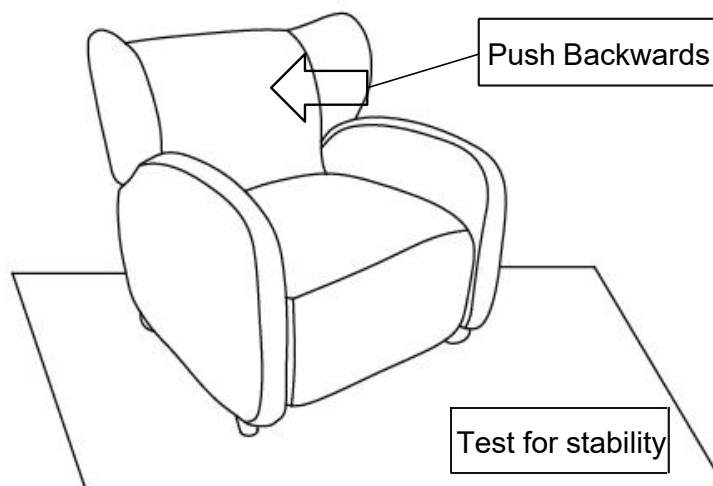

Scenario 1

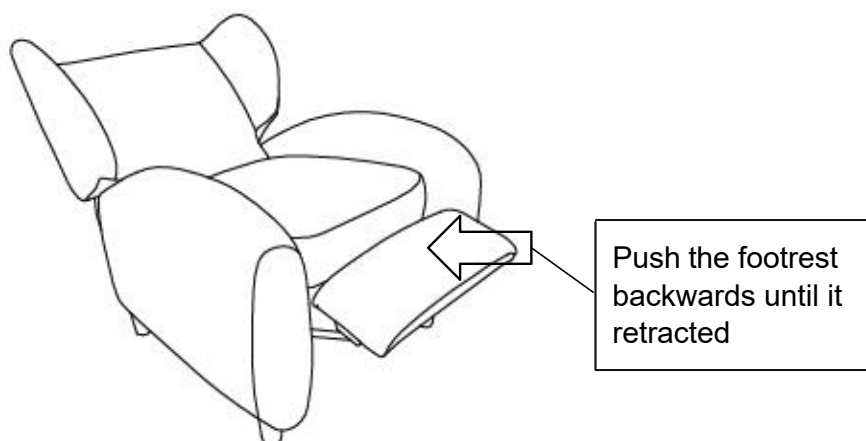 

Scenario 2

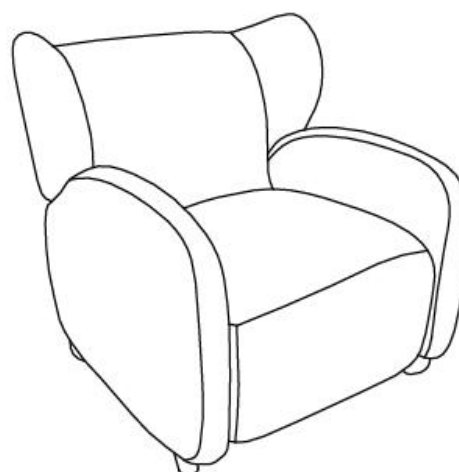 

Your Club Chair is ready for use.

This Club Chair can only be used on a flat, level surface.

When your back push the Backrest(A) backwards, the chair can be reclined(Scenario1).

When your leg push the footrest backwards until it retracted, the chair would be a normal club chair(Scenario2).