 
 
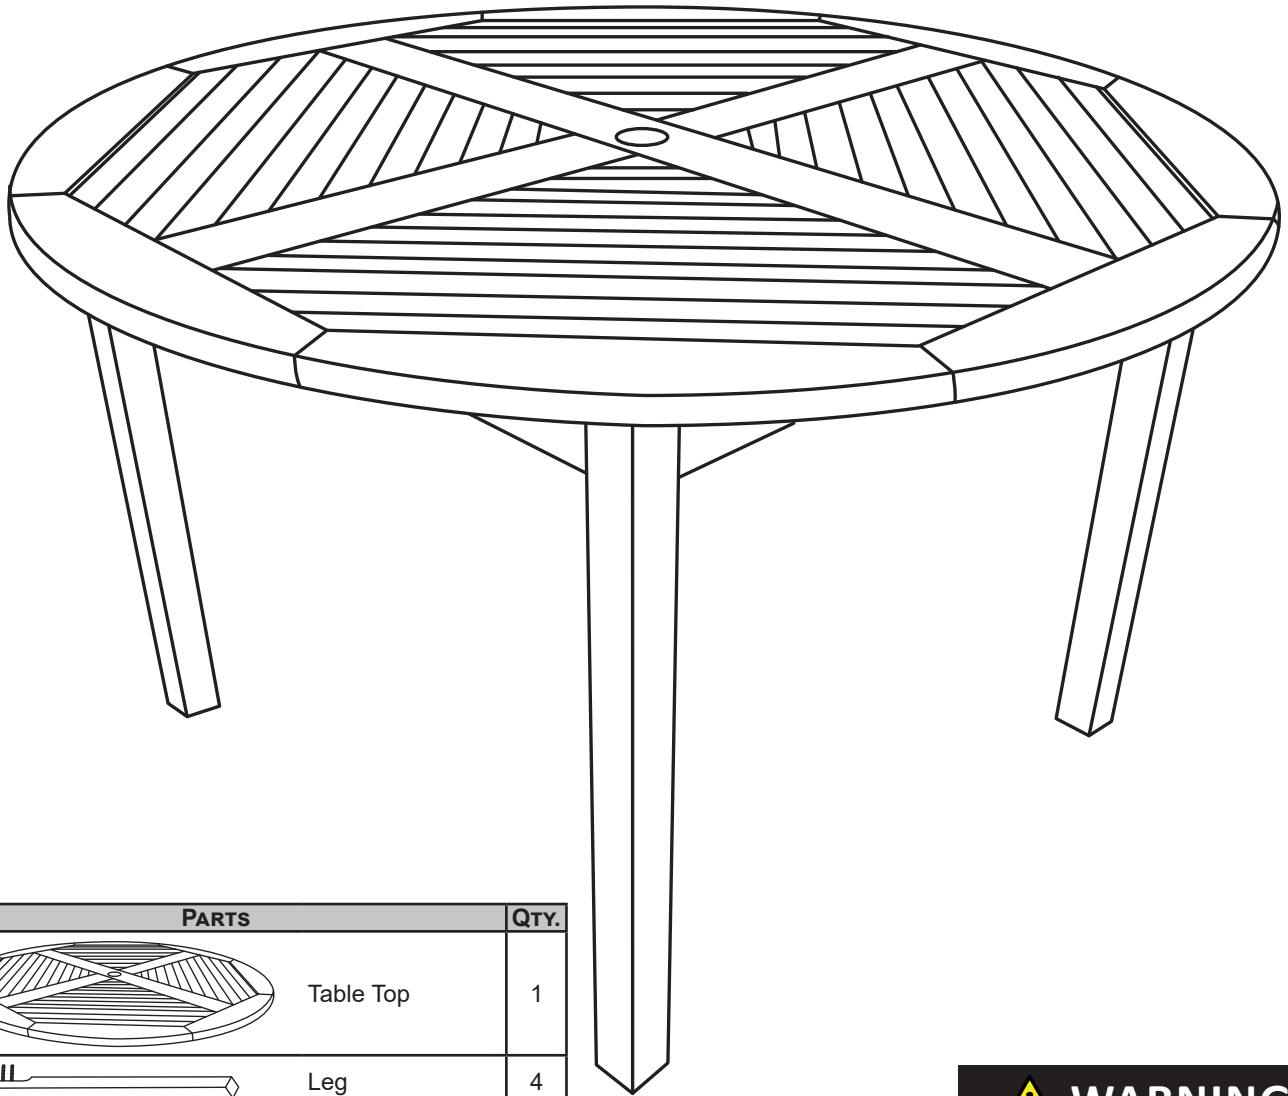 


 


ROUND OUTDOOR DINING TABLE

Read all assembly and care instructions carefully before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid damaging the finish.



| No. | PARTS | | QTY. |
|-----|---|-----------|------|
| A |  | Table Top | 1 |
| B |  | Leg | 4 |
| C |  | Nut | 8 |
| D |  | Washer | 8 |
| E |  | Spanner | 1 |



Ensure all parts are accounted for before disposing of packaging.

WARNING

 
CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.

HELPFUL HINT

This item was treated with teak oil at the factory. Apply a suitable wood oil at least once a year, or when the wood looks particularly dry. Left untreated, the wood will weather to a silvery gray color.

ASSEMBLY

1. Lay Table Top (A) face-down on a clean, soft surface.
2. Align Leg (B) with the pre-drilled holes on the underside of the table top, as shown.
3. Use 2x Washer (D) and 2x Nut (C) to affix the leg. Tighten the hardware using Spanner (E).
4. Repeat step 2 and step 3 for the remaining legs.

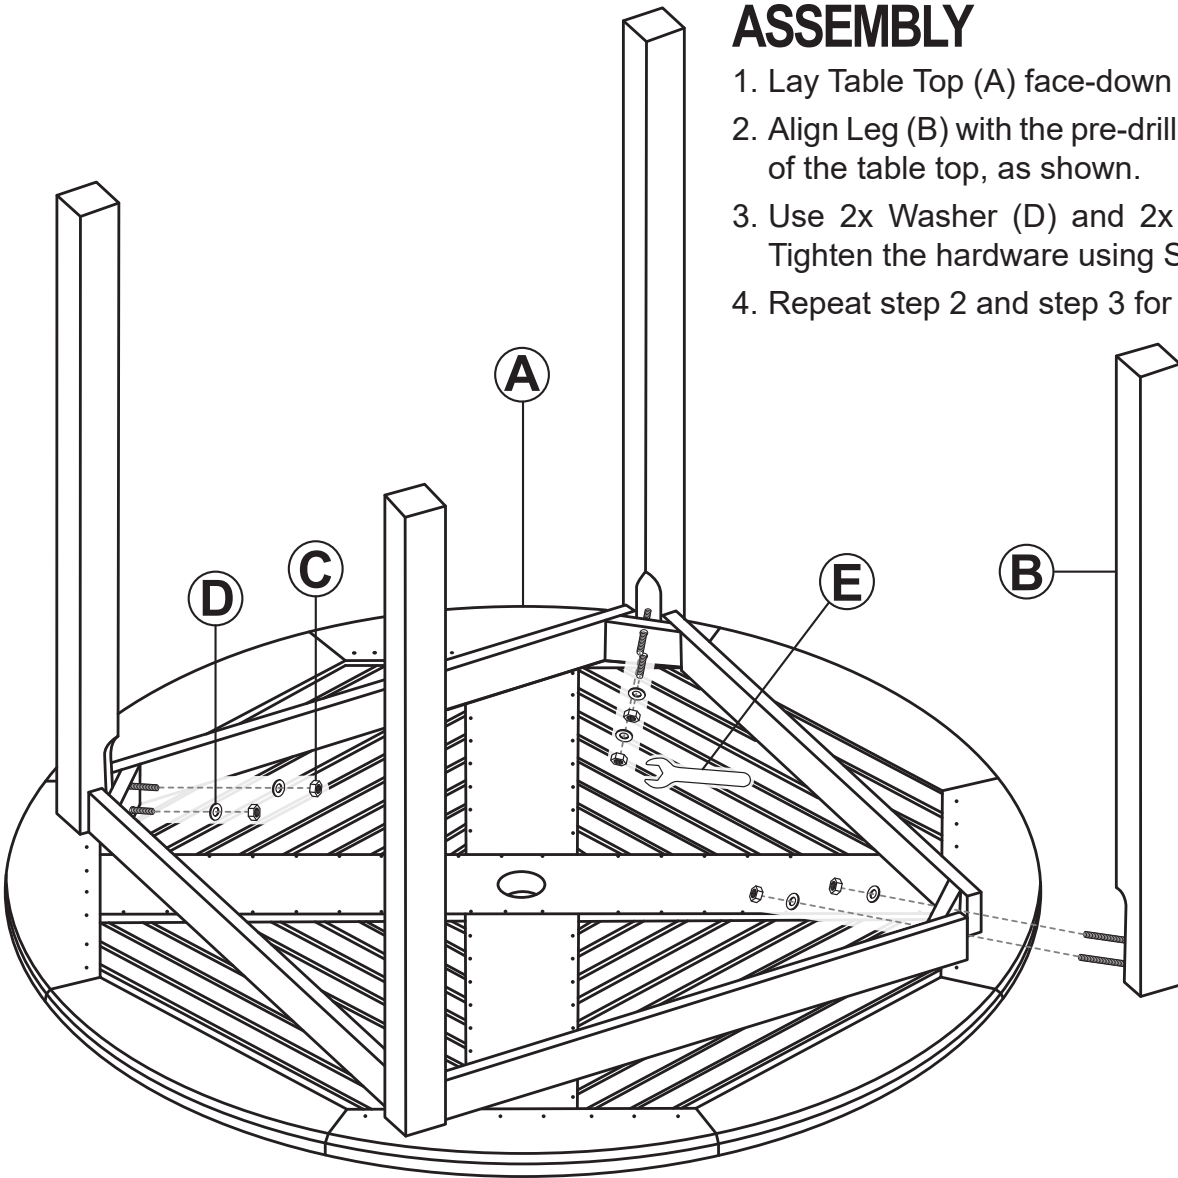

USE & CARE

SAFE USE: Place the table on a flat, level surface. Never sit or climb on the table.

INSPECT: Periodically check assembly points and tighten fittings as necessary.

CLEANING: Identify the direction of the woodgrain. Following the direction of the woodgrain, wipe surfaces with a soft cloth.

MAINTENANCE: This furniture was treated with teak oil at the factory. Apply a suitable wood oil at least once a year, or when the wood looks particularly dry. Follow application instructions as noted with the suitable wood oil (not included).

STORAGE: Protect this item from ice and snow. Store indoors, in a dry location. Covering the unit while in storage will help prevent dust buildup.

Any modification to the product or failure to follow recommended care will void the product warranty.

⚠️ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.