Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

"Hardware is attached underneath the seat bottom"

This product will take 15-20 minutes to assemble

Components List:

NO	DESCRIPTION	SKETCH	QTY
A	Back Rest		1pc
В	Cushion Seat		1pc
С	Front Leg		2pcs

Hardware List:

NO	DESCRIPTION	SIZE	SKETCH	QTY
1	Allen Key	58x23x4 mm		1pc
2	Wrench	12x75 mm	\sim	1pc
3	Short Bolt	1/4" x38 mm	0	3pcs
4	Long Bolt	1/4" x75 mm	0	4pcs
5	Hex-Nut	5/16"	(4pcs
6	Spring Washer	5/16" x Ø12	0	11pcs
7	Flat Washer	5/16" x Ø19	0	11pcs


Reminders

- 1. Use only the hardware supplied.
- 2. Once the chair is finished, level and tighten all the bolts.
- 3. Do not over-tighten bolts.
- 4. This item may require periodic tightening.

NOTE

- 1. Hardware pack is located underneath the Wooden Seat (B).
- 2. Two or more people are needed for assembly. Please keep all hardware parts out of the reach of children.


1 OF 4

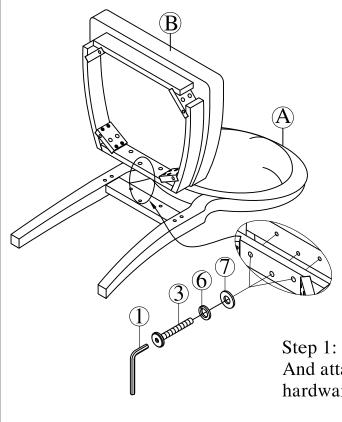


Grab hardware bag from underneath the cushion seat. Do not fully tighten bolts until the Product is level and the assembly of the product is completed.


Fig.1


Step 1: Lay the Backrest (A) on a flat Soft surface, And attached the wooden seat using the provided hardware as shown on Fig.1 And Fig.2.

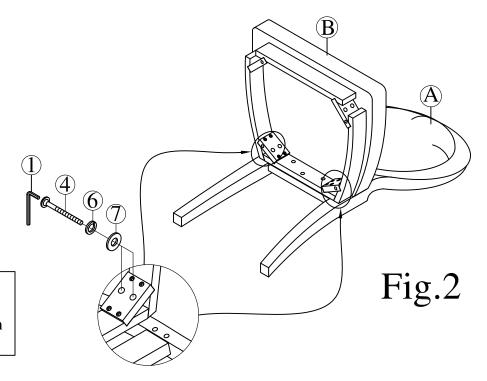

Note: move seat back and forward to ease the finding of the hole in the corner block.

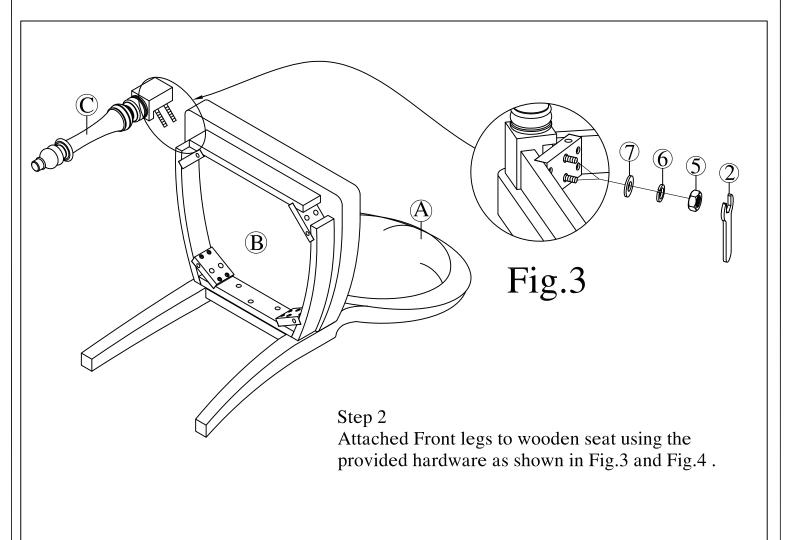

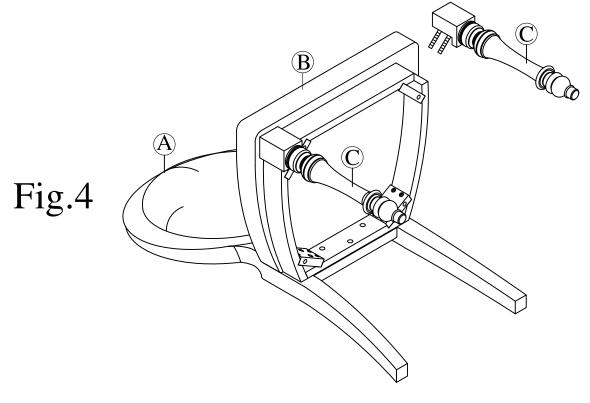

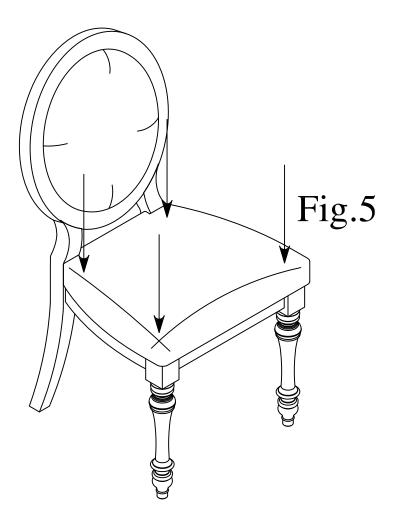

Step 3: Place the loosely assembled chair on a hard flat surface and apply gentle downward pressure on the seat. As shown on Fig.5. Once the chair is balanced and leveled, fully tighten all bolts.

Assembly is now Complete