

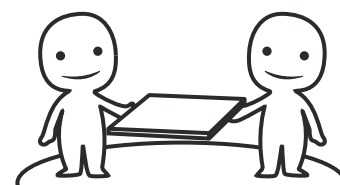


# Dresser


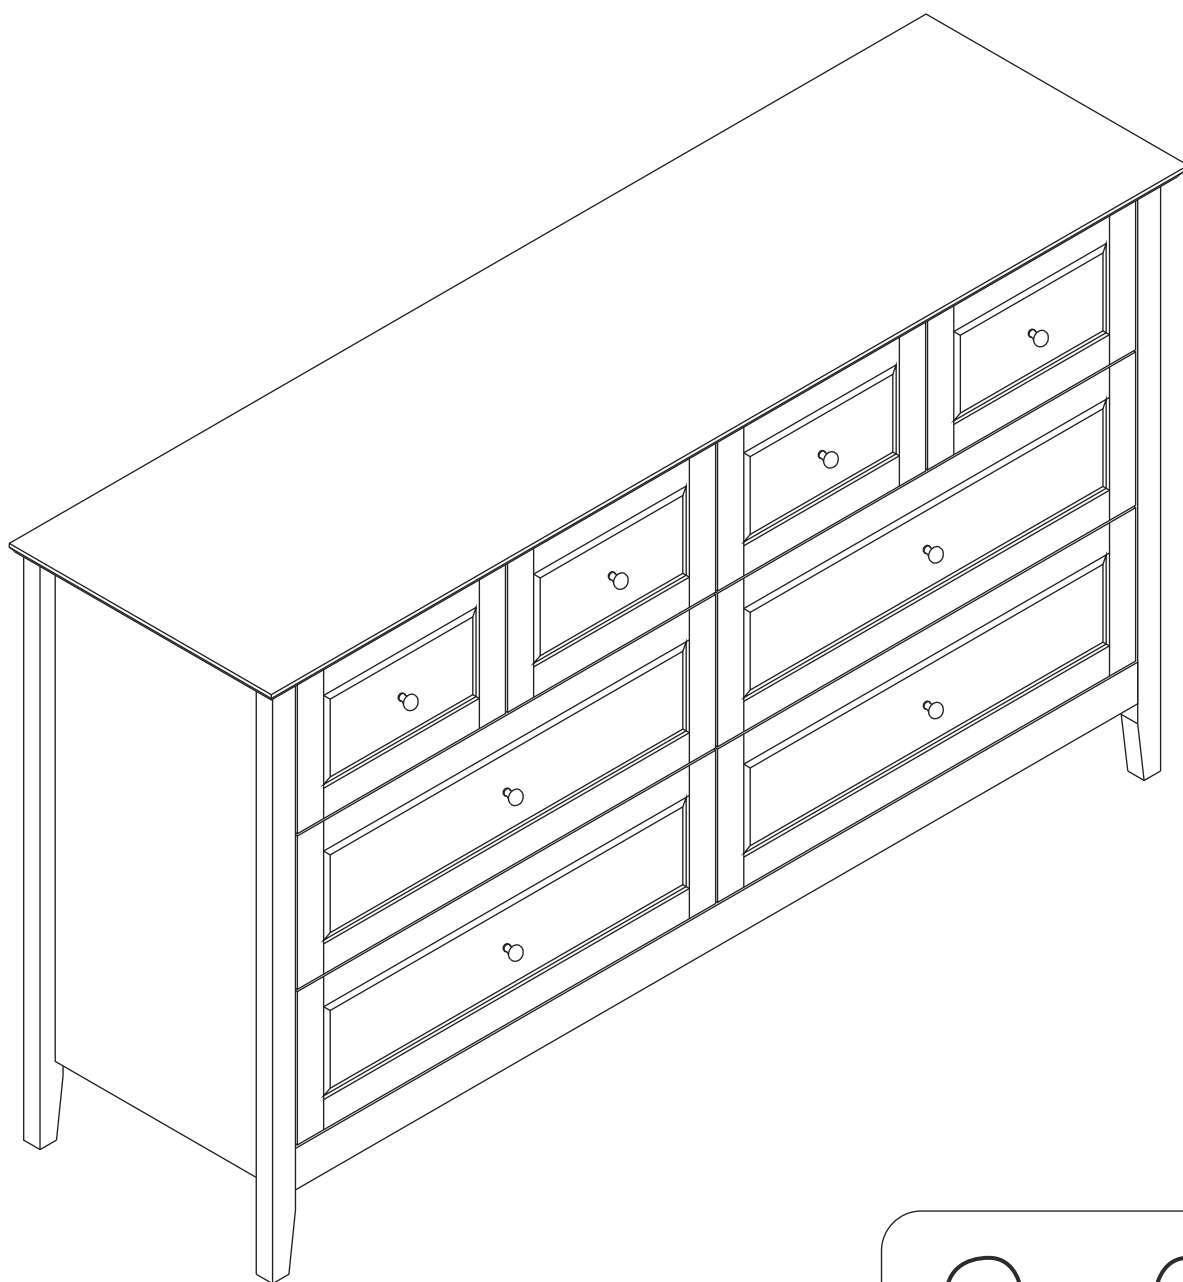


ASSEMBLED BY 2 ADULTS

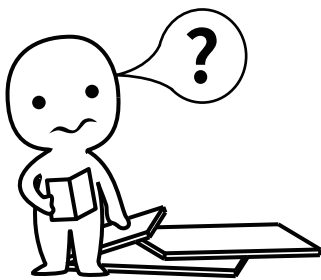


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

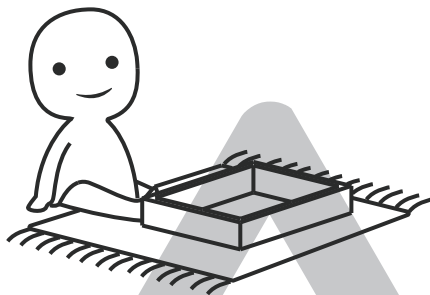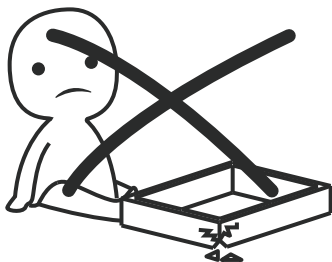



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

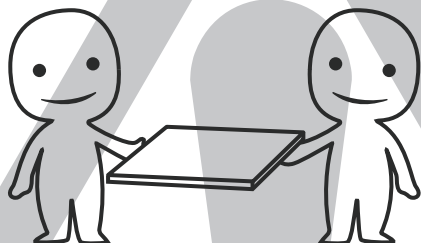

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

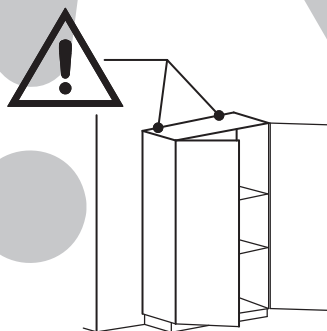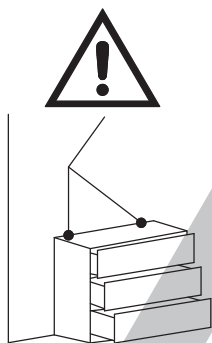

### **ANTI-TOPPLE WARNING !**


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

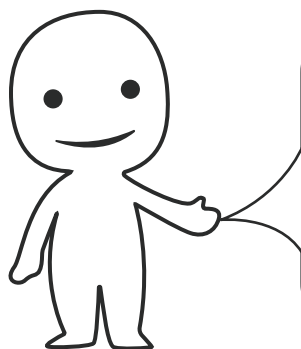


Please prepare the following tools

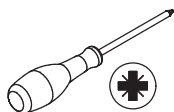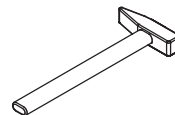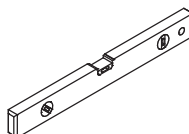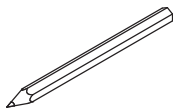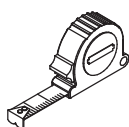


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 8

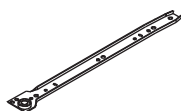


L = 300 mm

B x 8

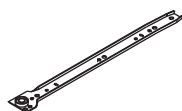


L = 300 mm

C x 8

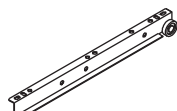

L = 300 mm

D x 8

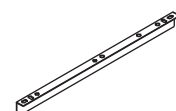


L = 300 mm

E x 96+1




Ø 3 x 12 mm

F x 74+1

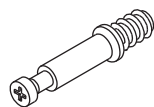

Ø 6 x 35 mm

G x 33+1

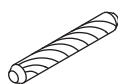


Ø 6 x 30 mm

H x 74+1



Ø 15 x 10 mm

J x 6+1

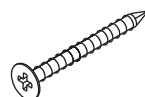


Ø 4 x 35 mm

K x 1



L x 2

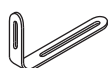

M x 2



Ø 4 x 14 mm

N x 20




P x 20+1



Ø 3 x 14 mm

Q x 36+1

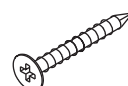

Ø 4 x 30 mm

R x 8




S x 8+1




Ø 4 x 14 mm






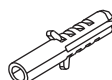









T x 2

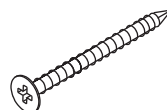


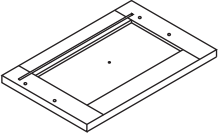
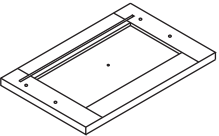
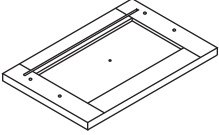
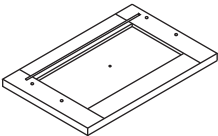
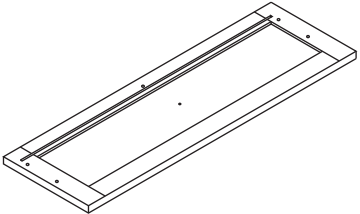
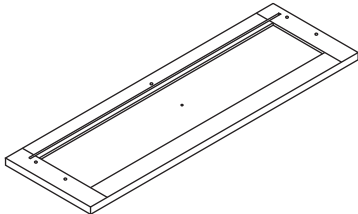
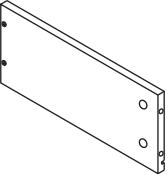
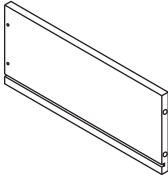
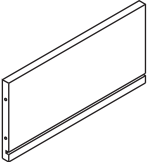
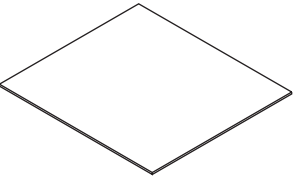
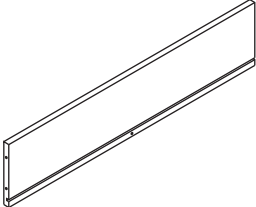
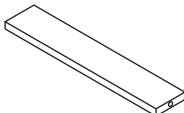


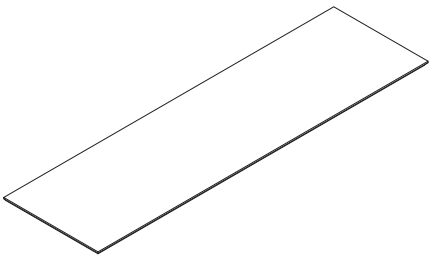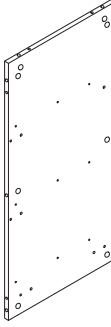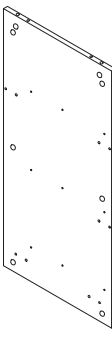U x 2

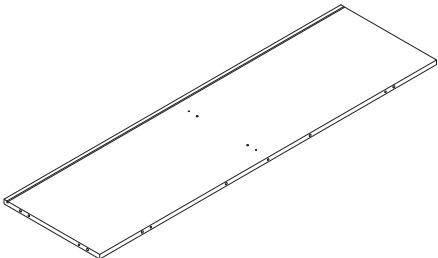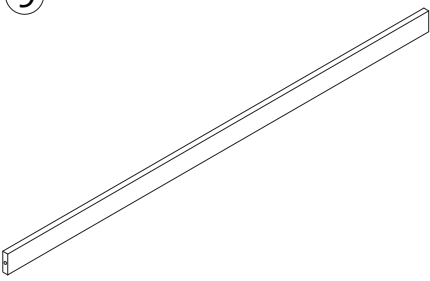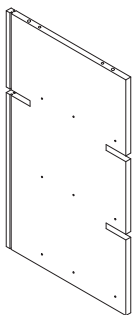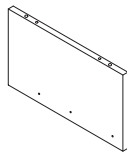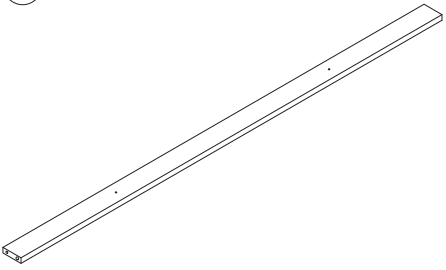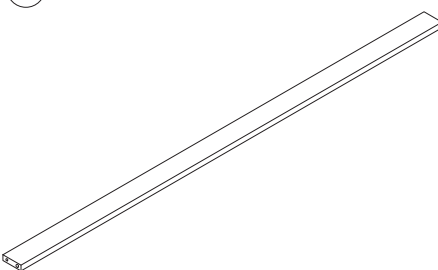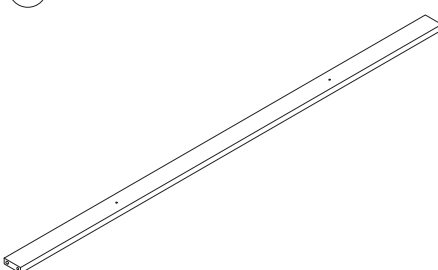


Ø 4 x 40 mm


<p>①</p>  <p>1PC</p>	<p>②</p>  <p>1PC</p>	<p>③</p>  <p>1PC</p>
<p>④</p>  <p>1PC</p>	<p>⑤</p>  <p>1PC</p>	<p>⑥</p>  <p>1PC</p>
<p>⑦</p>  <p>1PC</p>	<p>⑧</p>  <p>1PC</p>	<p>⑨</p>  <p>1PC</p>
<p>⑩</p>  <p>1PC</p>	<p>⑪</p>  <p>2PCS</p>	<p>⑫</p>  <p>1PC</p>
<p>⑬</p>  <p>1PC</p>	<p>⑭</p>  <p>1PC</p>	<p>⑮</p>  <p>1PC</p>
<p>5/27</p>		

<div>16</div>  <div>2PCS</div>	<div>17</div>  <div>2PCS</div>	<div>18</div>  <div>2PCS</div>
<div>19</div>  <div>1PC</div>	<div>20</div>  <div>2PCS</div>	<div>21</div>  <div>1PC</div>
<div>22</div>  <div>1PC</div>	<div>23</div>  <div>2PCS</div>	<div>24</div>  <div>2PCS</div>
<div>25</div>  <div>8PCS</div>	<div>26</div>  <div>8PCS</div>	<div>27</div>  <div>4PCS</div>
<div>28</div>  <div>4PCS</div>	<div>29</div>  <div>4PCS</div>	<div>30</div>  <div>4PCS</div>
<div>6/27</div>		



31

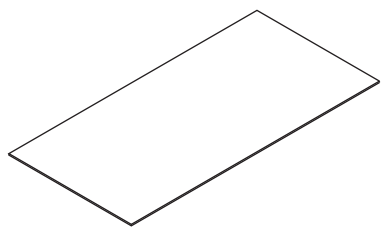



4PCS

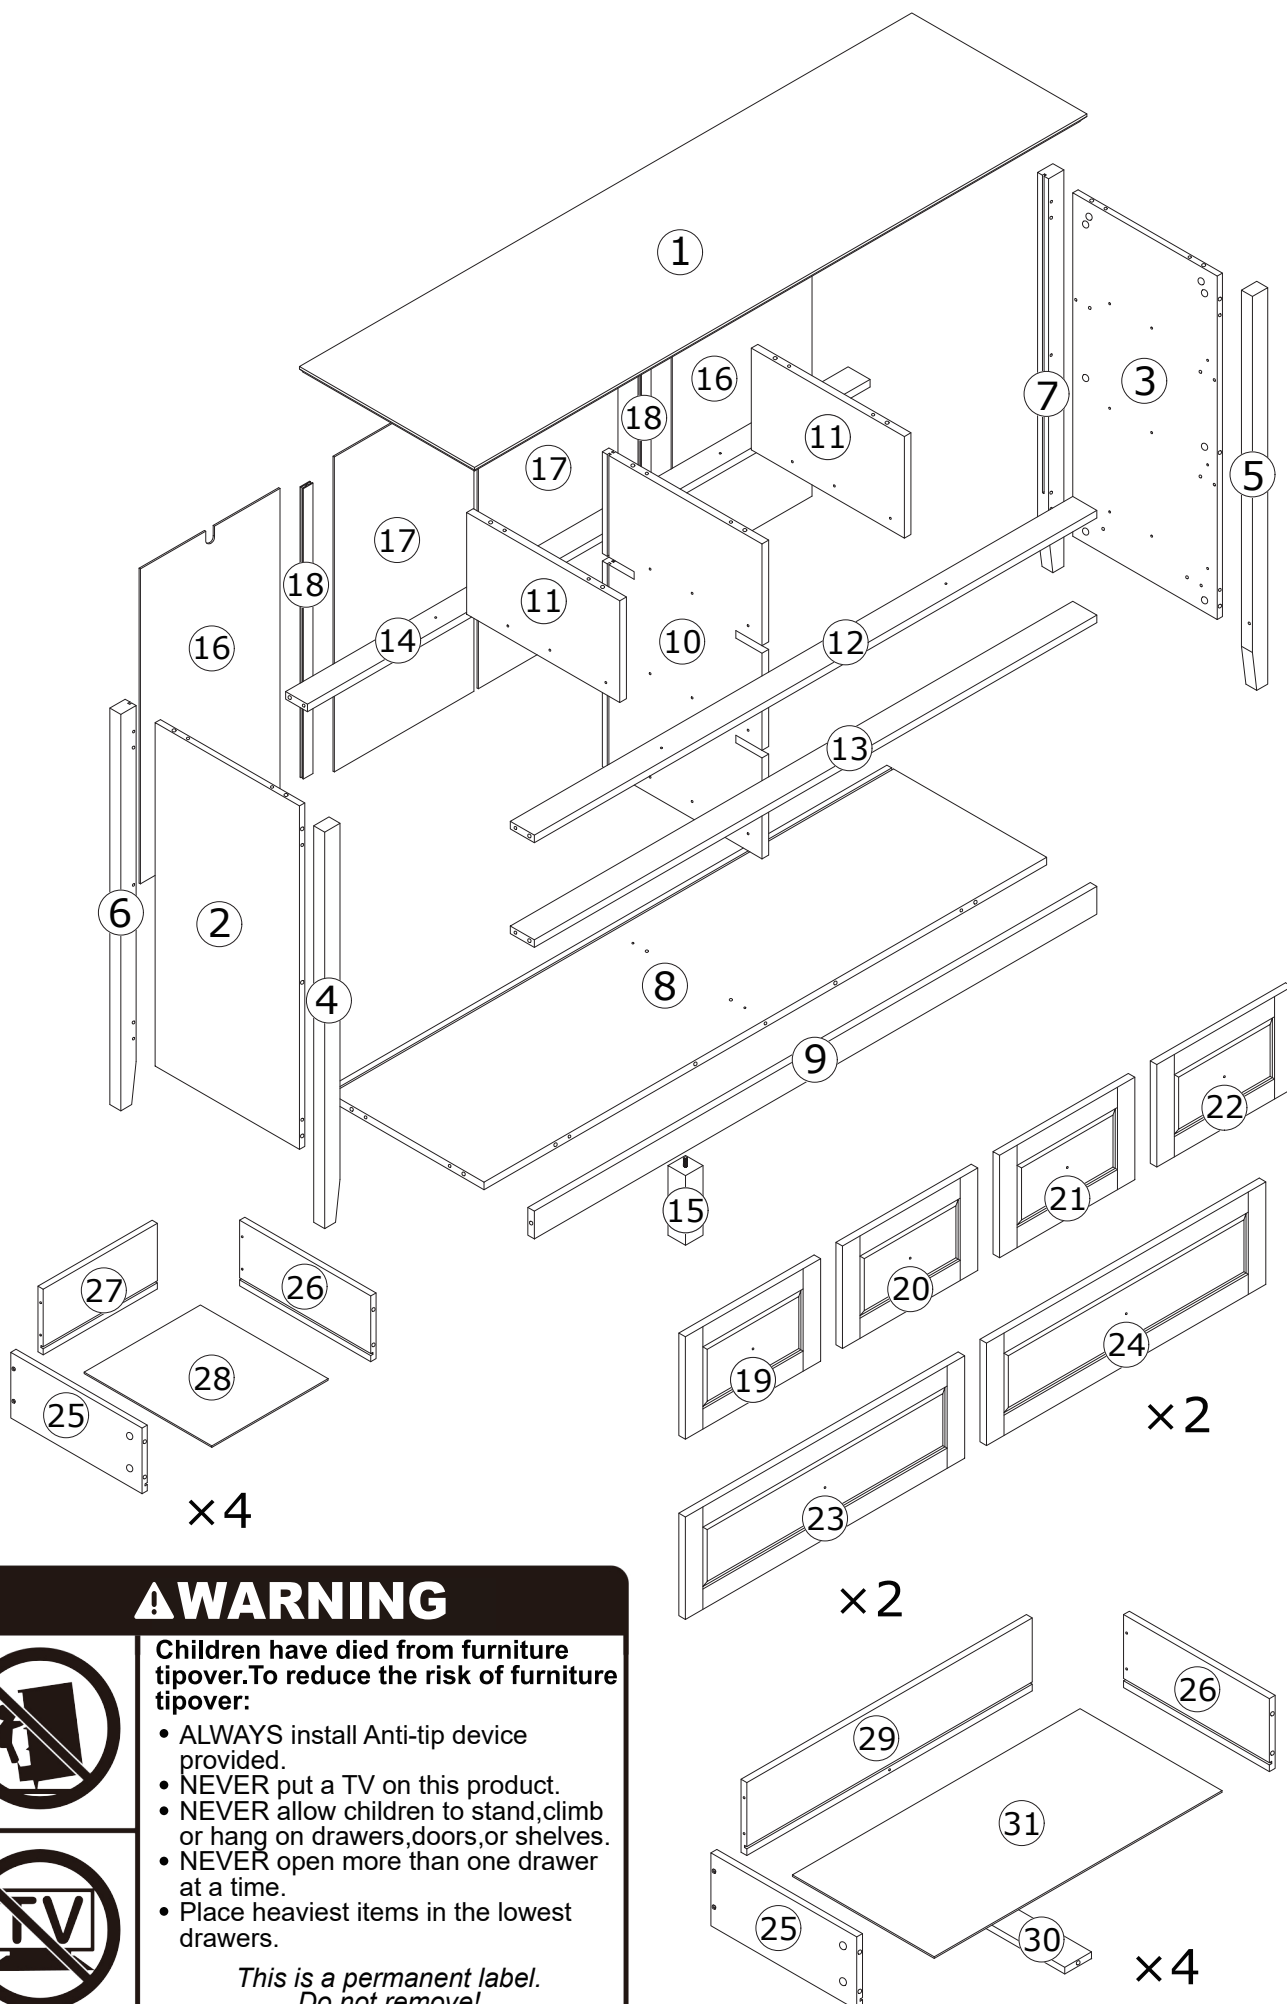



1

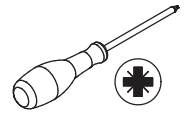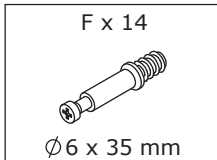



Screw eccentric rod(F)  
 into board 4, 5, 6 and 7  
 as shown.

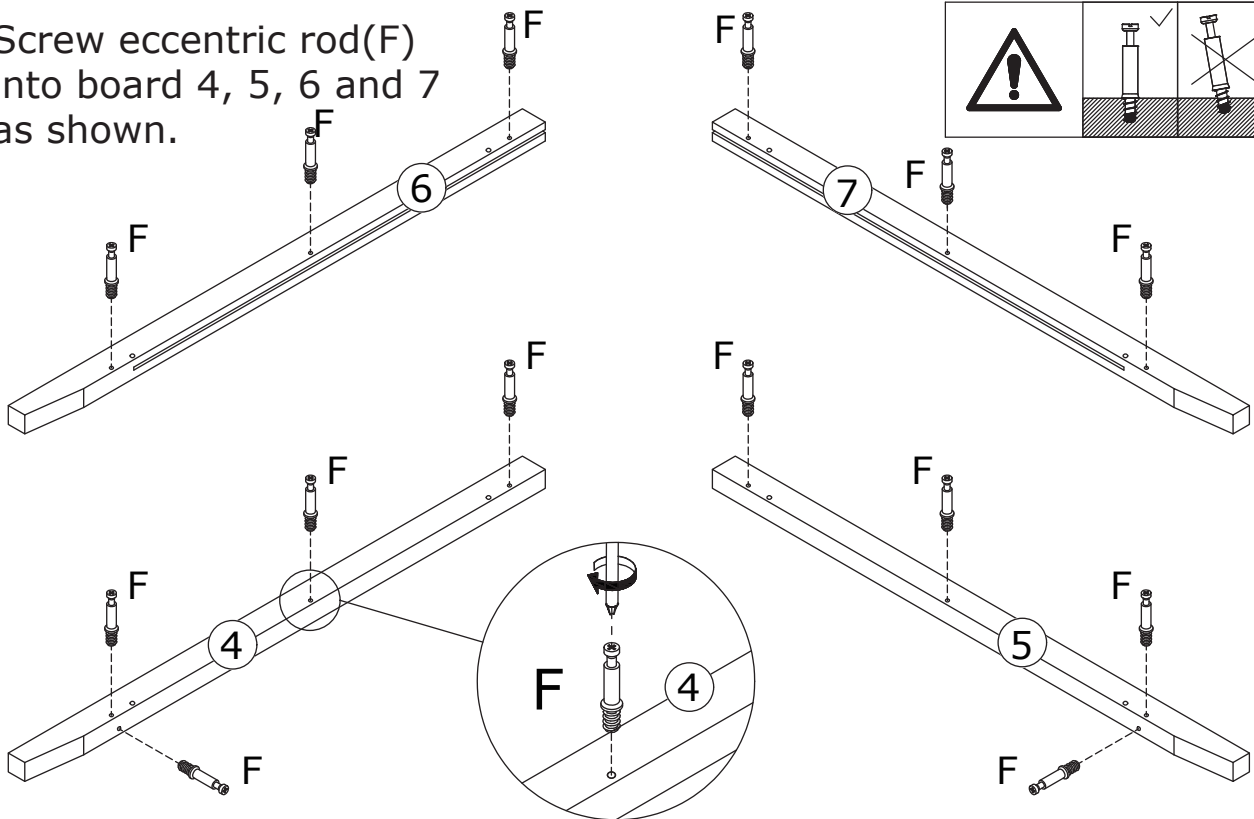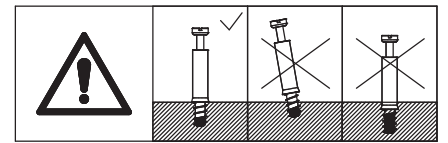

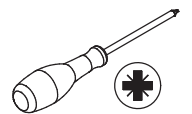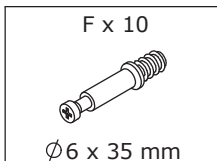

2

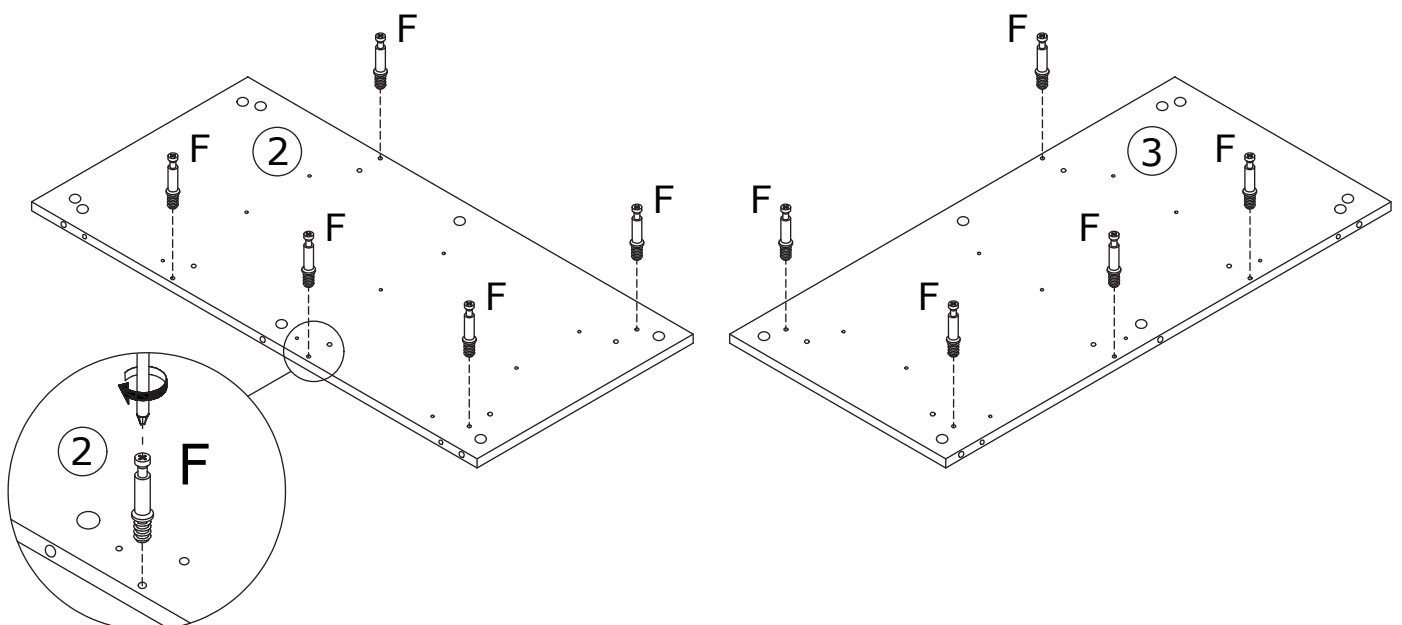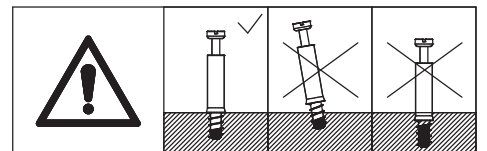


Screw eccentric rod(F) into board 2  
 and 3 as shown.





# 3

<p>G x 8</p>  <p>Ø 6 x 30 mm</p>	<p>H x 12</p>  <p>Ø 15 x 10 mm</p>
-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------

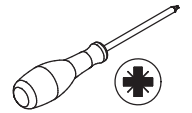


Connect board 4 and 6 to board 2;  
board 5 and 7 to board 3 using wooden  
dowel(G), add cam lock(H) into board 2,3  
and turn clockwise to tighten as shown.

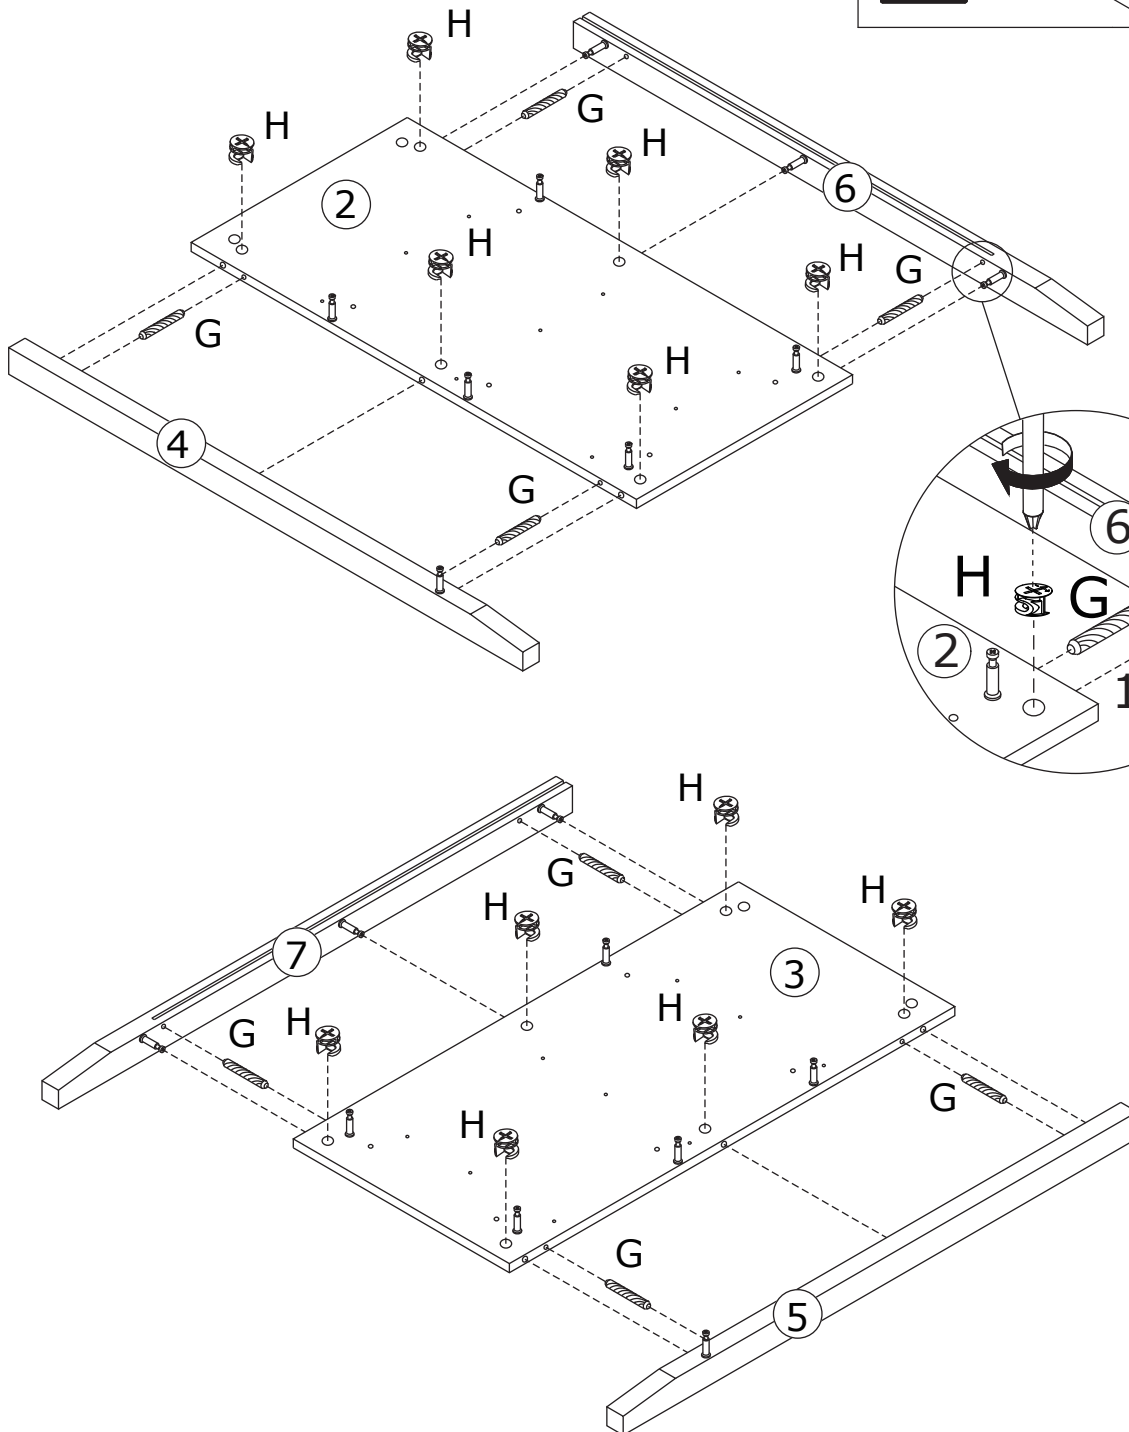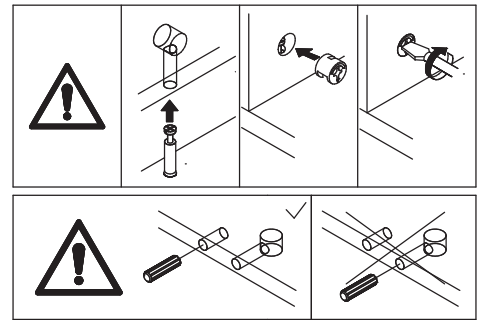


4

A x 3

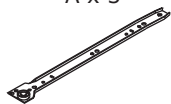

L = 300 mm

B x 3



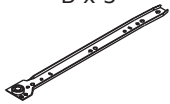


L = 300 mm




E x 18



Ø3 x 12 mm

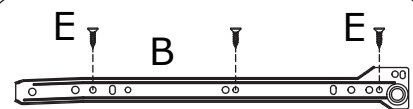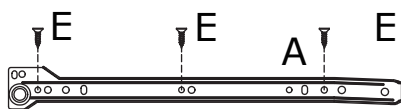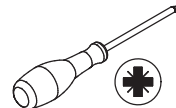


Fix rail(A) and (B) to board 2 and 3 respectively with screw(E) as shown.

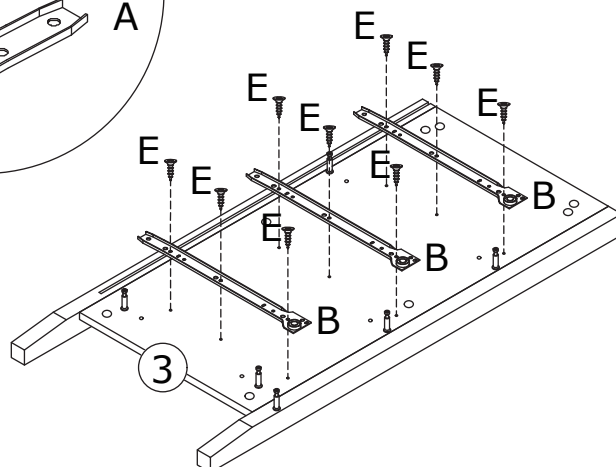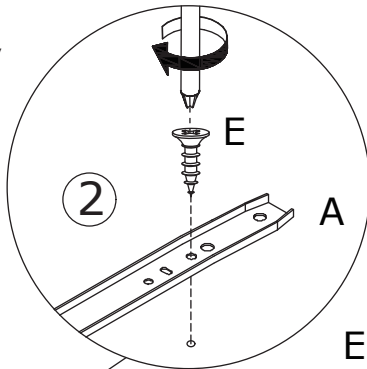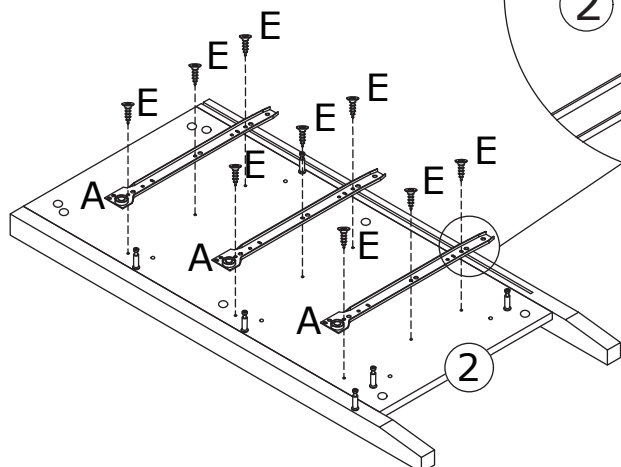


5

A x 3

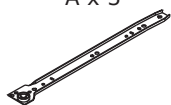

L = 300 mm

B x 3



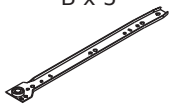


L = 300 mm



E x 18




Ø3 x 12 mm

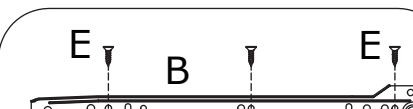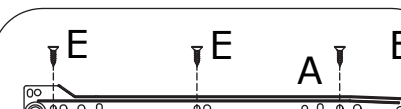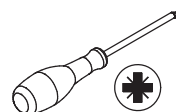


Fix rail(A) to board 10 with screw(E) at first.  
Flip to back, fix rail(B) with screw(E) as shown.

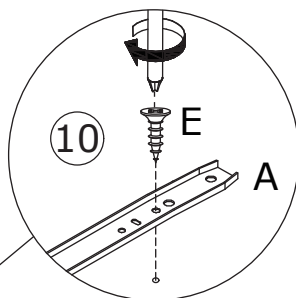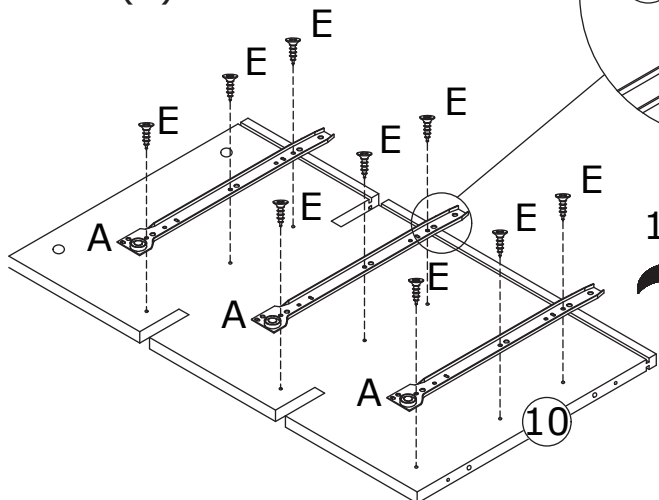


180°

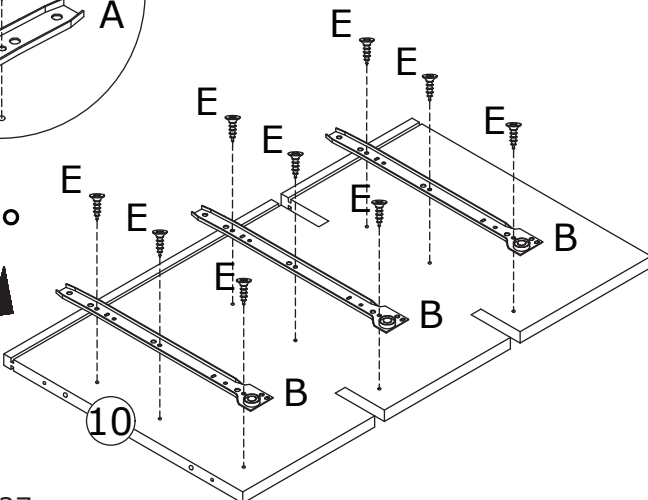

# 6

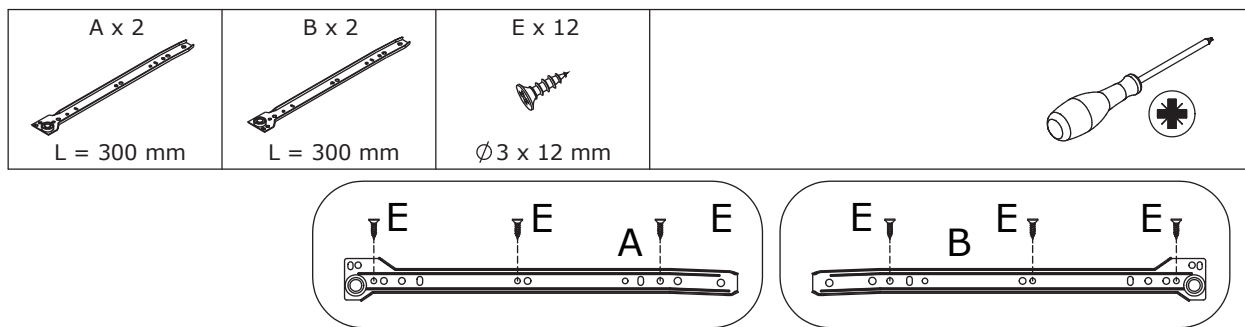

Fix rail(A) to board 11 with screw(E) at first.


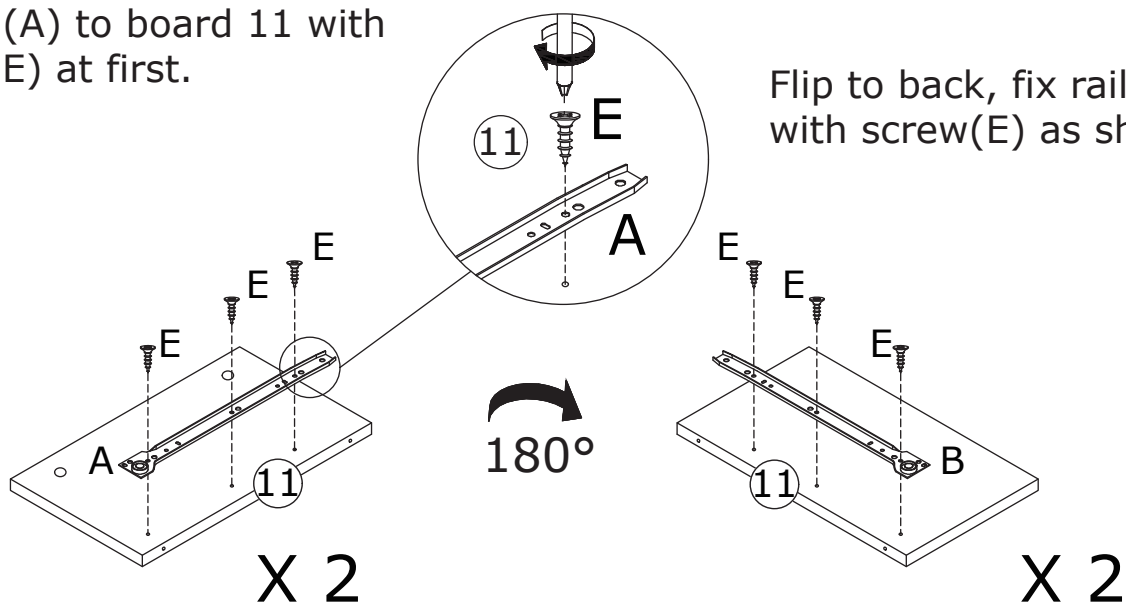


Flip to back, fix rail(B) with screw(E) as shown.


# 7




Screw eccentric rod(F) into board 9 as shown.

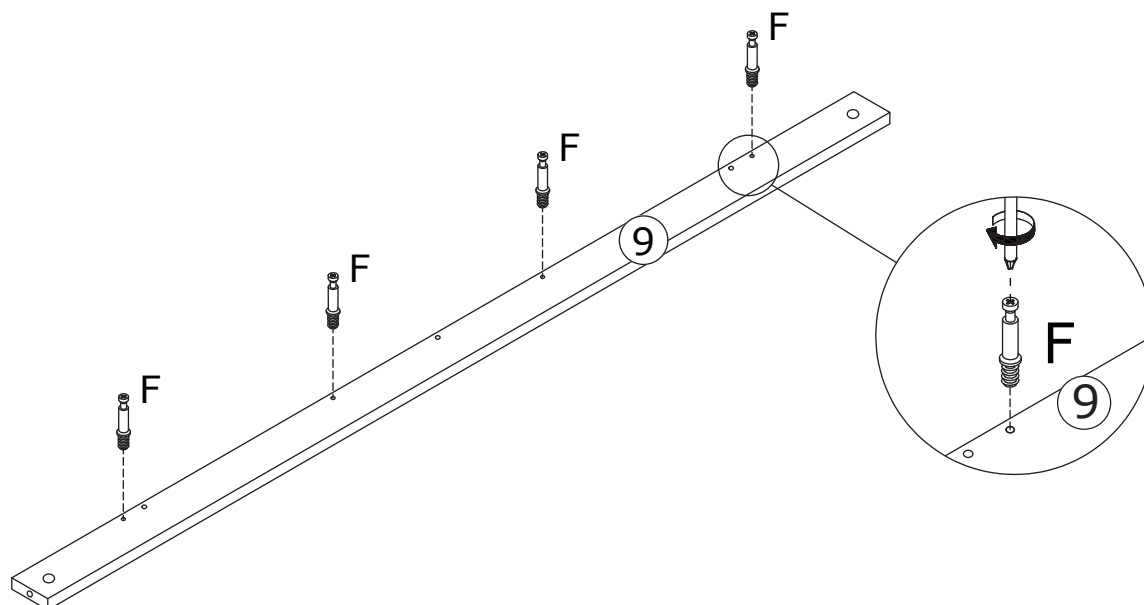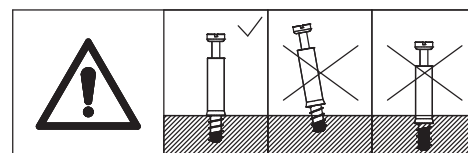




8

G x 3  
  
 Ø 6 x 30 mm


H x 4  
  
 Ø 15 x 10 mm




Attach board 8 to board 9 using wooden dowel(G), add cam lock(H) into board 8 and turn clockwise to tighten as shown.

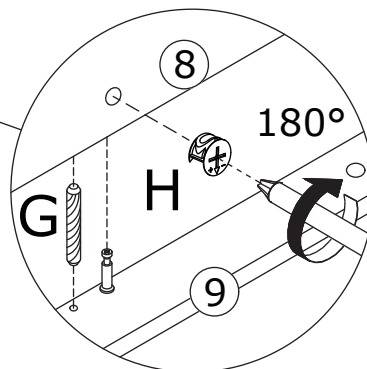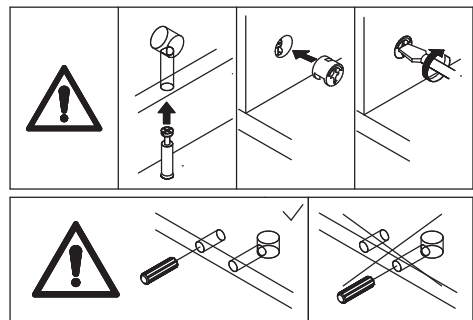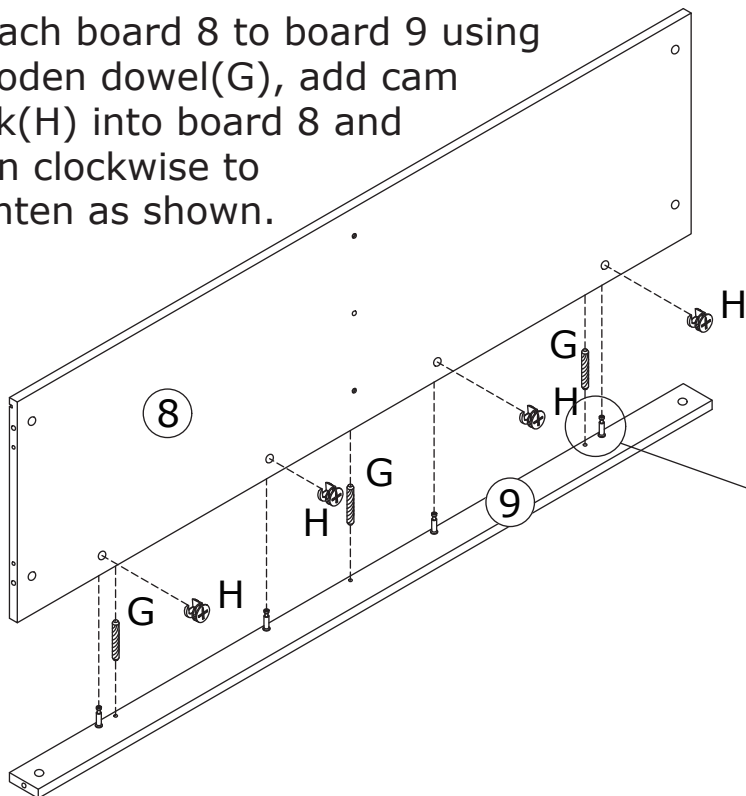




9

G x 2  
  
 Ø 6 x 30 mm

J x 2  
  
 Ø 4 x 35 mm




Attach board 10 to board 8 using wooden dowel(G), and fix with screw(J) as shown.

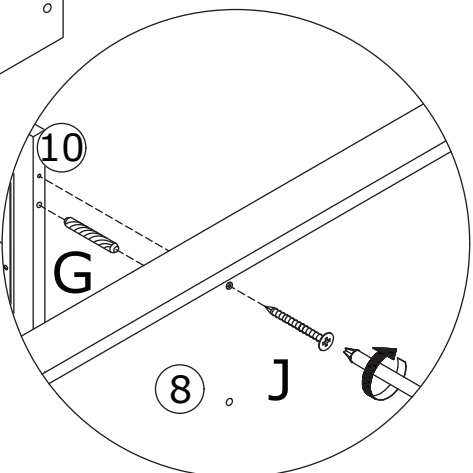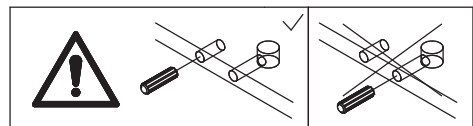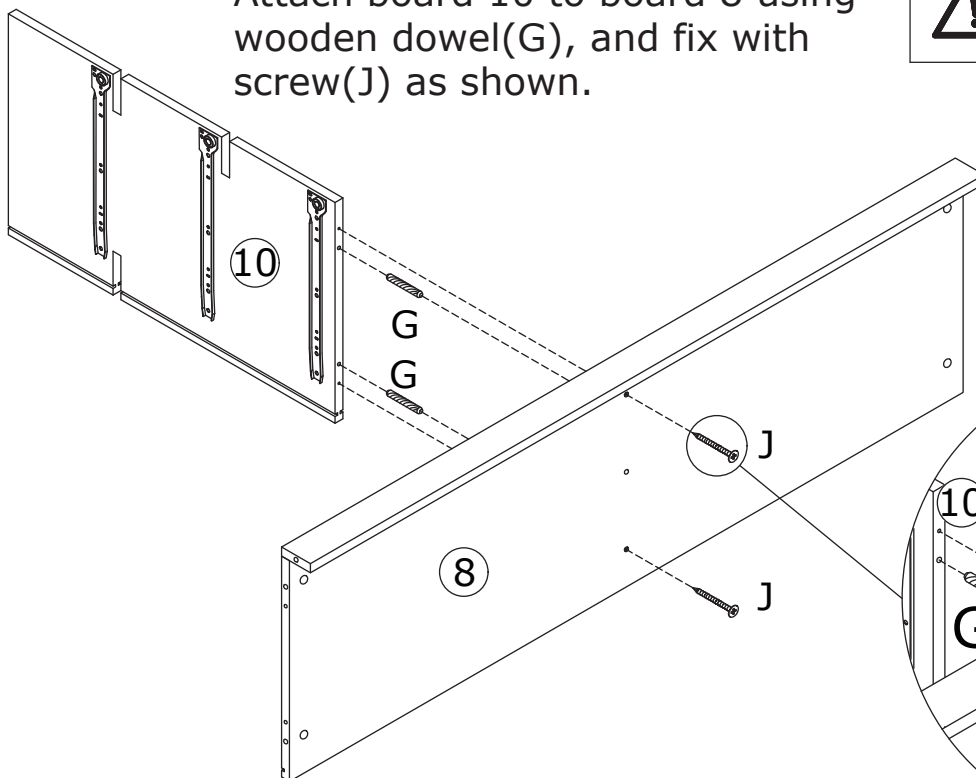

# 10

Connect board 12, 13 and 14 to board 10 as shown.

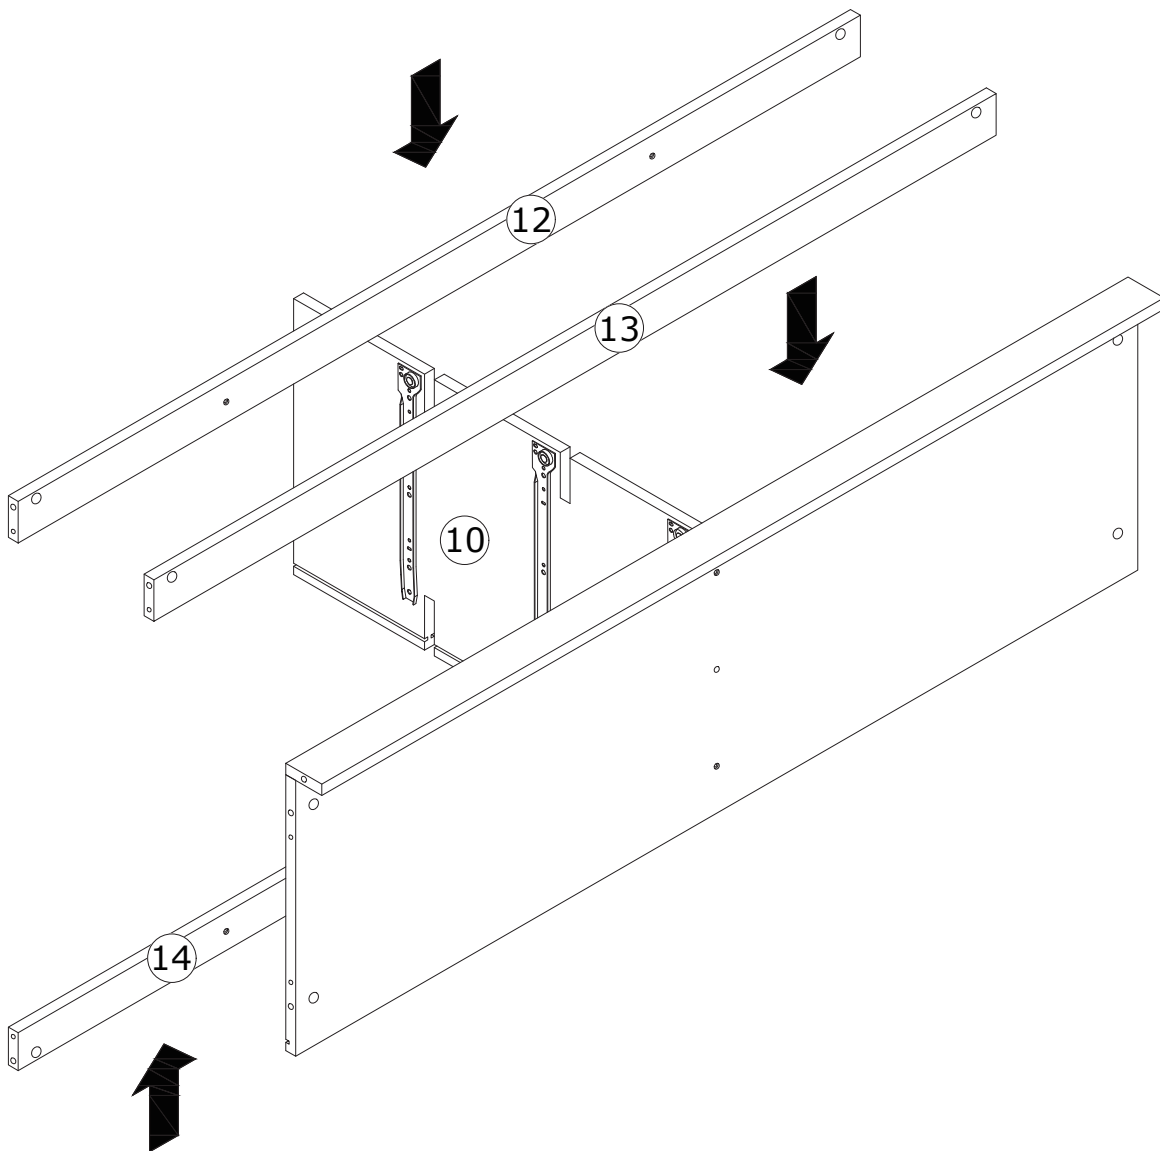

# 11

G x 10




Ø6 x 30 mm



H x 12



Ø15 x 10 mm

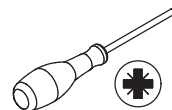


Connect the two components(assembled in step 3) to board 12, 13, 14, 8 and 9 using wooden dowel(G), add cam lock(H) into and turn clockwise to tighten as shown.

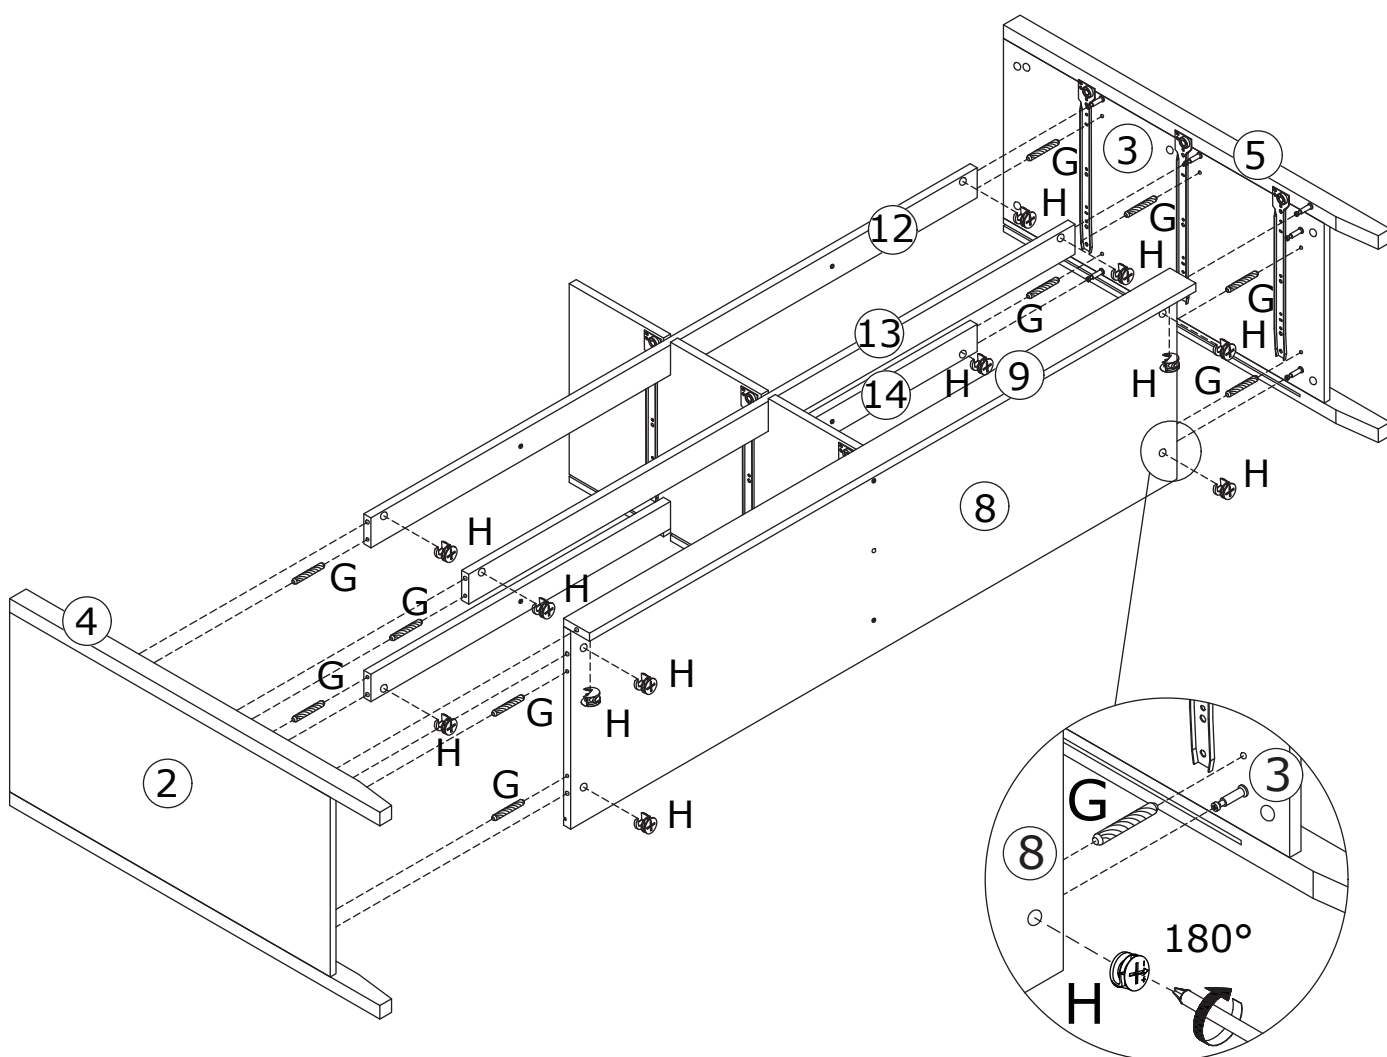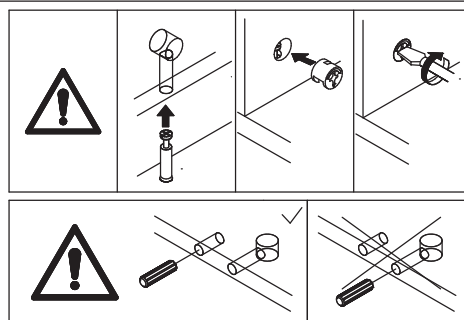

# 12

K x 1

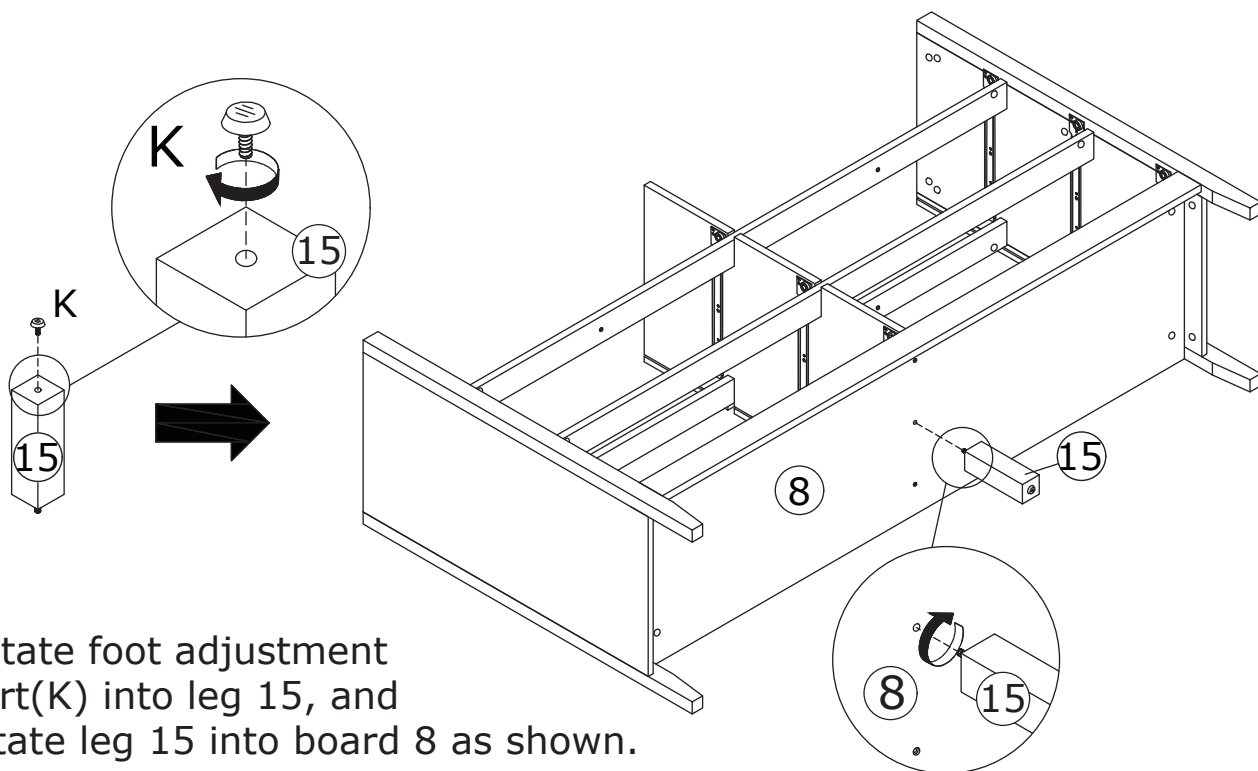



Rotate foot adjustment part(K) into leg 15, and rotate leg 15 into board 8 as shown.

# 13

J x 4




Ø4 x 35 mm

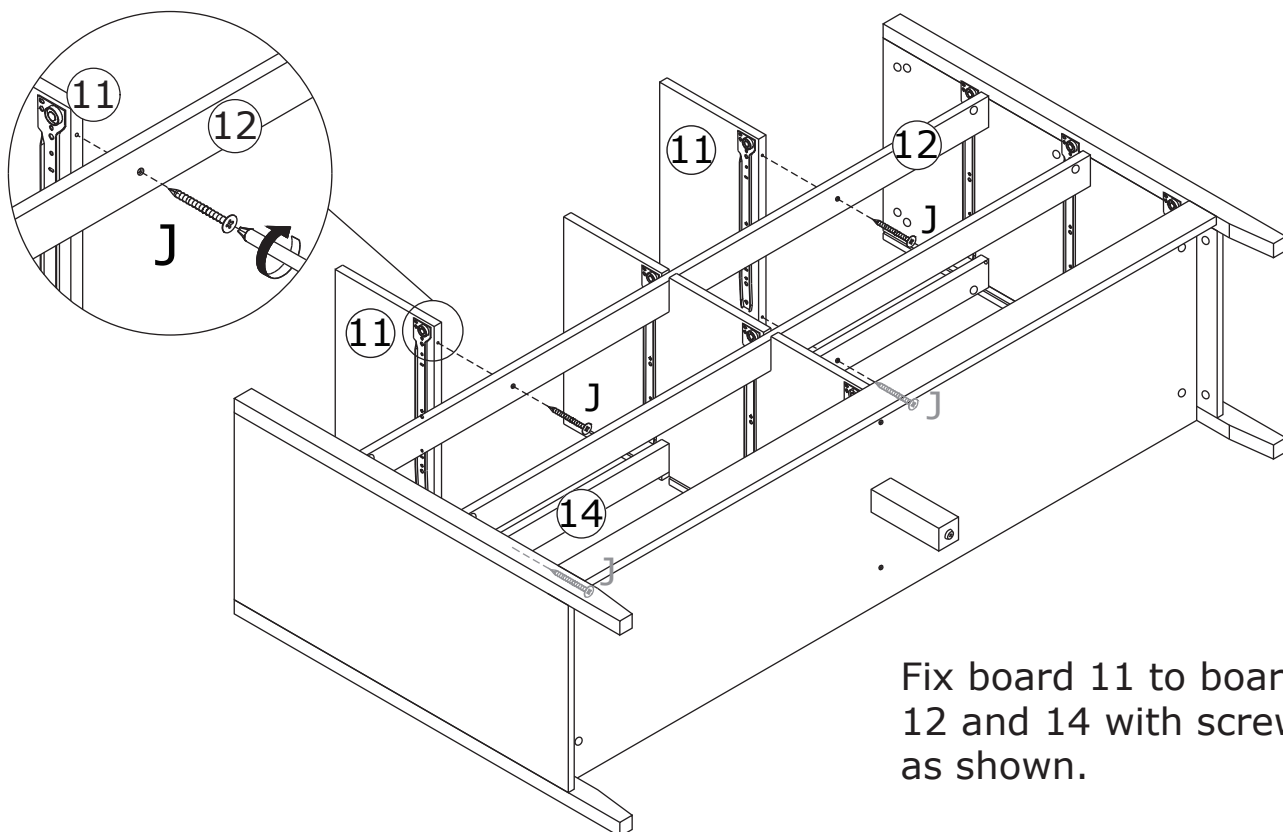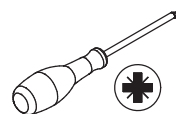


Fix board 11 to board 12 and 14 with screw(J) as shown.

# 14



F x 10

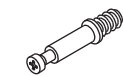

Ø6 x 35 mm

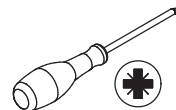

Screw eccentric rod(F) into board 1 as shown.

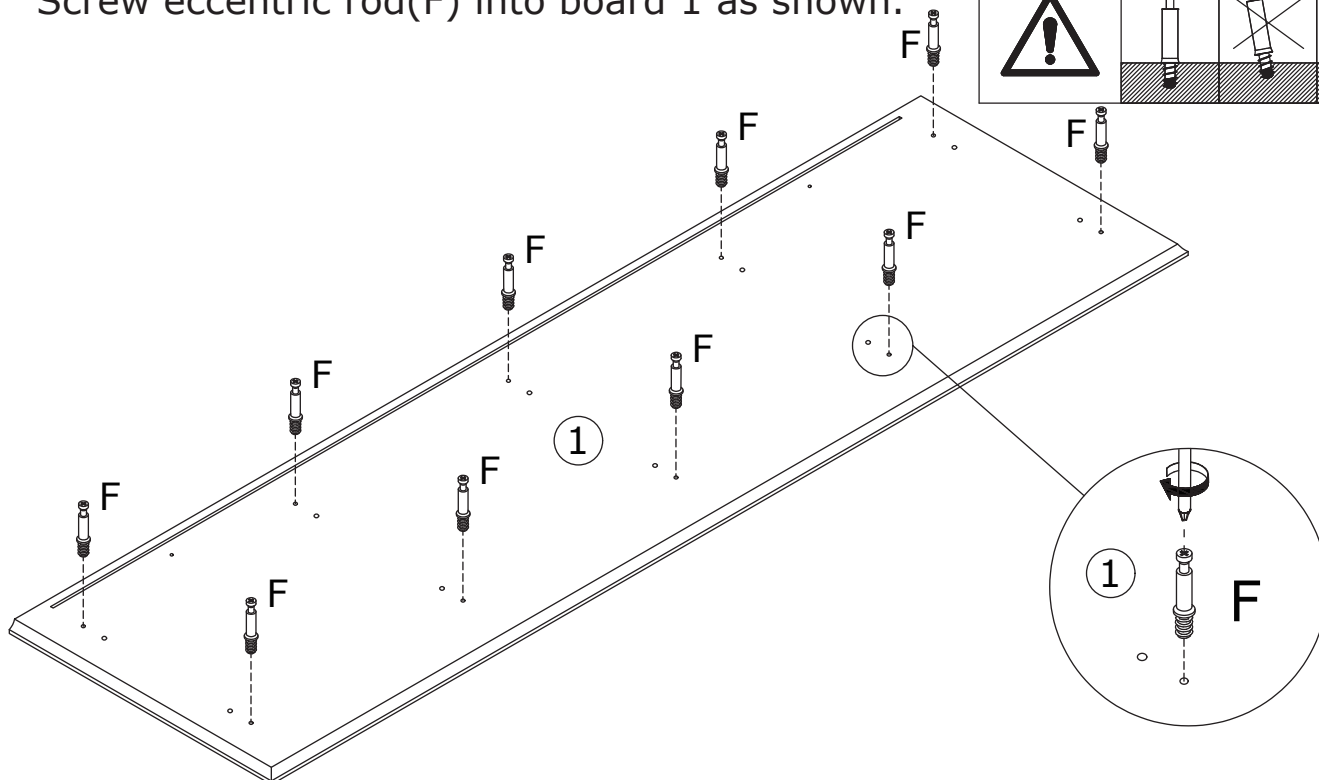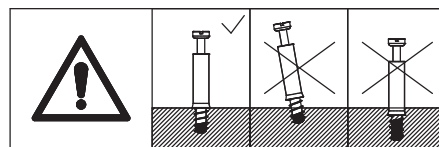

# 15



L x 2



M x 2




Ø4 x 14 mm

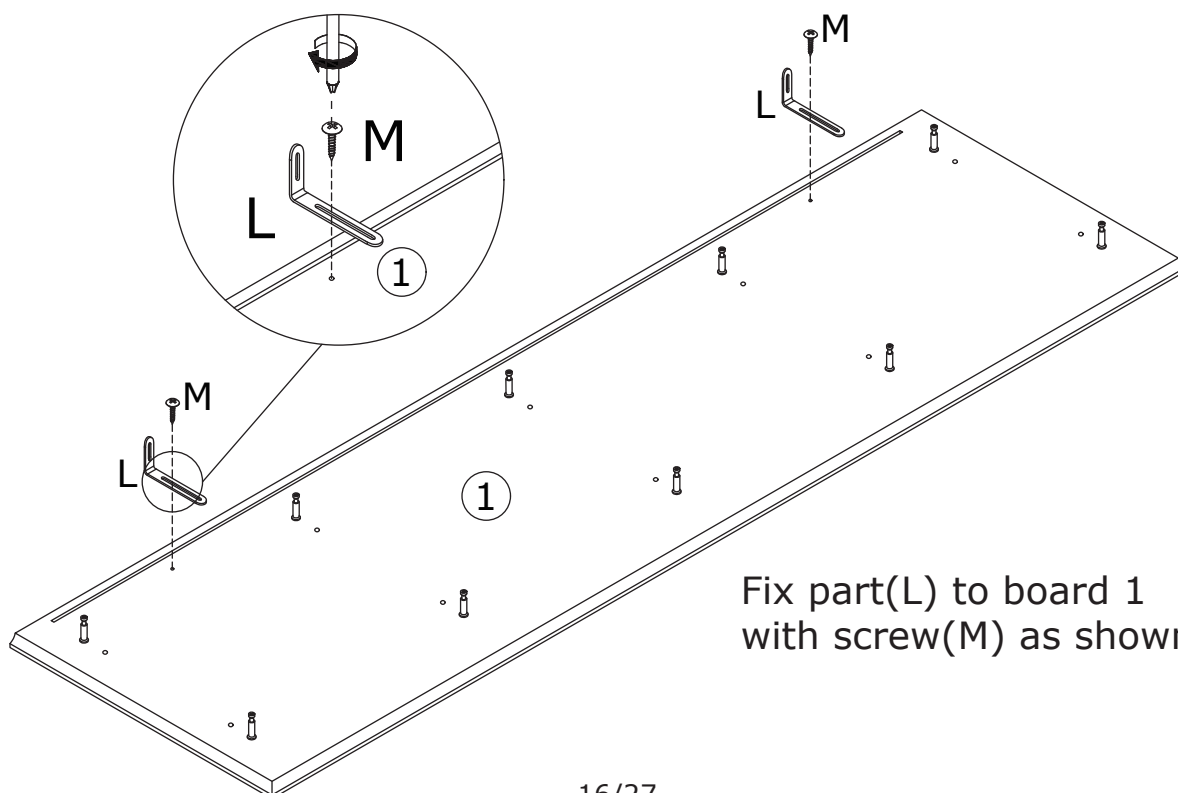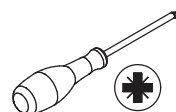

Fix part(L) to board 1 with screw(M) as shown.

# 16

Insert back board 16, 17 and plank 18 along available grooves as shown.

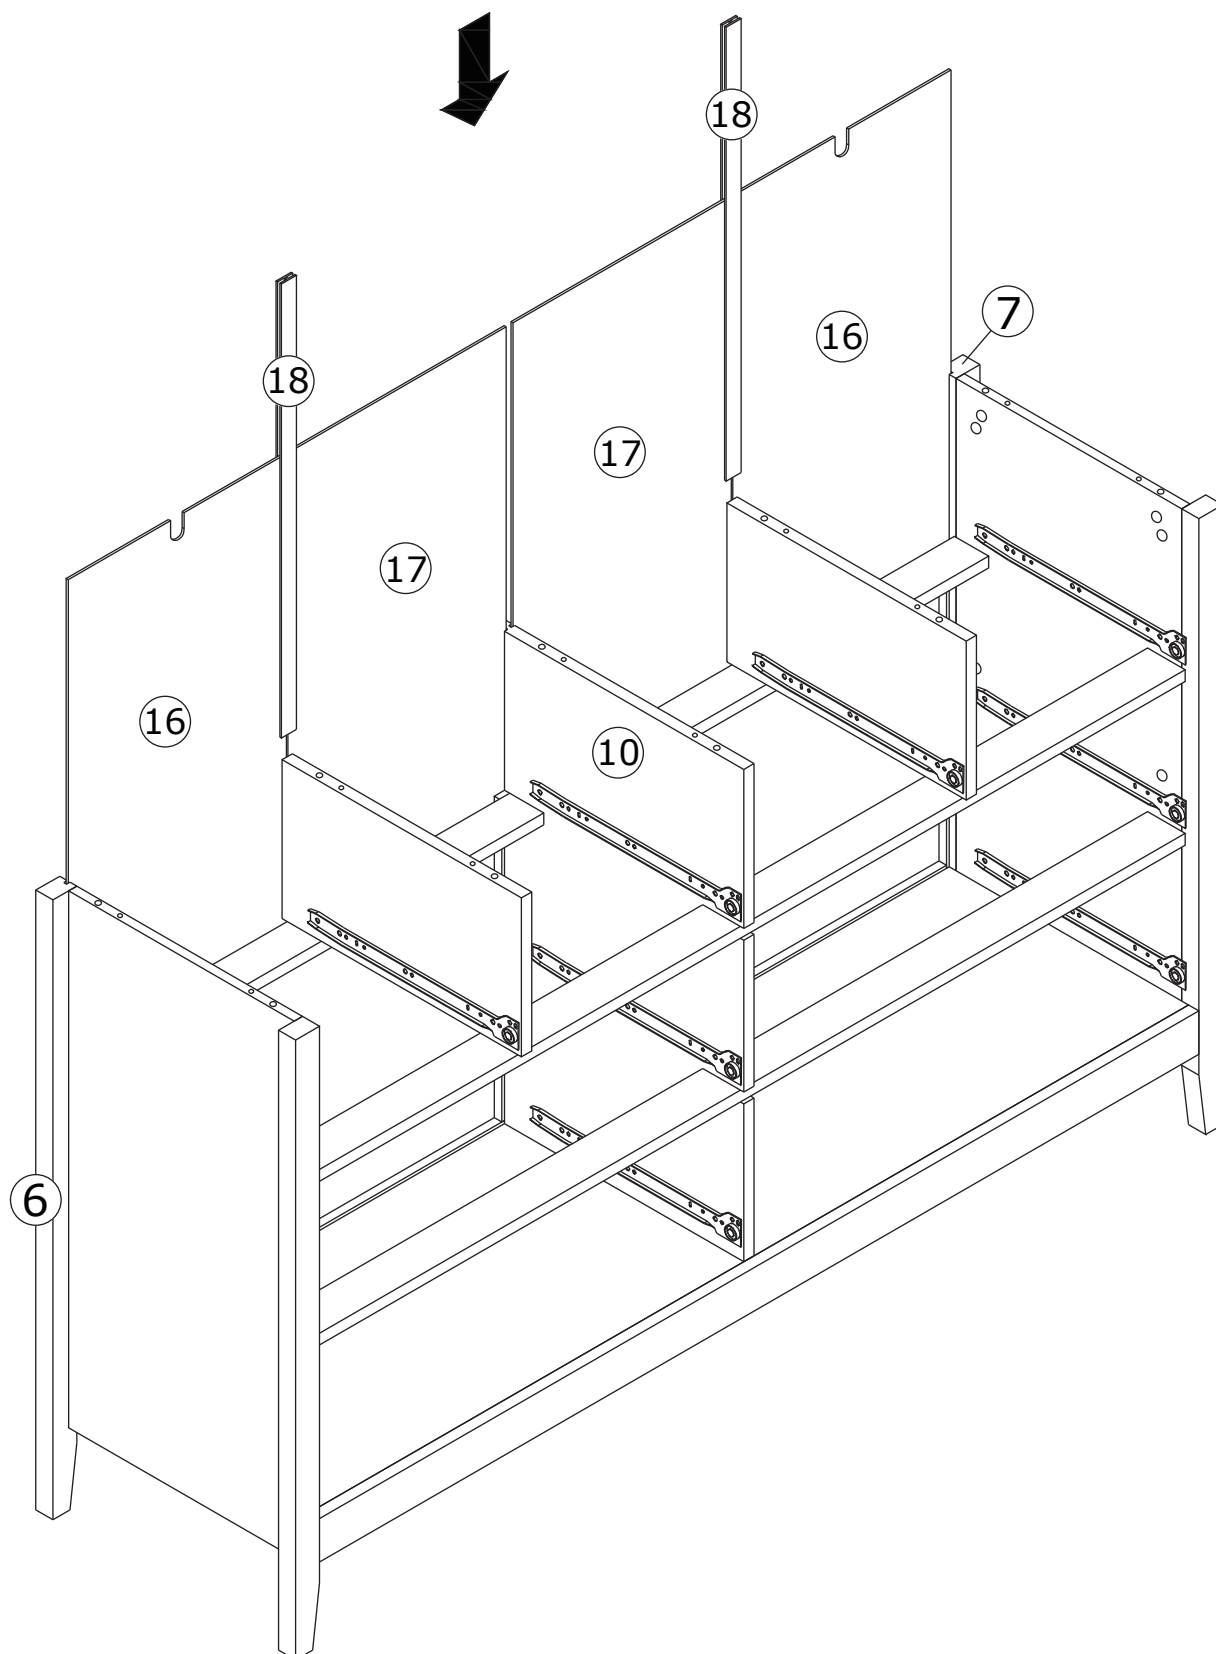

# 17

G x 10




Ø6 x 30 mm



H x 10



Ø15 x 10 mm

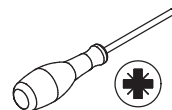

Cover board 1 to the top using wooden dowel(G), add cam lock(H) into and turn clockwise to tighten as shown.

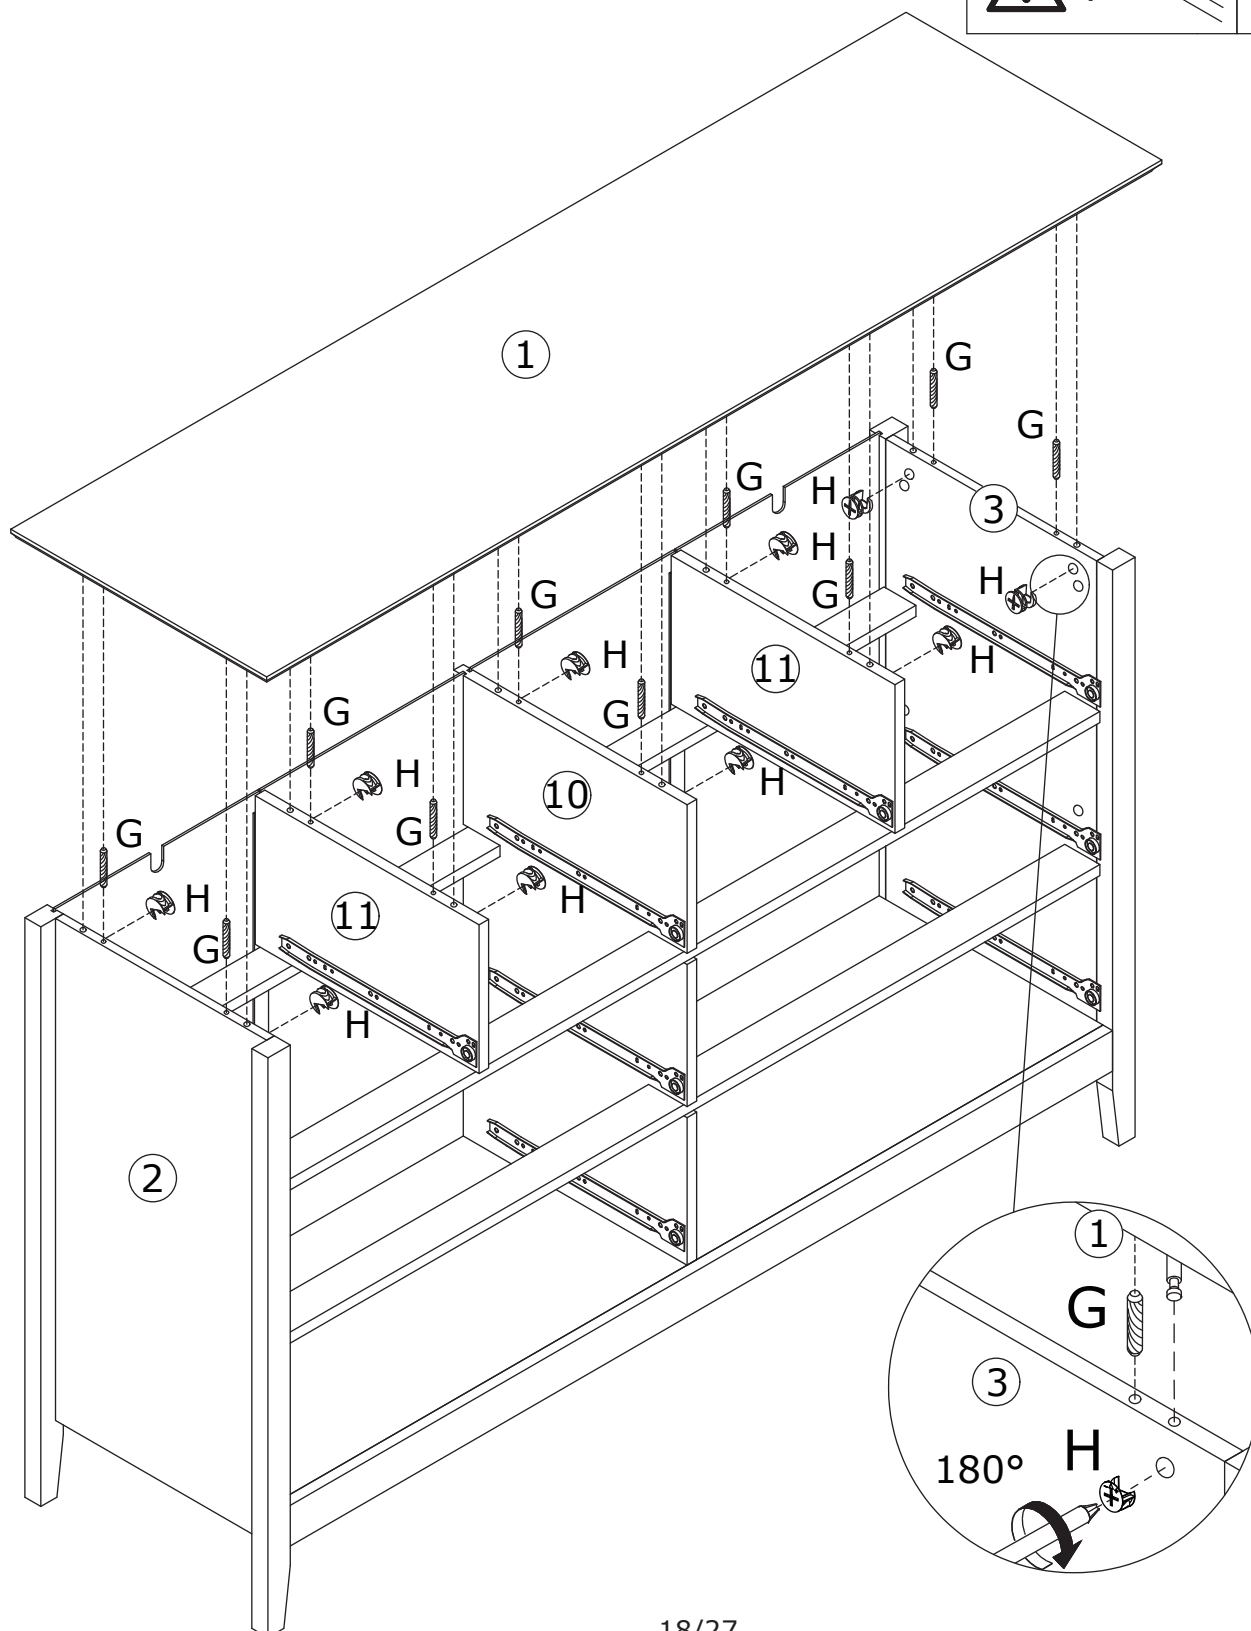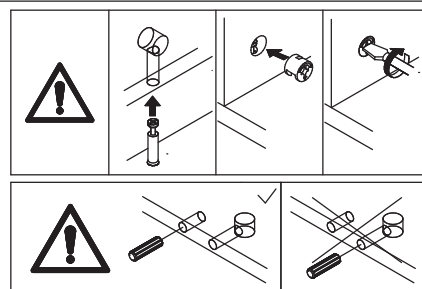

# 18


N x 20




P x 20



Ø3 x 14 mm

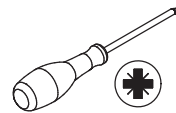

Insert buckle(N) into back slots and fix with screw(P) as shown.

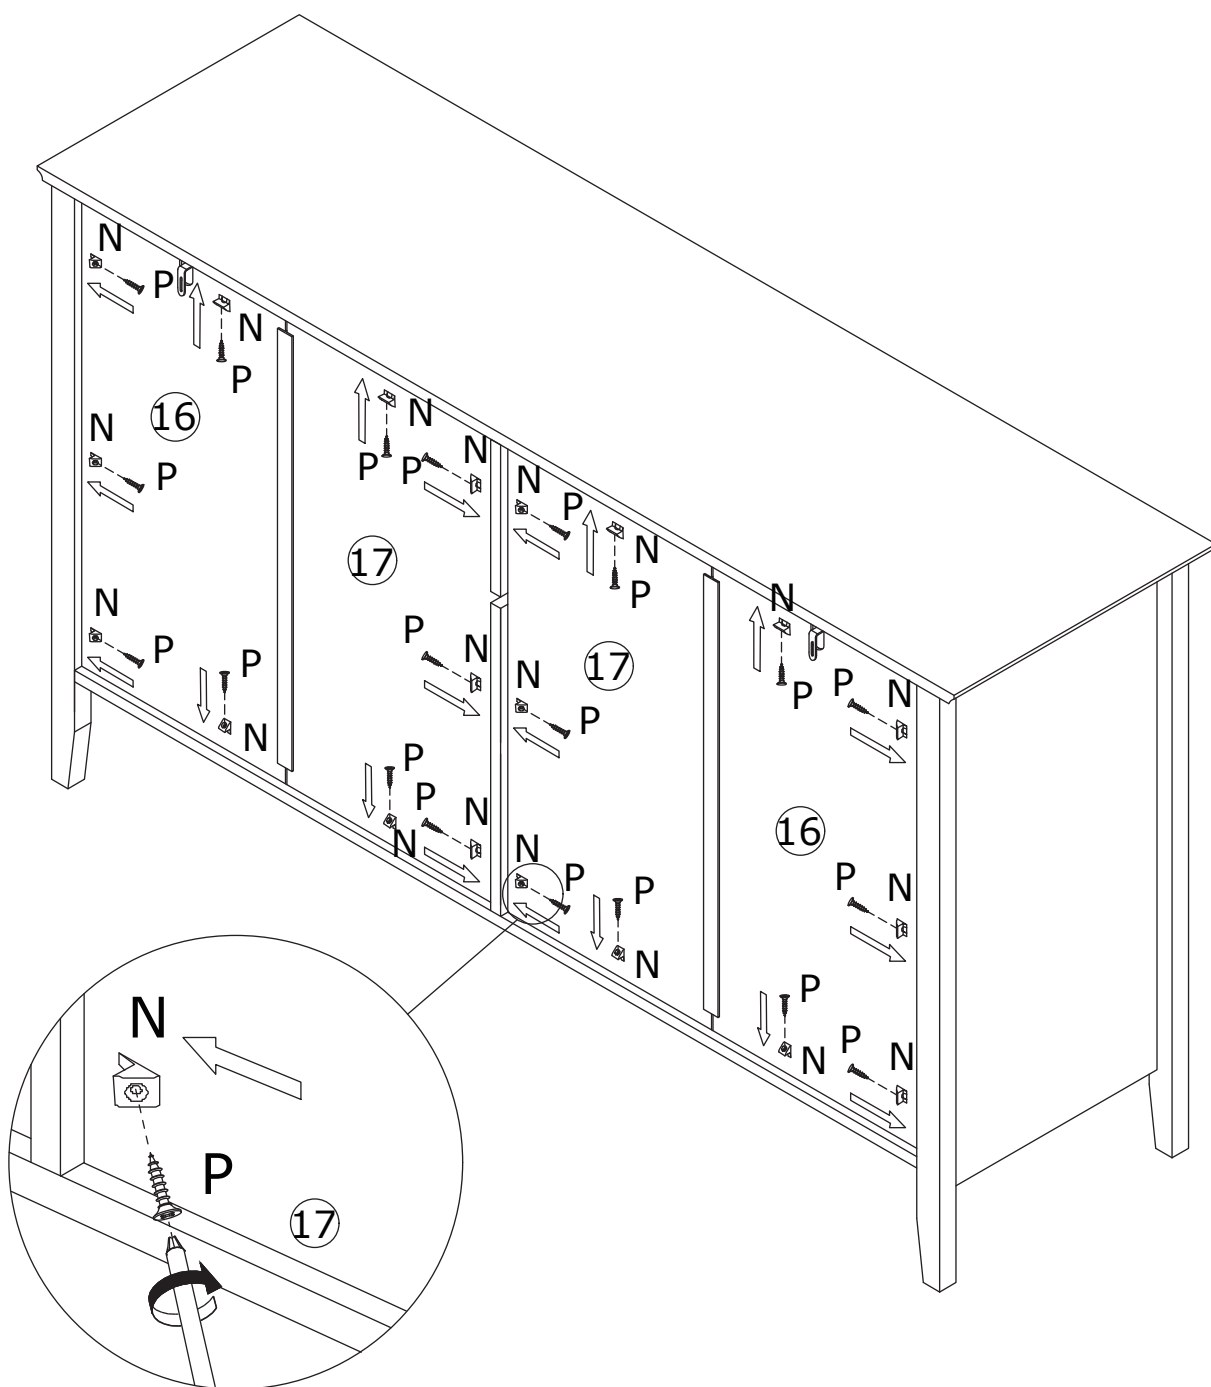


# 19







F x 16



Ø6 x 35 mm

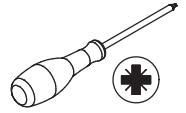

Screw eccentric rod(F) into board 19, 20, 21 and 22 as shown.

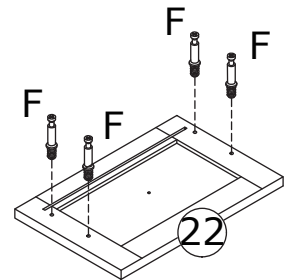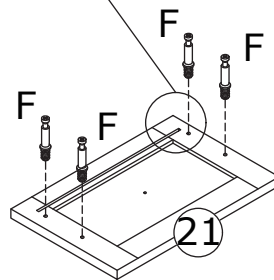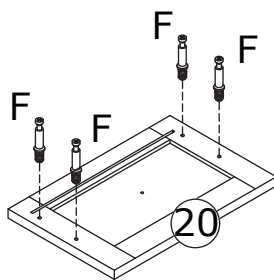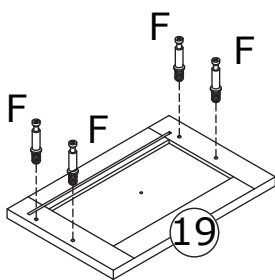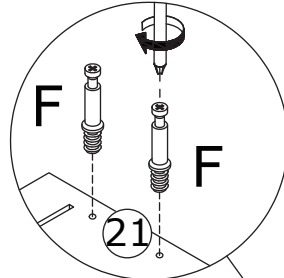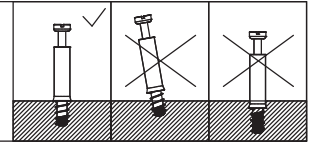


# 20







H x 16



Ø15 x 10 mm

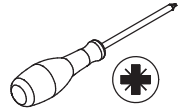


Attach board 25 and 26 to board 19, 20, 21 and 22 respectively, add cam lock(H) into and turn clockwise to tighten as shown.

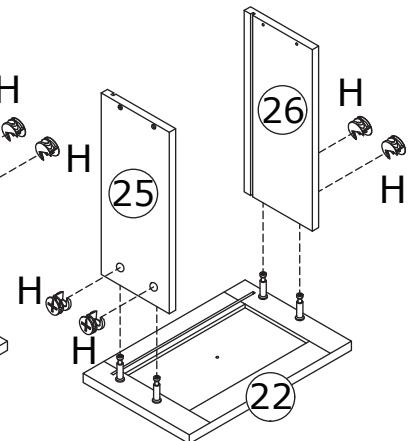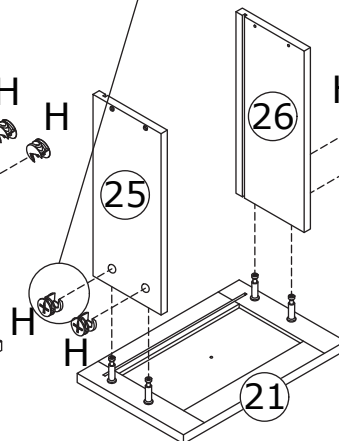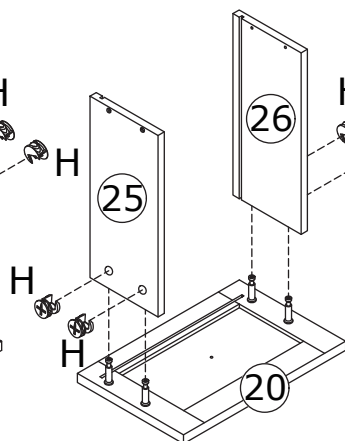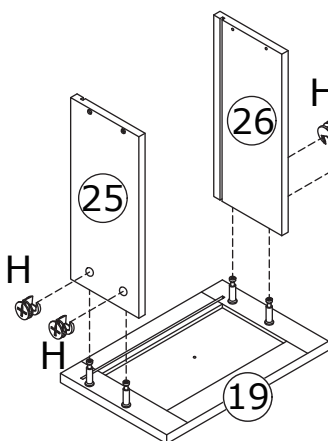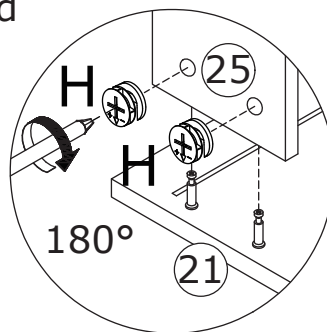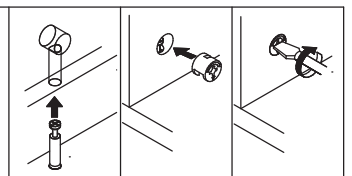



# 21

Insert bottom board 28 along available grooves as shown.


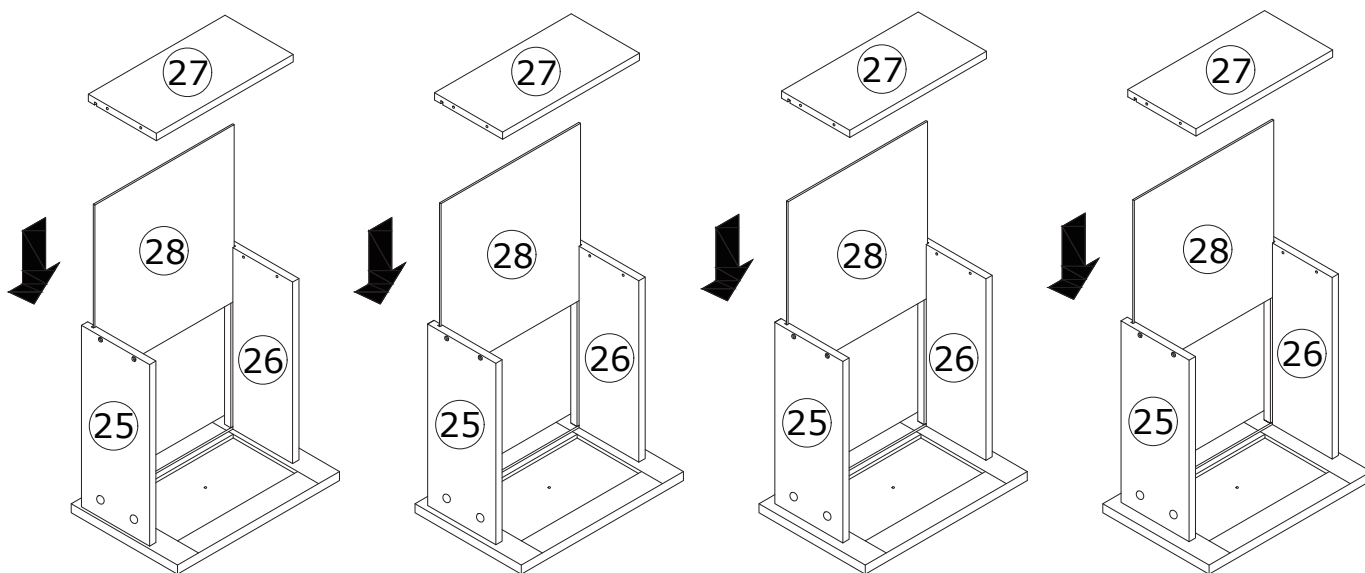


# 22

Q x 16

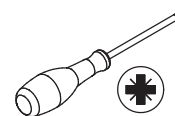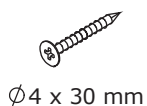

Fix board 27 to board 25 and 26 with screw(Q) as shown.

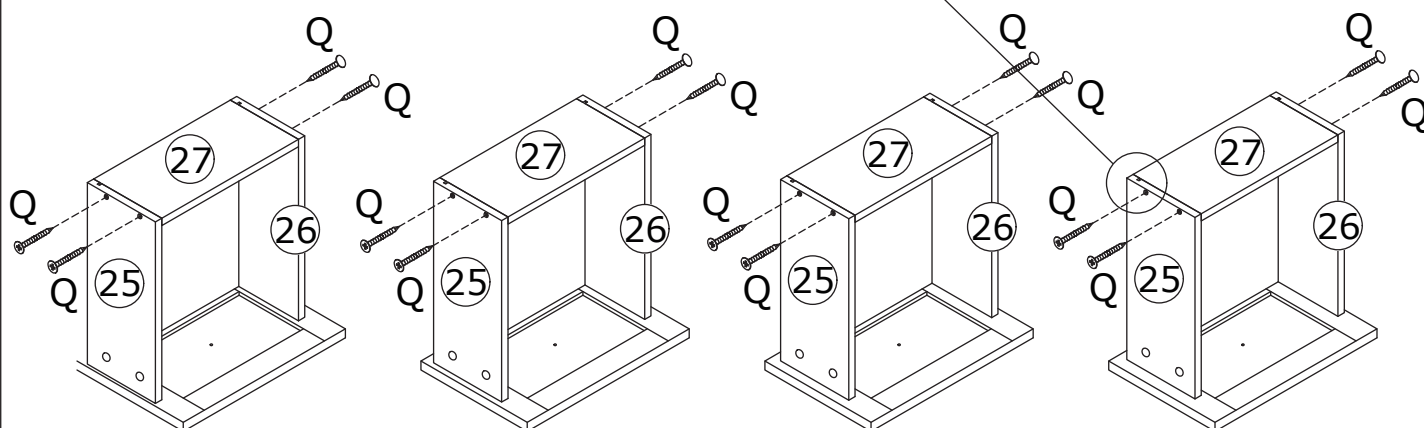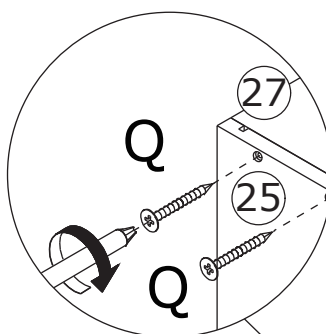

# 23






R x 4




S x 4



Ø4 x 14 mm

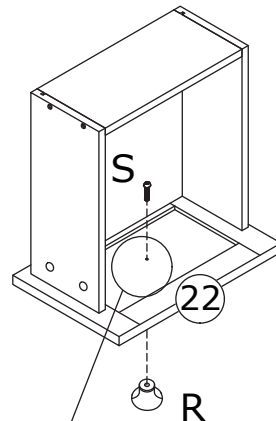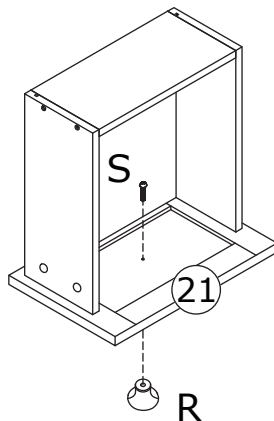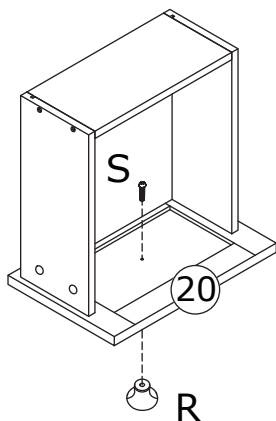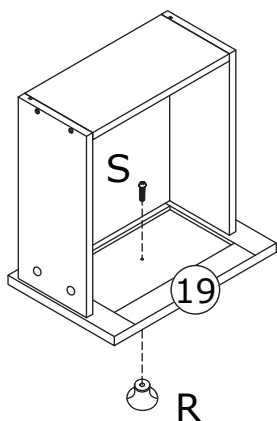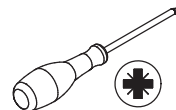


Fix knob(R) to board 19, 20, 21 and 22 with screw(S) as shown.

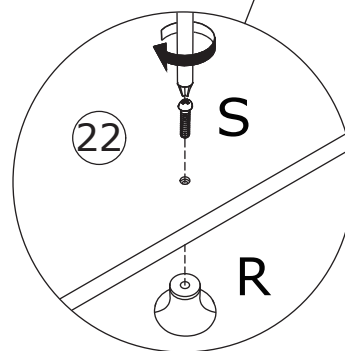


# 24





F x 20

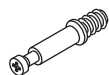


Ø6 x 35 mm

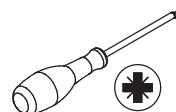


Screw eccentric rod(F) into board 23 and 24 as shown.

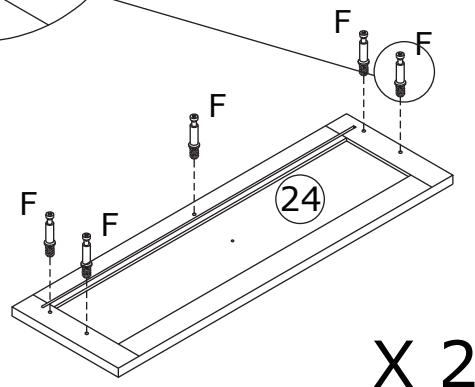
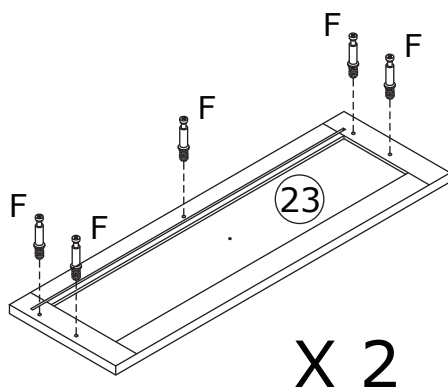
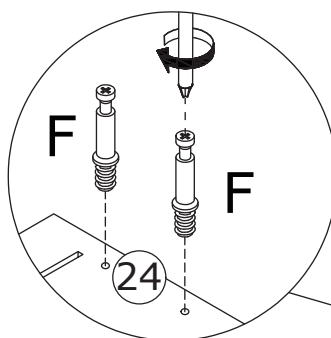
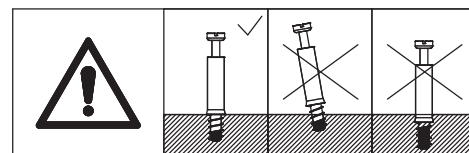


# 25

H x 20  
  
 Ø15 x 10 mm


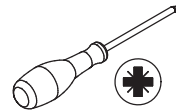


Attach board 25, 30 and 26 to board 23 and 24 respectively, add cam lock(H) into and turn clockwise to tighten as shown.

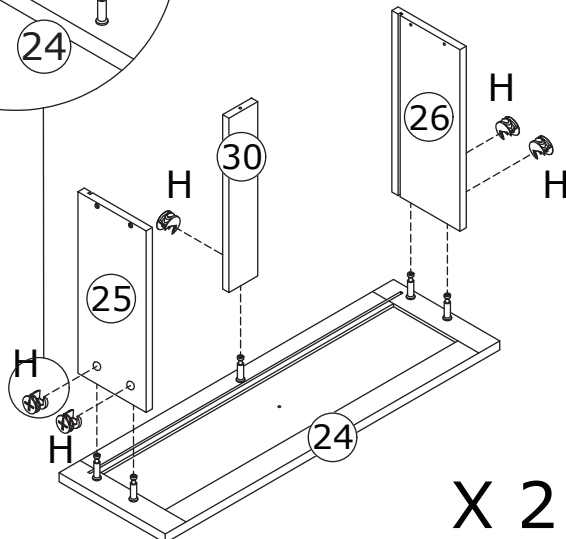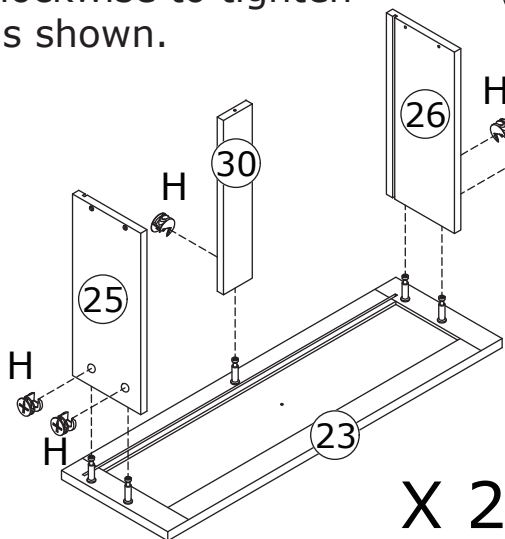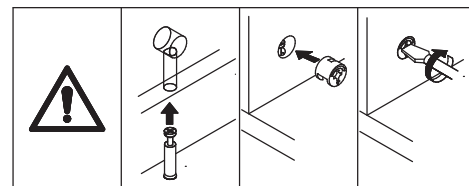
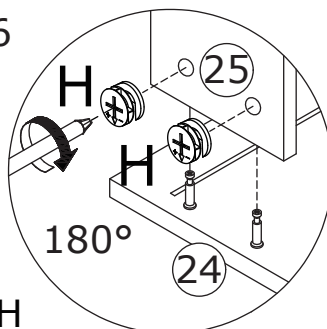


# 26


Insert bottom board 31 along available grooves as shown.

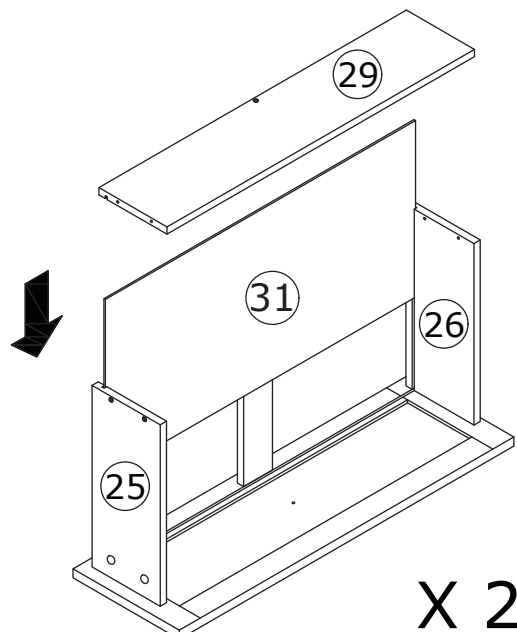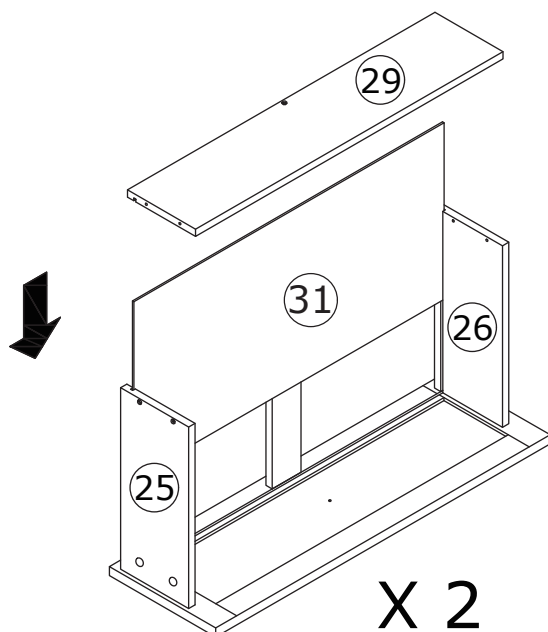



# 27

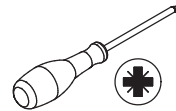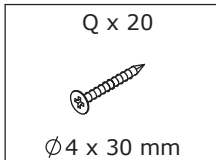

Fix board 29 to board 25, 30 and 26 with screw(Q) as shown.




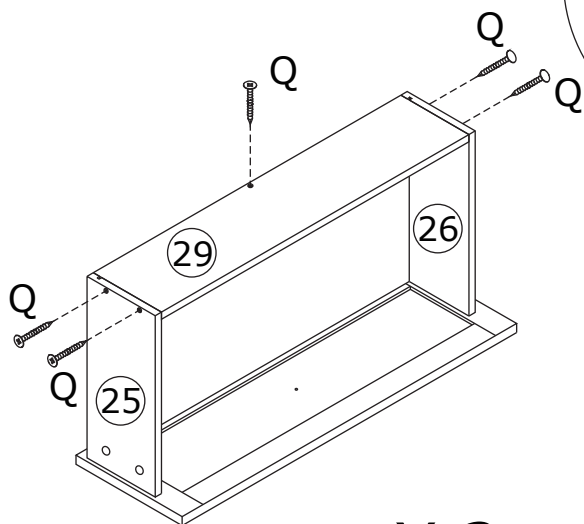


X 2

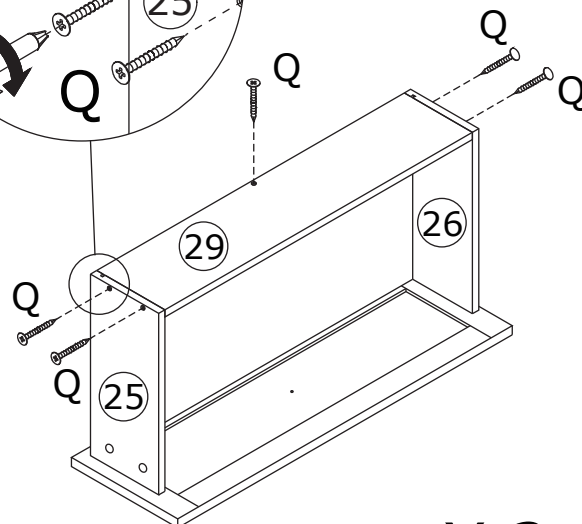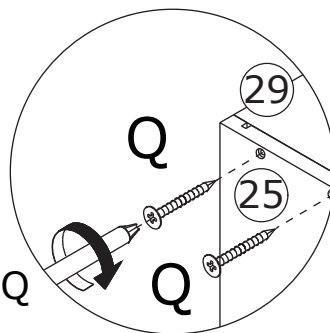


X 2

# 28

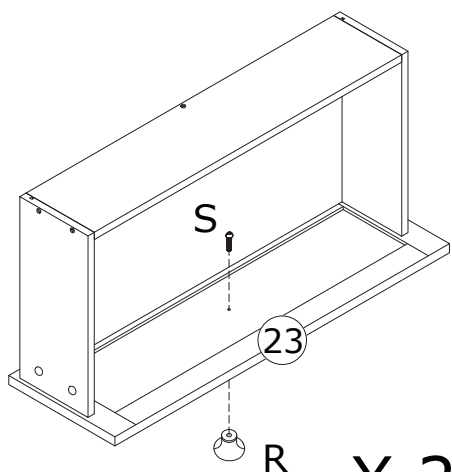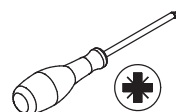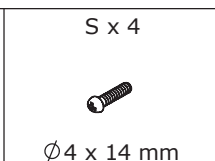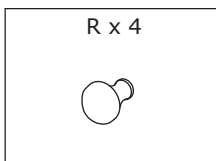


X 2

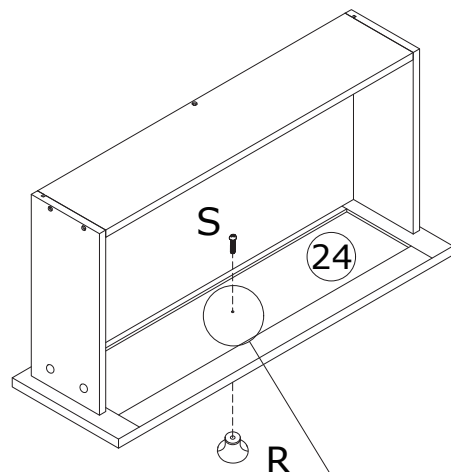


X 2

Fix knob(R) to board 23 and 24 with screw(S) as shown.

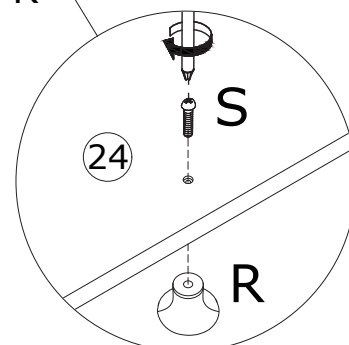


# 29




C x 8

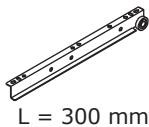







D x 8

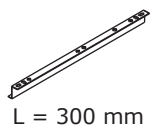


E x 48

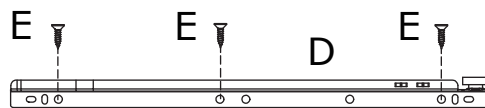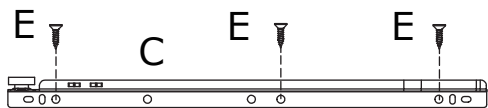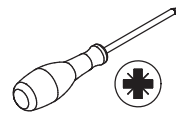

Fix runner(C) and (D) to board 25 and 26 with screw(E) as shown.

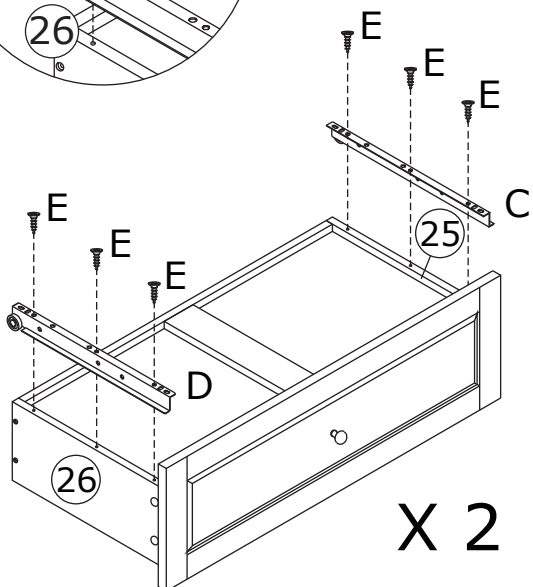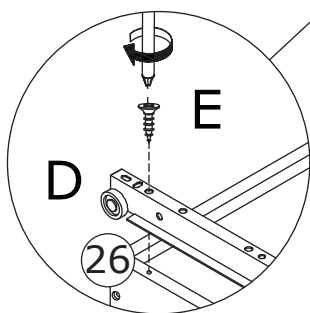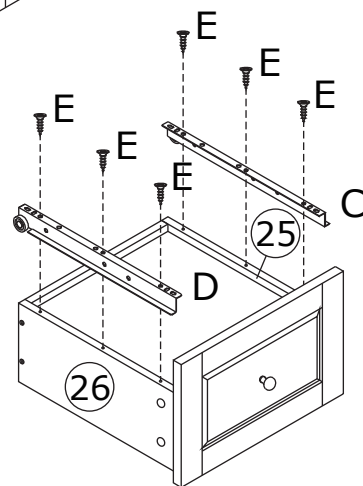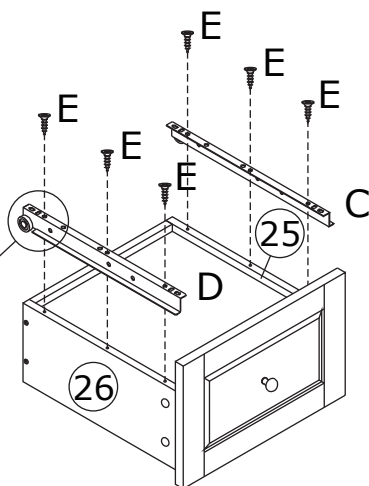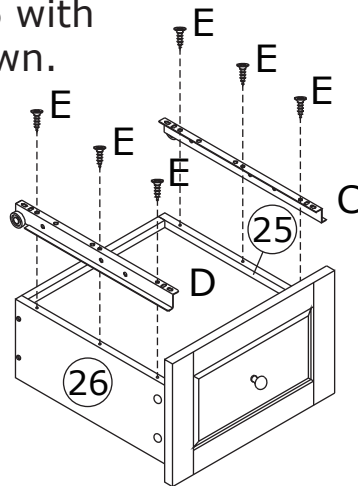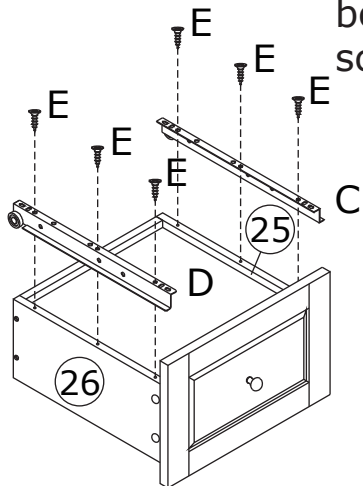

X 2

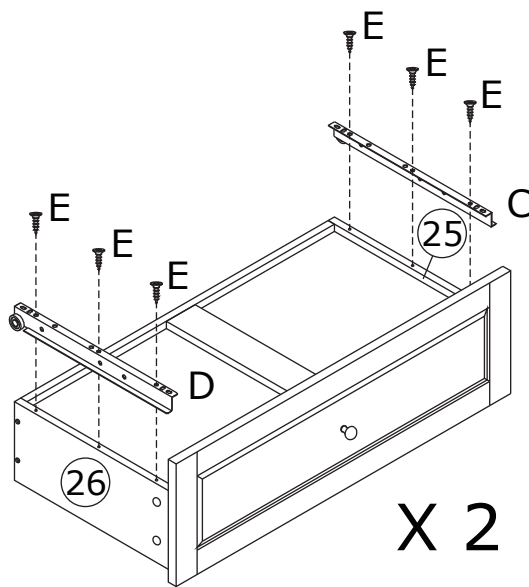

X 2

30




T x 2



U x 2







Ø4 x 40 mm

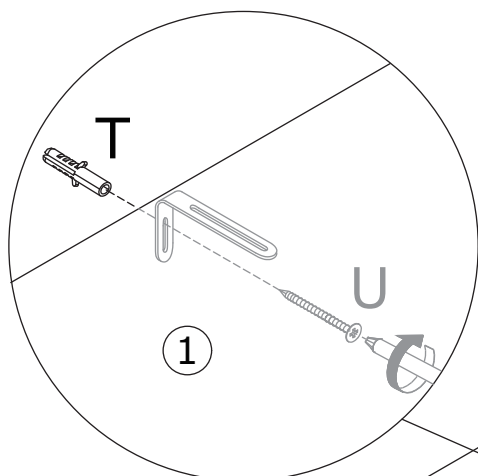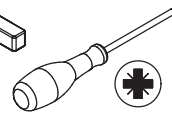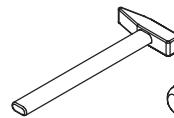

Install anti-tipping device as shown.

WALL

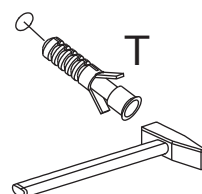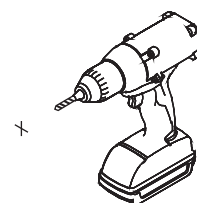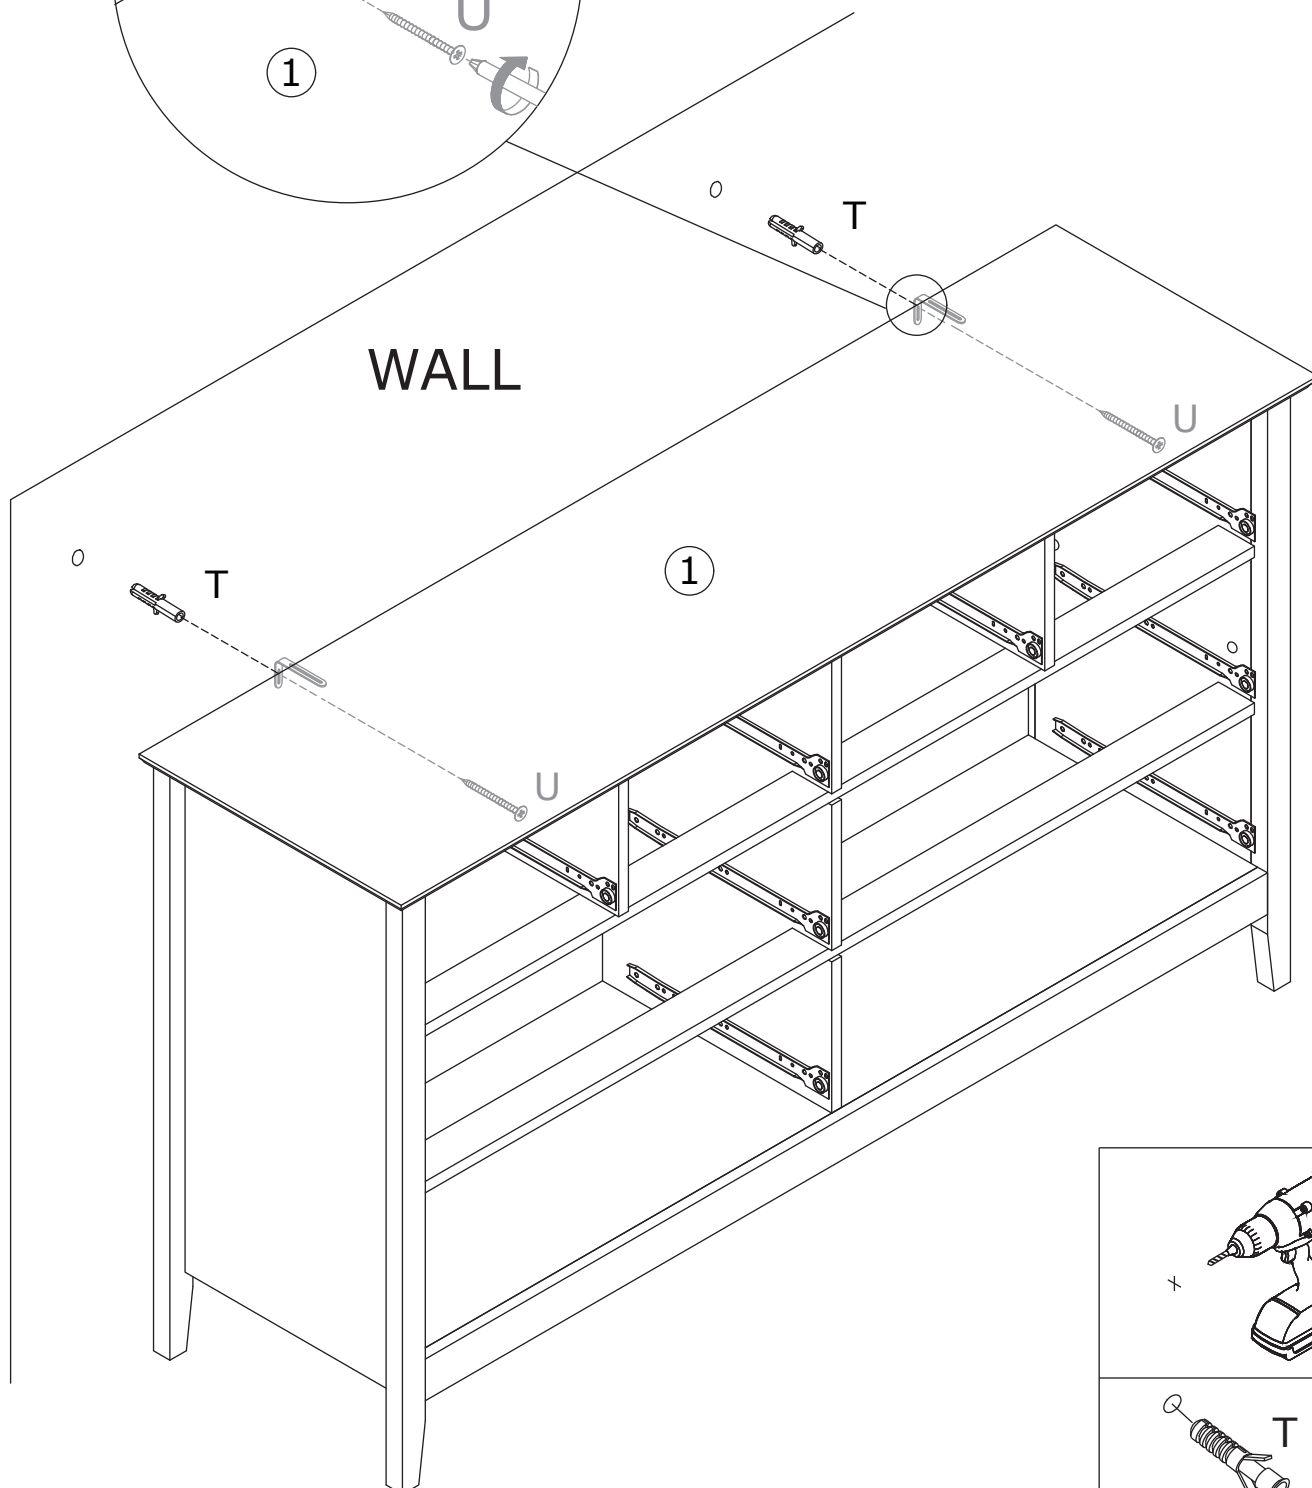

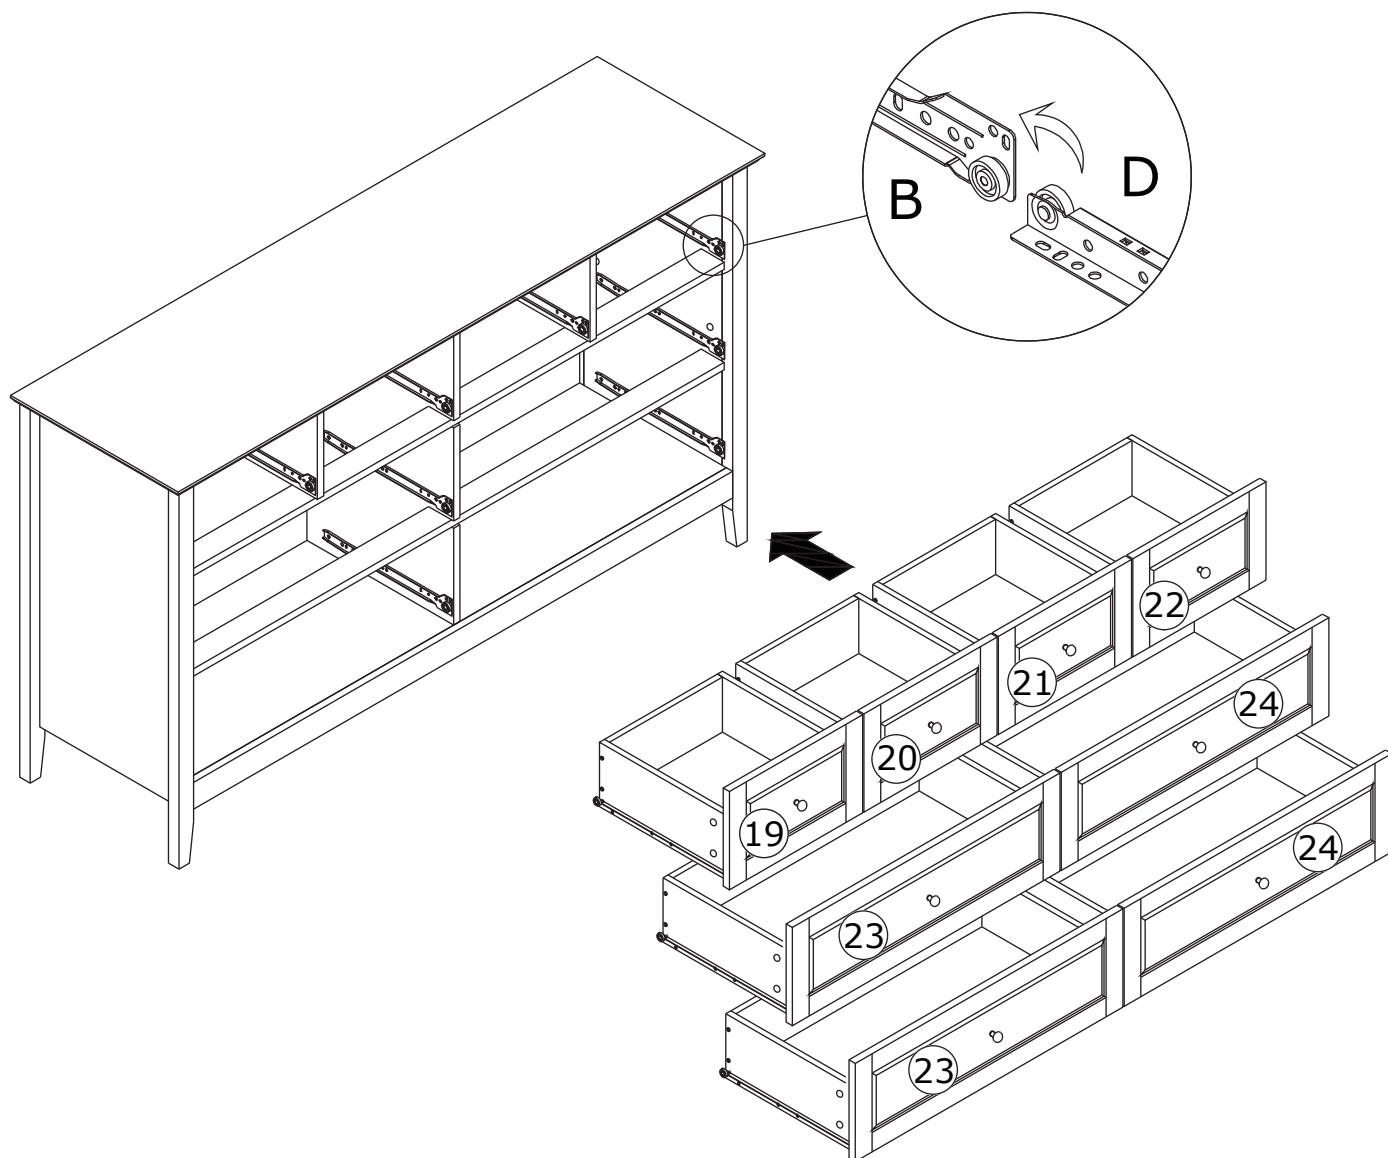

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.