



Photo: BCB1 – Base only does not include upper

Bakers Cart Base Only BCB1

If you need assistance, please call 1-877-ENCLUME


Enclume Design Products

24 Colwell Street, Port Hadlock, WA 98339



Enclosed you will find everything needed for the assembly and use of your Bakers Cart Base. Two people make assembly and installation easier. The parts and hardware included are:

- 2 – Rectangular upright supports
- 1 – Butcher block work surface
- 1 – Steel trim band
- 1 – Middle shelf rim with rivets
- 1 – Lower shelf rim with rivets
- 2 – Cart Handles
- 2 – Grid Shelves
- 16 – $3/8'' \times 1/2''$ Button head screws
- 4 – $3/8'' \times 3/4''$ Button head screws
- 4 – Locking caster wheels
- 1 – $5/32''$ Allen wrench (small)
- 1 – $7/32''$ Allen wrench (large)
- 4 – $1/4'' \times 7/8''$ Button head Screws

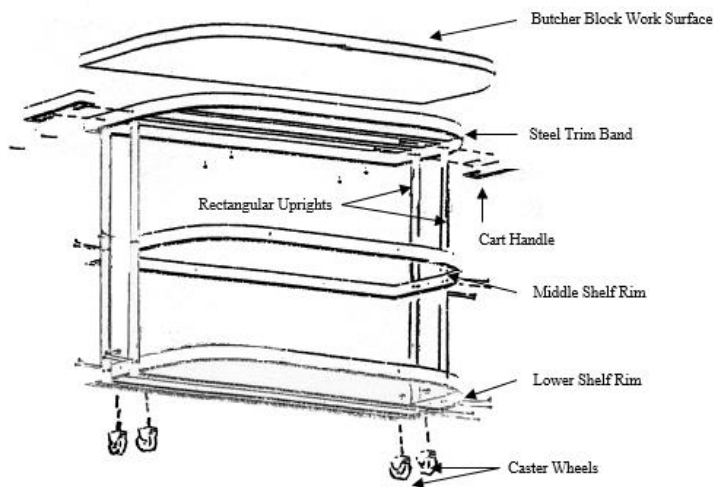

Assembly and Installation Instructions

- 1) The rectangular uprights are marked FRONT and BACK. Stand them on the floor in correct relationship to one another, about 11" apart. The top of the rectangular upright have slots. The bottom of the rectangular uprights have round threaded holes.
- 2) The lower shelf rim has a total of six threaded holes along the sides near the bottom. Slide the lower rim inside the rectangular uprights. Attach the rim to the uprights using 6 – $1/2''$ button head screws. The button heads should be inserted from the outside to the inside with the head of the screw visible from the outside of the Bakers Cart. **Leave the screws loose.**
- 3) The middle shelf rim has a total of four threaded holes along the sides near the bottom. Follow the same procedure as in Step 2, using 4 – $1/2''$ screws. **Leave the screws loose.**
- 4) The steel trim band has a total of four unthreaded holes along the sides. Place the band OVER the top of the rectangular uprights. Make sure the rounded side of the band is on the front side of the unit. Attach the cart handles and the trim band to the rectangular Uprights using the 4 – $3/4''$ button head screws, going from inside the cart handles through the outside of the steel trim band and rectangular uprights. **Leave the screws loose.**
- 5) Square up the entire unit using a carpenters square. **Tighten down all the screws.**
- 6) Gently tilt unit backwards until it is lying flat on its back. Attach the four caster wheels to the bottom of the rectangular upright. Make sure the acorn nuts are secured tightly. **Lock the caster wheels** by flipping the tab on each wheel in the down position.
- 7) Gently place the unit back into the upright position
- 8) Place the butcher block work surface on top of assembled unit with the rough surface facing down. Line up mounting holes in back of the unit. Secure tightly in place with four $1/4'' \times 7/8''$ button head screws and the small Allen wrench.
- 9) Now place the grid shelves into the middle and lower shelf rims. The grid shelves should rest upon the rivets assembled into each shelf rim. Your Bakers Cart is now fully assembled. Release locks on the caster wheels to move unit.
- 10) The butcher block surfaces have been penetrated with natural mineral oil. To maintain their finish we recommend a periodic application of mineral oil rubbed into all of the wooden surfaces.

WARNING: It is important that your Baker's cart base is assembled correctly. If the unit is assembled or used incorrectly, it could become unstable and collapse, possibly causing injury.

LIMITED WARRANTY: This product is warranted to be free of material defects, other than that from normal use, for a period of five years from the date of purchase. Customer's exclusive remedy shall be the repair or replacement of the defective product and shall be subject to the following conditions: (1) notice of any defect is received by Enclume within the warranty period and (2) customer returns the defective product to Enclume Design Products, 24 Colwell St., Port Hadlock, WA 98339, postage prepaid within 20 days following a return authorization number (which may be obtained by telephoning the number at the top of this instructions) being provided to the customer by Enclume. There are no other warranties, expressed or implied. THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ENCLUME SPECIFICALLY DISCLAIMS ANY AND ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE PURCHASE OR USE OF ENCLUME'S PRODUCTS.