

ASSEMBLY INSTRUCTIONS

Kitchen Island

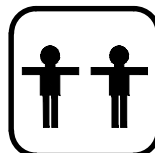 
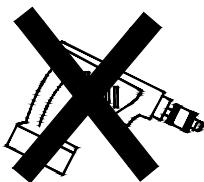 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.




+

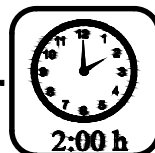 

Tools Required

 

(Not Included)

 

(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation







Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions








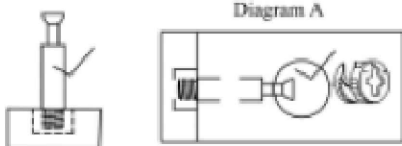 
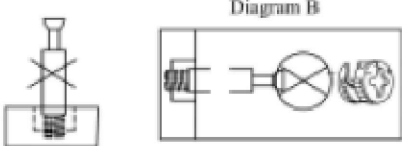 
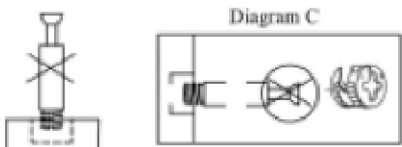 
 
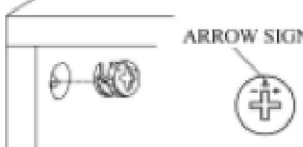 
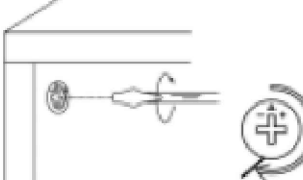 
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

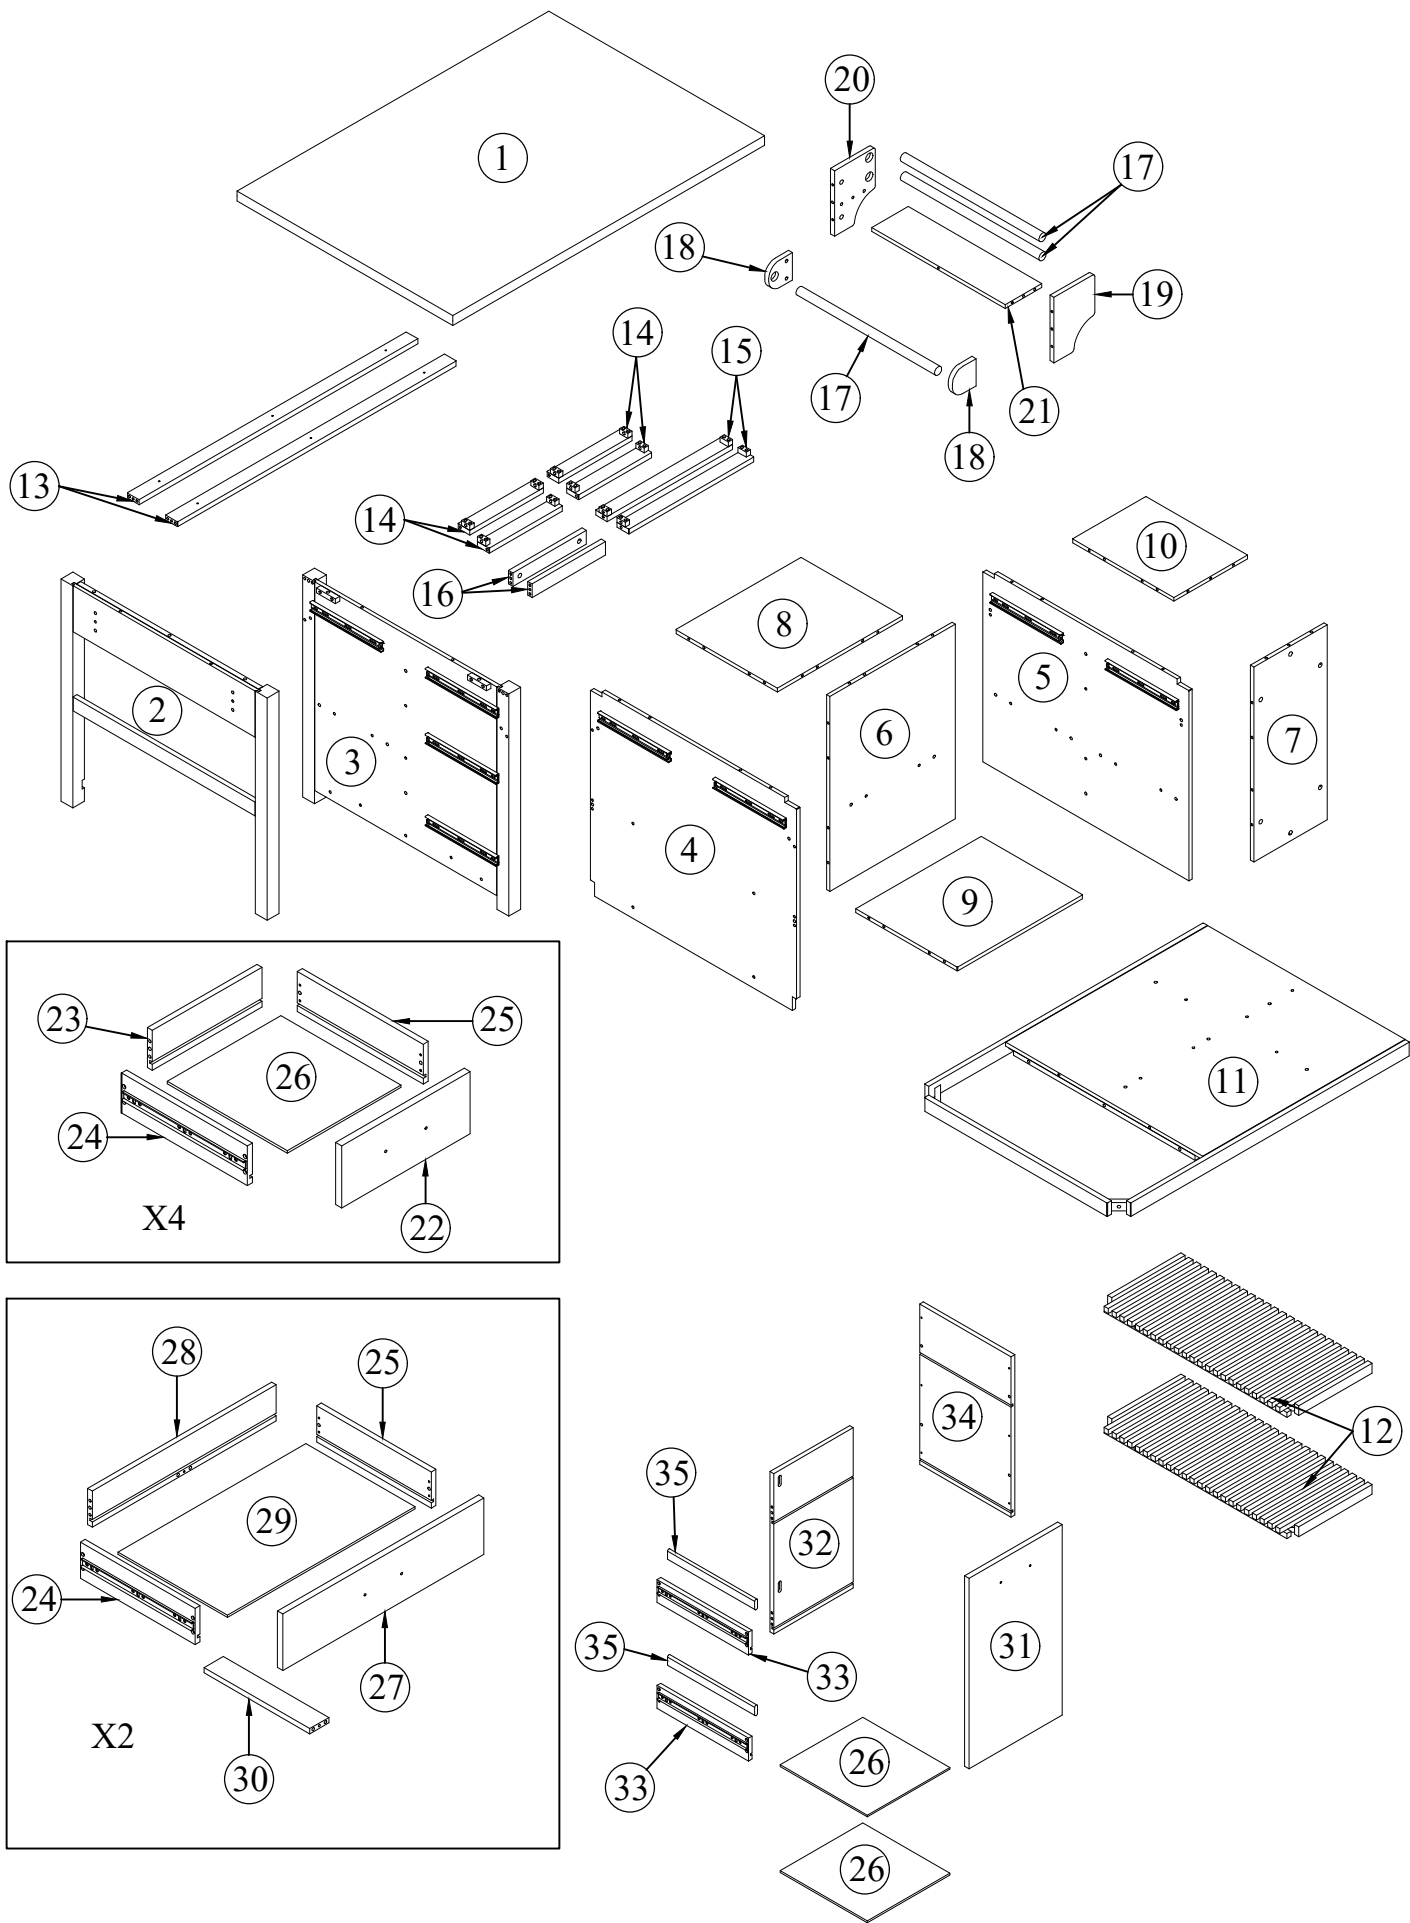 Detail View - CABINET

















Identifying the Hardware - identify the hardware using the illustrations below.

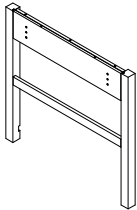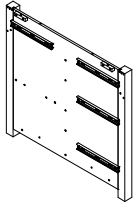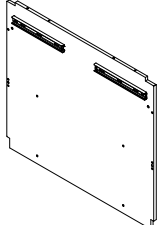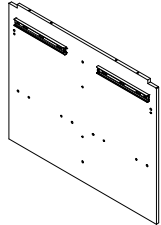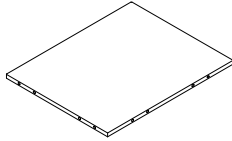       
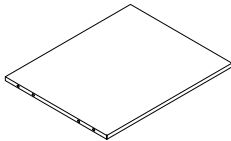 
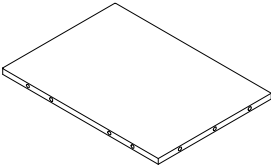 
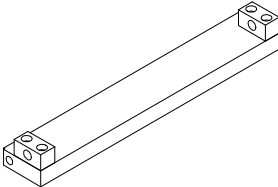 
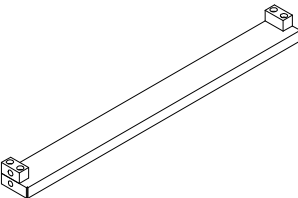 
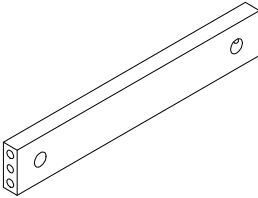 
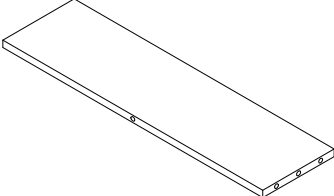 
Part List-N762P478626

2	 Side Panel (L) - 1pc	3	 Side Panel (R) - 1pc
4	 Middle Vertical Panel (L) - 1pc	5	 Middle Vertical Panel (R) - 1pc
6	 Middle Divider - 1pc	7	 Middle Divider (R) - 1pc
8	 Middle Shelf (A) - 1pc	9	 Middle Shelf (B) - 1pc
10	 Fixed Shelf (L) - 1pc	14	 Top Side Middle Rails - 4pcs
15	 Middle Rail - 2pcs	16	 Side Middle Rail - 2pcs
21	 Shelf Bottom Panel - 1pc		

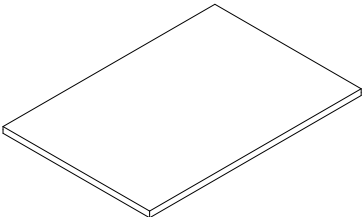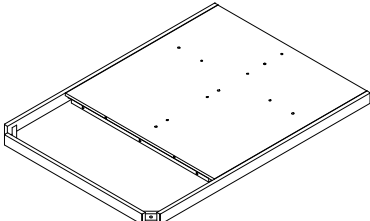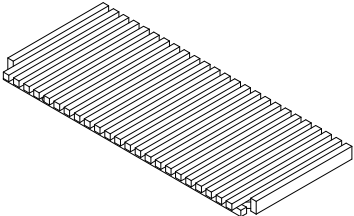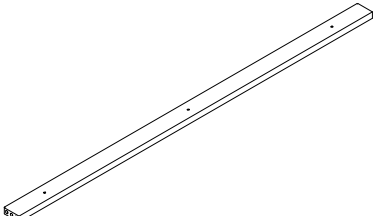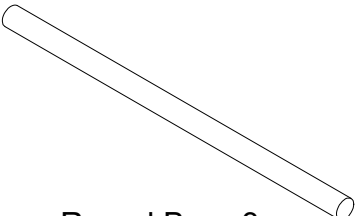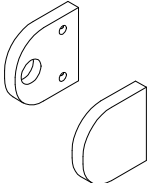      
 
 
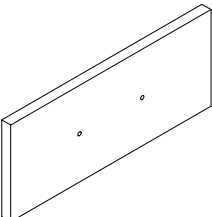 
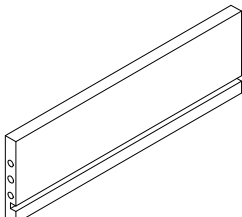 
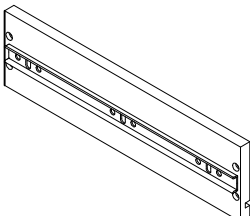 
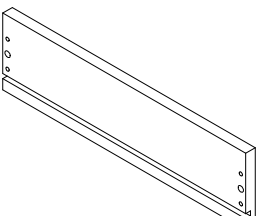 
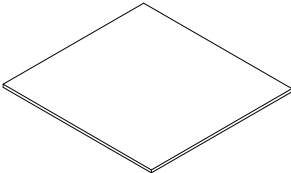 
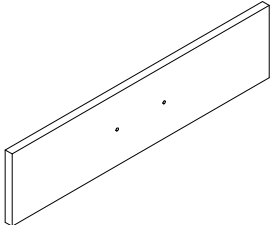 
Part List-N762P478625

1		11	
	Tabletop - 1pc		Bottom Frame - 1pc
12		13	
	Middle Frame - 2pcs		Top Rail - 2pcs
17		18	
	Round Bar - 3pcs		side hand - 2pcs
19		20	
	Side Support (L) - 1pc		Side Support (R) - 1pc
22		23	
	Top Side Drawer Fronts - 4pcs		Top Side Drawer Backs - 4pcs
24		25	
	Drawer Side Panel (L) - 6pcs		Drawer Side Panel (R) - 6pcs
26		27	
	Drawer Bottom - 6pcs		Top Middle Drawer Front - 2pcs

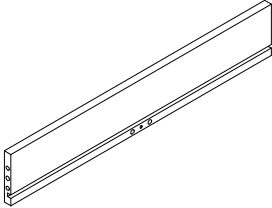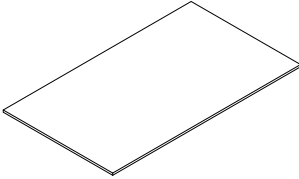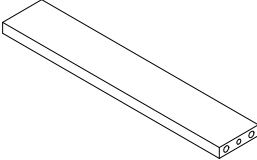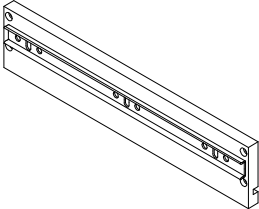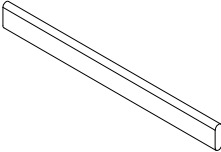       Part List-N762P478625


28  Top Middle Drawer Backs - 2pcs	29  Top Middle Drawer Bottom - 2pcs
30  Drawer Bottom Support - 2pcs	31  Bottom Drawer Front - 1pc
32  Bottom Drawer Back - 1pc	33  Bottom Drawer Side (L) - 2pcs
34  Bottom Drawer Side (R) - 1pc	35  Drawer Stop Rail - 2pcs

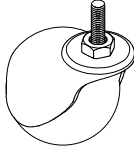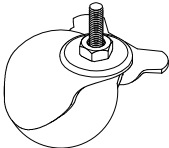         Hardware List-N762P478625





A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts(54+3pcs)	Three in one lock(54+3pcs)	Wood dowel(82+4pcs)
D  ø13x1/4"x40mm	E  ø1/4"x16x1mm	F  ø13x1/4"x28mm
Hex-Head bolts - (4+1pcs)	Washer - (33+2pcs)	Hex-Head bolts - (25+2pcs)
G  ø13x1/4"x55mm	H  1/4"Xø10x13mm	I 
Hex-Head bolts - (4+1pcs)	Horizontal-Hole bolts(4+1pcs)	Caster without brake(2pcs)
J  ø6x30mm	K  ø5/32"x32mm	L  ø8xø4x32mm
Wood dowel(40+3pcs)	Handle screw(14+1pcs)	Round head screw (64+3pcs)
M  ø8xø4x25mm	N 	O  4mm
Round head screw (8+1pcs)	Handle(7pcs)	Allen key (1pc)
P  Caster with brake(2pcs)		

STEP: 1


 
A



22PCS

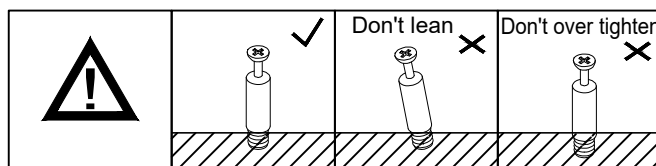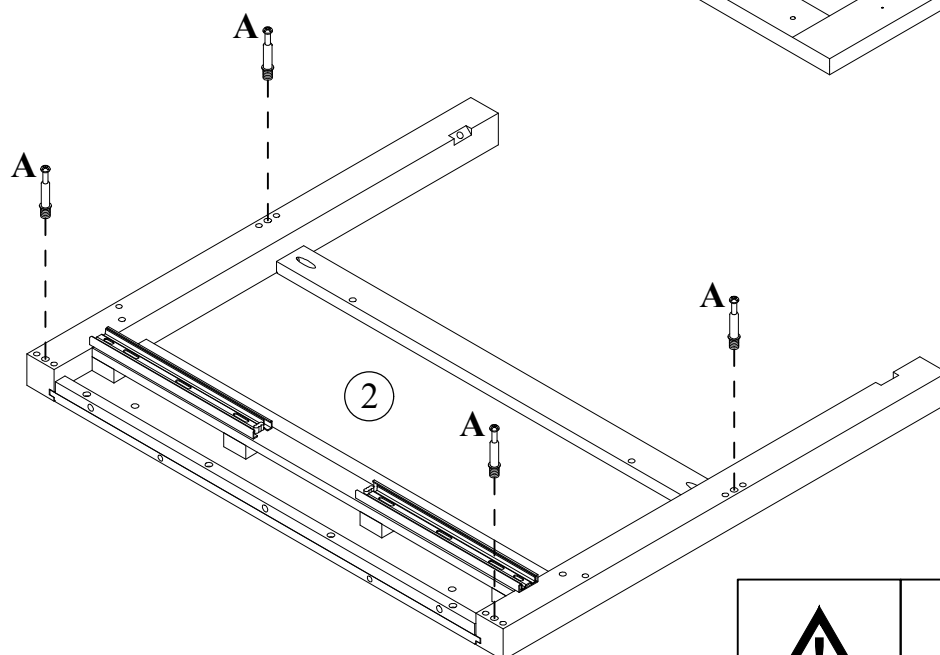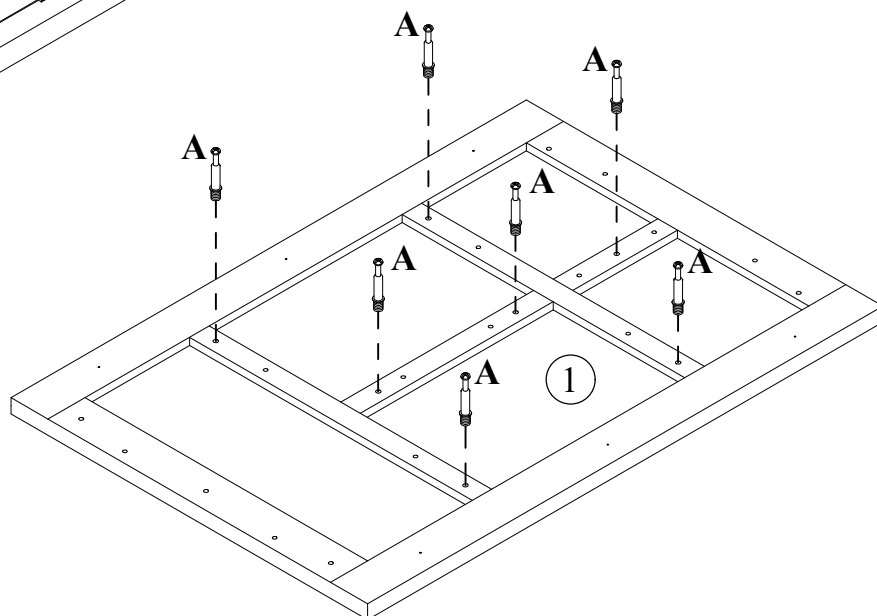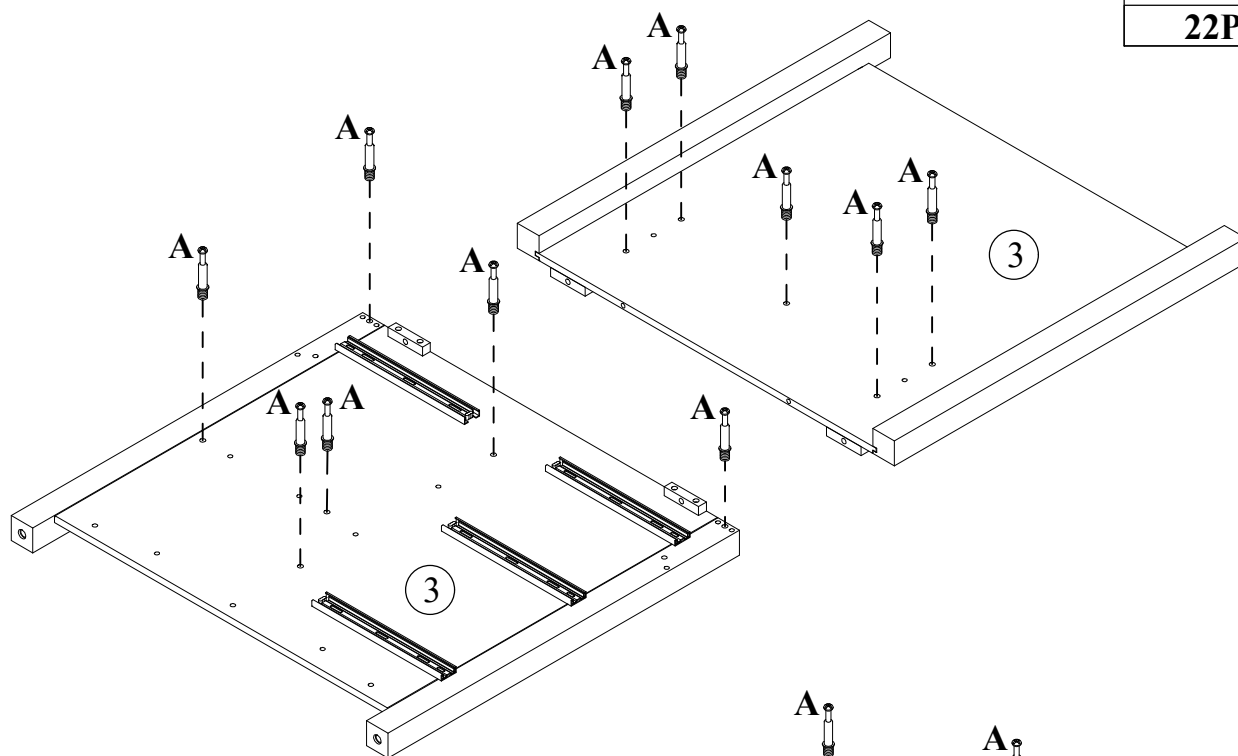    


STEP: 2




 
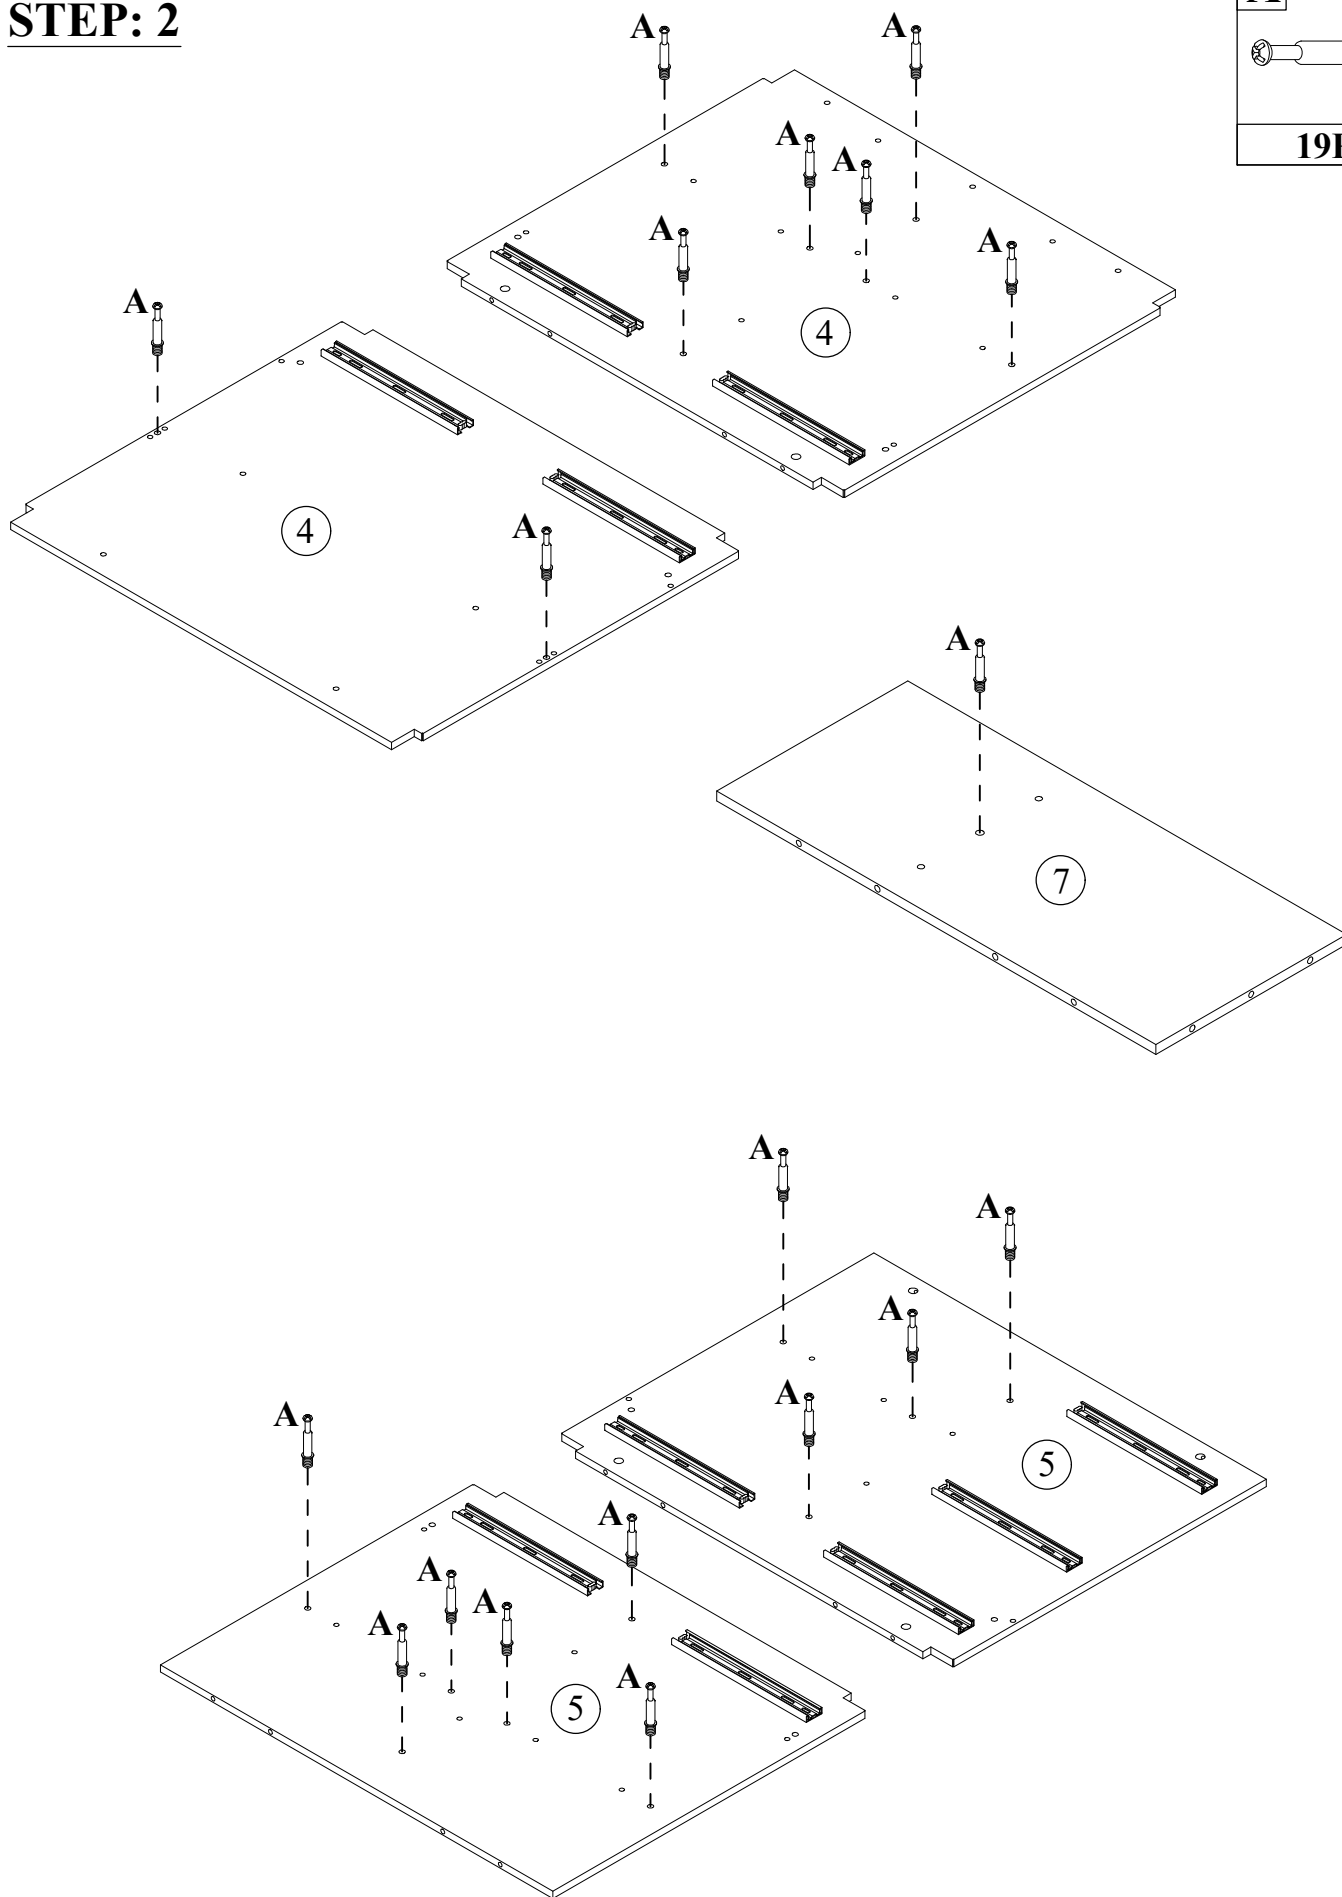 
A**19PCS**

STEP: 3

 
A




13PCS

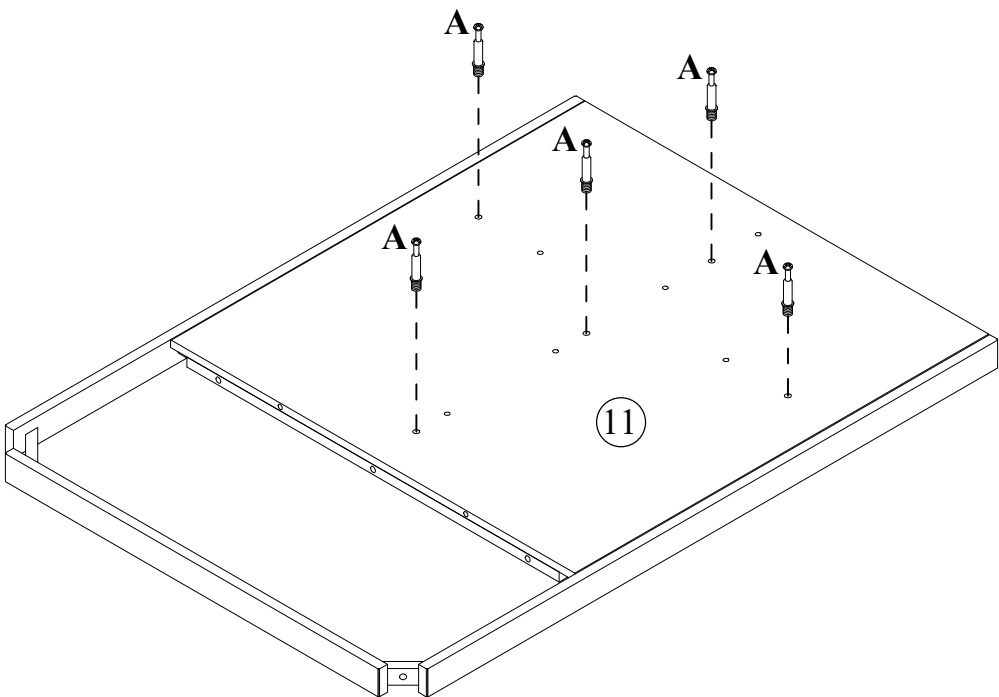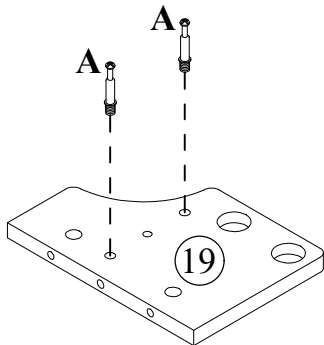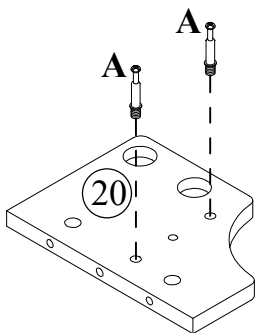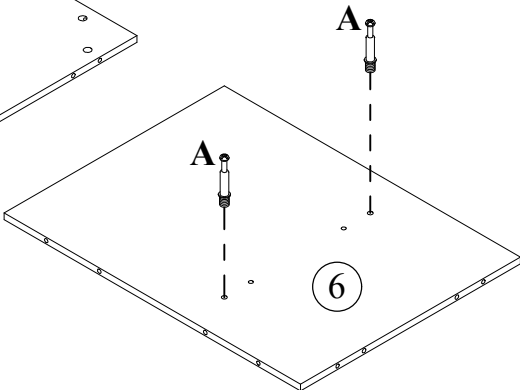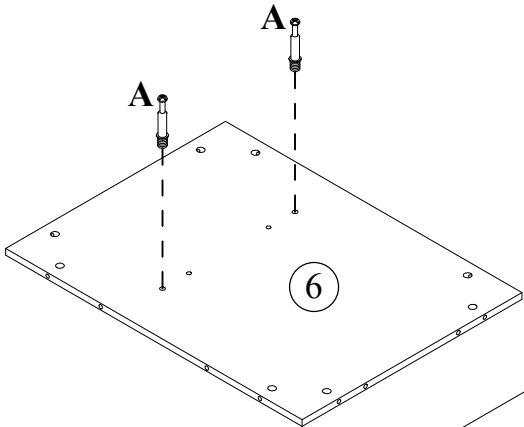     


STEP: 4

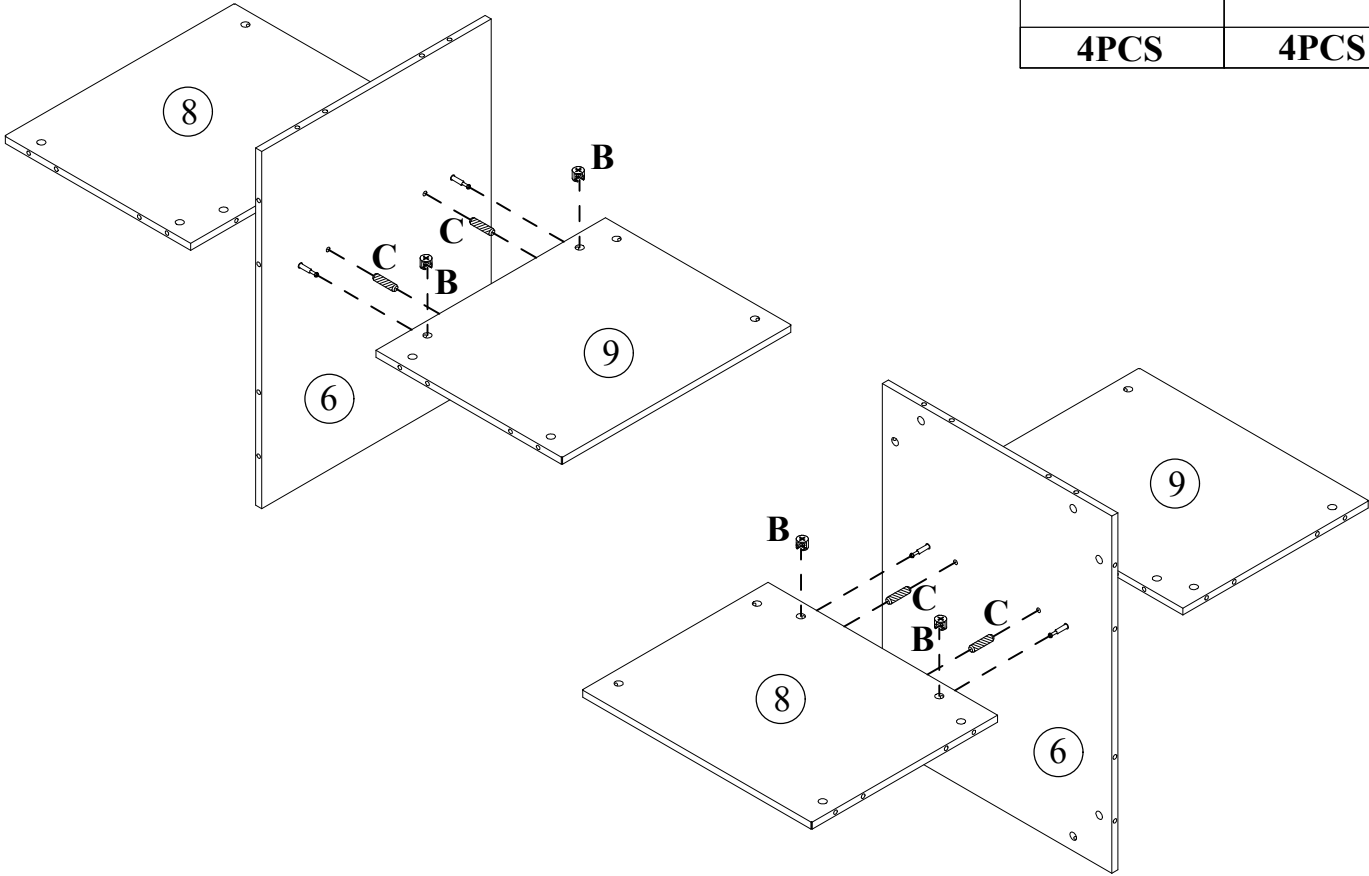 

 B	C
	
4PCS	4PCS

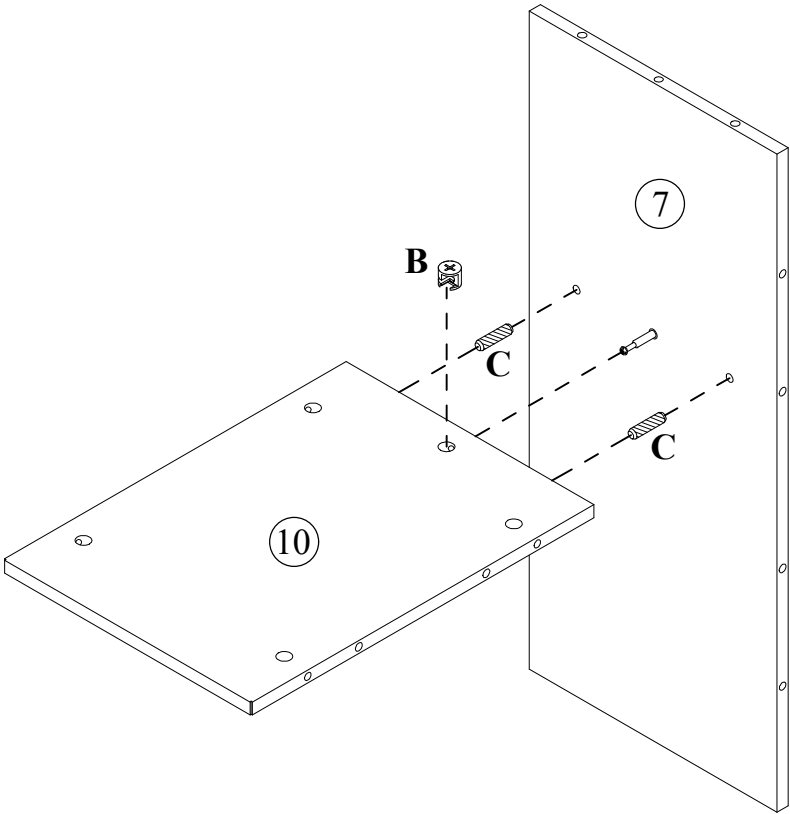 
STEP: 5



B	C
	
1PC	2PCS


STEP: 6

B	C
	
6PCS	6PCS

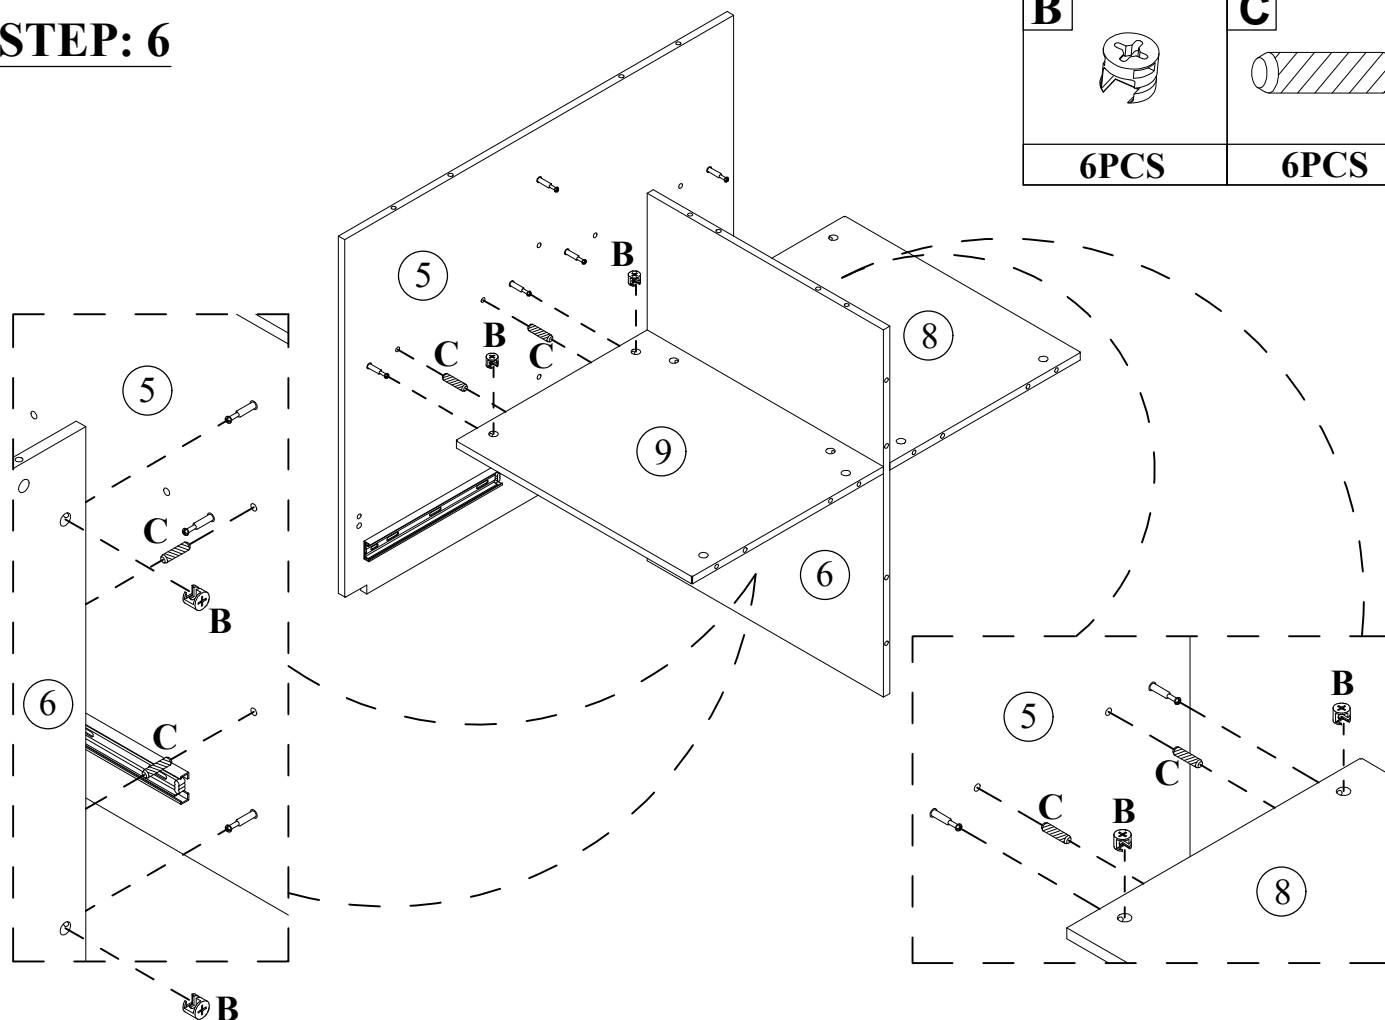 


STEP: 7


B	C
	
4PCS	4PCS

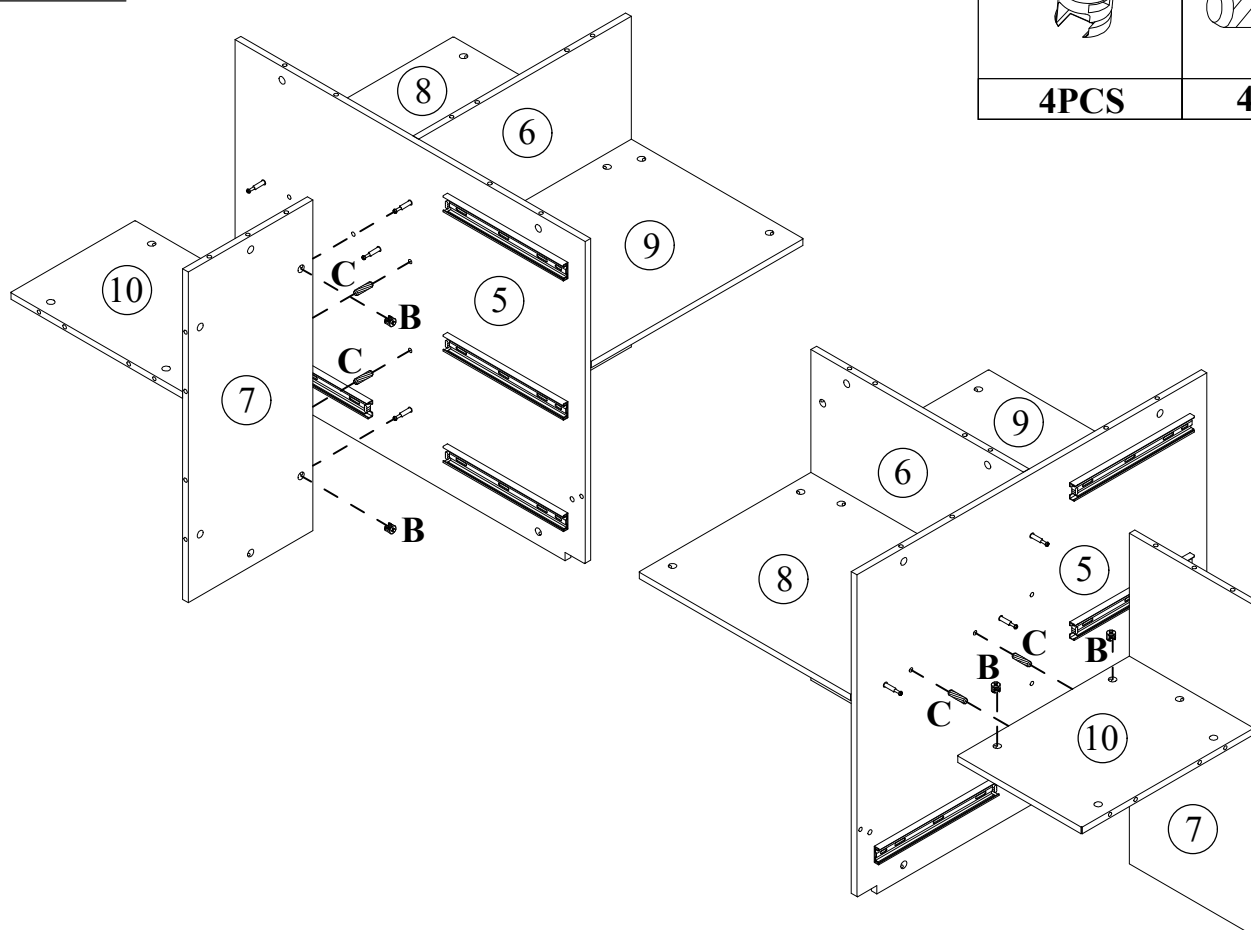 

STEP: 8

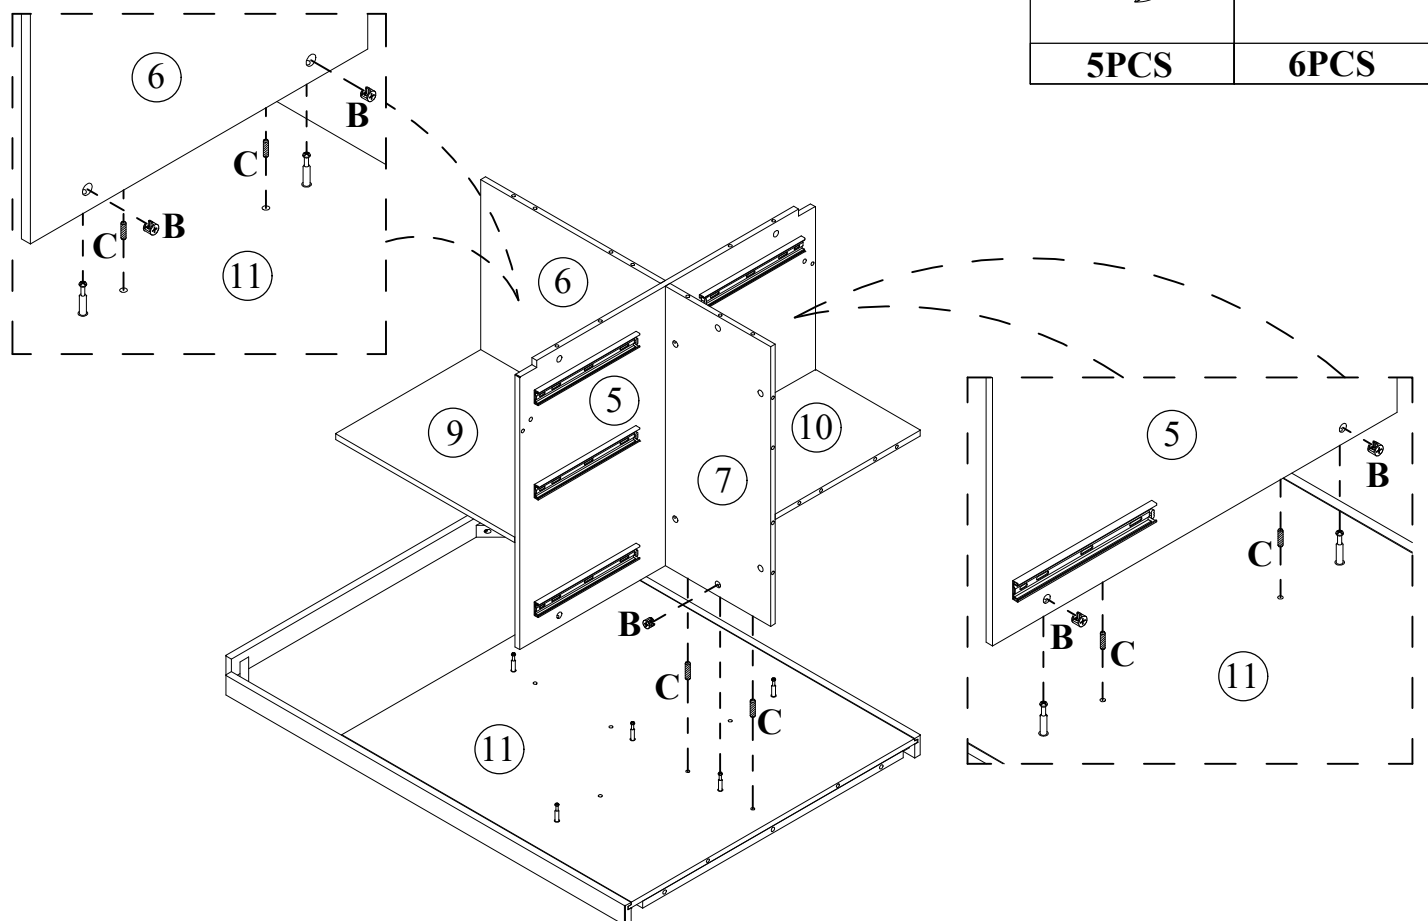 


STEP: 9

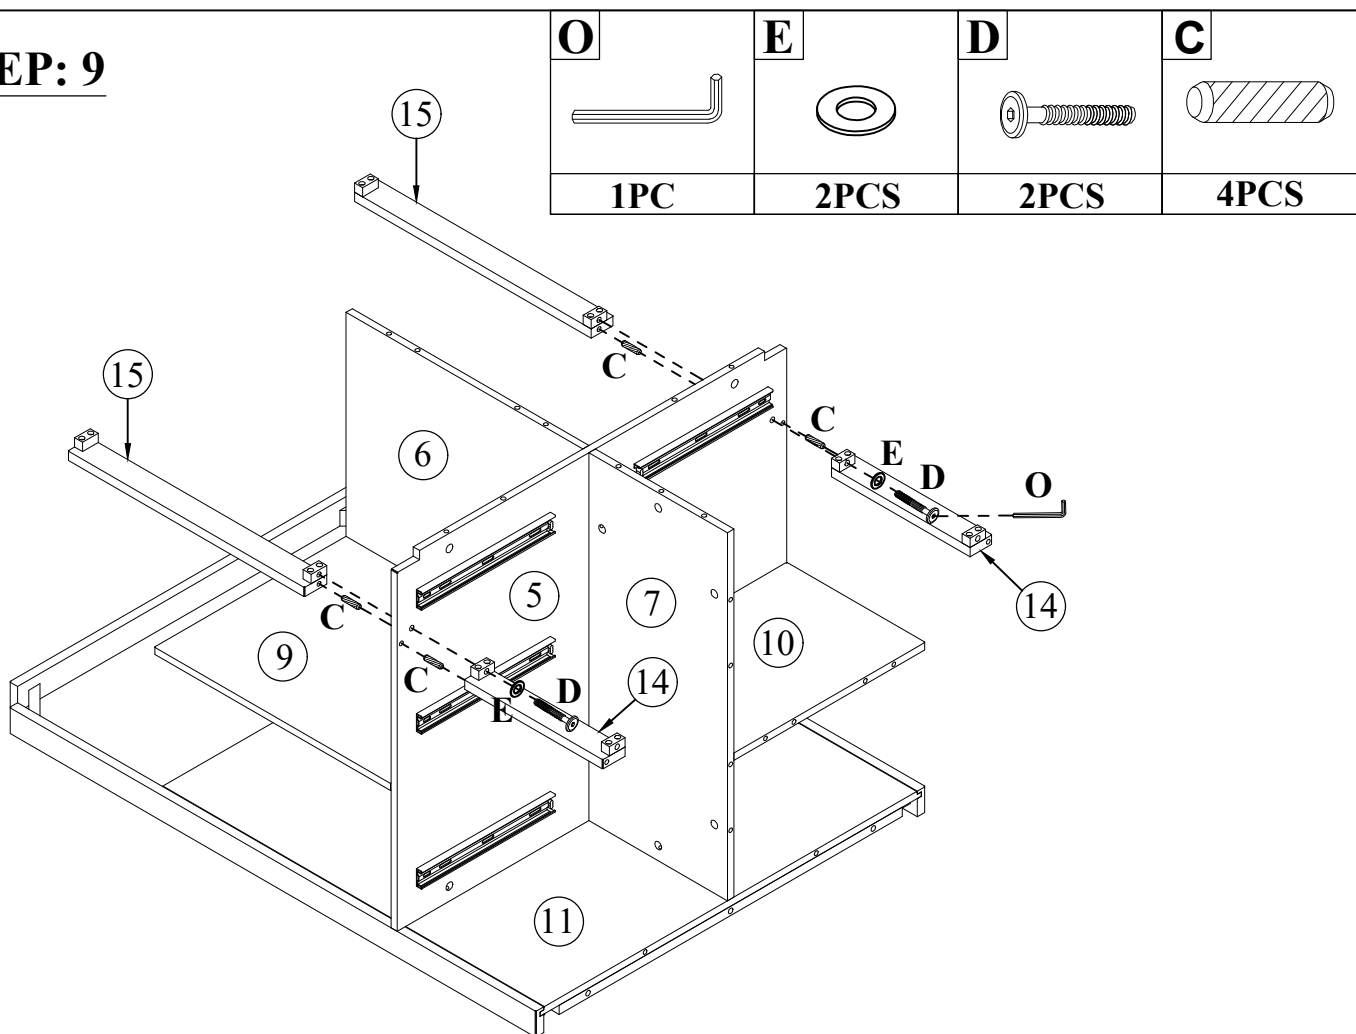 



STEP: 10


O	F	E	D	B	C
					
1PC	3PCS	5PCS	2PCS	6PCS	12PCS

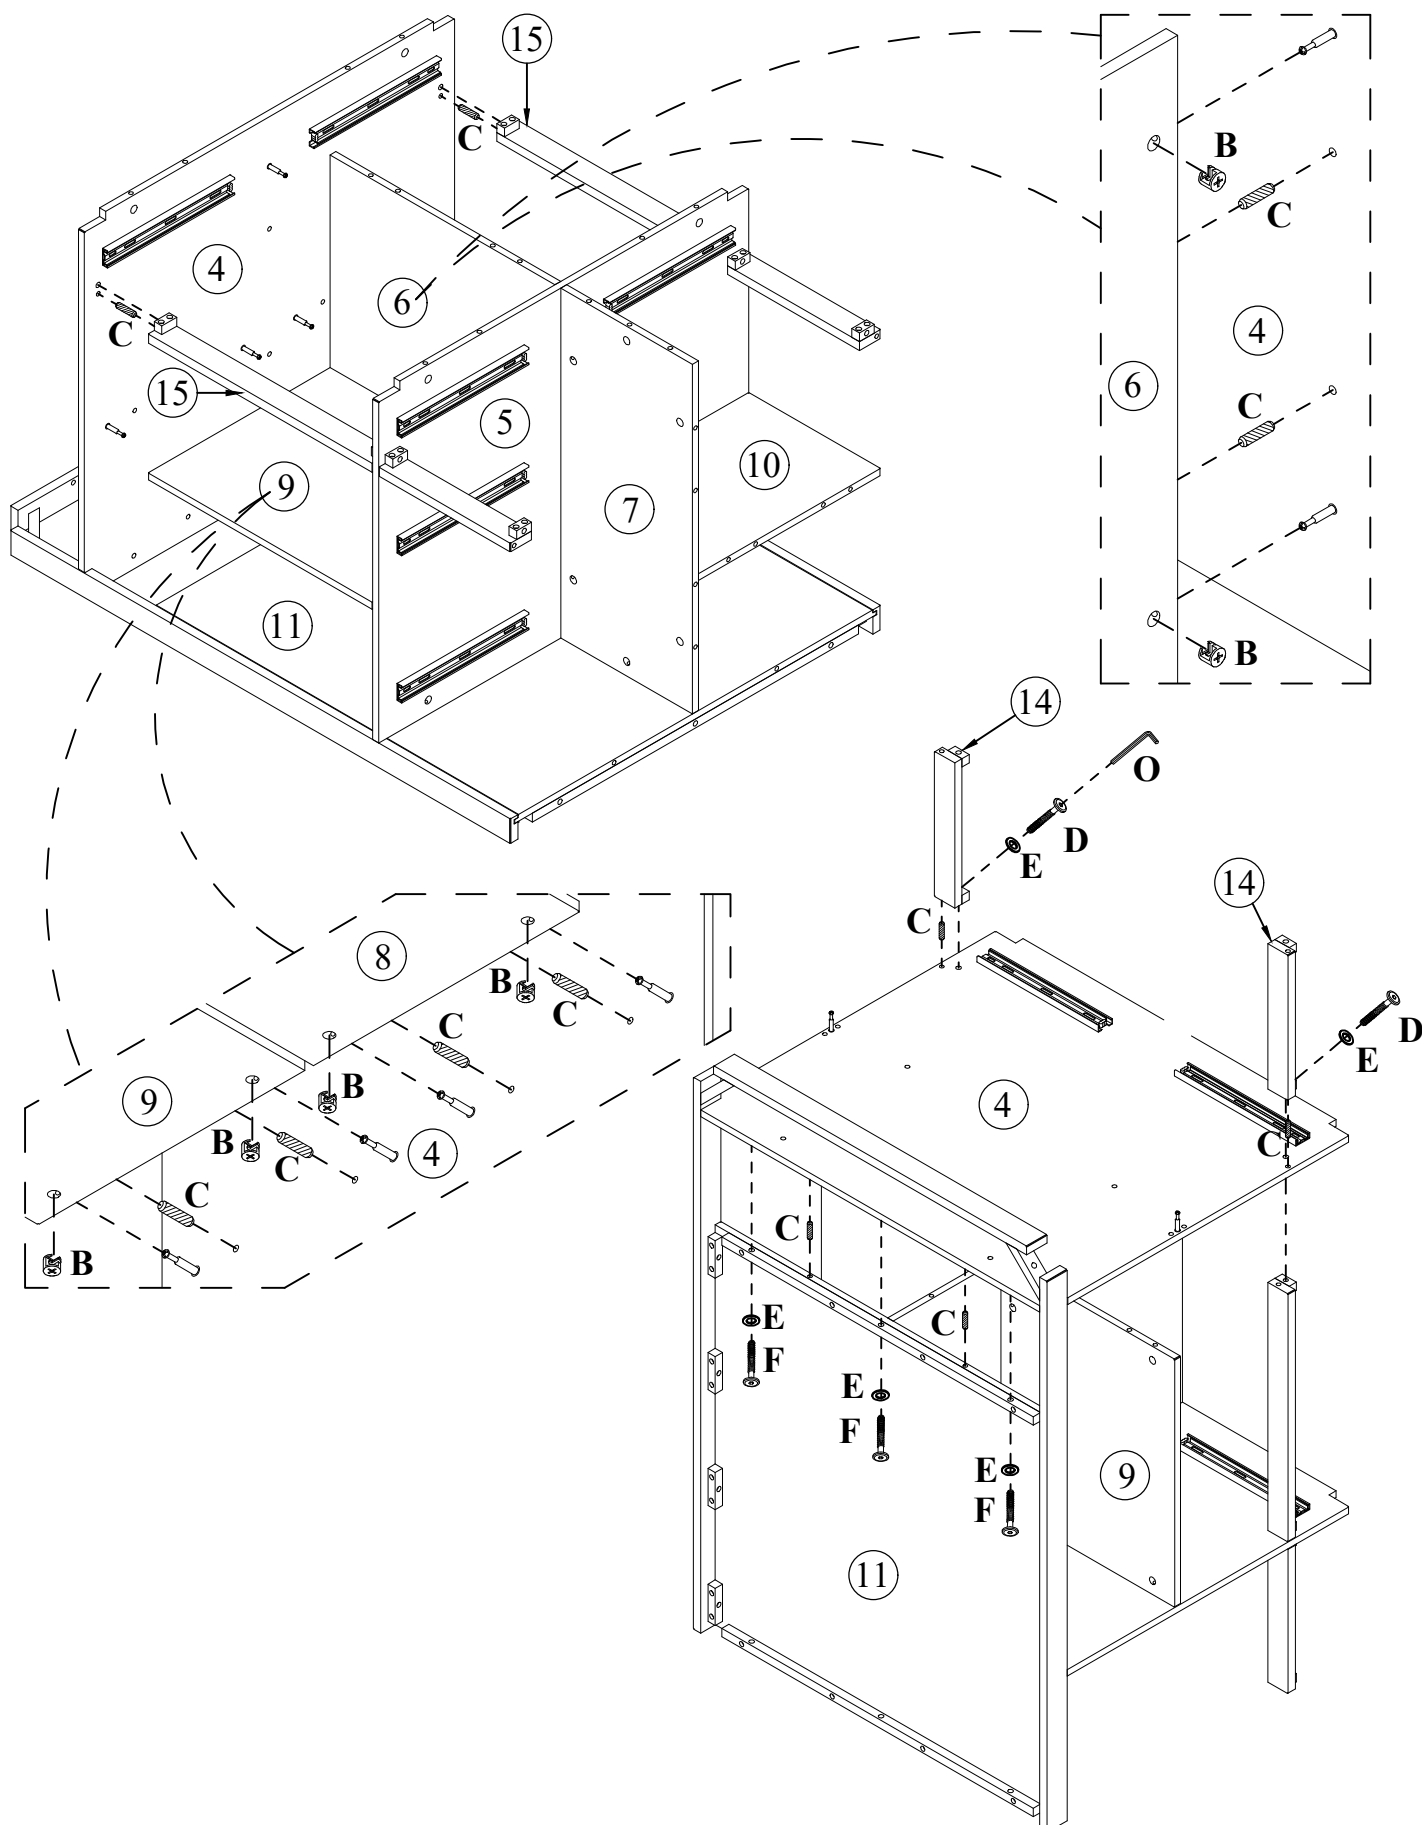 


STEP: 11

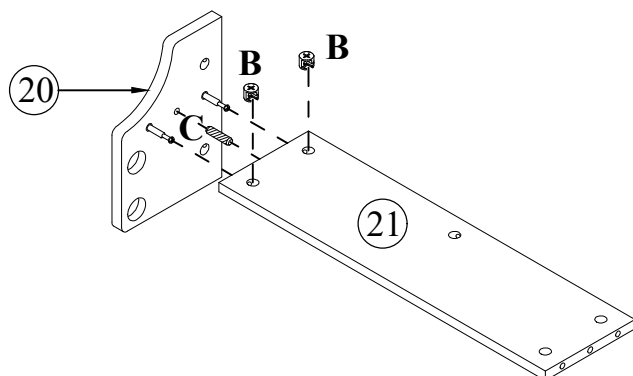 


 
B	C
	
4PCS	2PCS

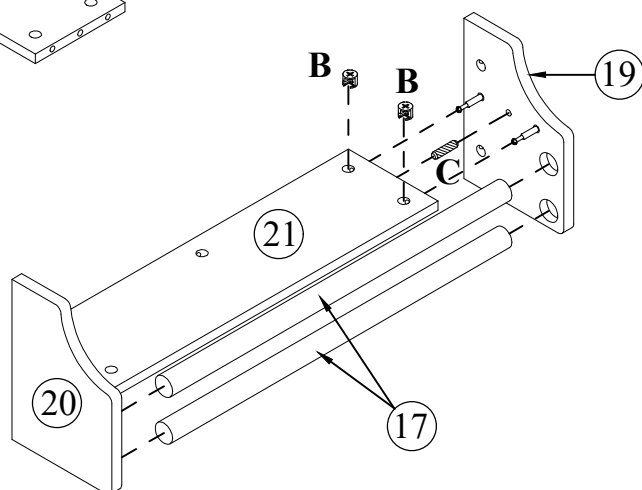 

STEP: 12

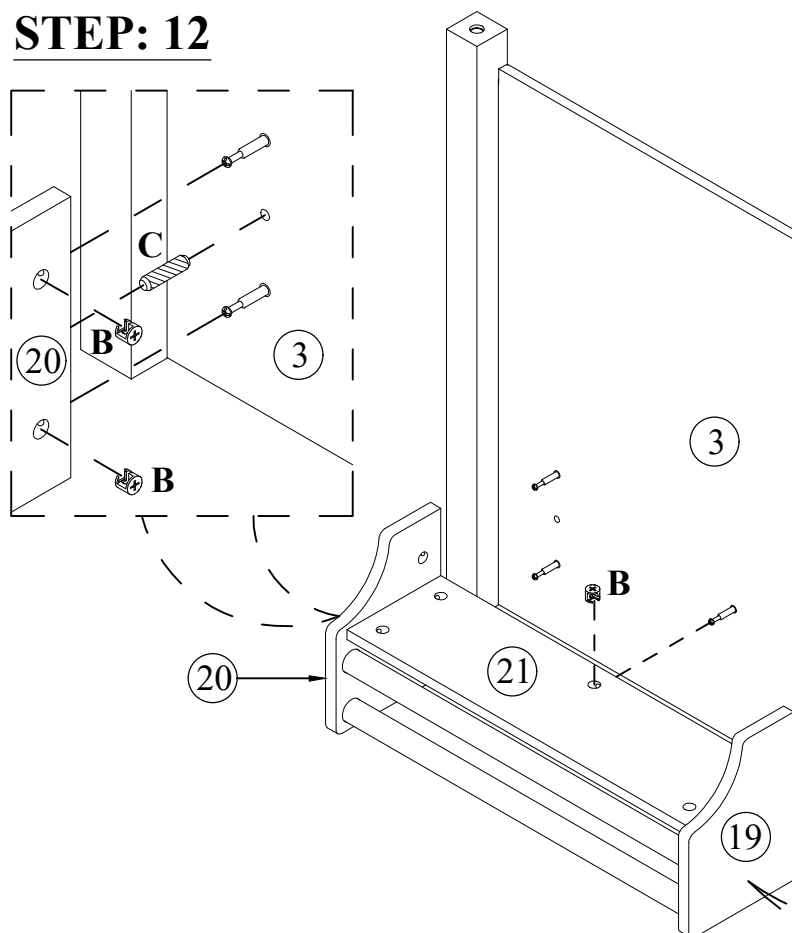 


 B	C
	
5PCS	2PCS

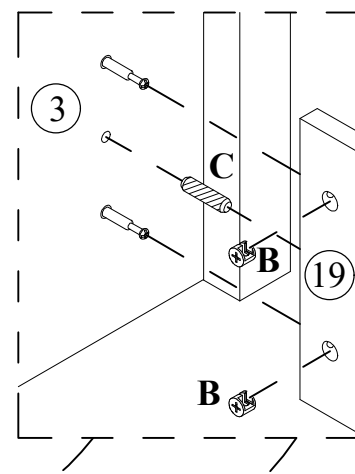 


STEP: 13


O	F	E	B	C
				
1PC	5PCS	5PCS	4PCS	8PCS

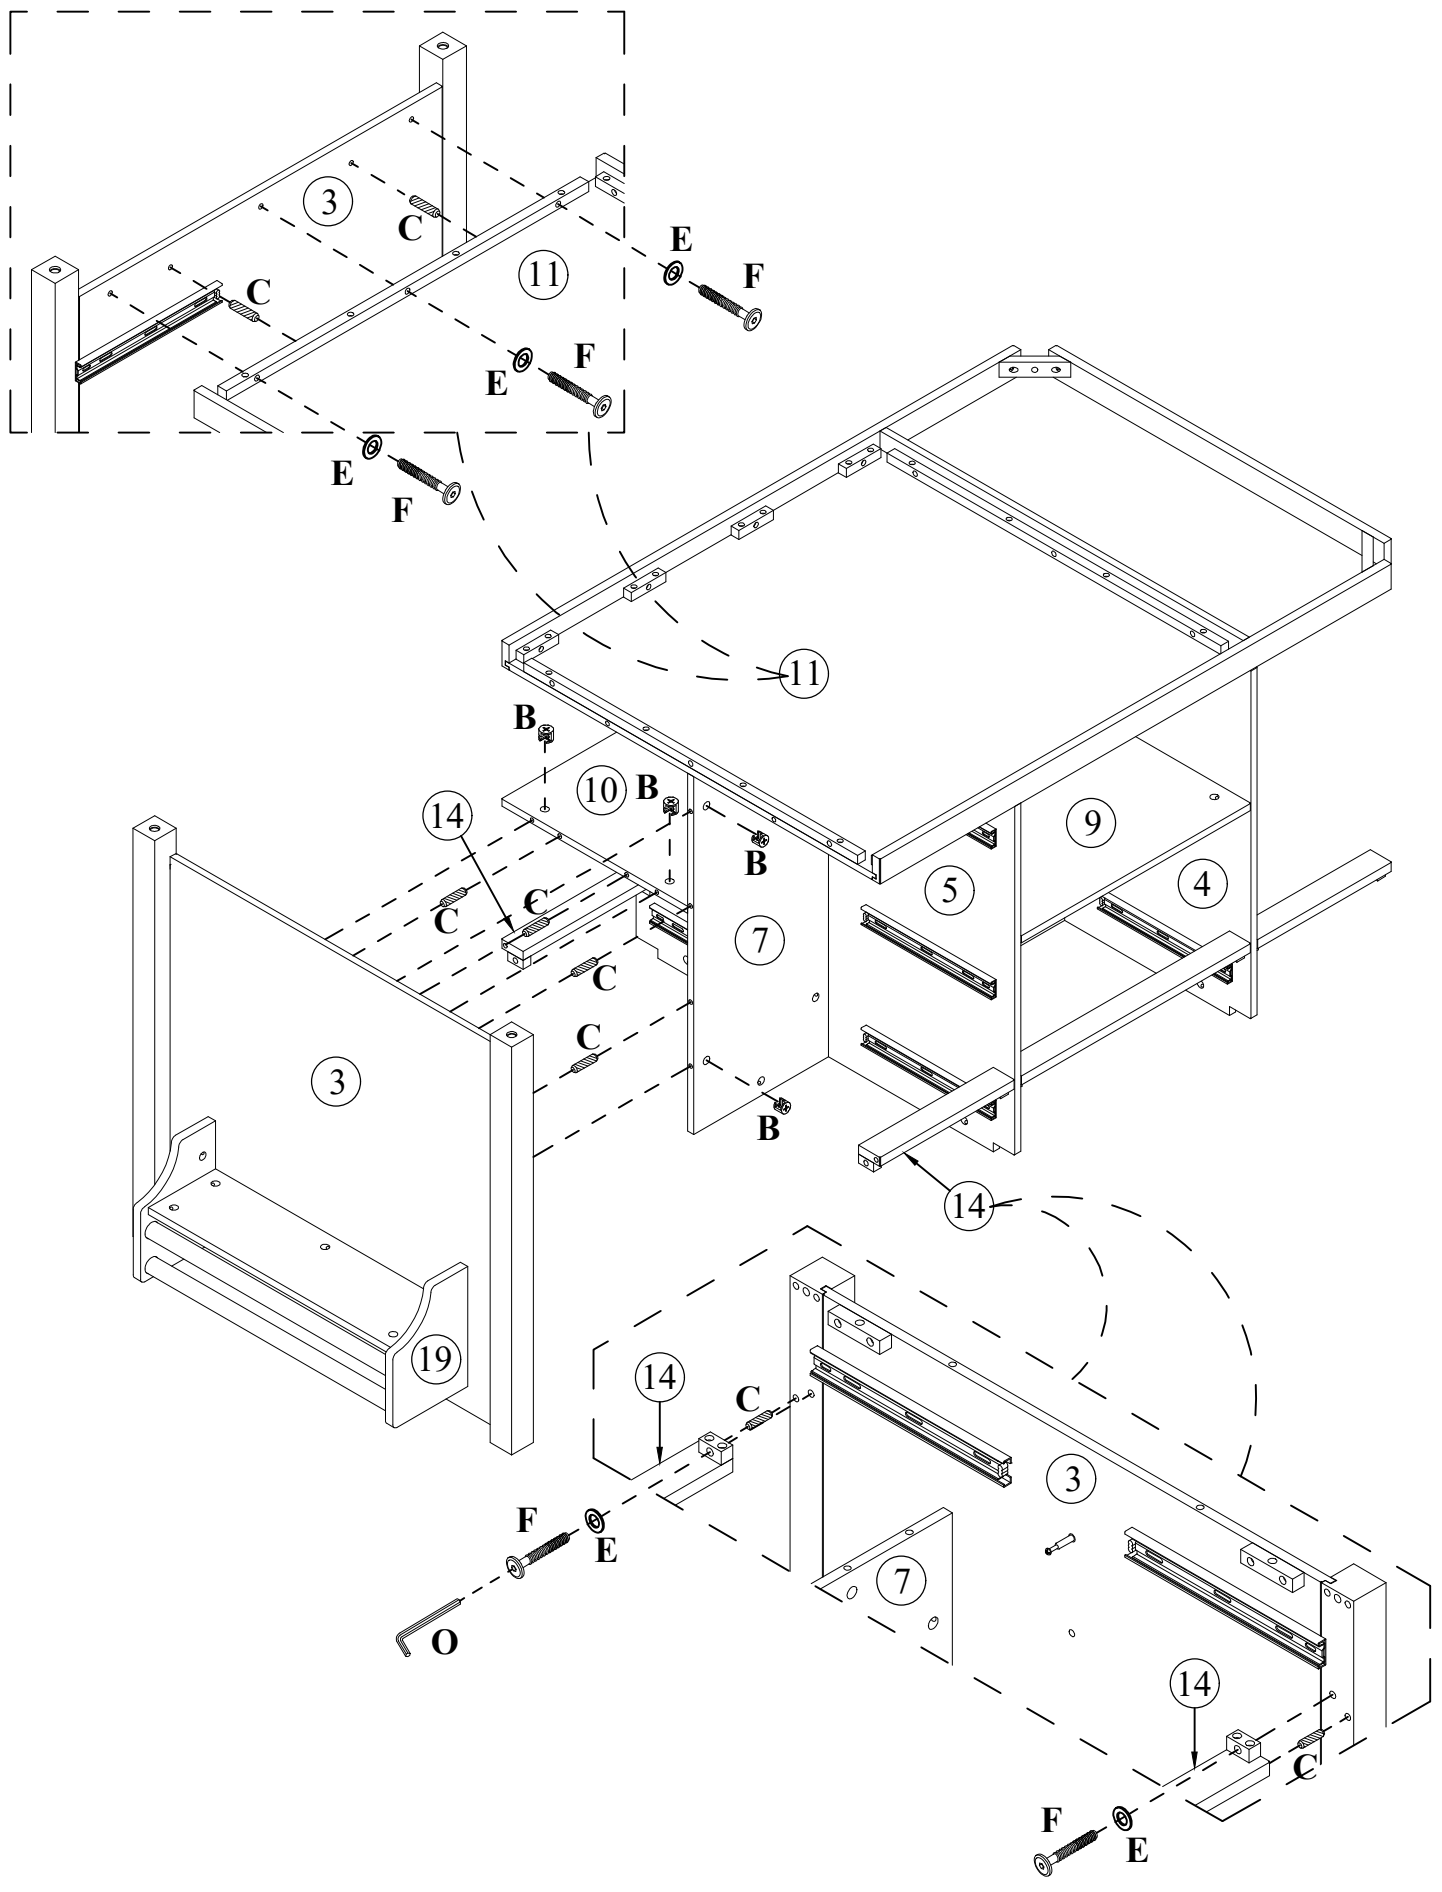 

STEP: 14

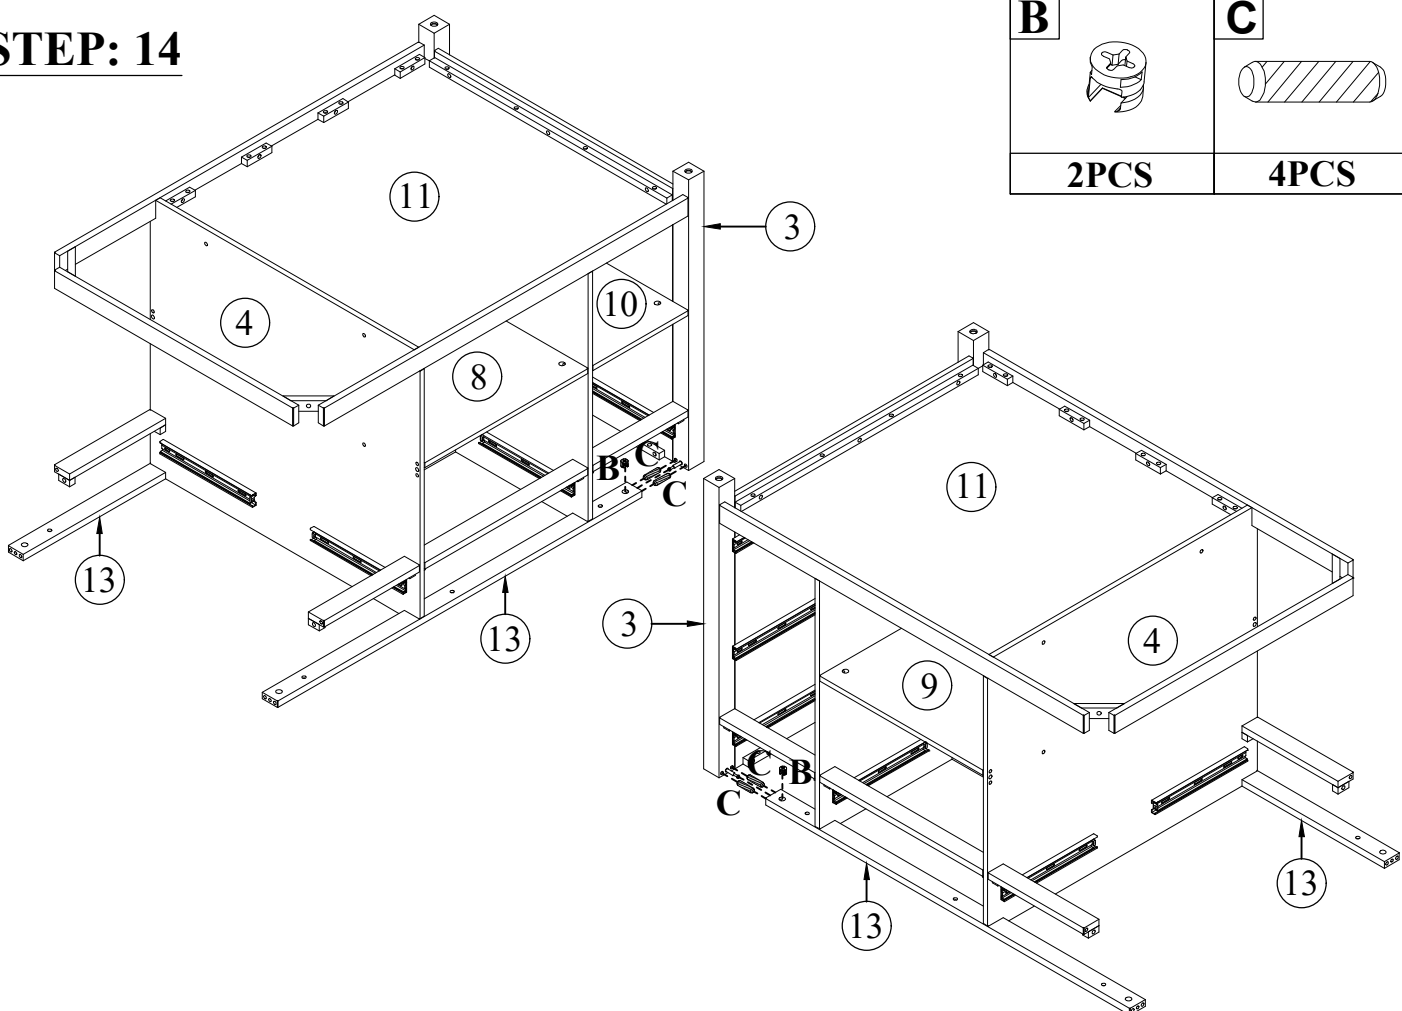 


STEP: 15

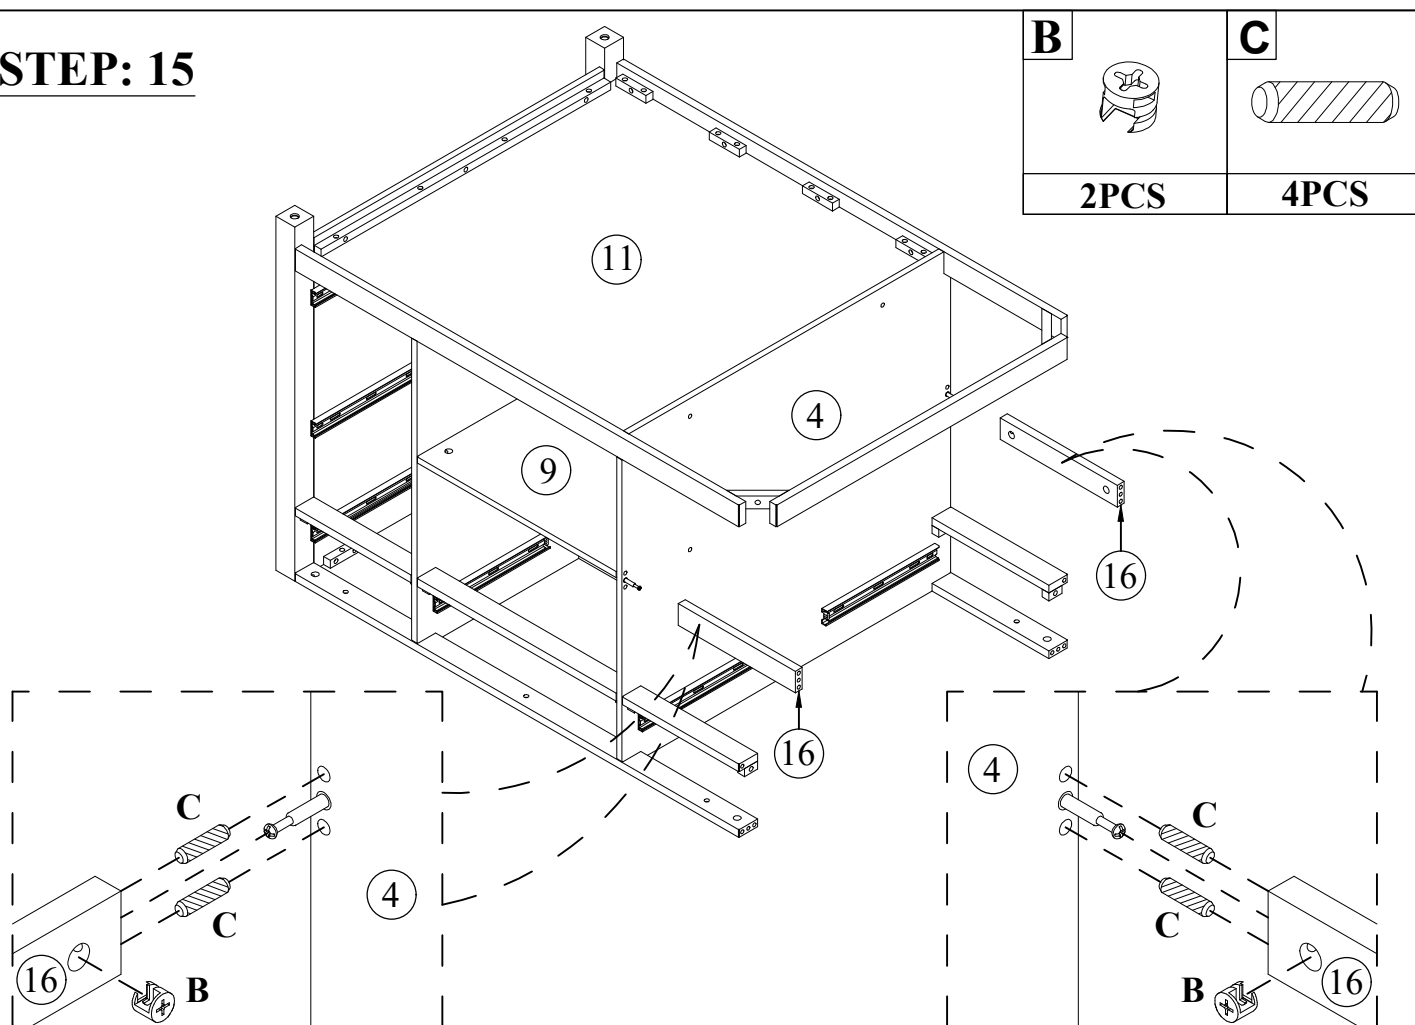 


STEP: 16

O	F	E
		
1PC	6PCS	6PCS

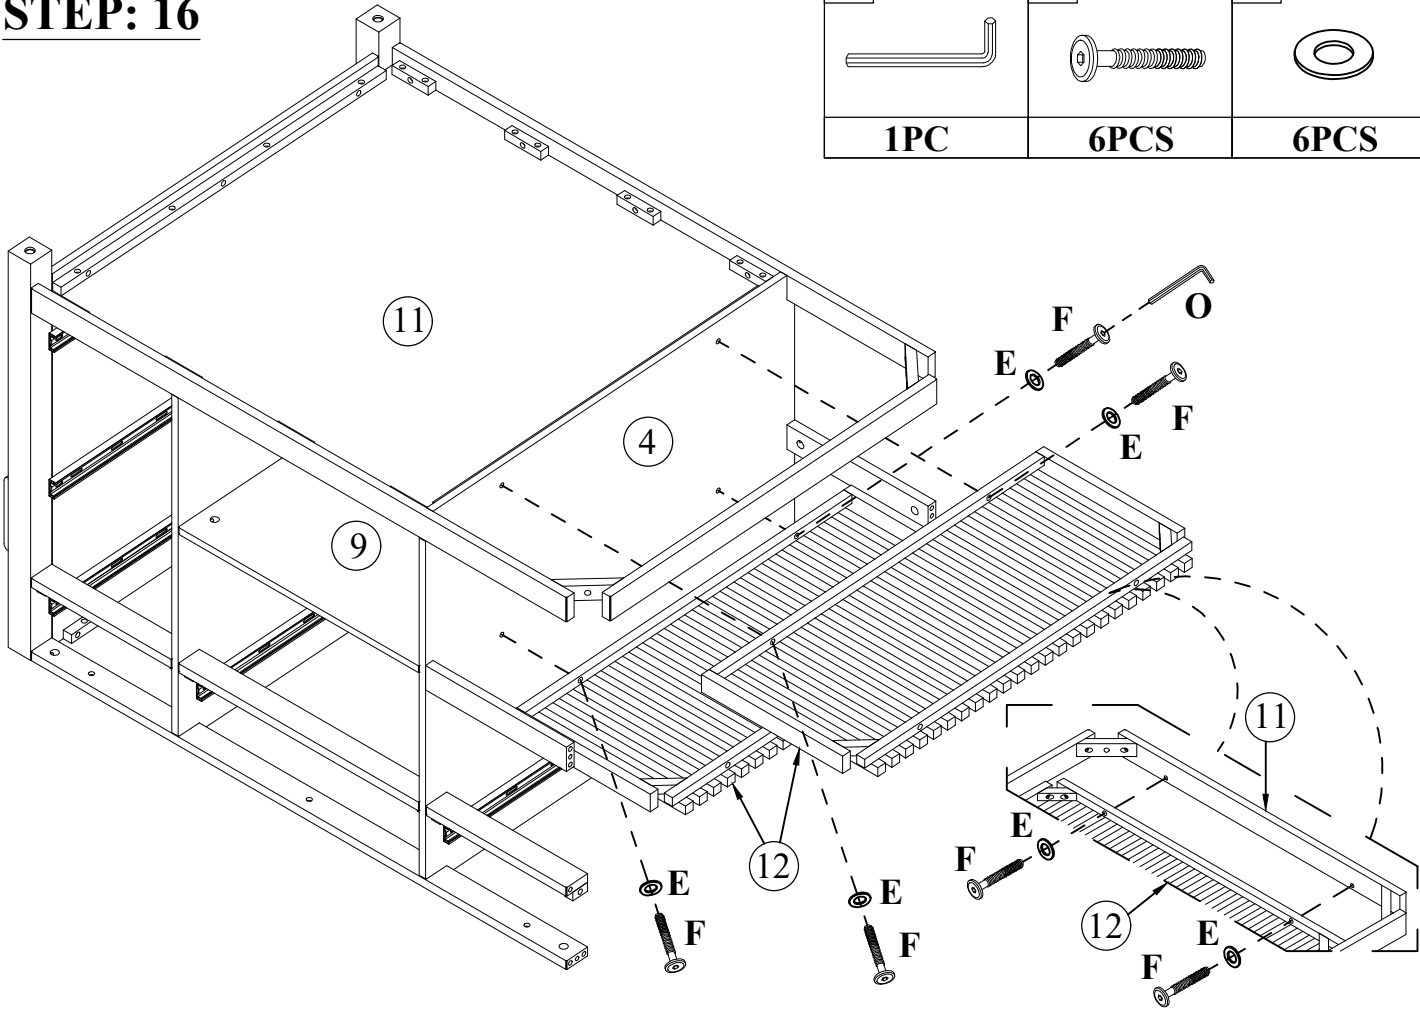 



STEP: 17

O	G	E	H	C
				
1PC	4PCS	4PCS	4PCS	2PCS

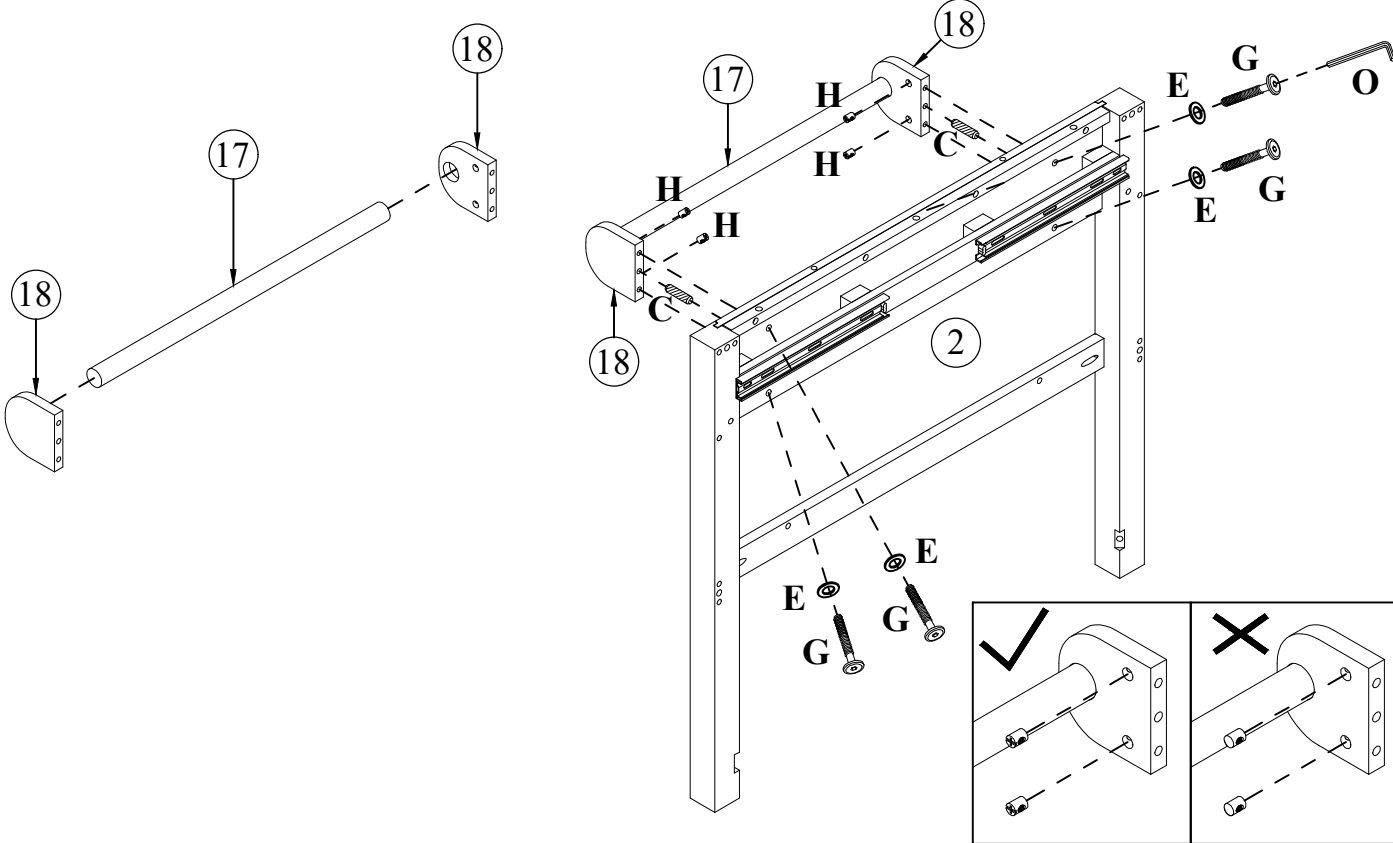 



STEP: 18

 O	F	E	B	C
				
1PC	6PCS	6PCS	4PCS	10PCS



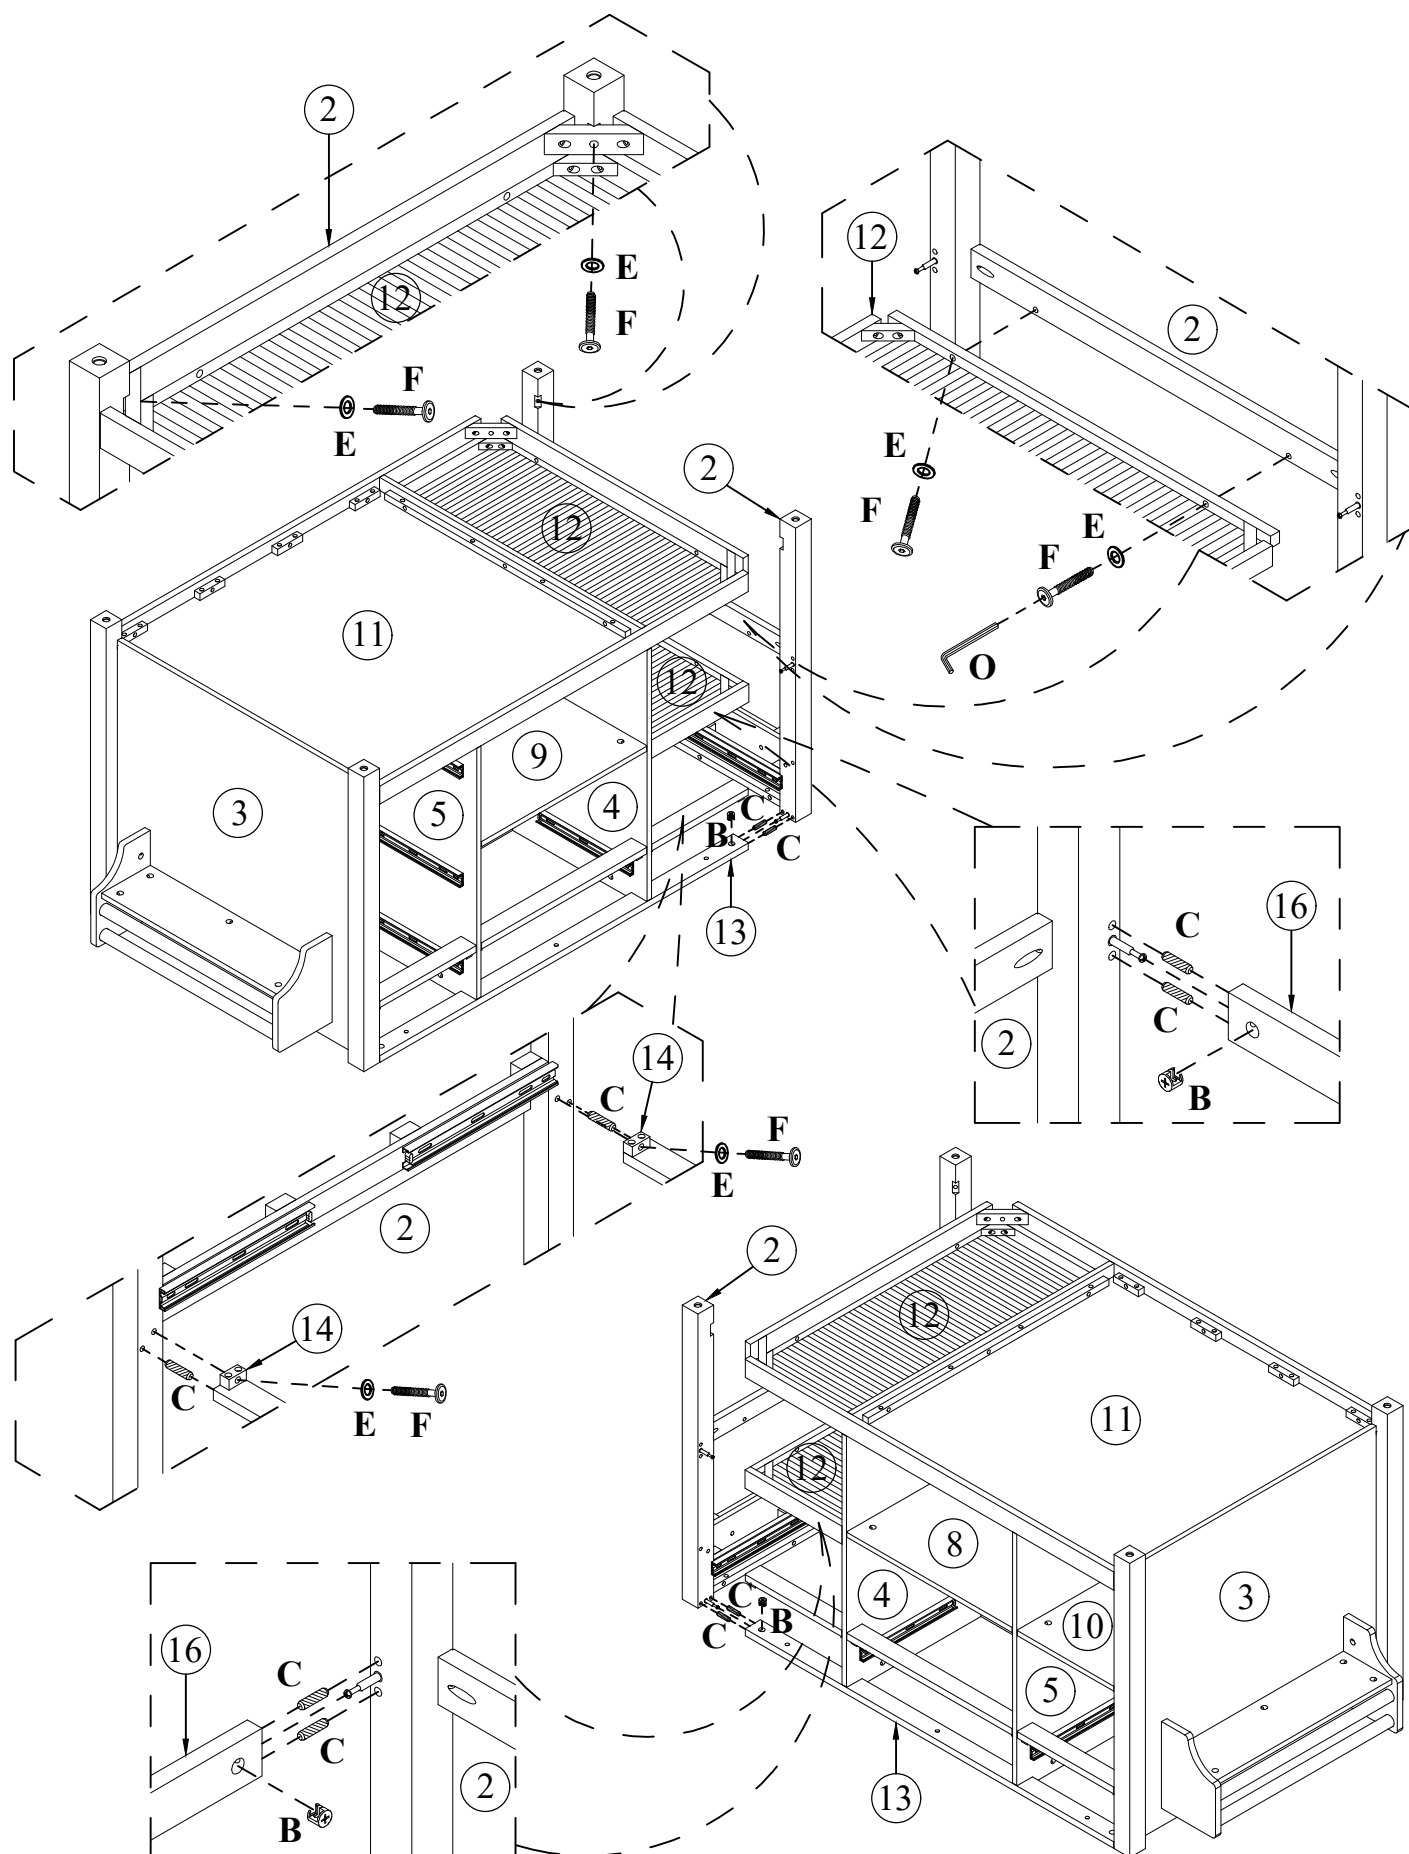 



STEP: 19

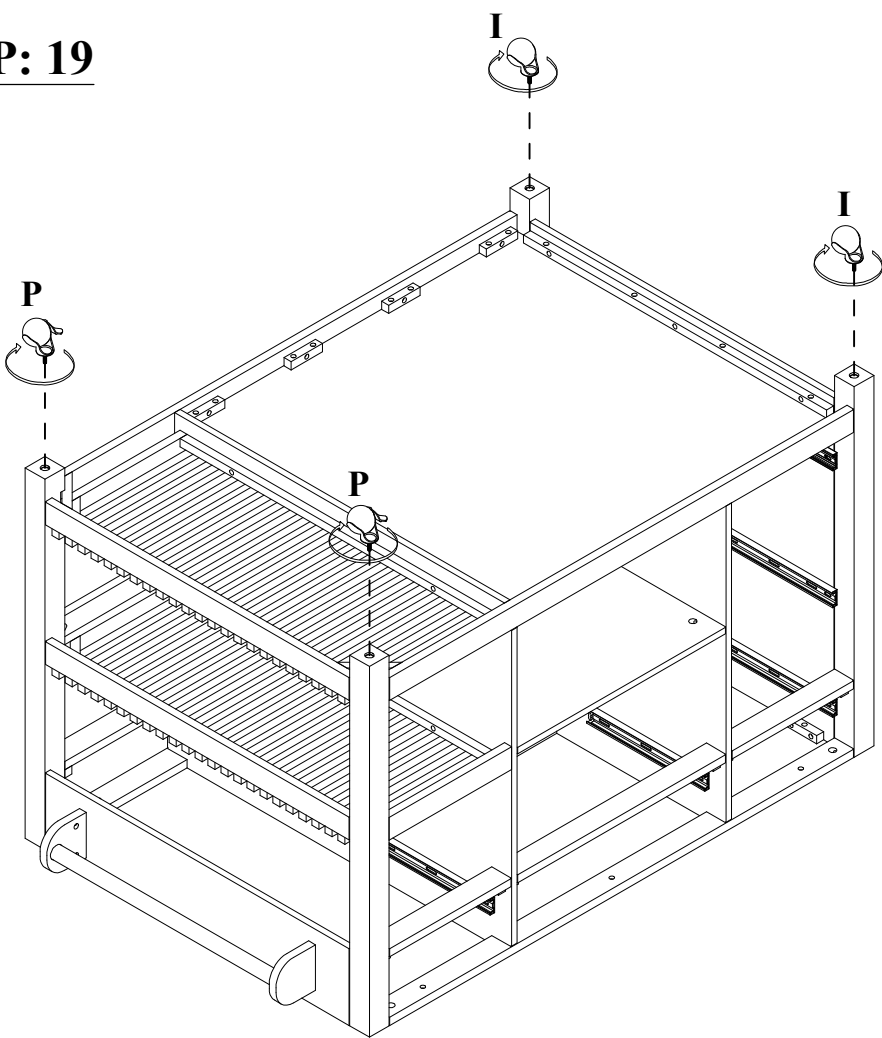 

 P		I	
2PCS		2PCS	


 
 
 
STEP: 20


N		L		K		J	
4PCS		32PCS		8PCS		16PCS	

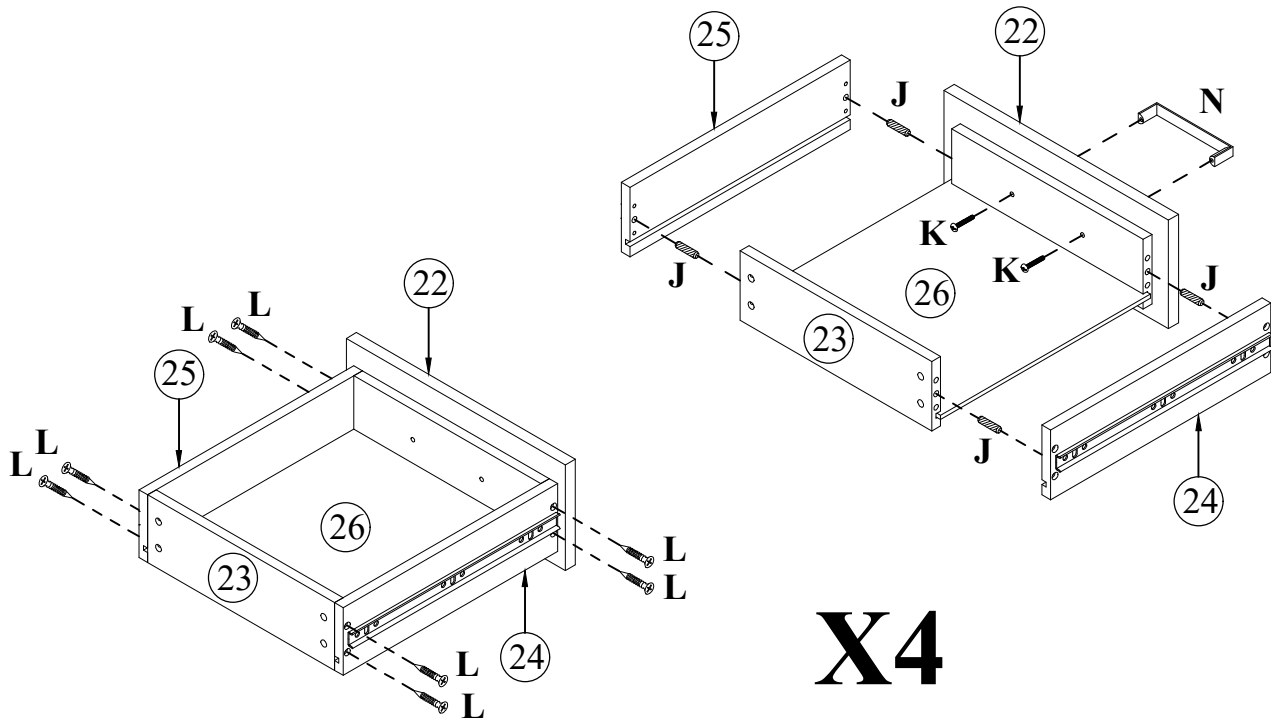 





X4

    
STEP: 21

N	M	L	K	J
				
2PCS	2PCS	18PCS	4PCS	16PCS

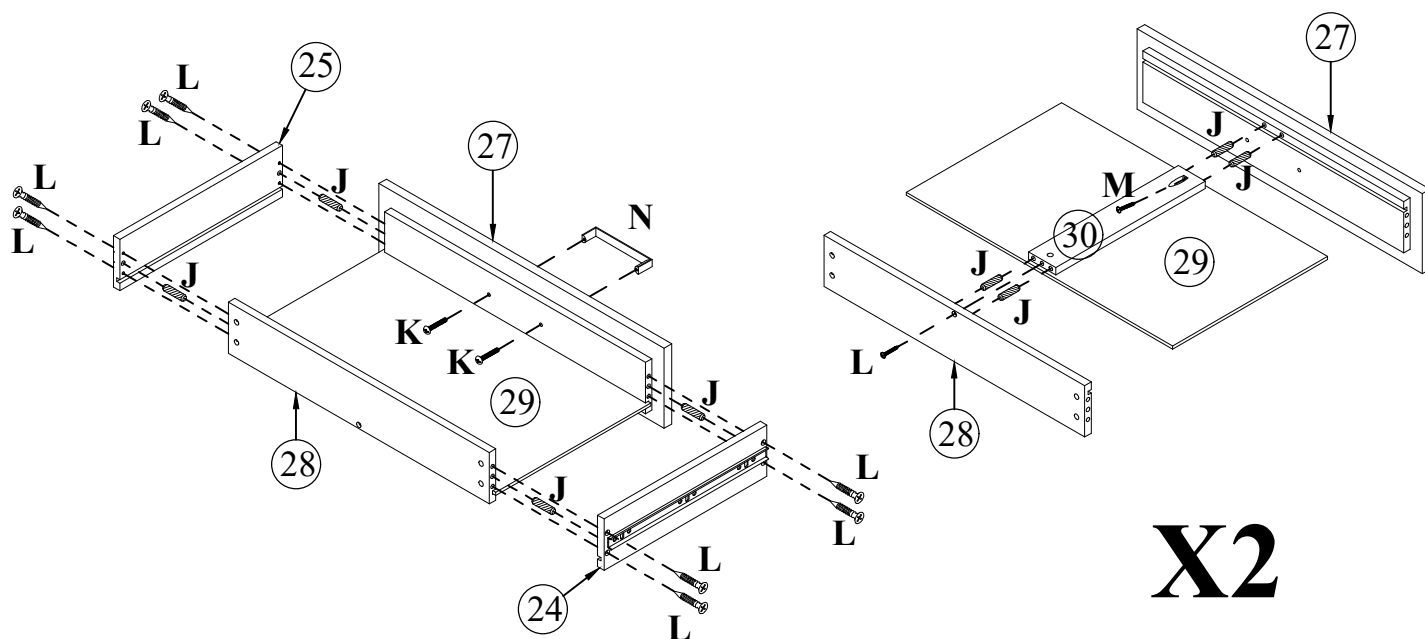 










STEP: 22

    N	L	K	J
			
1PCS	14PCS	2PCS	8PCS


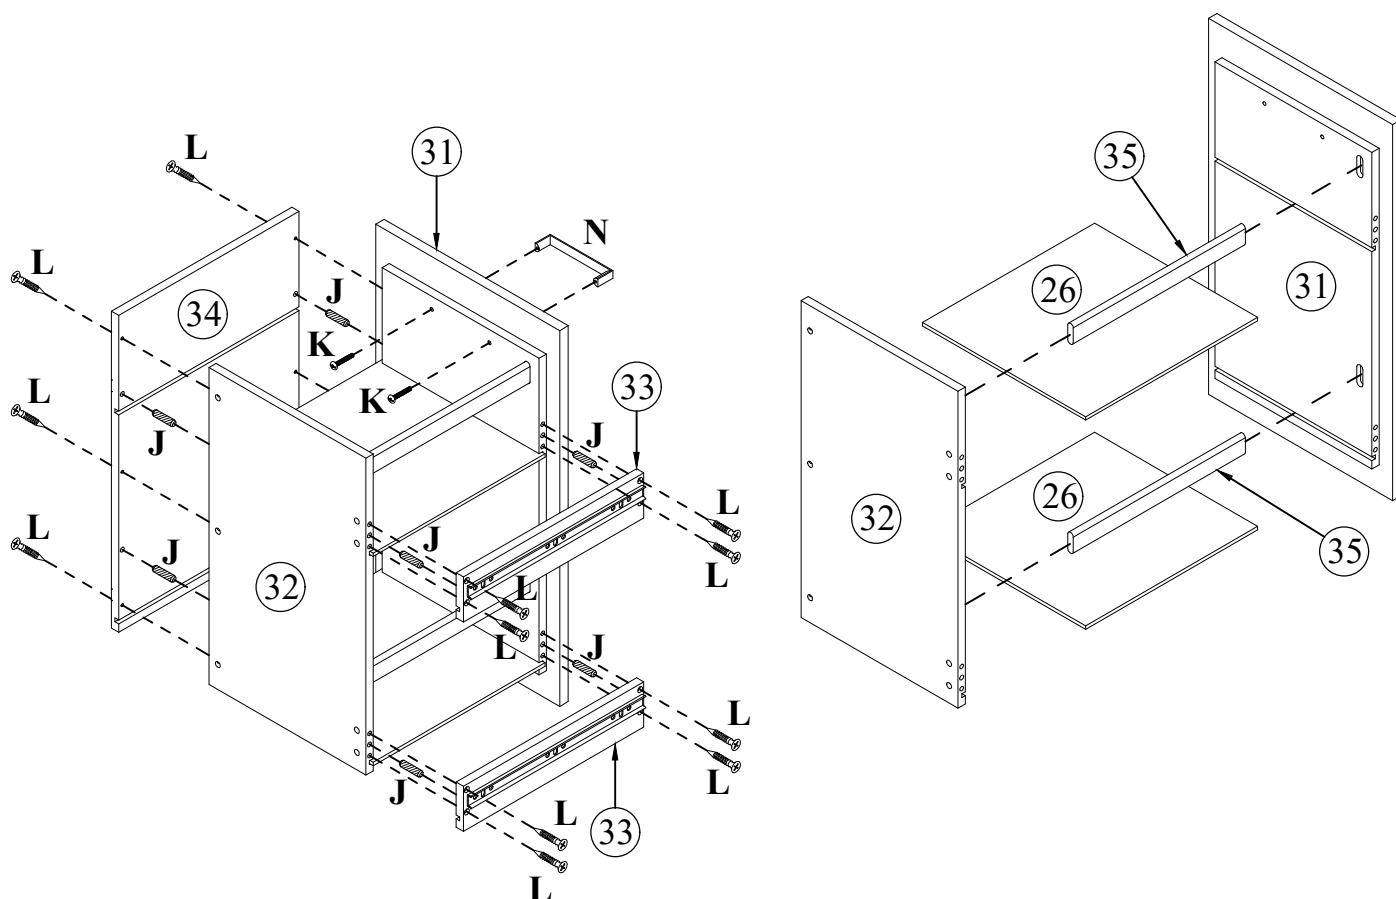 


STEP: 23

 M	O	F	E	B	C
					
6PCS	1PC	5PCS	5PCS	7PCS	12PCS

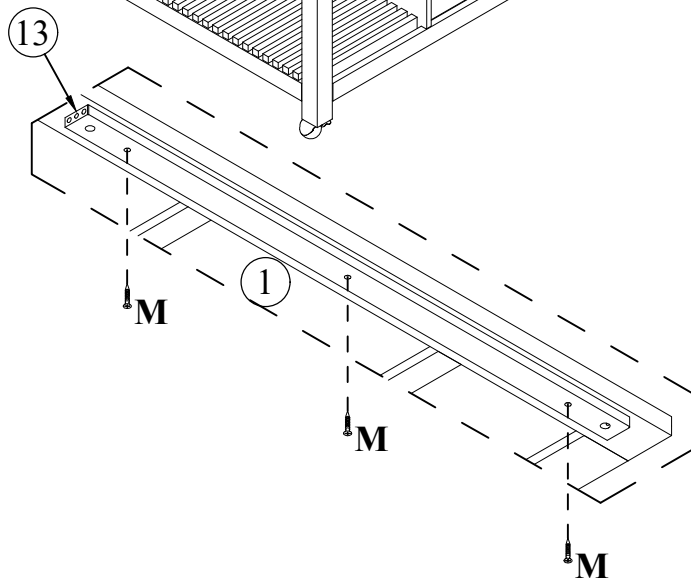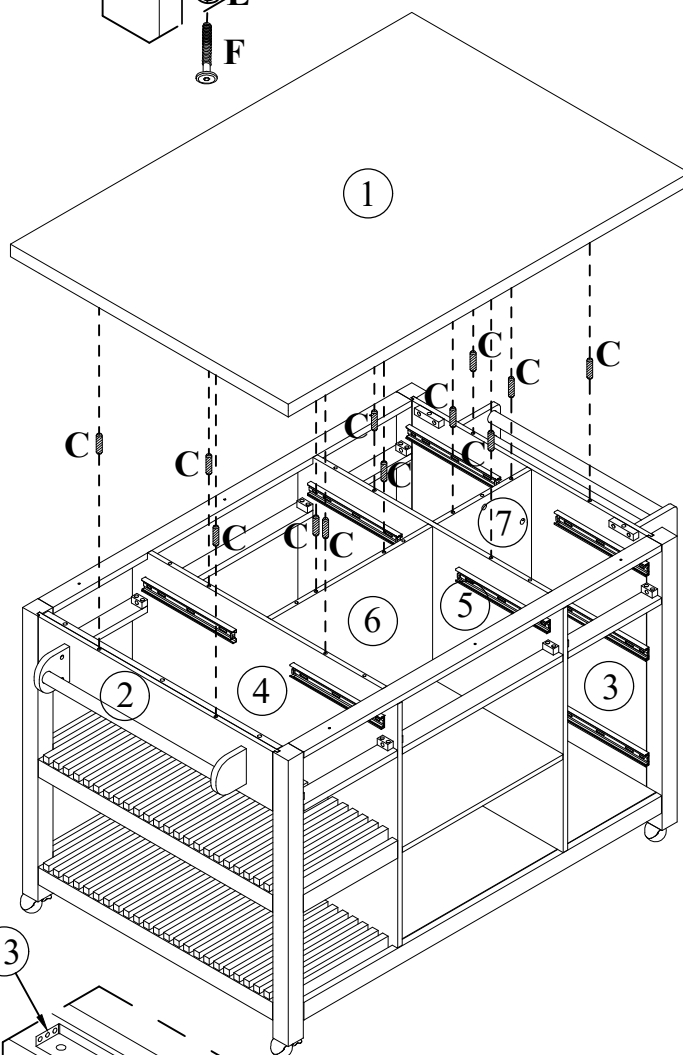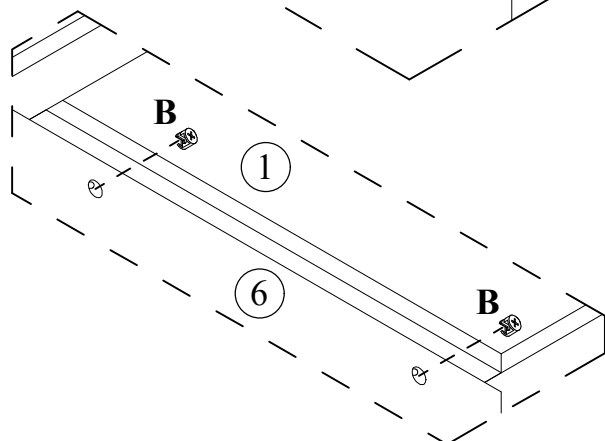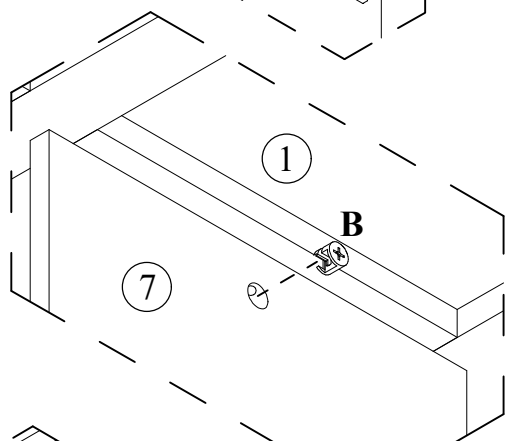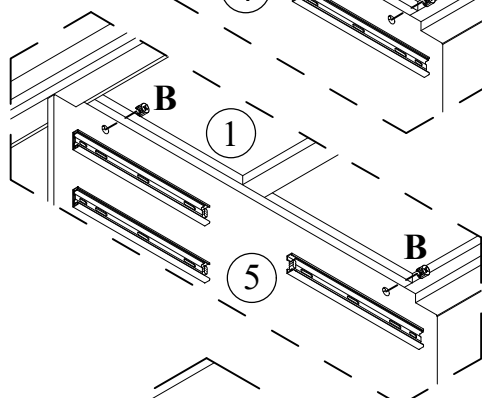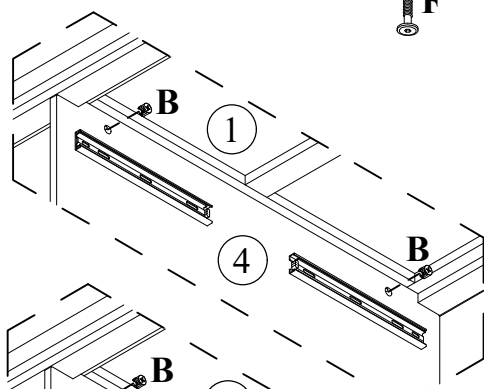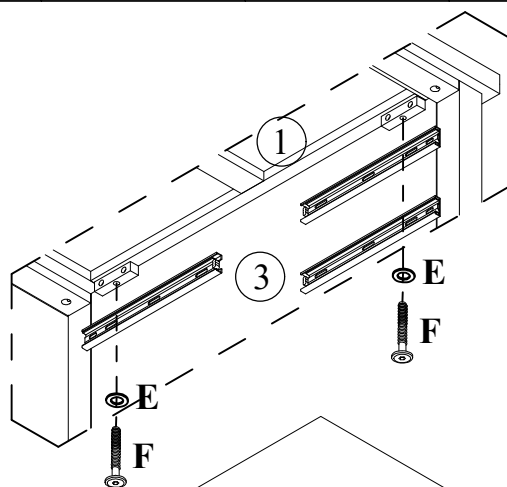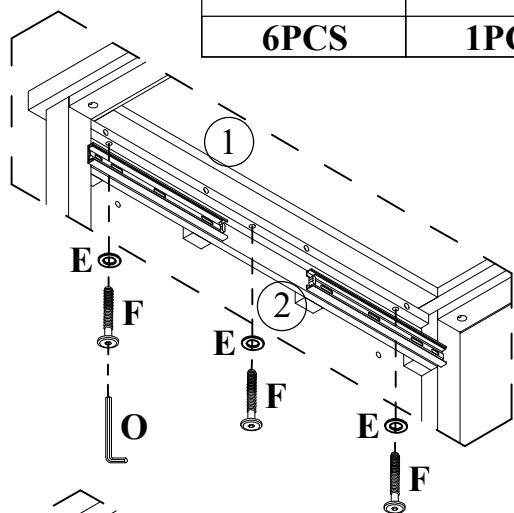        

STEP: 24

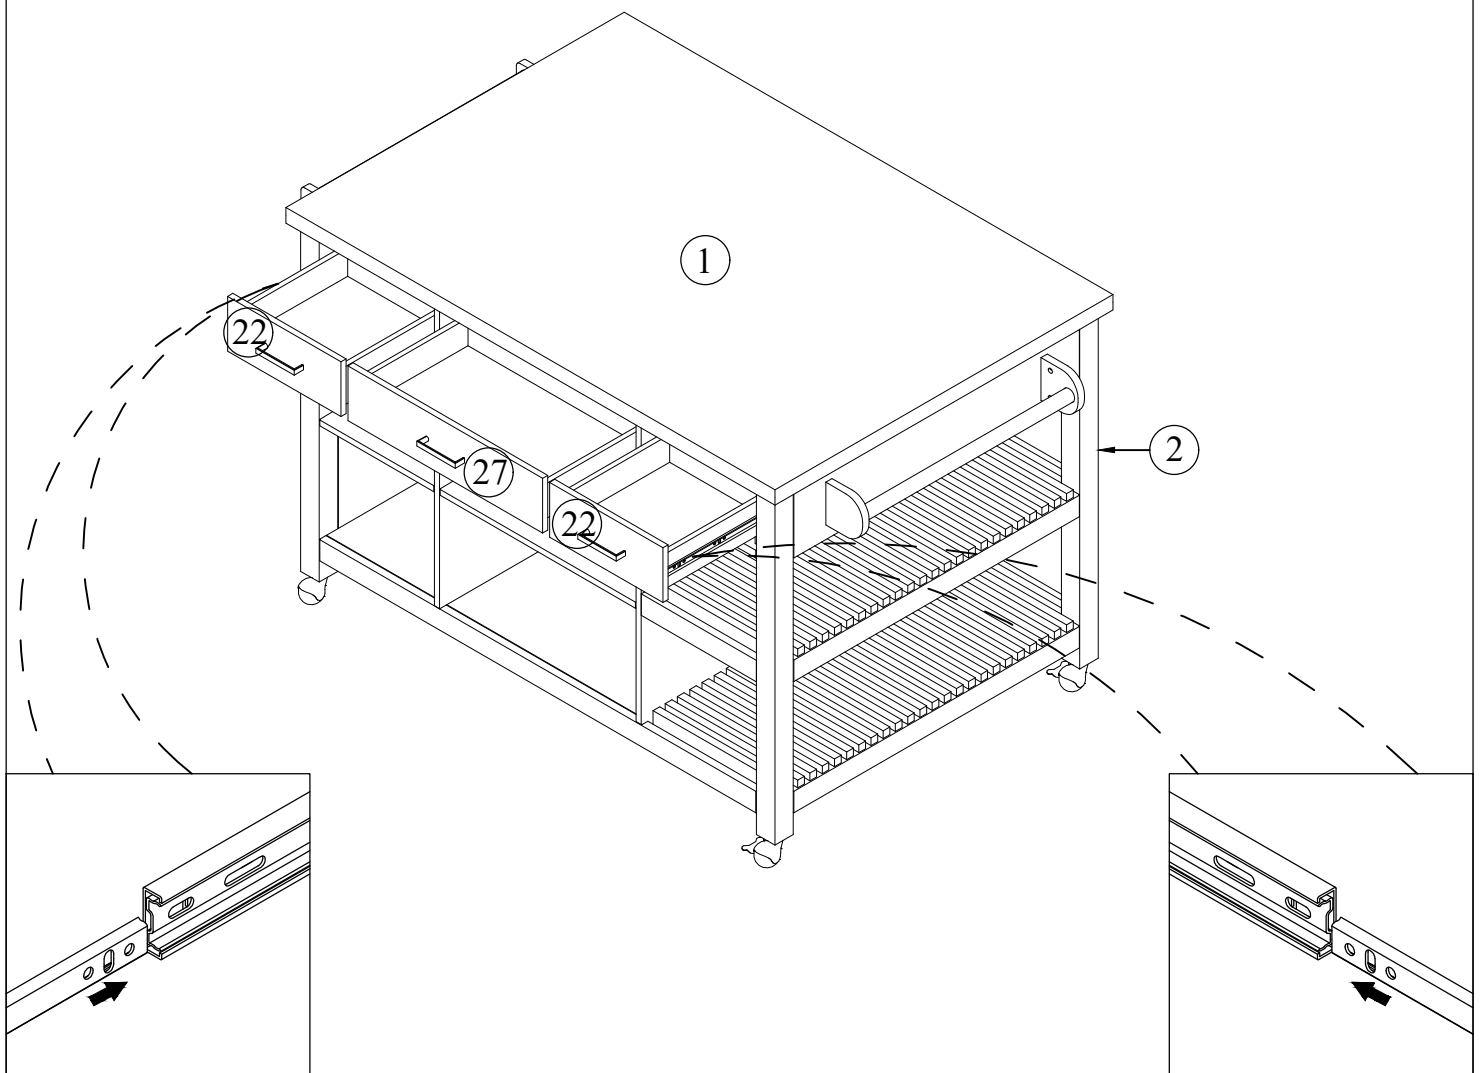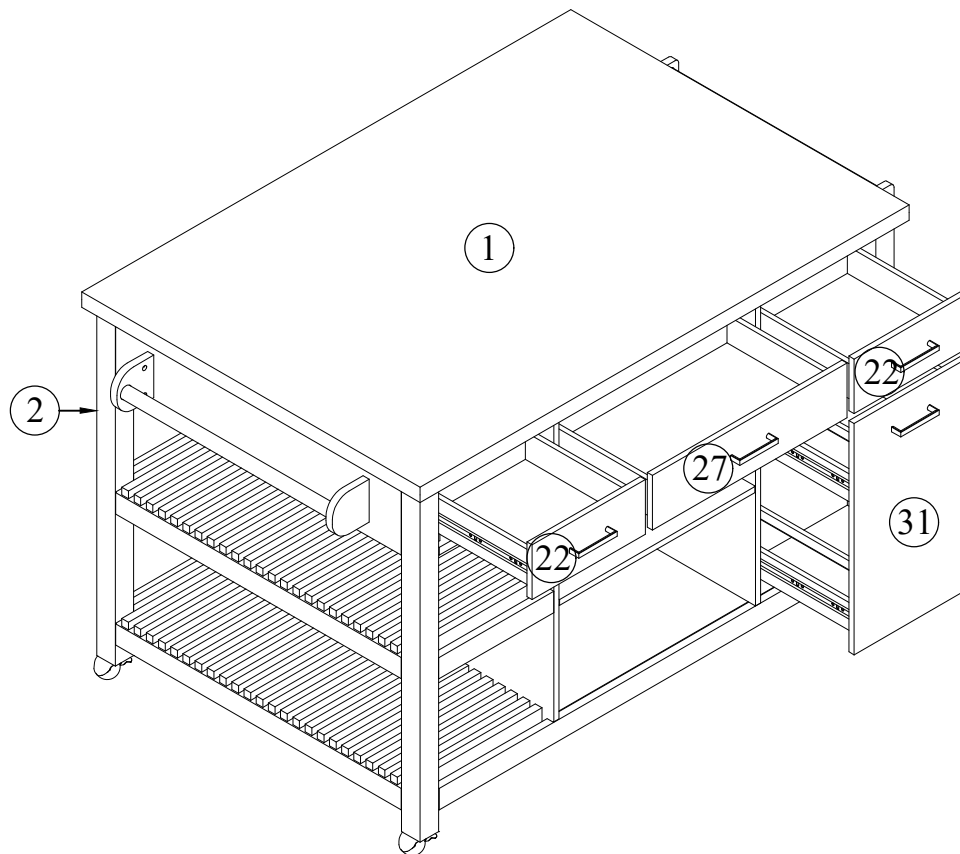  

STEP: 25

