 






ASSEMBLY INSTRUCTION

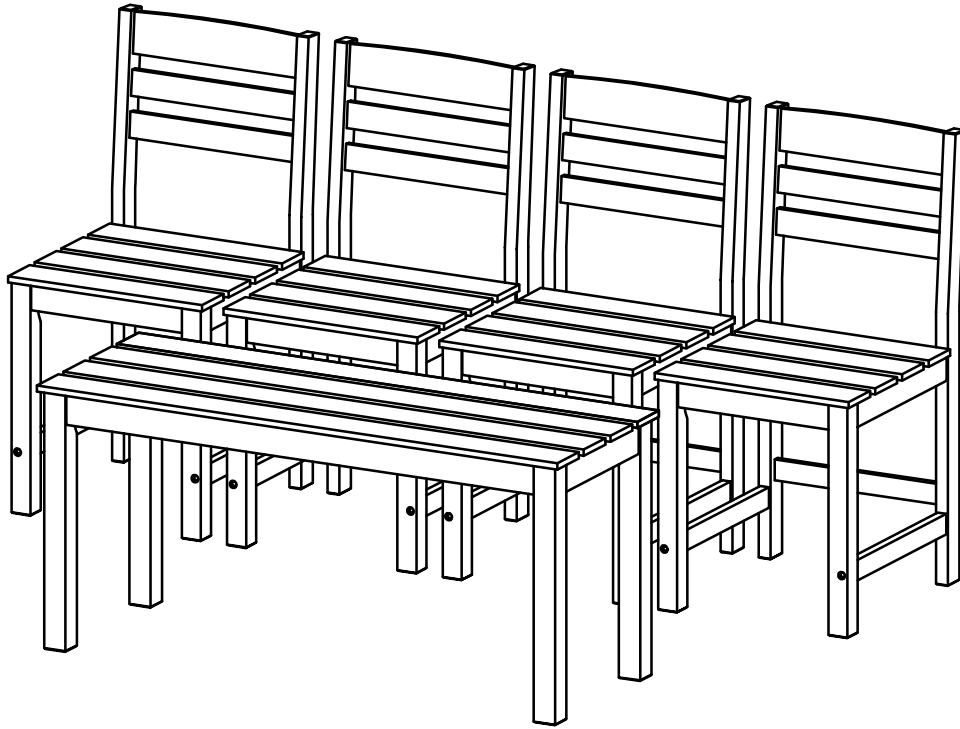


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

    "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

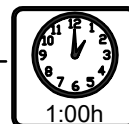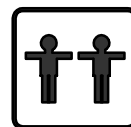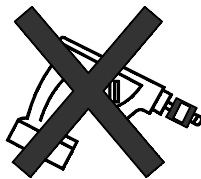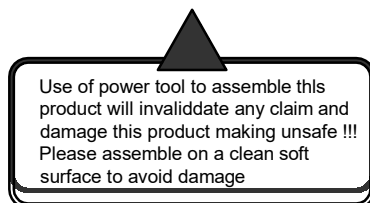

ToolsRequired

 

(Included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

 
Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

DETAIL VIEW - OUTDOOR DINING BENCH

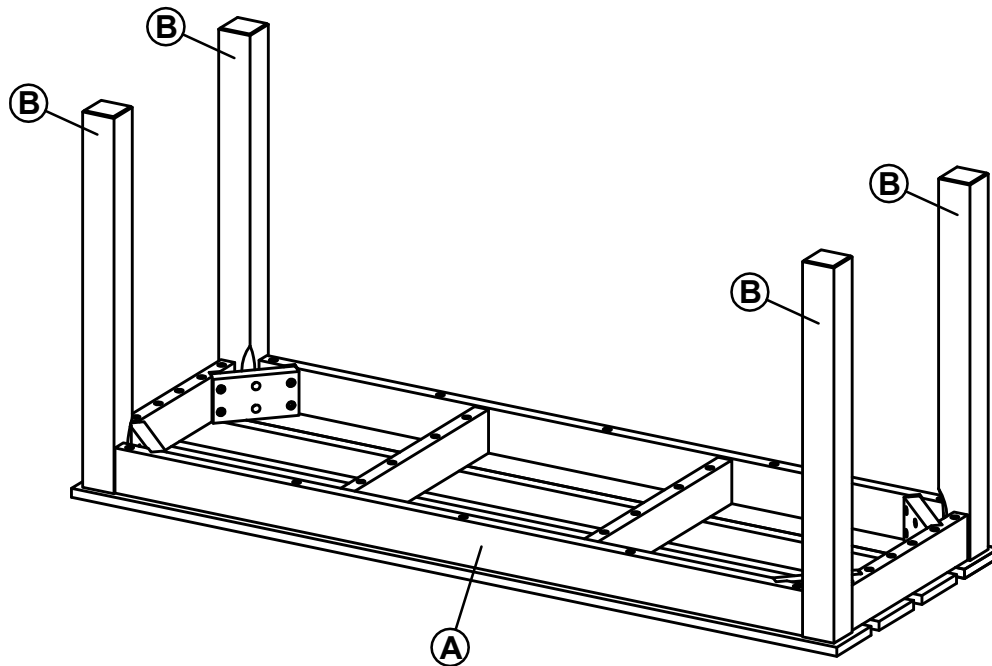

DETAIL VIEW - OUTDOOR DINING CHAIR


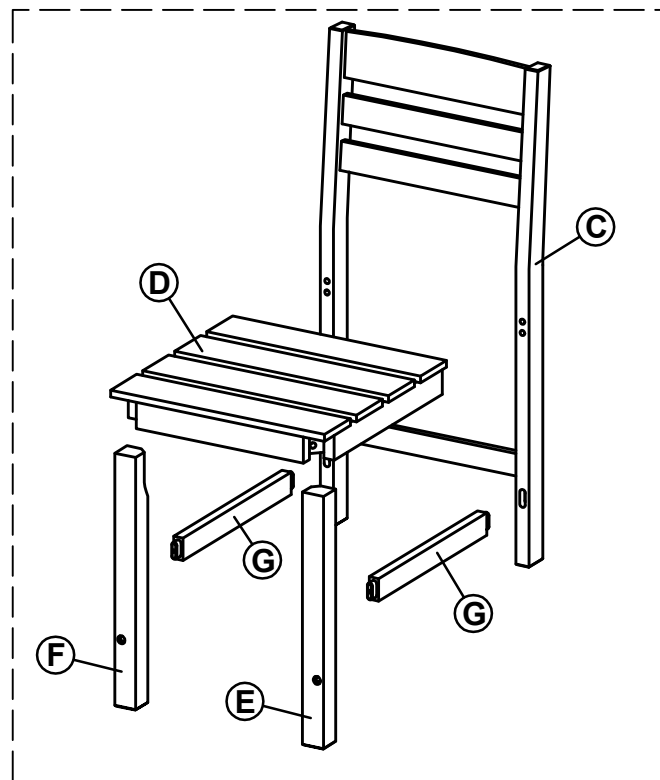 


X 4



Identifying the Hardware - Indentify the hardware using the illustrations below.

PART LIST

  OUTDOOR DINING BENCH



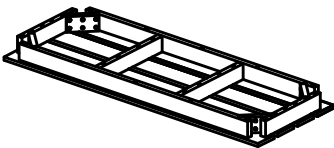
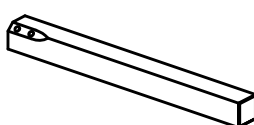
A  1 PC	B  4 PCS
--	--

  OUTDOOR DINING CHAIR

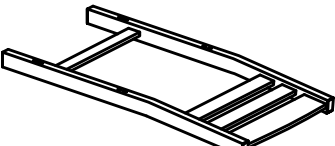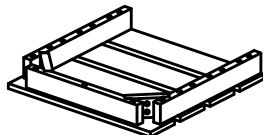C  4 PCS	D  3 PCS
---	---


PART LIST

    OUTDOOR DINING CHAIR

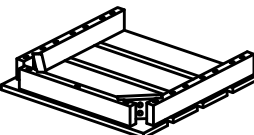
D  1 PCS	E  4 PCS	F  4 PCS	G  8 PCS
--	--	---	--

HARDWARE LIST

 OUTDOOR DINING BENCH



1. BOLT  M6 x 60 mm 8 PCS	2. SPRING WASHER  Ø6 x 11 x 1 mm 8 PCS
3. FLAT WASHER  Ø6 x 18 x 1 mm 8 PCS	4. ALLEN WRENCH  4 x 60 mm 1 PC

 OUTDOOR DINING CHAIR

5. BOLT  M6 x 60 mm 32 PCS	6. SCREW  M6 x 50 mm 16 PCS	7. SPRING WASHER  Ø6 x 11 x 1 mm 32 PCS
8. FLAT WASHER  Ø6 x 18 x 1 mm 16 PCS	9. FLAT WASHER  Ø6 x 13 x 1 mm 16 PCS	10. ALLEN WRENCH  4 x 60 mm 1 PC


STEP 1

1		2		3		4	
8PCS		8 PCS		8 PCS		1PC	

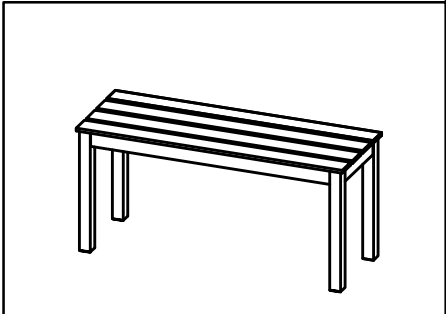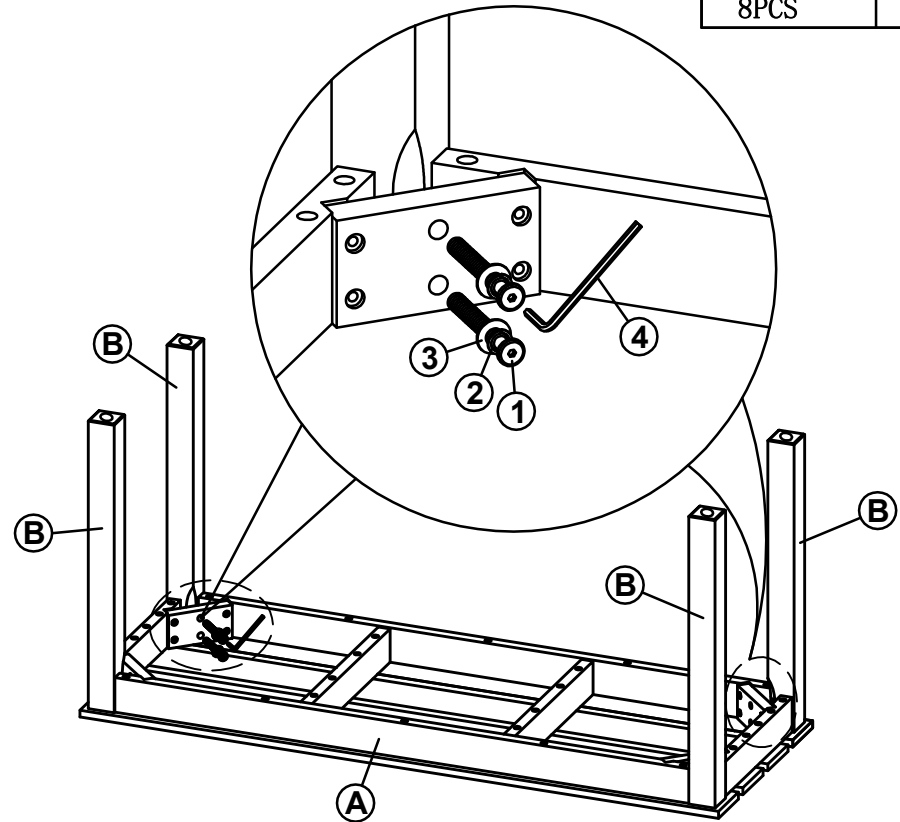  



STEP 2

5		7		8		10	
4PCS x 4		4PCS x 4		4PCS x 4		1PC	

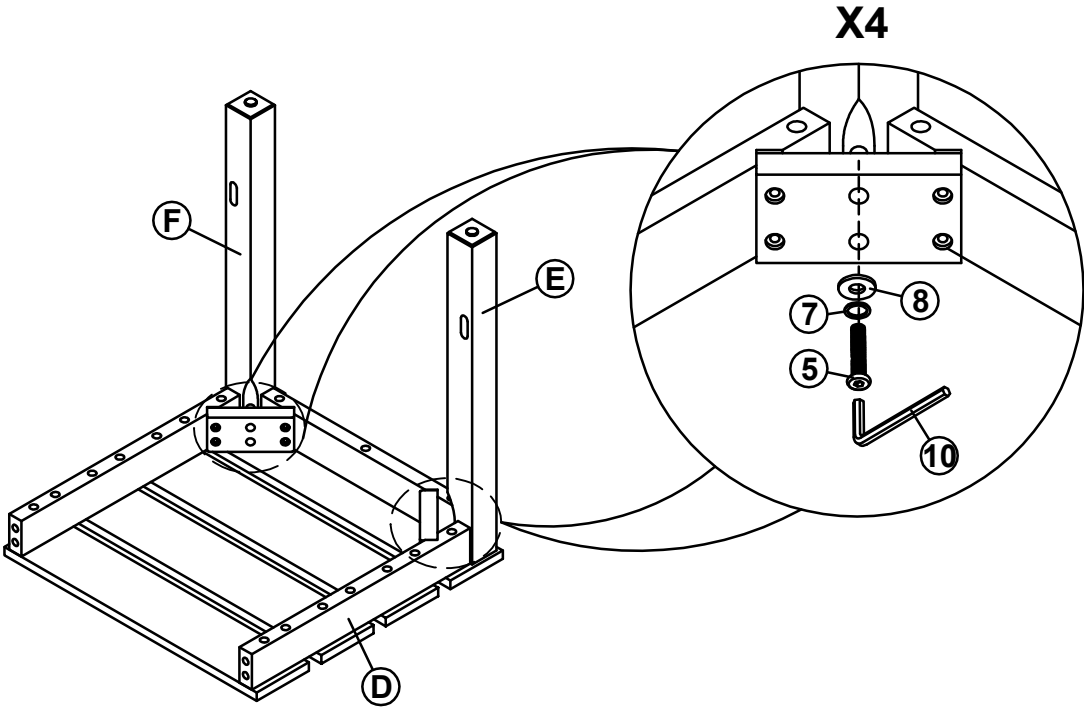 

 STEP 3

5	6	7	9	10
				
4PCS x 4	2PCS x 4	4PCS x 4	4PCS x 4	1PC

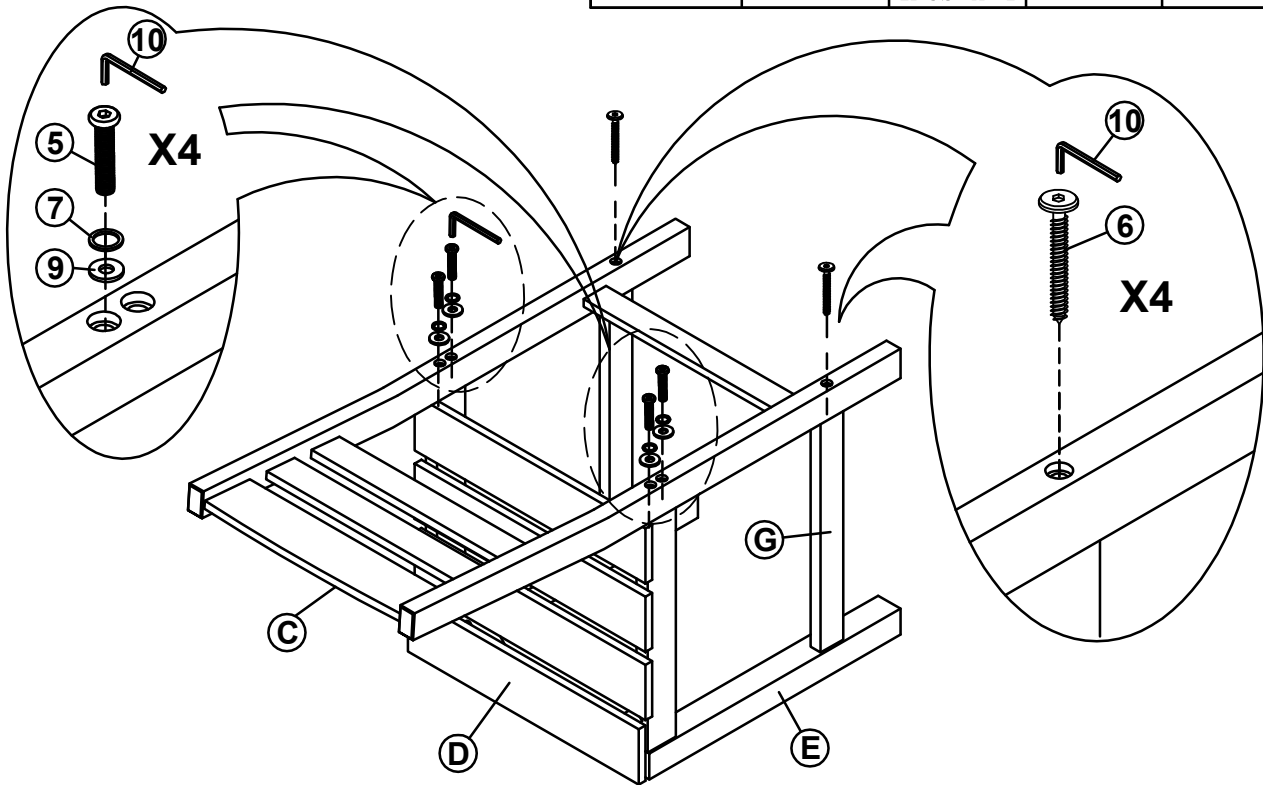 

STEP 4

6	10
	
2PCS x 4	1PC

