

Camping Recliner with Footrest

USE AND CARE GUIDE



Question about your product? We are here to help.

Please kindly email: **Lounge-Chair@outlook.com**

CAMPING CHAIR ACCESSORIES



Camping Chair *1



Storage Bag *1



Detachable pillow*1

WARNING!!!



Do not scratch the camping chair with sharp objects.



Please keep away from fire.

STEPS FOR USAGE

STEP 1

How to unfold the camping chair: Hold the back of the chair with one hand and use your other hand to push down on the armrests.



STEP 2

Secure the removable pillow to the chair using Velcro.




STEPS FOR USAGE

STEP 3

4-Position Adjustable Backrest (The adjustment settings on both sides must be consistent.)

Adjustment buttons

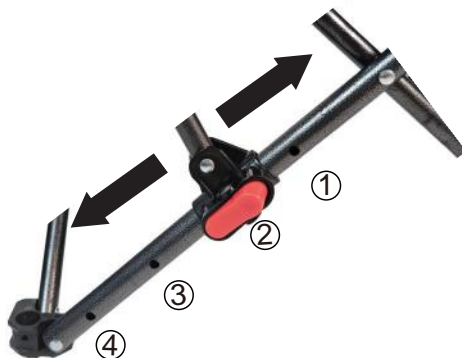

STEPS FOR STORAGE

STEP 1

Grasp the back of the chair with one hand, and lift the armrest with the other hand until the chair is closed.



STEP 2

Pack the chair into the storage bag.

