 


# INSTRUCTION MANUAL

**SKU:AGDRE73NA**

Thank you for your support.  
Follow us for more updates!

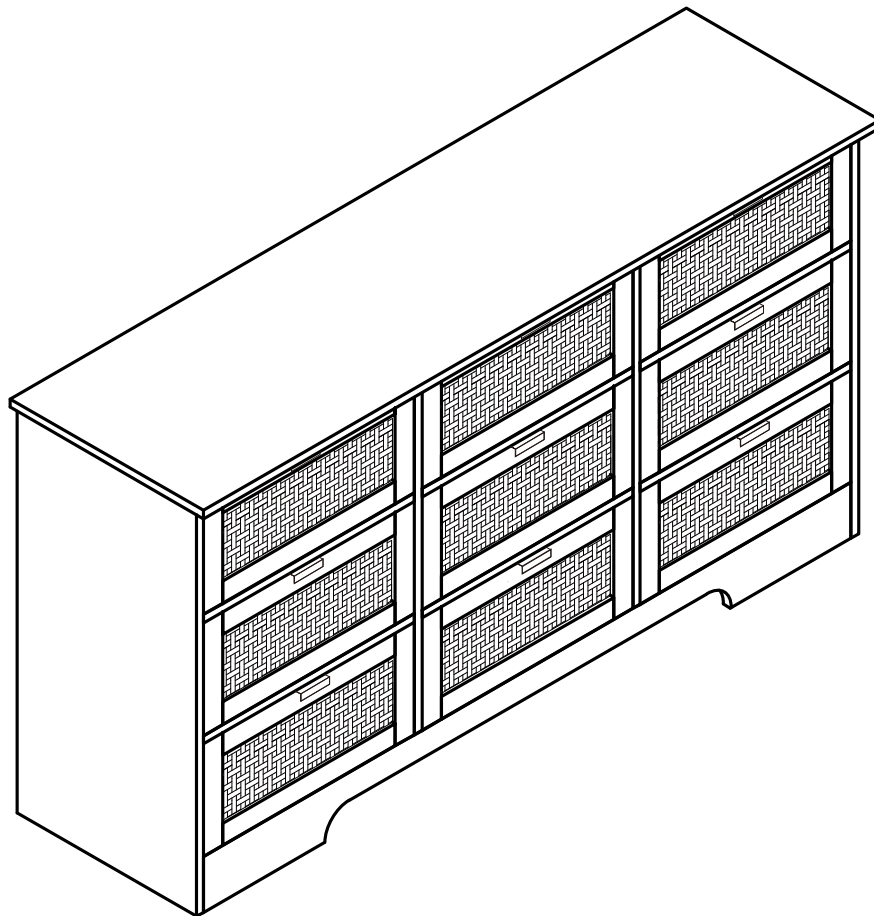

Thank you for purchasing our product.

Please contact us and Leave ordernumber if you  
have difficulty with installing or need replacement parts.

Customer service is here to assist you all the time.

**E-MAIL: [yourniture@163.com](mailto:yourniture@163.com)**

# CONTACT US !

## Do Not return this product

Contact our friendly customer service team first for help.

①



**youfurniture@163.com**

②



 
**Amazon Message**

 
**Q: If the parts were missed or damaged when received, what can I do?**

**A: There are two solutions.**

**1. Please purchase the missed part from the local store and send the receipt to us on Amazon, we will pay for it.**

**2. You could contact us on Amazon or by after-sale e-mail and we will reply and solve the problem for you in 24 hours. Our after-sales mailbox is **youfurniture@163.com**, thank you!**

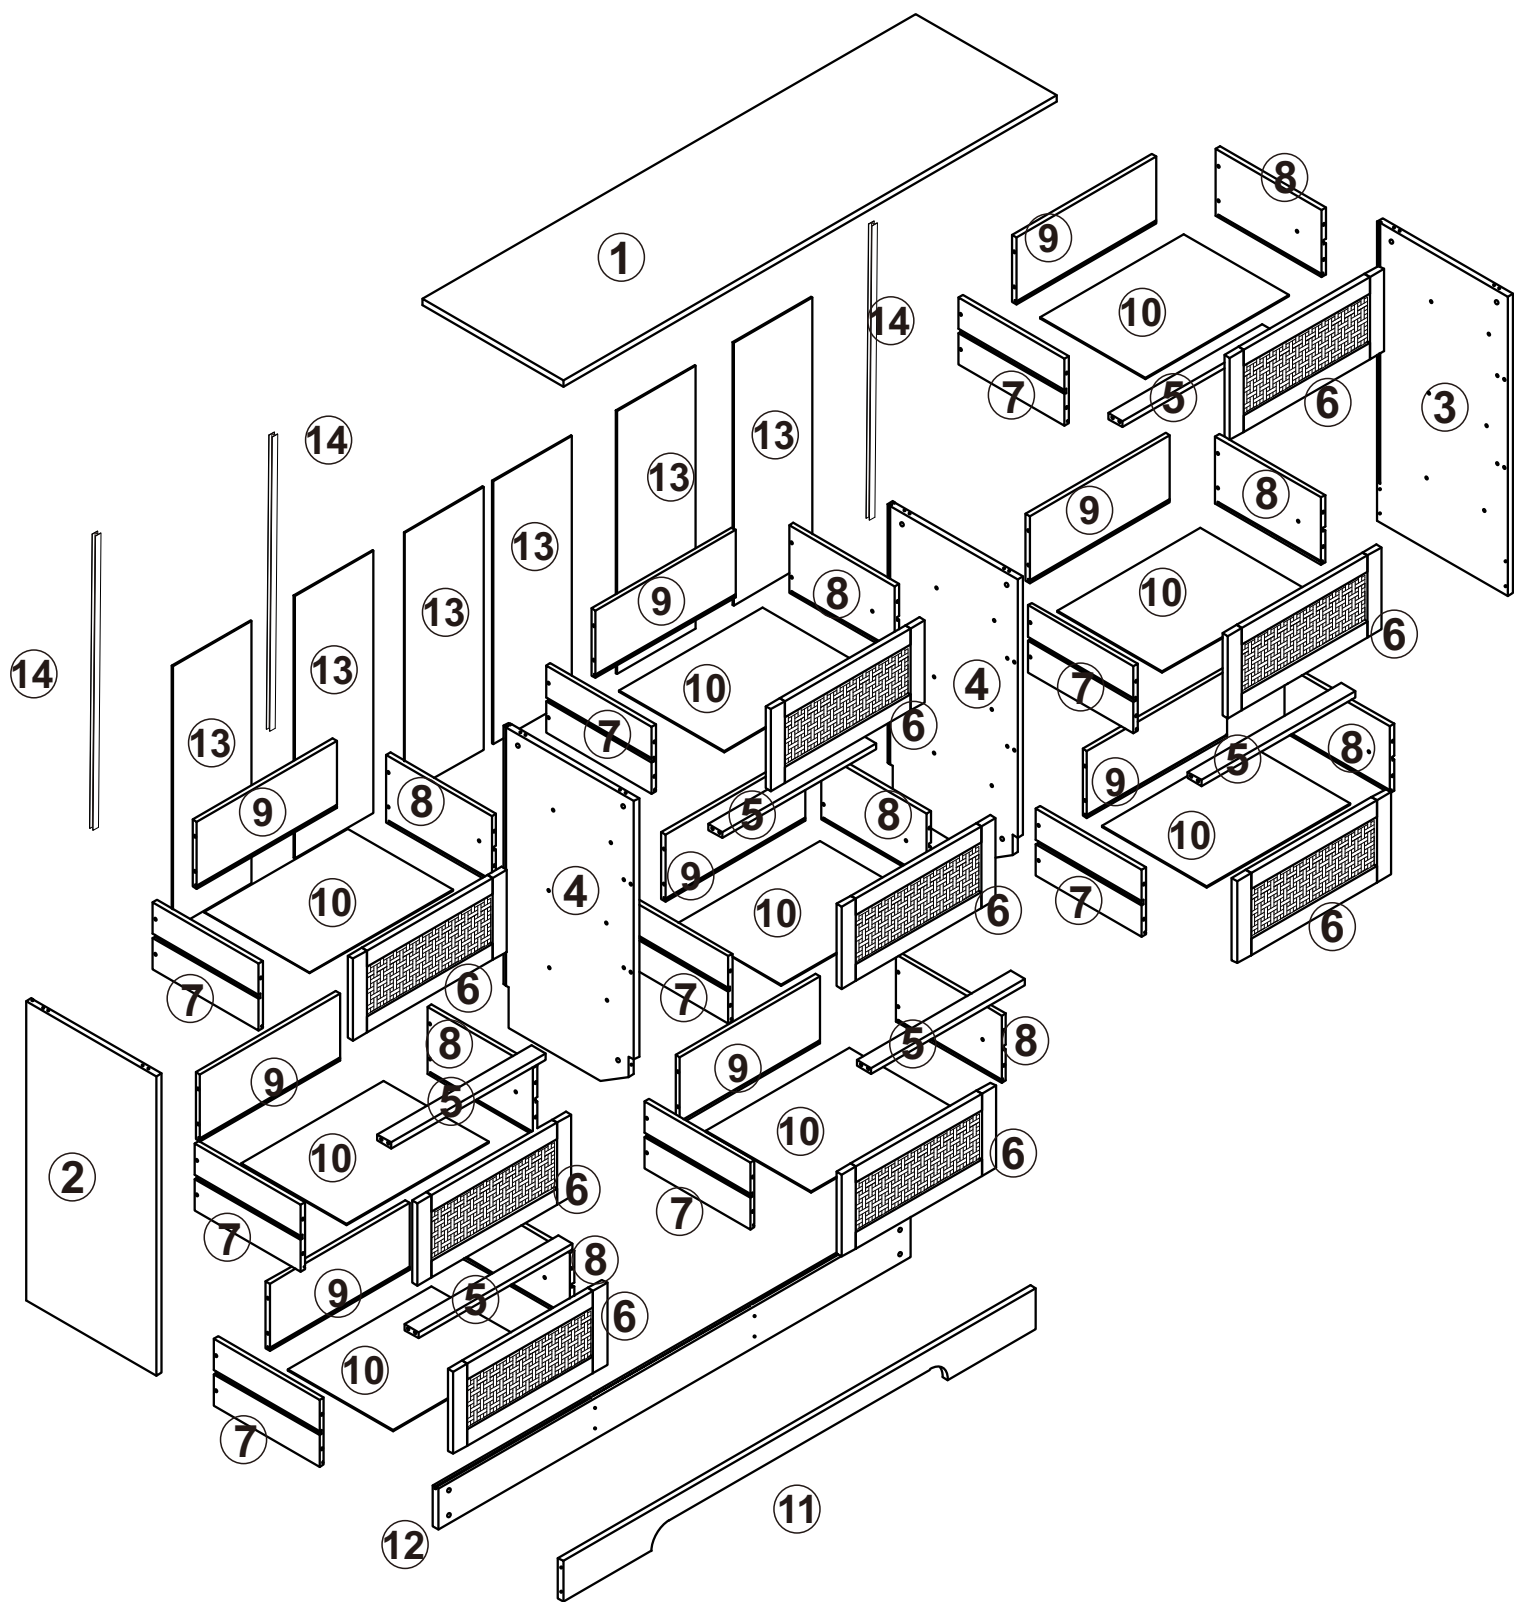



|                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                       |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |  |  |  |
| Ax78(+3)                                                                            | Bx78(+3)                                                                            | Cx8                                                                                 | Dx36                                                                                | Ex18                                                                                  | Fx4                                                                                   |
|  |  |  |  |  |  |
| Gx36                                                                                | Hx9                                                                                 | Ix18                                                                                | Jx18                                                                                | Kx12                                                                                  | Lx2                                                                                   |

# SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT
  
## CAM-LOCK




**WHEN FITTING CAMLOCK  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING QUICKFIT  
TURN CLOCKWISE UNTIL SECURE**

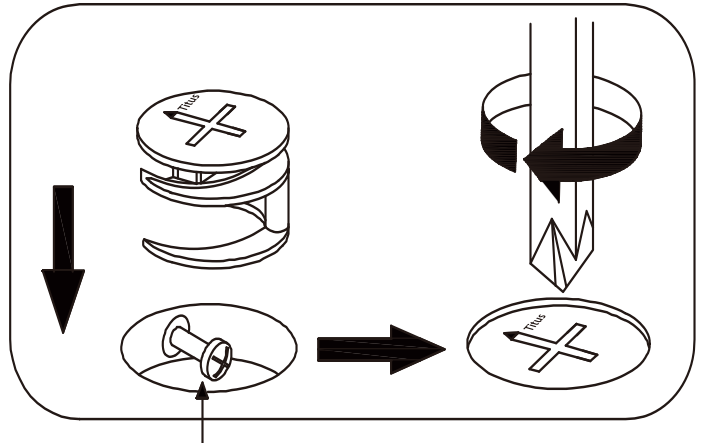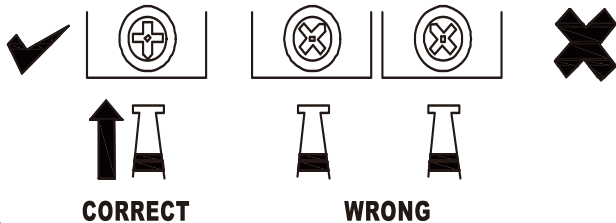






**Quickfit head needs to be in centre**

## QUICKFIT




 
**Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)**

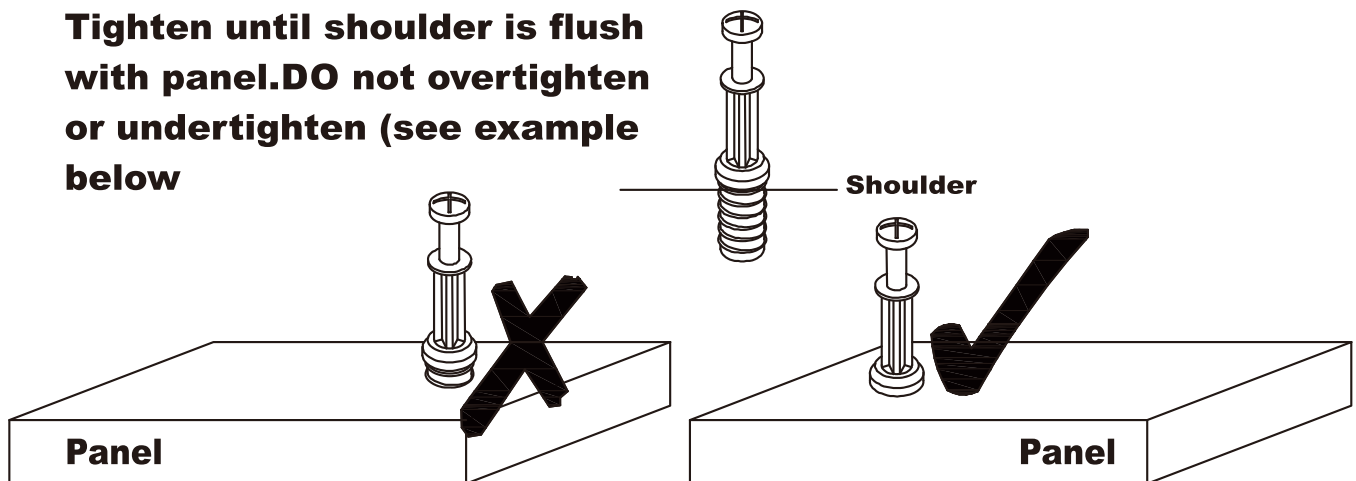


1

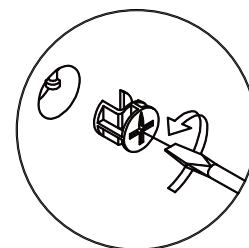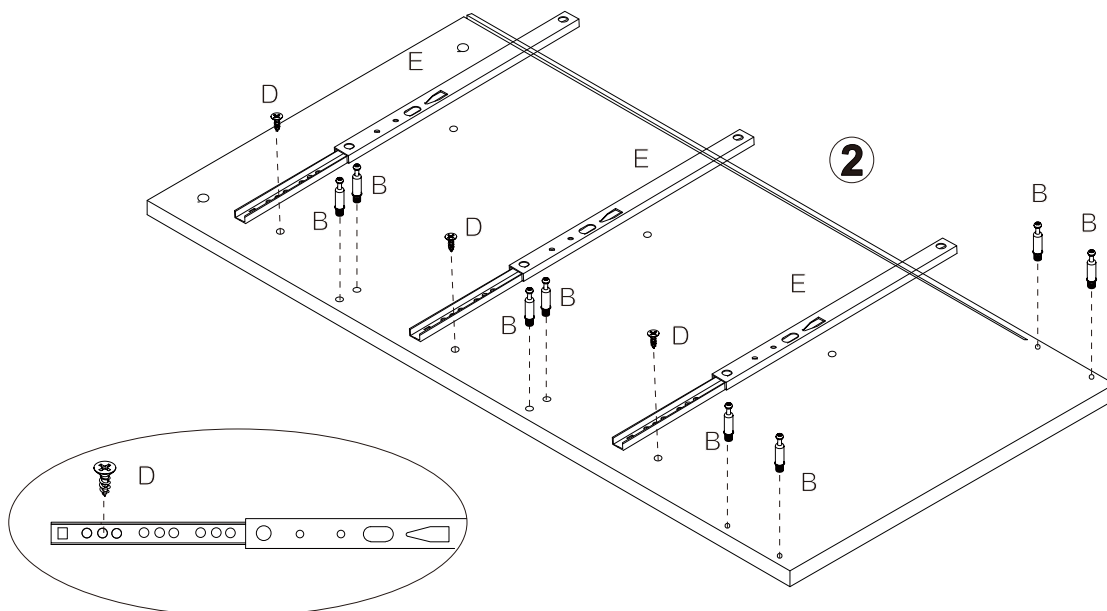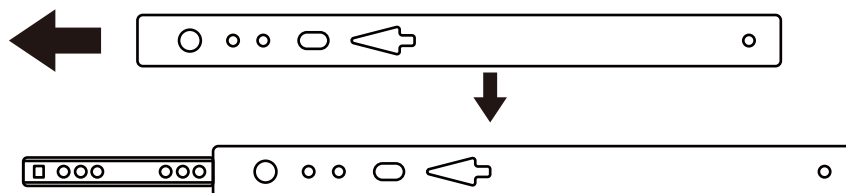     


2

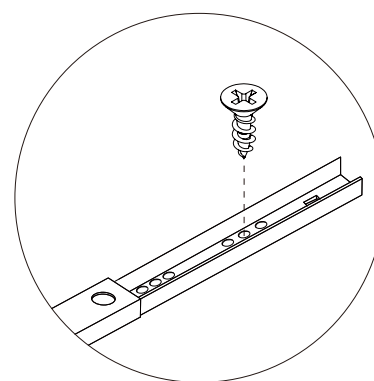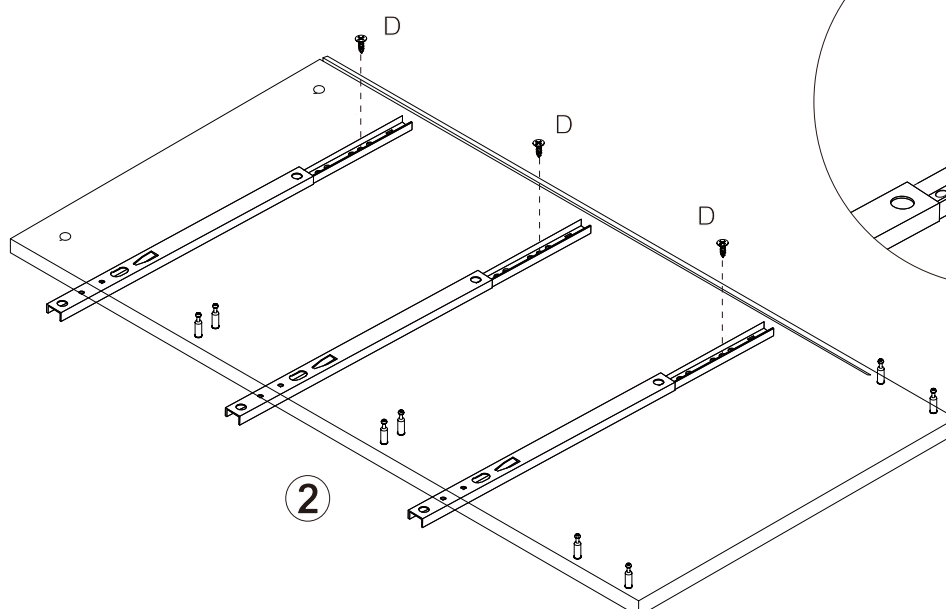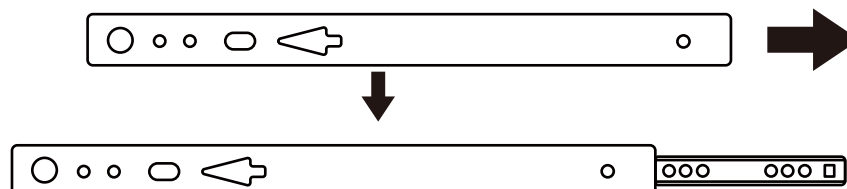    



3

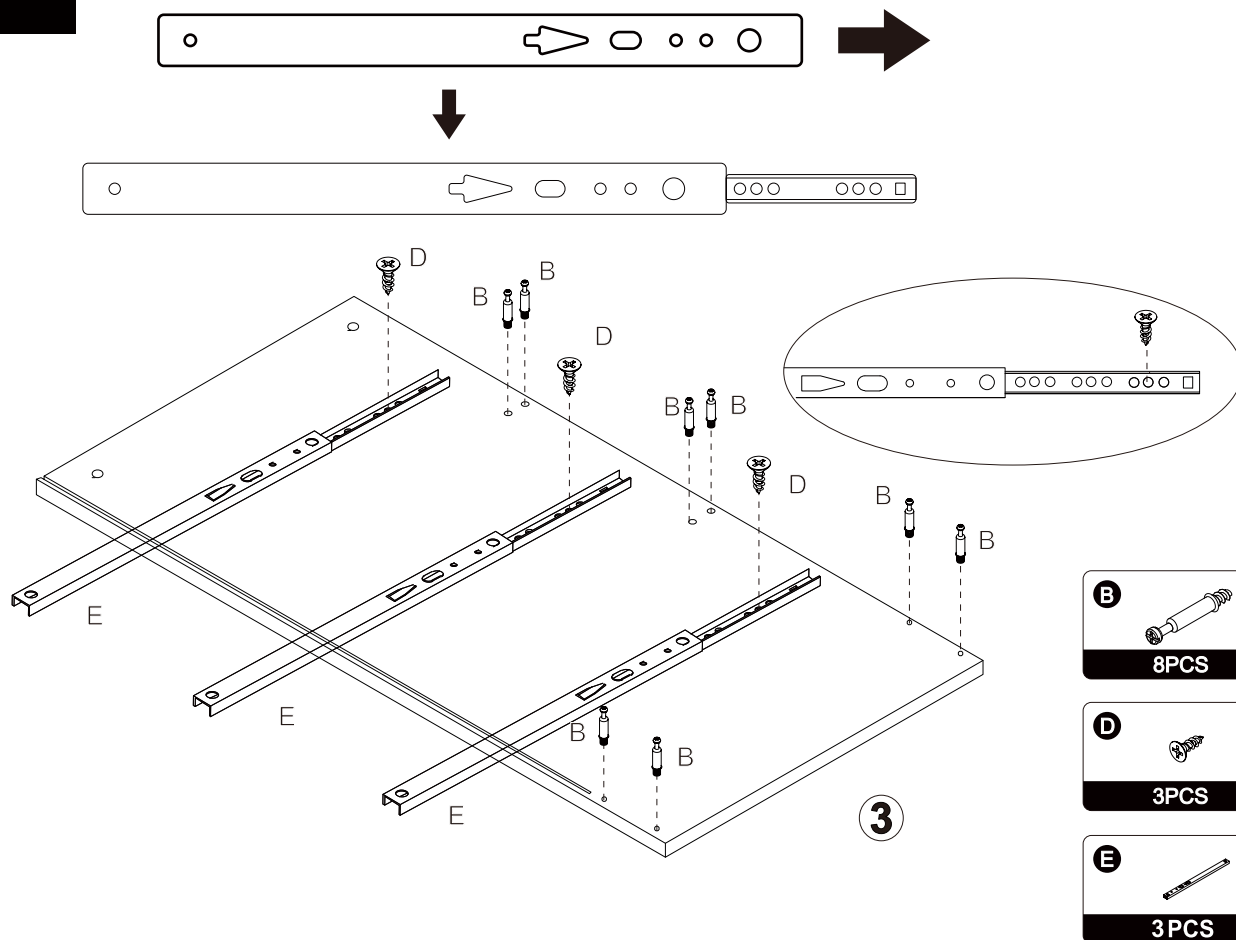 



4

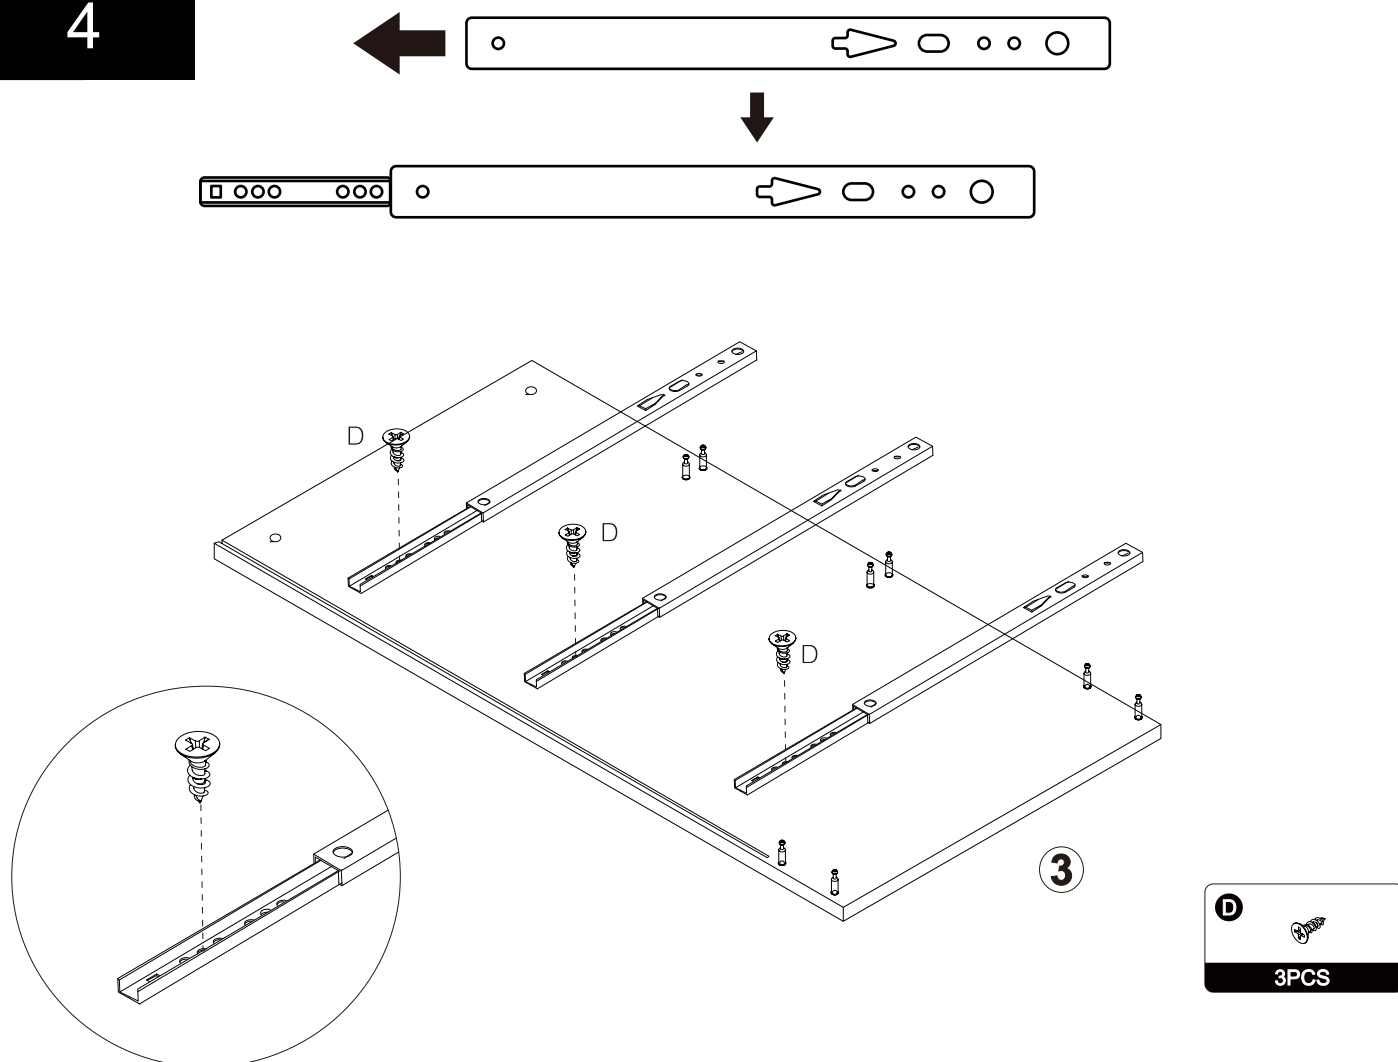 



5

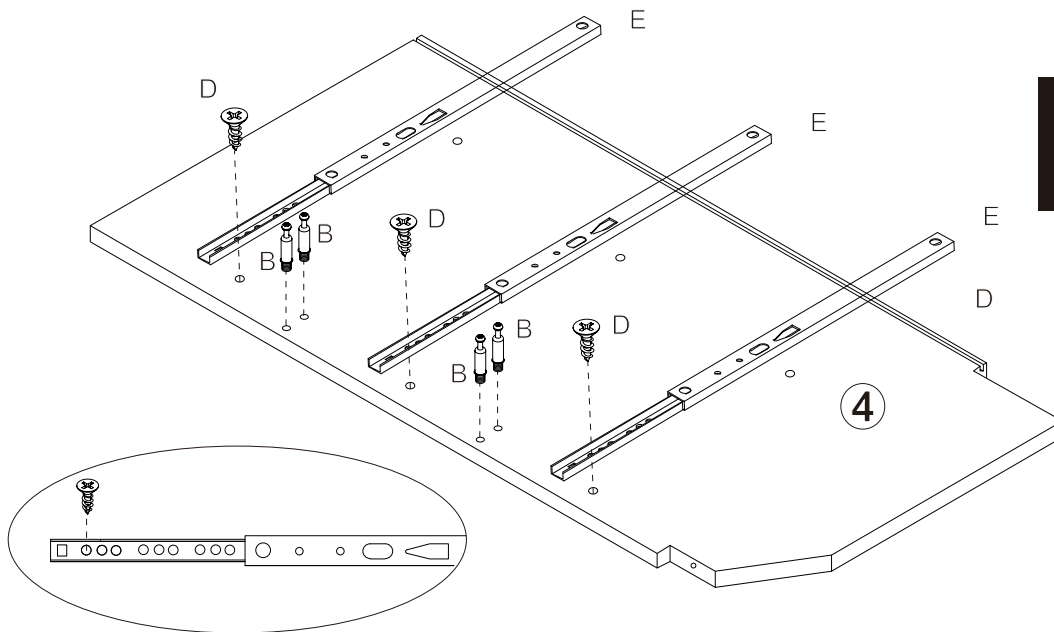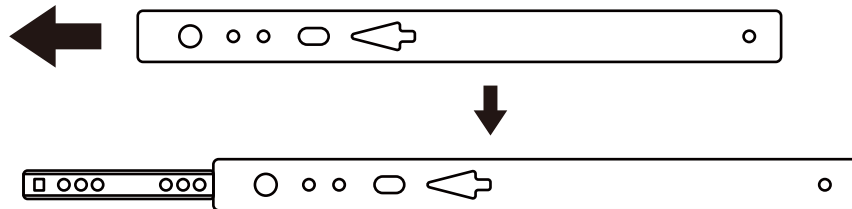  

x2

  


6

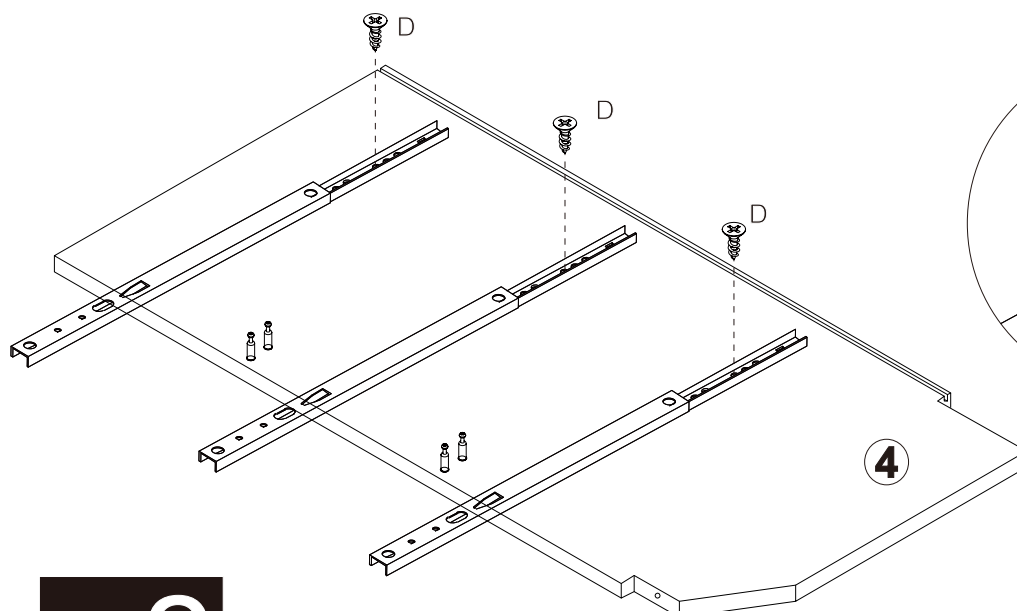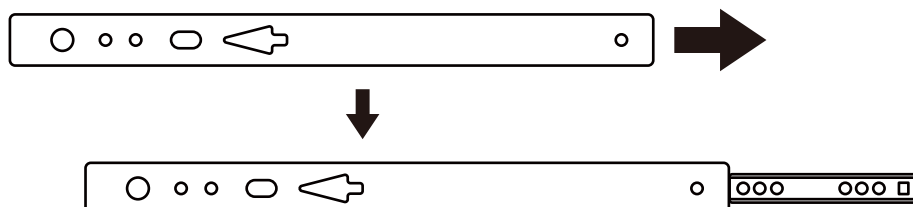  

x2




 7

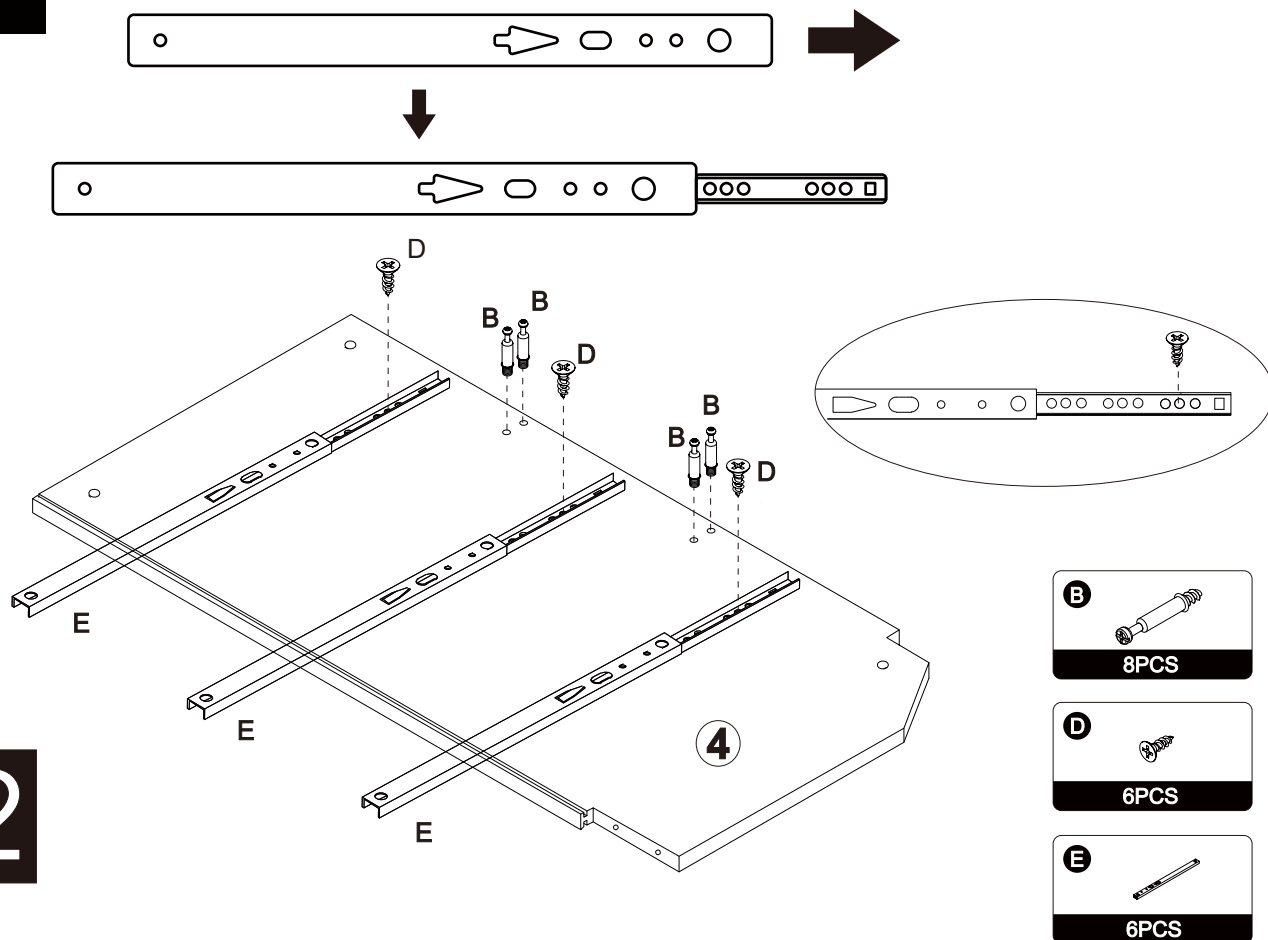


x2

 
8

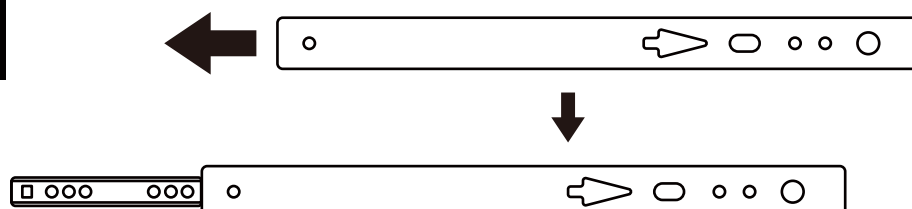




x2

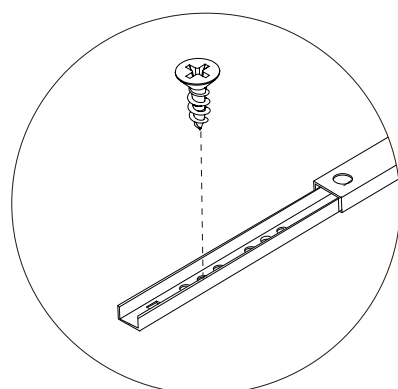 



9

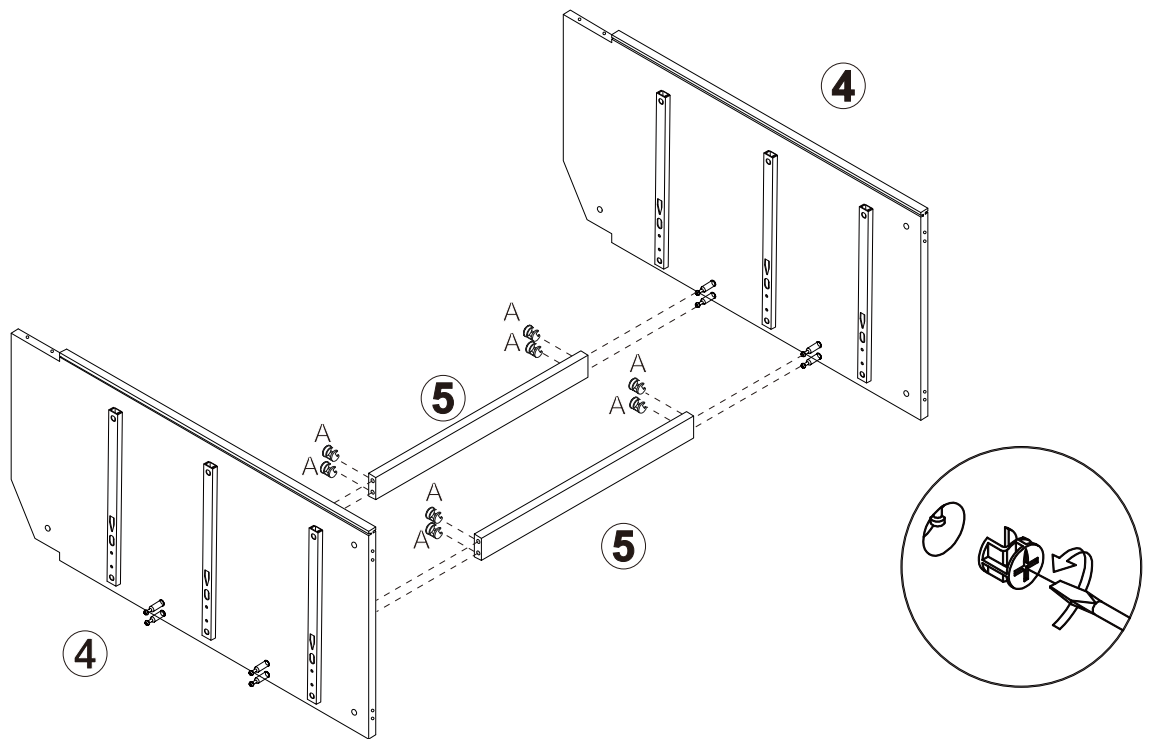 



10

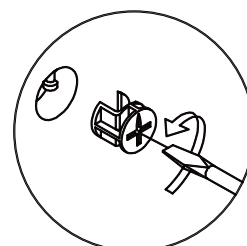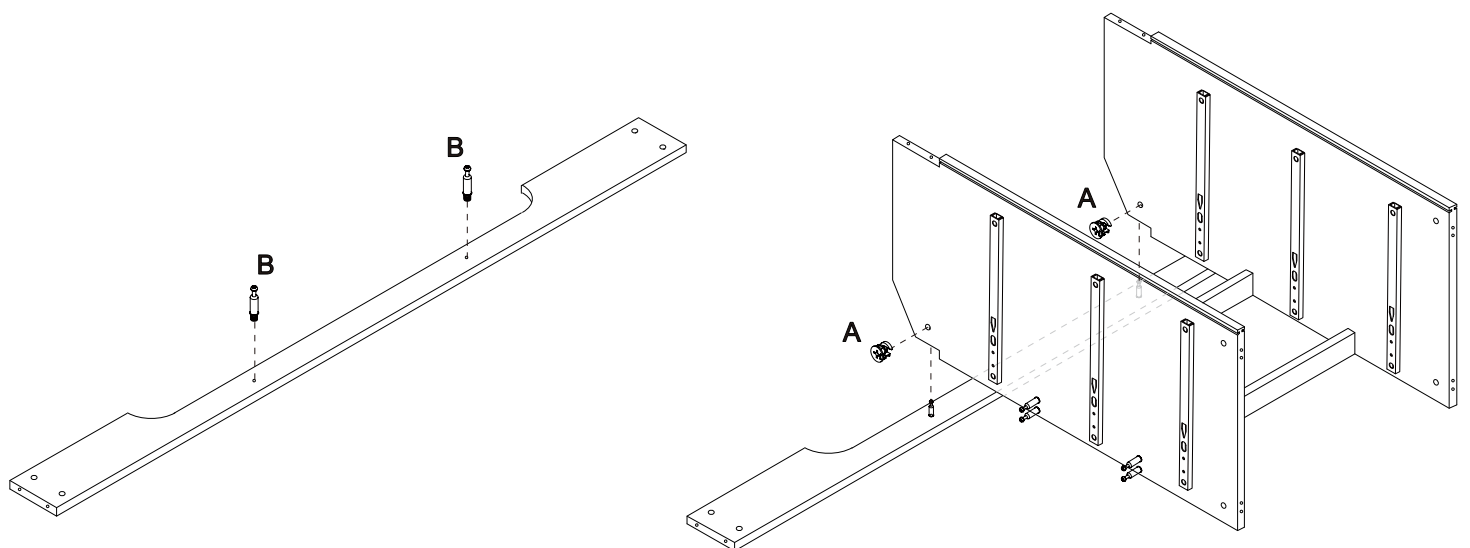   


11

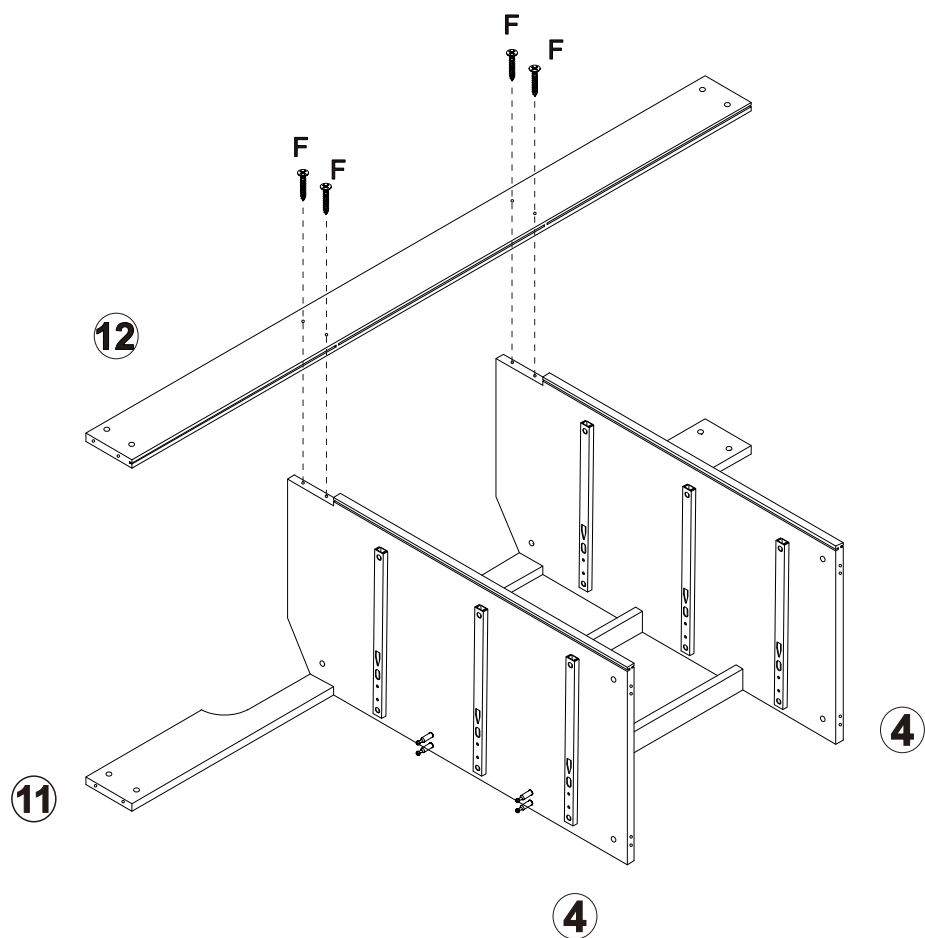  


12

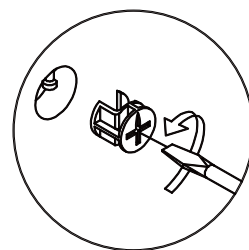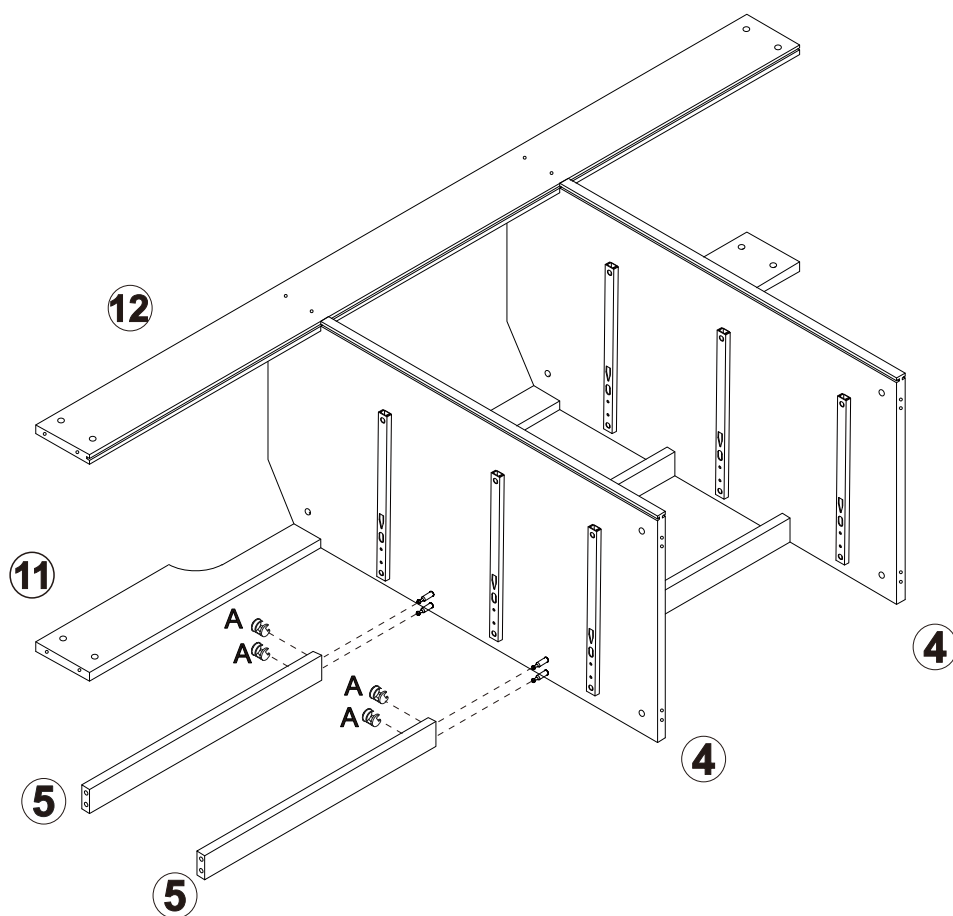  


13

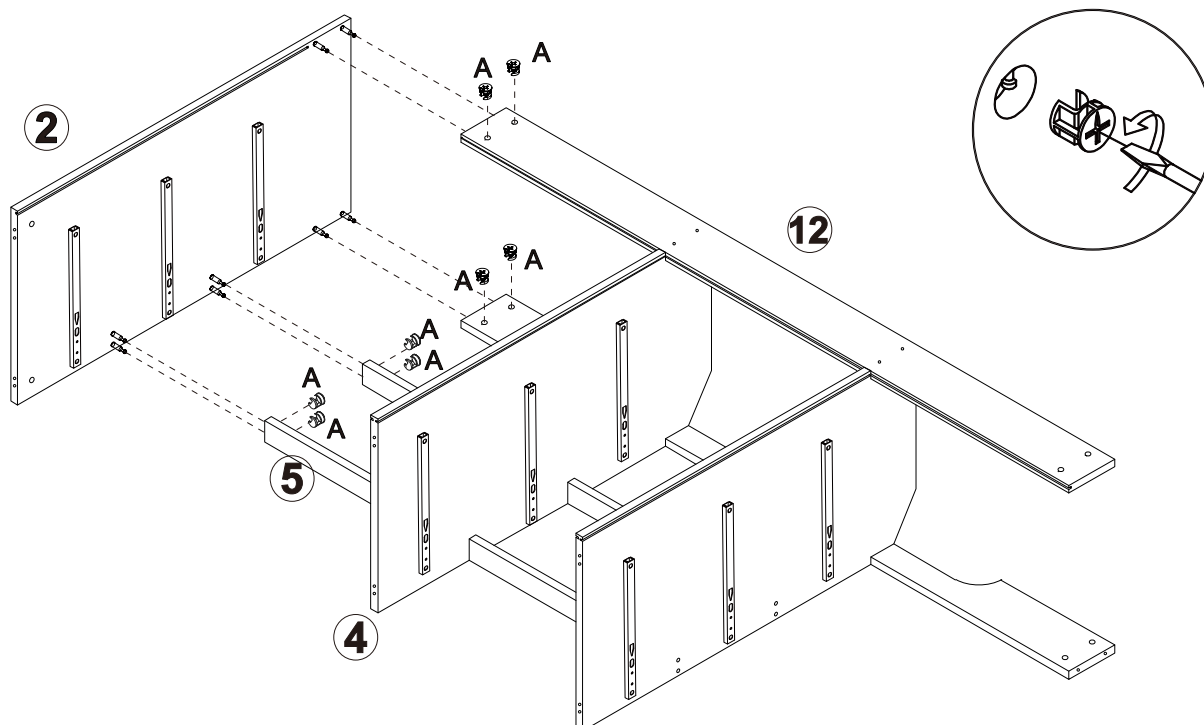 


14

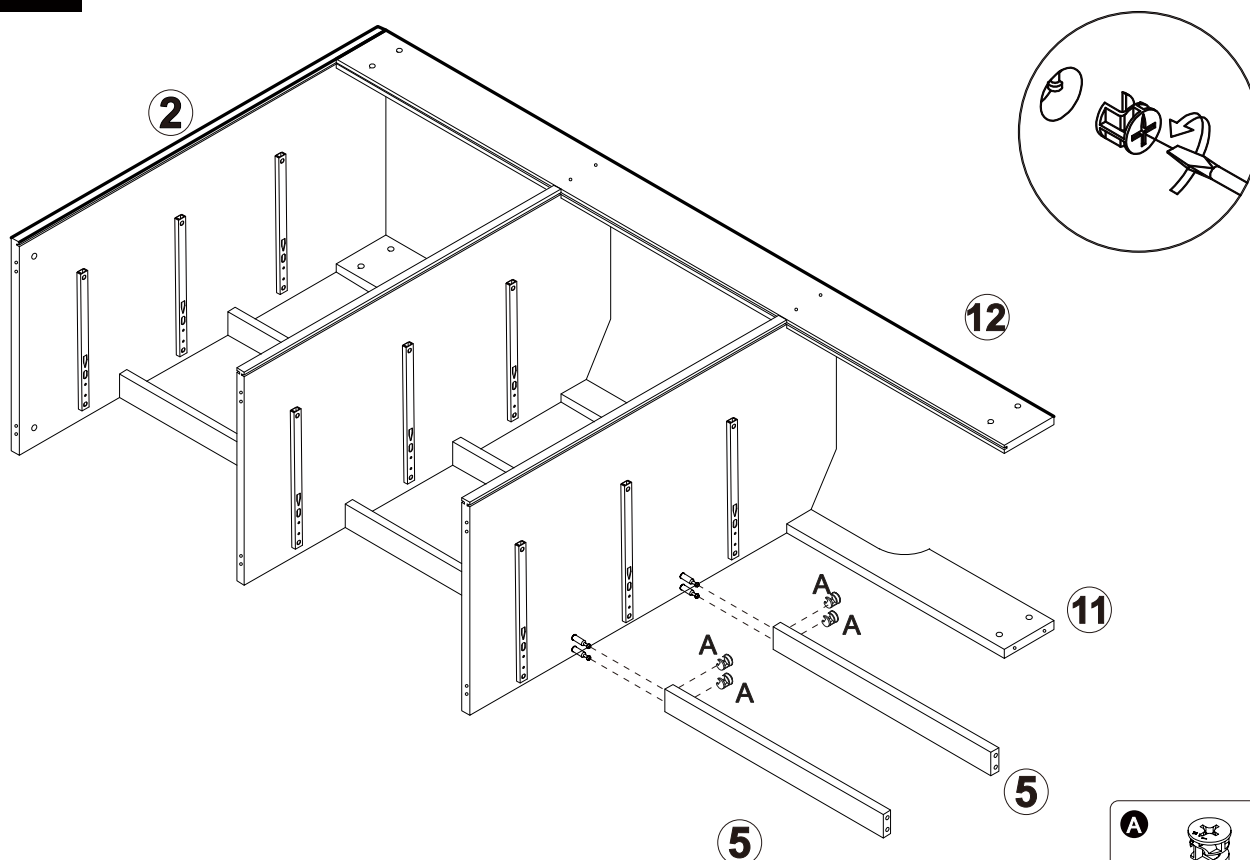 





15

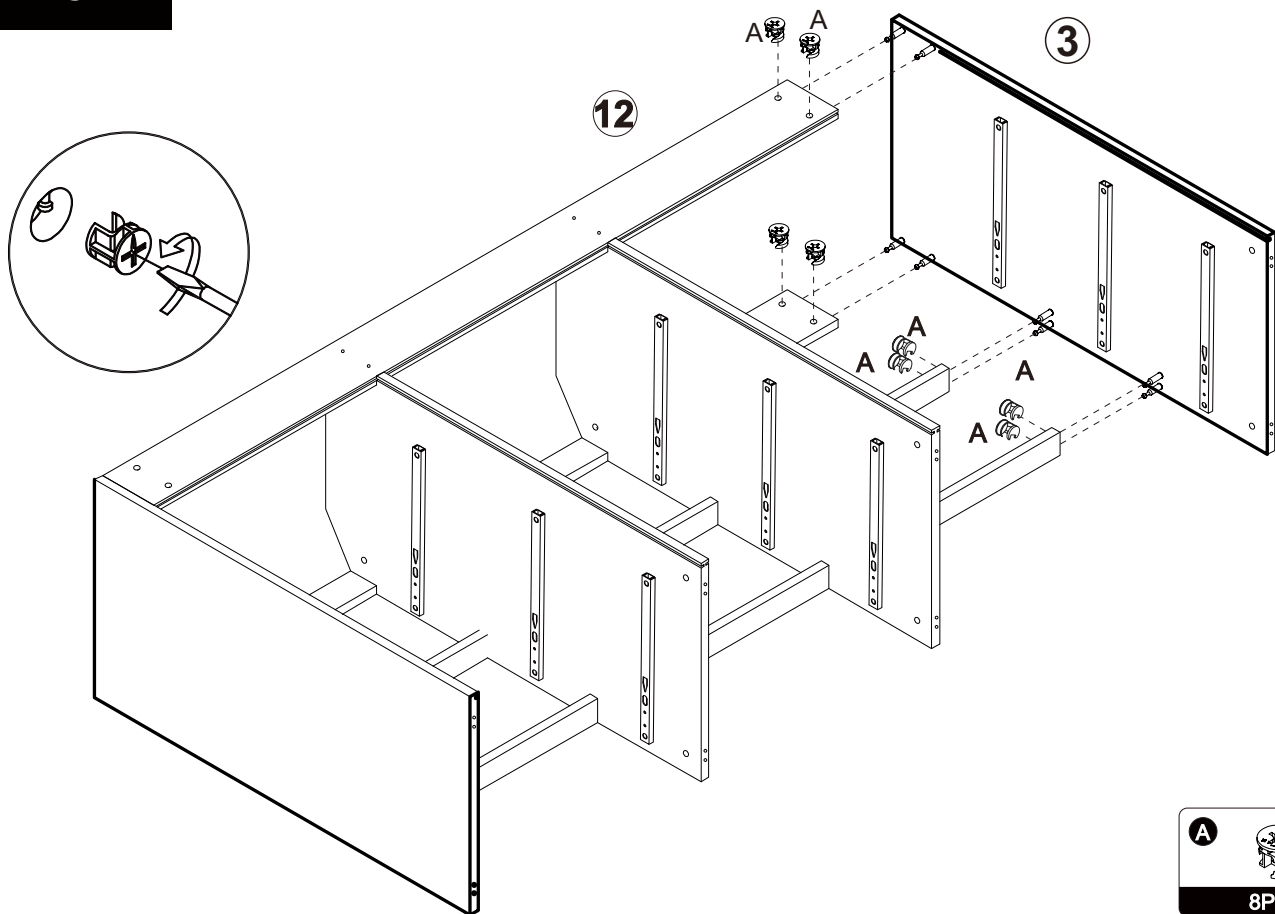 


16

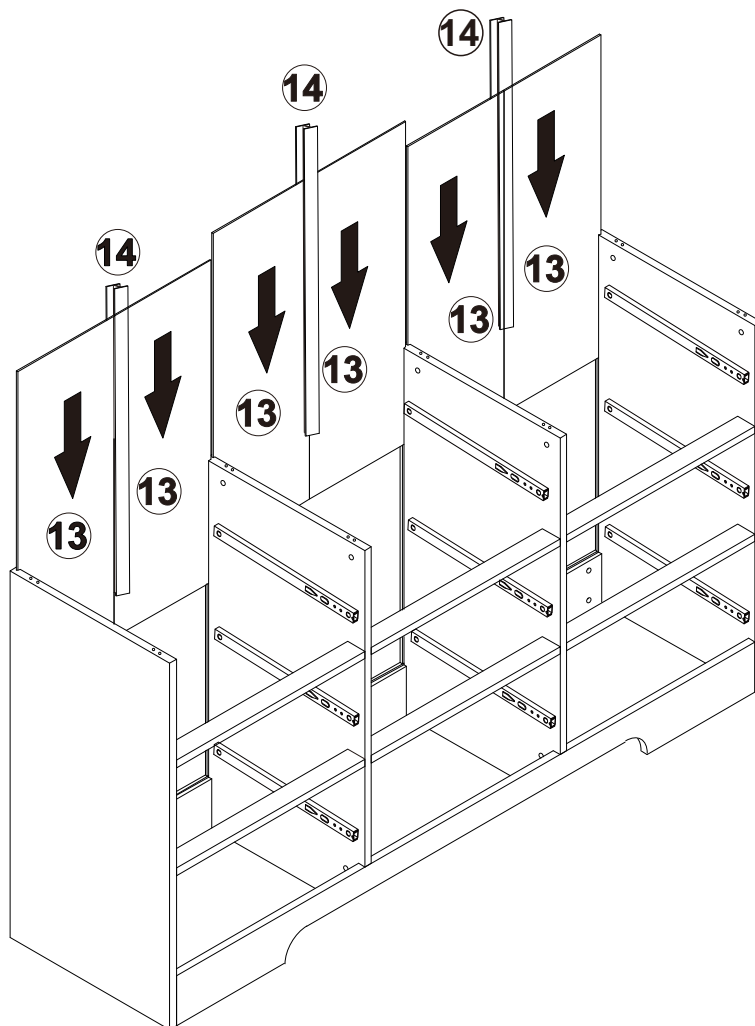 


17

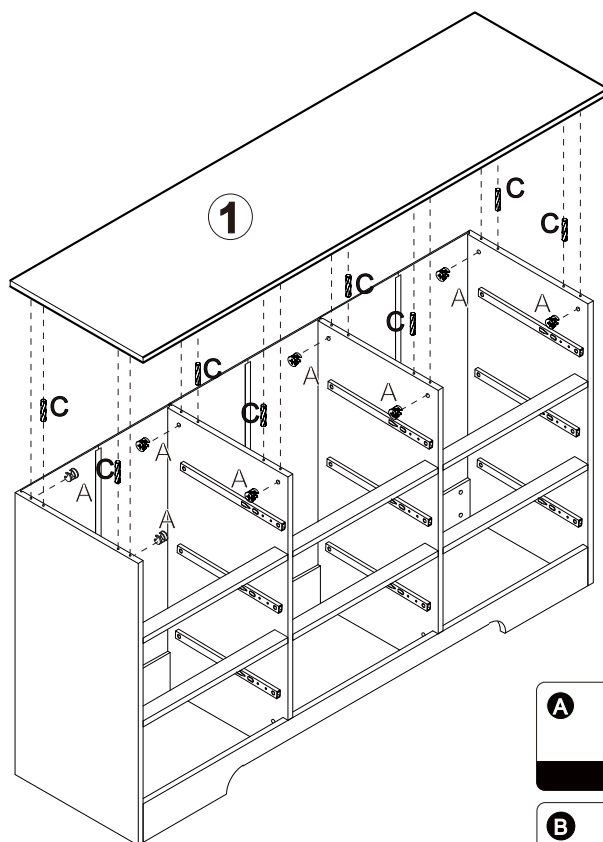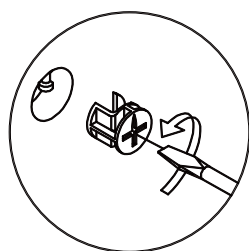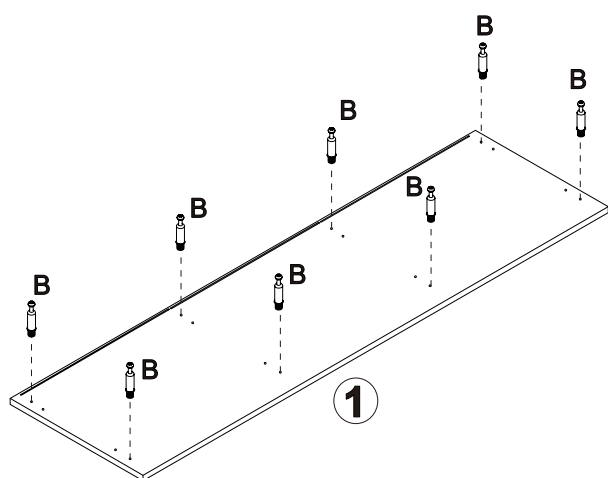    

18

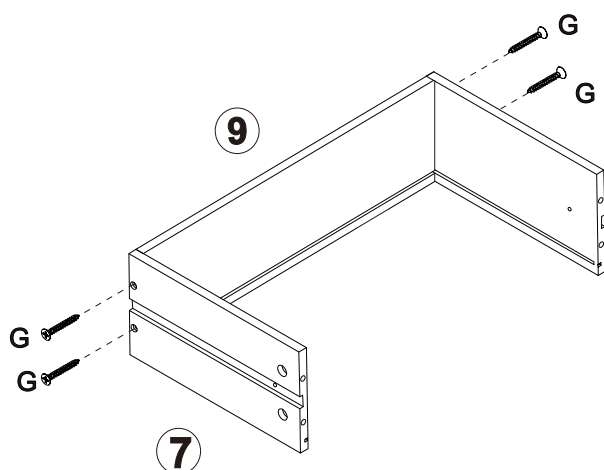 


8

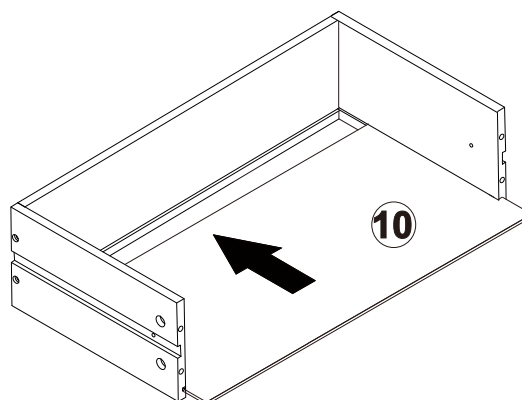 






x9




 
19

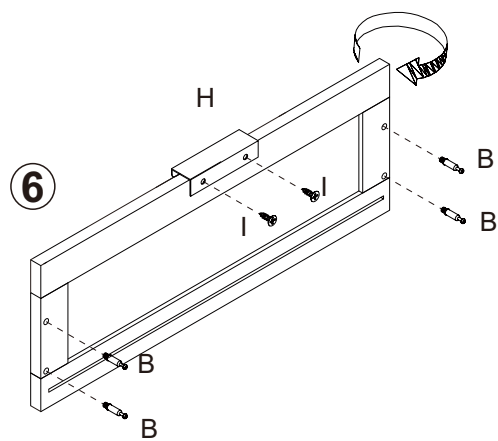








x9

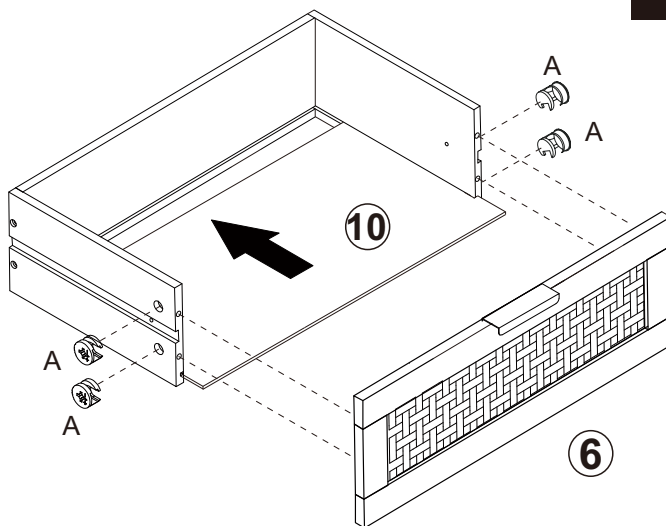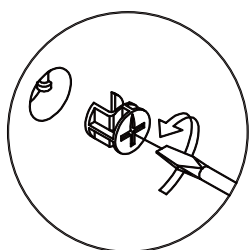     




20

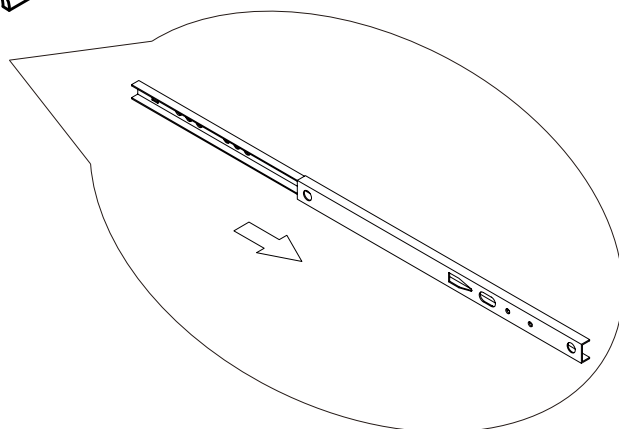 
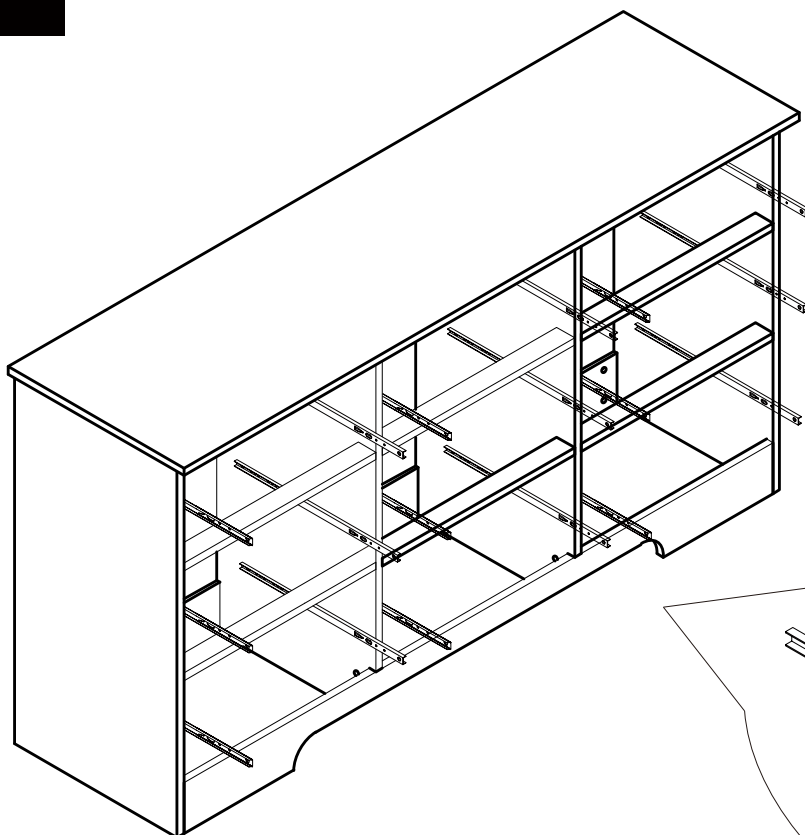 


21

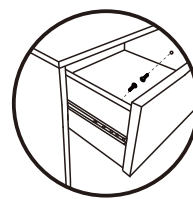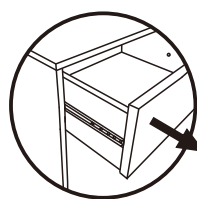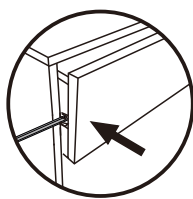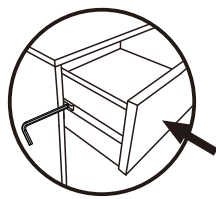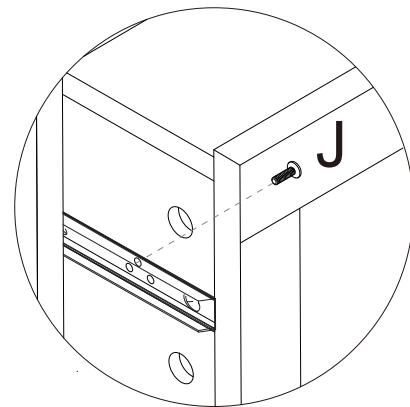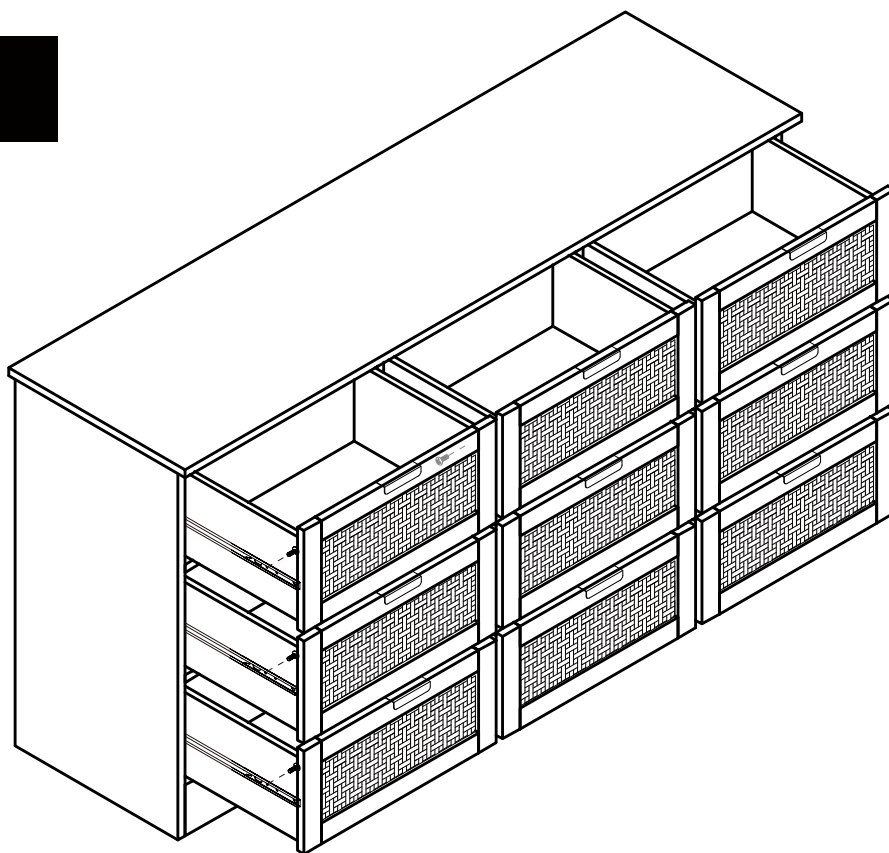       

22

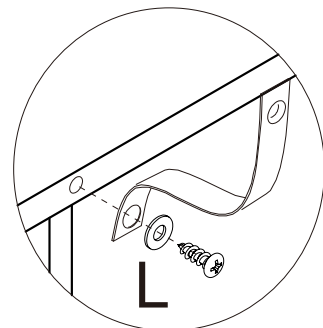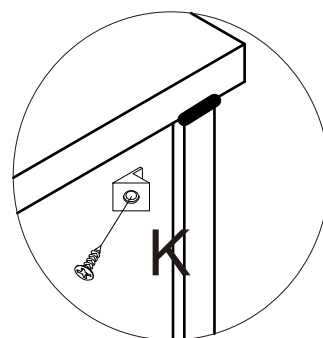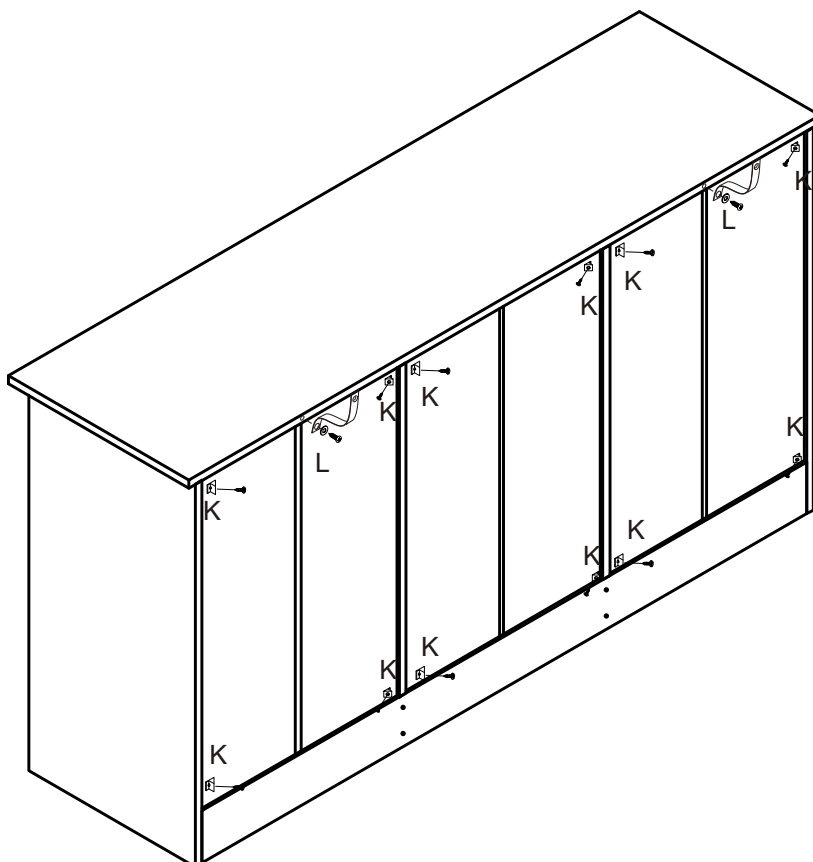   

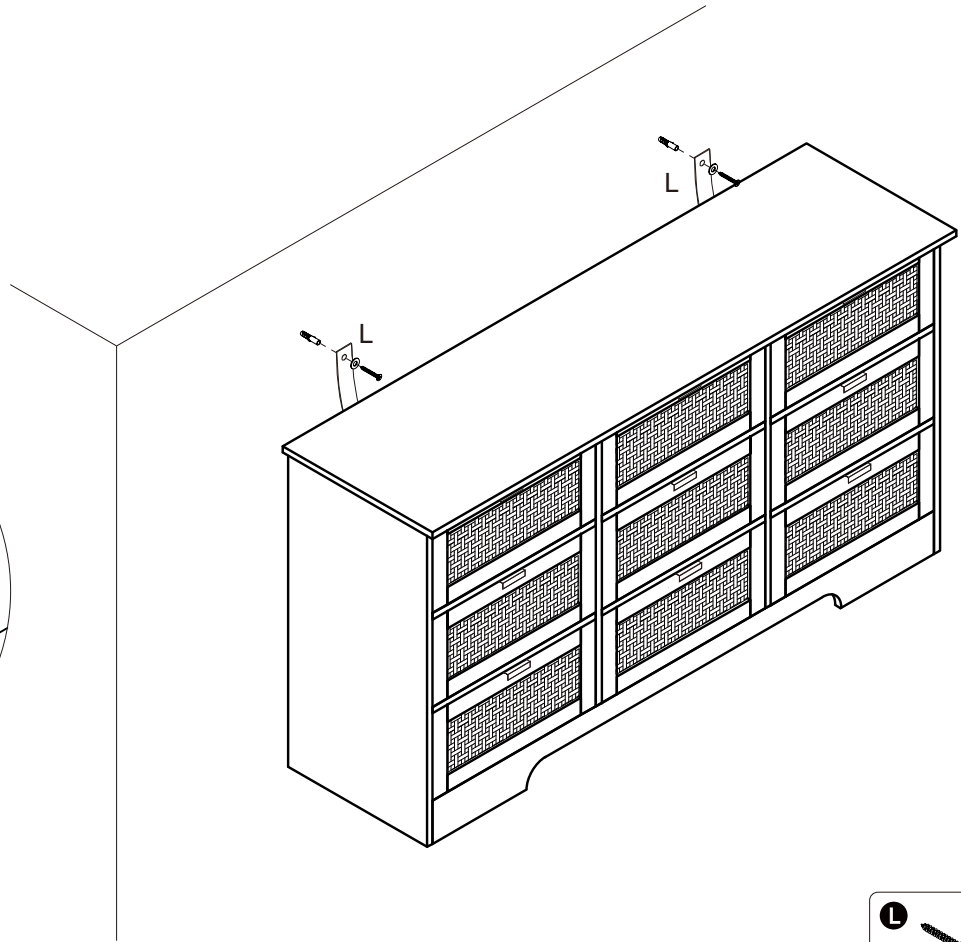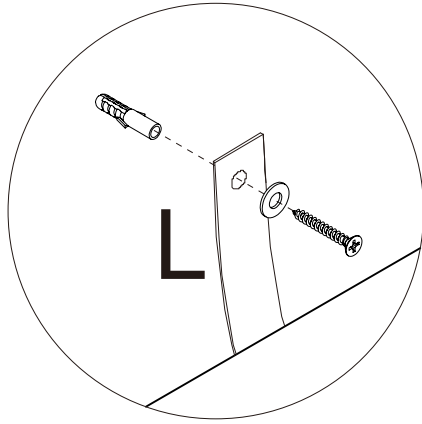  

| <b>⚠ WARNING</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                  | <p><b>Children have died from furniture tipover. To reduce the risk of furniture tipover:</b></p> <ul style="list-style-type: none"> <li>• ALWAYS install tipover restraint provided.</li> <li>• NEVER put a TV on this product.</li> <li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li> <li>• NEVER open more than one drawer at a time.</li> <li>• Place heaviest items in the lowest drawers.</li> </ul> |
|                  | <p><i>This is a permanent label.<br/>Do not remove!</i></p>                                                                                                                                                                                                                                                                                                                                                                                     |

Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over.

.Mark the drill position on the wall with a pencil.

.Drill holes on the marked position using a bit.

Gently inert the wall anchor (J) into the drilled hole with the help of a hammer

.Fixed the cabinet to the wall with provided screws (K)