




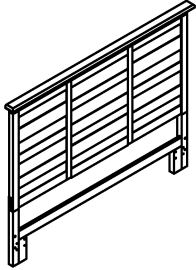

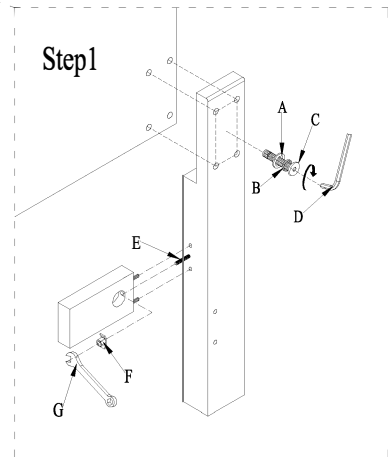




ASSEMBLY INSTRUCTION

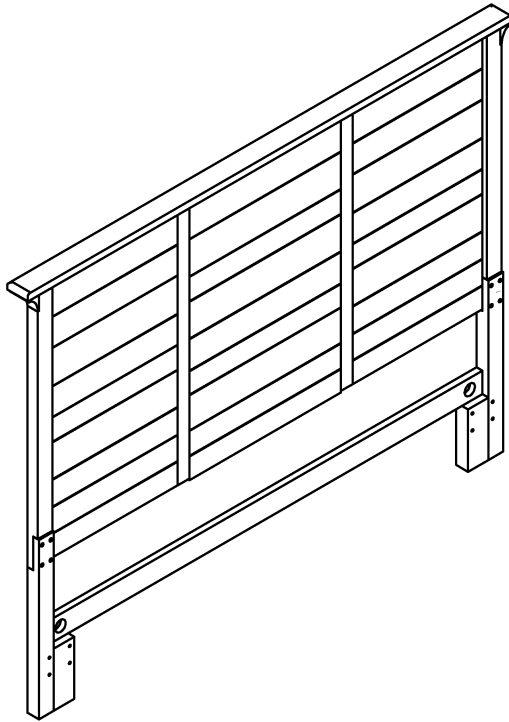

IMPORTANT NOTES :

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.



NO.	PART DESCRIPTION	Q'TY
A	 FLAT WASHER 5/16"*19	8
B	 LOCK WASHER 5/16"	8
C	 BOLT 5/16"*32mm	8
D	 ALLEN KEY 4mm	1
E	 THREAD ROD (5/16"*88mm)	2
F	 CURVED SLOTTED WASHER (5/16")	2
G	 WRENCH (12mm)	1