



ITEM #: RVY-CIL5552-4

IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.



For any replacement parts or installation issues, please Contact Us!

Email: help@kira-home.com


Facebook/Instagram: @KiraHomeDecor

Phone: 888.208.2085

INSTALLATION INSTRUCTIONS

1. Measure Canopy (D) height with measuring tape. Adjust hex nut on Nipple (E) furthest away from Mounting Plate (A) to the height of measured Canopy (D) plus 1/4" to allow Nipple (E) to protrude through Canopy (D) during installation.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with Nipple (E) pointing away from the junction box.
3. Place Canopy (D) against the ceiling by inserting Nipple (E) through the appropriate hole located on Canopy (D). Adjust Nipple (E) and hex nut until 1/4" of the threaded portion is visible. Remove Canopy (D) and set it aside.
Note: If 1/4" of Nipple (E) is not visible, remove Canopy (D) and re-adjust the hex nut on Nipple (E) to proper length.
4. Determine hanging length by selecting desired Downrods (G). Secure them together, then secure Sloped Ceiling Adapter (I) on top.
5. Thread Wires (H) from top of Fixture Body (J) up through Downrods (G) and Sloped Ceiling Adapters (I). Secure Downrods (G) to the top of Fixture Body (J). Pull through any necessary Wires (H).
6. Thread Wire (H) through one of the holes in Canopy (D). Ensure the threading from both Sloped Ceiling Adapters (I) protrude through Canopy (D).

7. Secure Metal Plate (K) over the threading on both Sloped Ceiling Adapters (I). Slide first Washer (L) over the threading on Sloped Ceiling Adapter (I) until flush with Canopy (D). Secure Ground Wire (M) and second Washer (L) over the threading. Tighten Hex Nuts (N) on both sides of Canopy (D).
8. Use wire cutters to cut Wire (H) 10" beyond the length of Downrods (G) to allow for easier wire connection.
9. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).

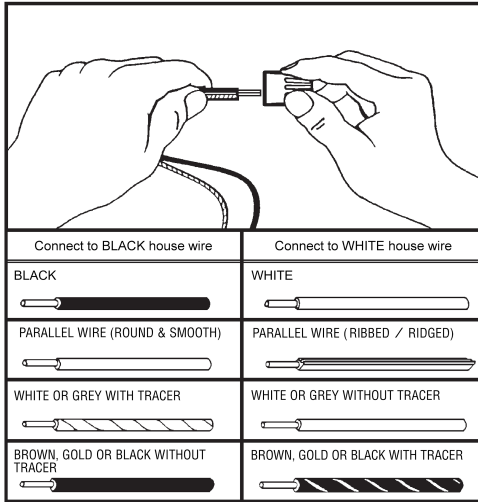

- A. Connect the ground wire (bare copper or green) from your fixture to the:
 - 1) ground wire in the junction box, or
 - 2) ground screw in the junction box
- B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).
- C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

10. Place all Wires (H) and Wire Connectors (C) back into the junction box.
11. Place Canopy (D) against the ceiling, ensuring Nipple (E) is protruding through the hole in Canopy (D). Secure the fixture in place to Nipple (E) with Decorative Cap (F).

Note: If the fixture doesn't sit flush against the ceiling, remove the fixture and readjust Nipple (E) and hex nut.
12. Secure Shades (P) onto Sockets (O) with using Socket Rings (Q)

Note: Socket Rings (Q) should already be attached to Sockets (O). Remove it before installing Shades (P).
13. Install bulbs (not included) into Sockets (O).

Enjoy your new fixture!

Kira Home

ITEM #: RVY-CIL5552-4 - PARTS DIAGRAM

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Measuring Tape

