

IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box. Note: Some types of fuses must be unscrewed to shut the power off.

UNPACK THE COVER: Check the contents of the box. Box should contain all items on the parts diagram.

ASSEMBLY INSTRUCTIONS

1. Slide Decorative Panel (B) into Chime Cover (A) using Tabs (C) to secure the Decorative Panel (B) into place.
2. Position Chime Cover (A) over your existing door chime.

Enjoy your new chime cover!

