


Assembly & Installation Instructions

CAUTION:

Read instructions carefully and ensure a dry and lighted assembly area.

WARNING

Wires and cables are all attached "further wiring is not needed from consumer". When unpacking product, be careful to not pull wires as it may result as a bad connection. Do not plug into electrical outlet until lamp is fully assembled.

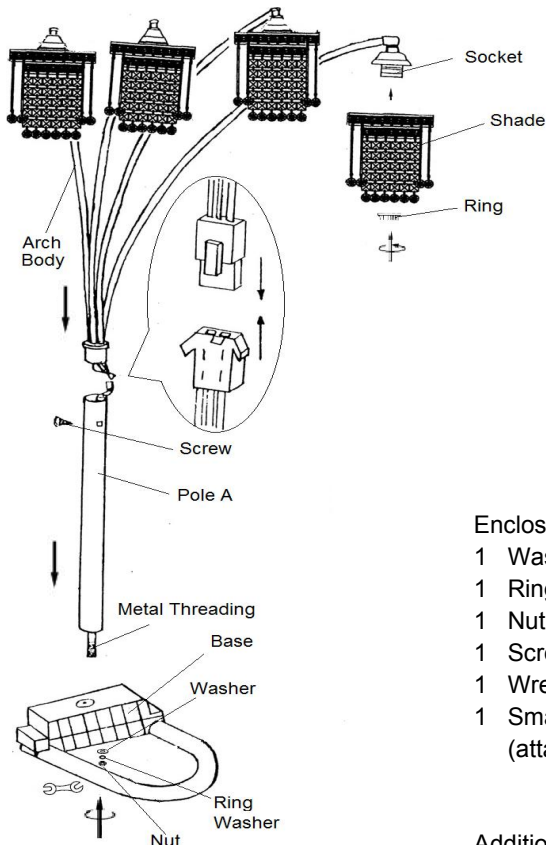

Enclosed:

- 1 Washer
- 1 Ring Washer
- 1 Nut
- 1 Screw
- 1 Wrench
- 1 Small Screw
(attached on "Arch Body")

Additional Tools Required:

- 1 Philips Head

Assembly Instructions:

*Unpack and place all parts on surface or floor

1. Insert the threaded side of "Pole A" into the "Base".
***NOTE:** The threaded bottom portion of "Pole A" can be extended by unscrewing. Adjust accordingly to ensure that "Pole A" and the "Base" are securely fastened.
2. Tighten the pole from the bottom of the "Base" with the nut and washer.
3. Use screwdriver to unscrew the "Screw" located on "Arch Body".
4. Connect the wires in "Pole A" with the wires in the "Arch Body".
5. Attach the "Arch Body" to "Pole A" then use the screwdriver to reattach the screw back onto the "Arch body".
6. Place the "Shade" onto the "Socket" then secure it with the "Ring".

**LAMP MODEL 6968 IS TO BE USED IN A CORNER
WALL SURFACE ONLY**

Additional Note:

Turn the power off (unplug from the wall outlet) before replacing the bulb. Make sure the bulb has sufficient time to cool down.

Cleaning:

Use only soft cloth to dust and clean fixture. Never use chemicals or abrasive cleaners as it may damage finish.