


 
 

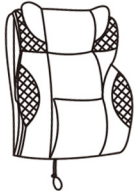









Accessories List

<p>(A) 5 Split Base Tubes</p> 	<p>(B) Central Base Tube</p> 	<p>(C) 5 Castors</p> 	<p>(D) Air Rod</p> 	
<p>(E) Base Plate</p> 	<p>(F) Seat Cushion</p> 	<p>(G) Backrest</p> 	<p>(H) 2 Armrests</p> 	<p>(I) 10 Screws (M6x20mm) (Split Base Tube)</p> 
<p>(J) 2 Screws (M6x30mm) (Front of Base Plate)</p> 	<p>(K) 2 Screws (M6x25mm) (Rear of Base Plate)</p> 	<p>(L) 8 Screws (M8x30mm) (Armrests)</p> 	<p>(M) 8 Decora-tion Caps</p> 	<p>(N) Hexagon Wrench</p> 

Notice

1. Do not stand in this chair or use the chair as a step ladder use it as chair only. This chair is designed for one person to use at a time.
2. Do not use this chair unless all bolts, screws and knobs are firmly secured.
3. Check all bolts, screws and knobs every 90days. Tighten if any are loose.
4. Failure to follow these instructions may result in serious injury or death of yourself and people around you.
5. Some of the parts are heavy and/or have sharp edge, please install it carefully to avoid hurting you and people around you.

Instructions for Use



Upward/Downward Adjustment



Rocking Function



4D Adjustable Armrests



Air Pump lumbar support


Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (14 kinds in total).

Assembly Instruction

Please assemble in a wide and flat place.

Step 1


Take out Split Base Tube, Central Base Tube and Central Base Buckle. Insert Split Base Tube into Central Base Tube as shown. You can see there are screw holes, then align with the holes, tighten (I) 10 Screws M6X20 with Hexagon Wrench to fix 5 Split Base Tube to Central Base Tube.

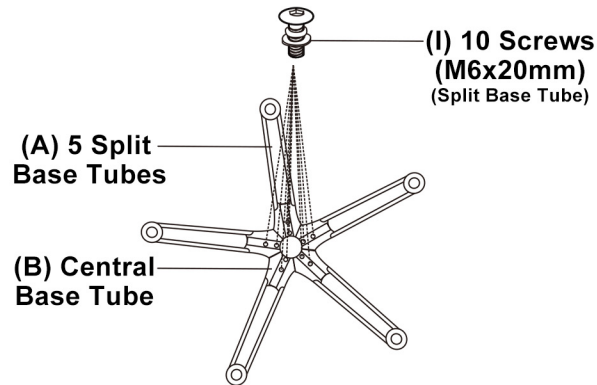

Step 3

Fix Base Plate to the bottom of Seat Cushion. Tighten (J) Screws M6x30 and (K) Screws M6x25 with Hexagon Wrench firmly. Insert the parts assembled in step 2 into the metal tube at the bottom of the seat cushion.


***Caution: There is a FRONT sticker on the front of Seat Cushion.**

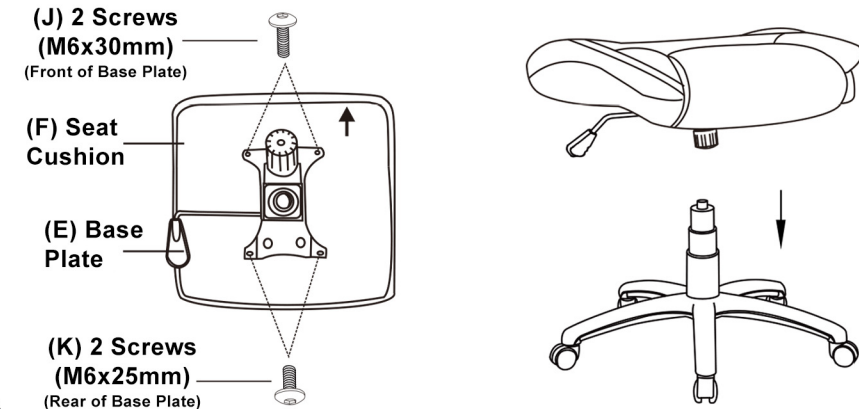

Step 2

Take out 5 Castors. Insert Castors into part of step 1 as shown, There are 5 Castors need to be inserted. Then Take out Air Rod. Put Air Rod into the hole of Central Base Tube as shown. Put it aside and we will use it in Step 5.

***Caution: Confirm Castors must be inserted deeply, Otherwise the castors could easily fall out and the chair could fall down.**

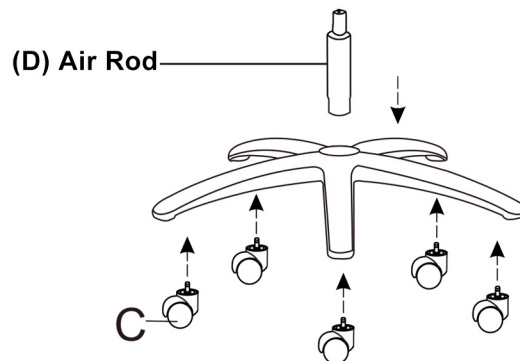

Step 4

Use 4 (L) M8x30 screws to fix the 4 screw holes to connect the armrest and the seat cushion.

***Caution: Do not tighten these 4 screws, which is very helpful for installing the backrest.**

After fixing the armrests on both sides, align the screw holes of the backrest with the armrests. Use the remaining 4 (L) M8x30 screws to fix the 4 screw holes to connect the armrest and the backrest. Then tighten all 8 screws firmly. Finally, install the 8 (M) Decoration Caps. Chair installation completed!

