


# USE AND CARE MANUAL

## MINITABLE LAMP

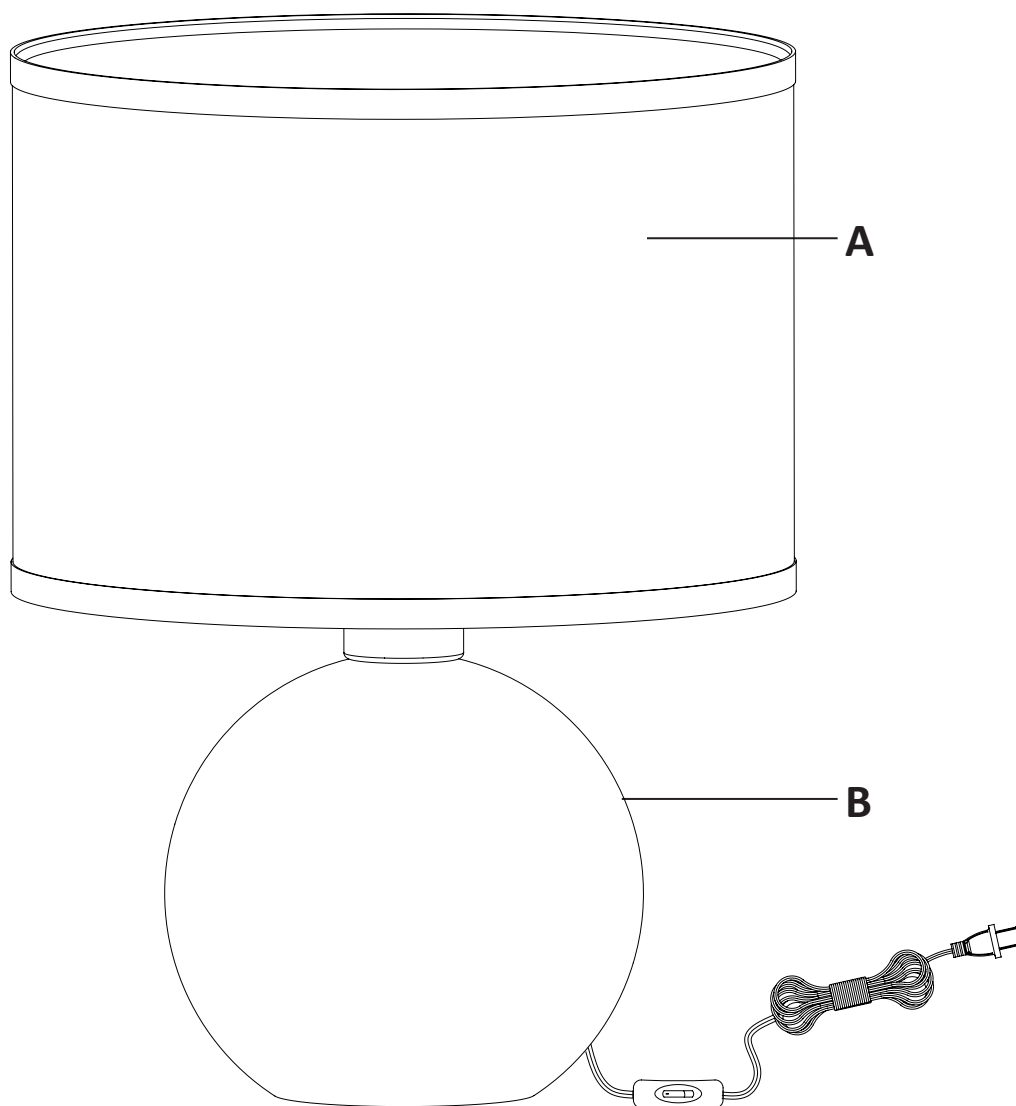

 
---

### Hardware (Parts are not to scale)

#### H1

Socket ring (Pre-assembled on the socket of the fixture body (B))

1 pc



**THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND  
KEEP FOR FUTURE REFERENCE.**

---

---

# IMPORTANT SAFETY INFORMATION

- This lamp is for indoor use only. The lamp should not be used near water. Never immerse the lamp in water or other liquids.
  - Never cover the lamp with any object including cloth or paper as this is a fire hazard.
  - Do not handle the bulb immediately after the light is turned off as it will be hot.
  - This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.
- 

## PREPARATION

- Before beginning assembly, installation or operation of the product, make sure all parts are present. Compare parts with package contents list and diagram on the previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.
- 


## ASSEMBLY

---

### 1 Assembling the shade and bulb

- Carefully remove shade (A) and fixture body (B) from the box, and lay them out on a smooth surface.
- Unscrew the socket ring (H1) from the socket of the fixture body (B).
- Place the shade (A) over the socket of the fixture body (B) and secure with the socket ring (H1).
- Install the light bulb (not provided) into the socket. Use one **MAX 40 W candelabra base (E12) type "B"** bulb (recommended).
- Plug into the wall outlet, turn on the switch and enjoy.

**NOTE:** You can also use one **MAX 9 W candelabra base (E12) self-ballasted LED** bulb. Do not exceed the recommended wattage. Remove the plastic cover from the shade before using.

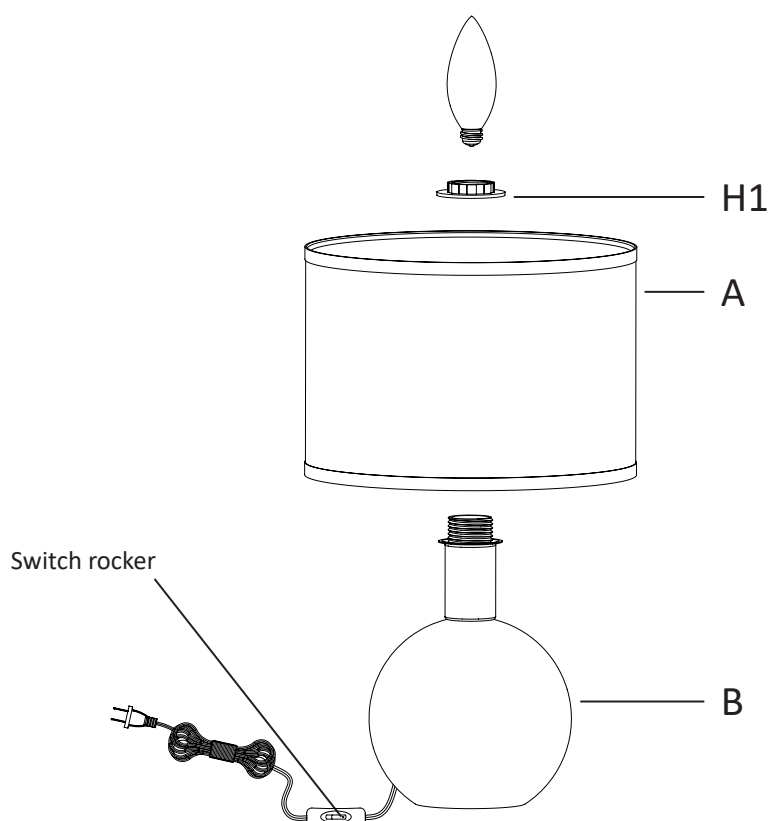

---

## CLEANING

- Do not use any cleaners with chemicals, solvents, or harsh abrasives. Use only a dry, soft cloth to dust or wipe carefully.
- To clean the fixture, pull the plug from the wall outlet. Use a dry or slightly dampened, clean cloth to wipe the exterior surface of the fixture.

---

## TROUBLESHOOTING

- The light does not come on at all:
  - a) Check whether the bulb was burned out.
  - b) Ensure the power supply is turned on.
  - c) Ensure the cord is plugged into an outlet.
  - d) Ensure the circuit breaker is set in the “ON” position.
- Fuse blows or circuit trips when light is turned on.
  - a) Check for crossed wires, ensure wiring is correct.