


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

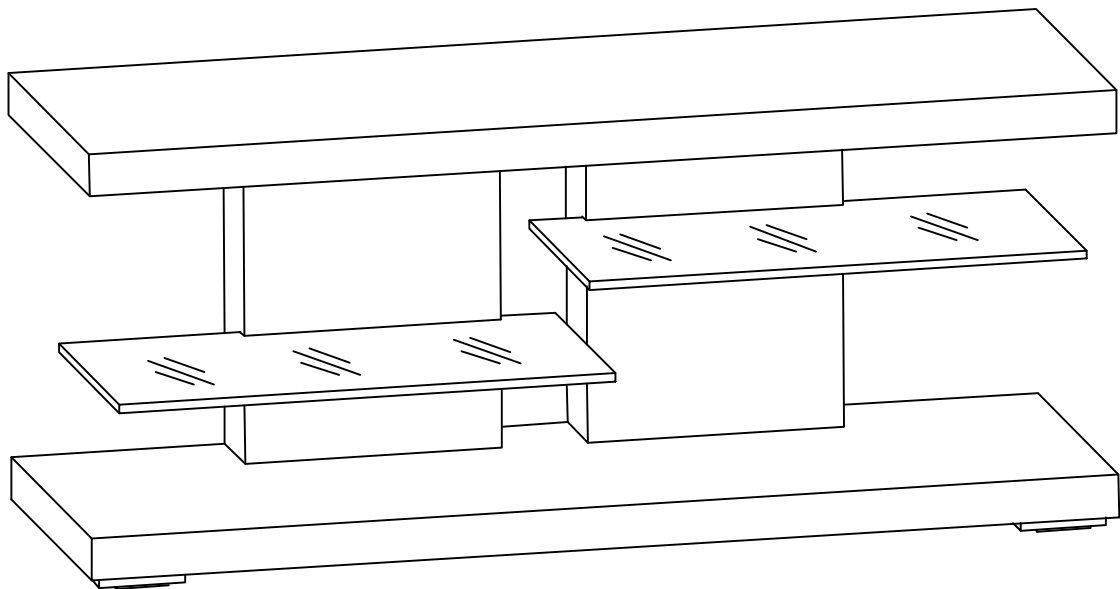

Fine Furniture for every stage of life

TV
Stand

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

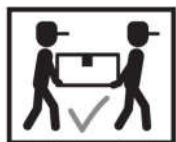

ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

A TOP BOARD

1PC




B BASE BOARD

1PC



C SUPPORT BOX

2PCS

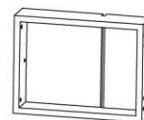

D GLASS

2PCS



E LEG

4PCS



Z HARDWARE IDENTIFICATION

1 ALLEN KEY



1PC

M5

2 LONG BOLT



12PCS

M8*50

3 SHIM



12PCS

ø22

4 SPRING CHIM



12PCS

ø13

5 SCREW



8PCS

M4*25

6 WOOD PLUG



8PCS


ø8*30

ASSEMBLY INSTRUCTIONS


STEP 1




STEP 2

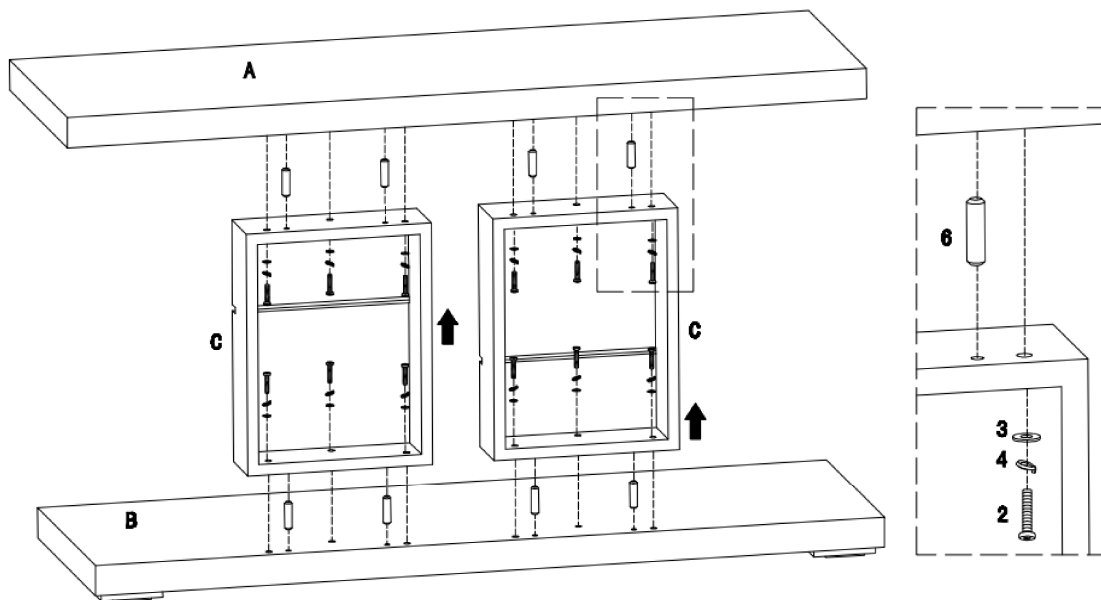

STEP 3

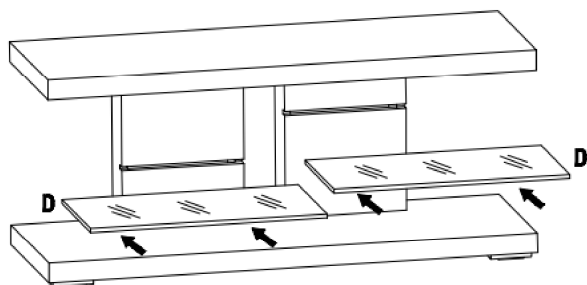

STEP 4

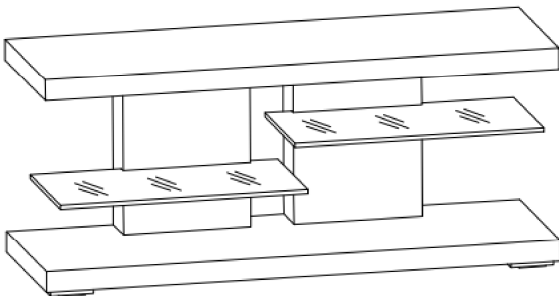

ASSEMBLY INSTRUCTIONS

