 
 
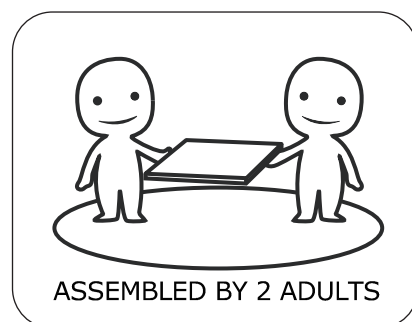 




TV Cabinet

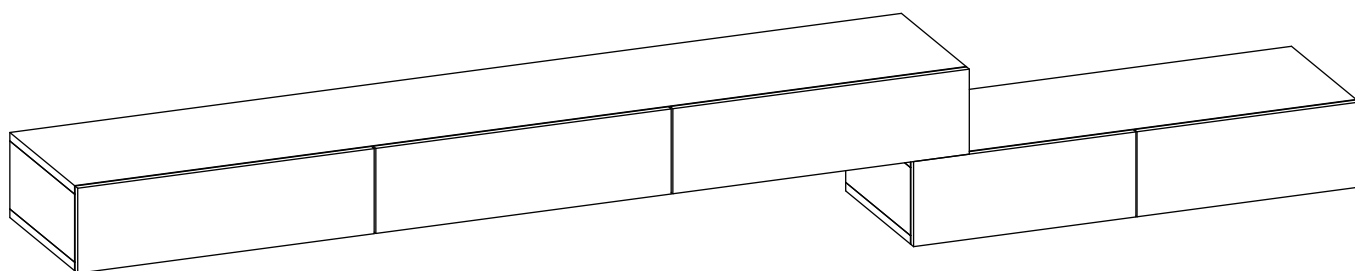

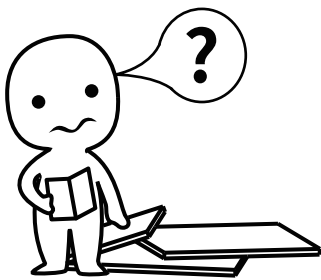


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

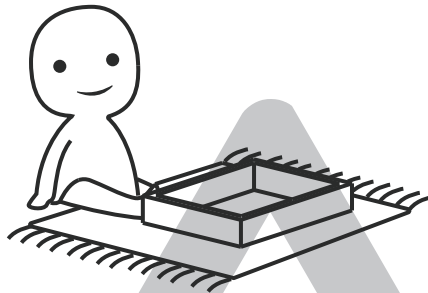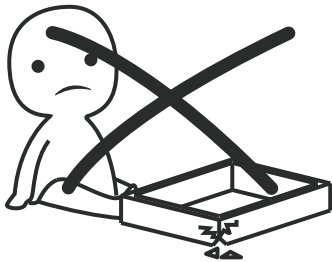



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

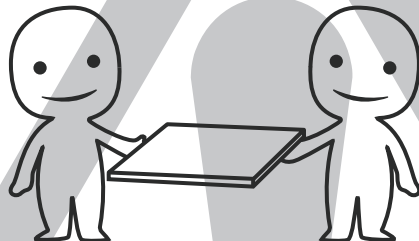

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

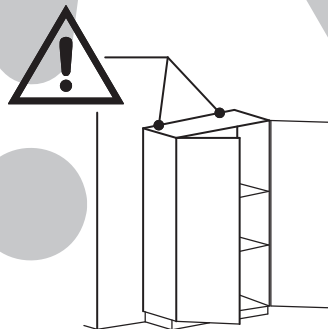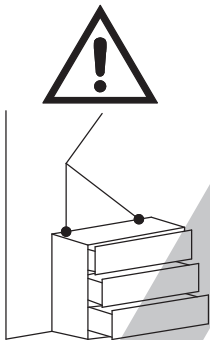

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

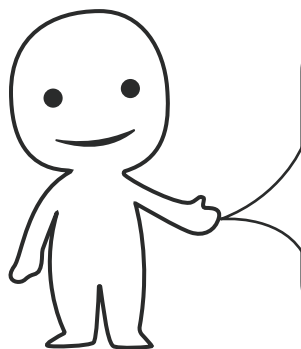


Please prepare the following tools

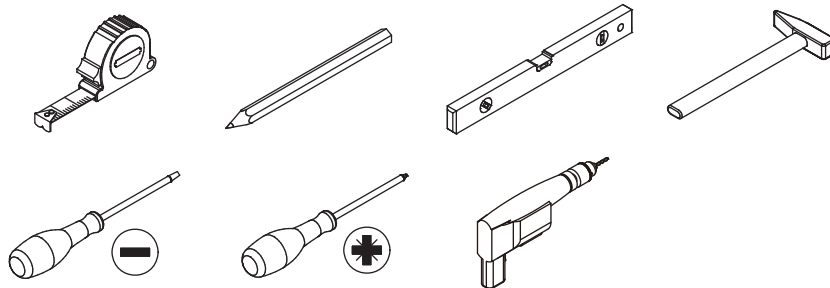 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Ax37



Ø6x35mm

Bx37




Ø15x9mm

Cx28



Ø6x30mm

 Dx23




M4x30mm

Ex68



M3.5x12mm

 Fx14




M4x40mm

Gx29




M4x14mm

 
Hx2



Jx2

 

Kx1

 

Lx20




M5x80mm

Mx20



 
Nx14



Px1




 CL x 5

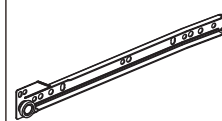


300mm

 DL x 5




300mm

 DR x 5






300mm

 
CR x 5



300mm

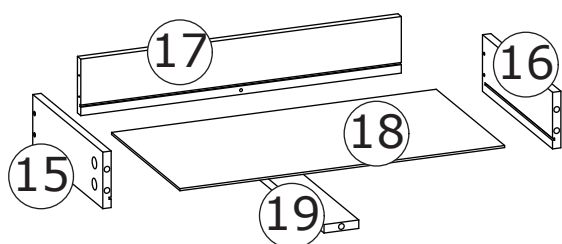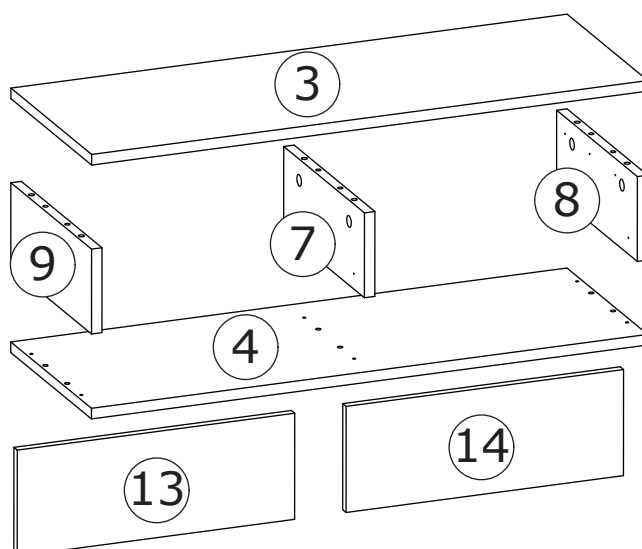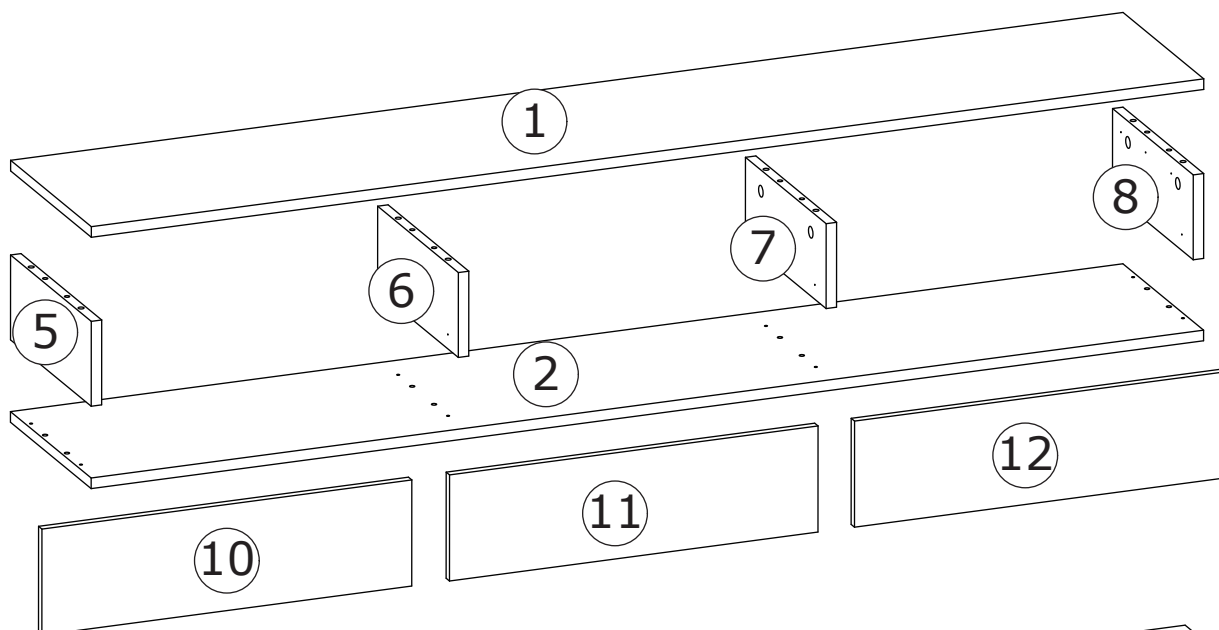   

x3

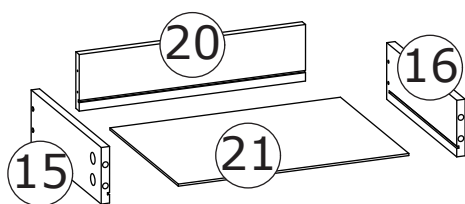 

x2

 
⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.





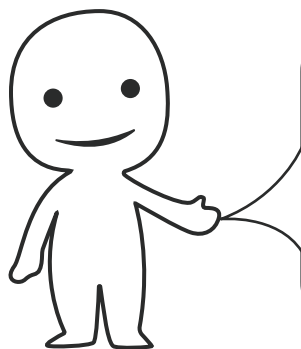

 
 
 
 
 


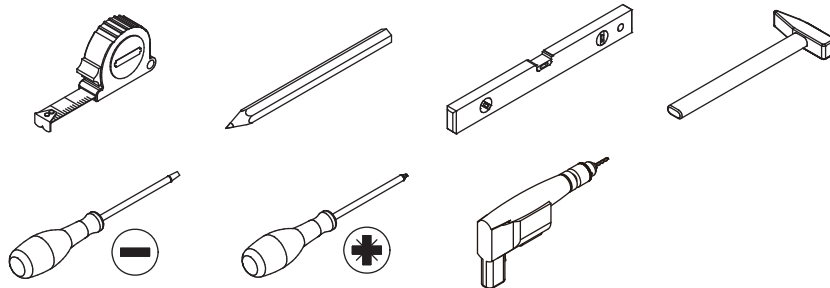


 
 





*This is a permanent label.
Do not remove!*



 Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

① x 1 	② x 1 	③ x 1 	④ x 1 	⑤ x 1 
⑥ x 1 	⑦ x 2 	⑧ x 2 	⑨ x 1 	⑩ x 1 
⑪ x 1 	⑫ x 1 	⑬ x 1 	⑭ x 1 	⑮ x 5 
⑯ x 5 	⑰ x 3 	⑱ x 3 	⑲ x 3 	⑳ x 2 
㉑ x 2 				

 
1

E x 20




M3.5x12mm

CL x 5






CR x 5

 



Fix slide rail(CL) and (CR) to board 5, 9 and 8 with screw(E) as shown.

Fix slide rail(CR) to board 6 with screw(E) at first, then flip to back, fix rail(CL) as shown.

  
 
Fix slide rail(CR) to board 7 with screw(E) at first, then flip to back, fix rail(CL) as shown.

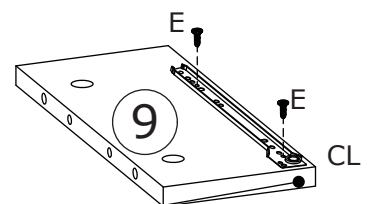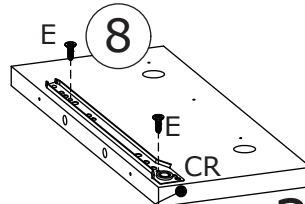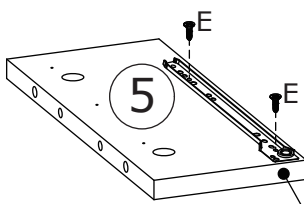



x2

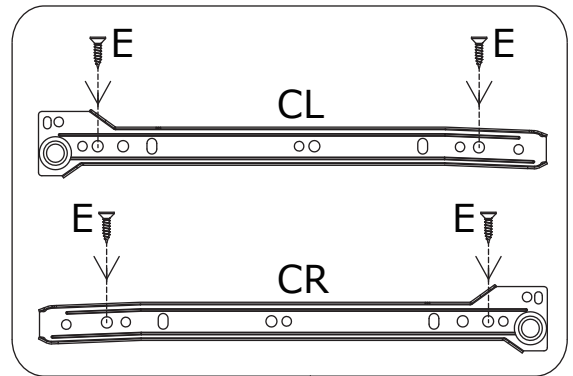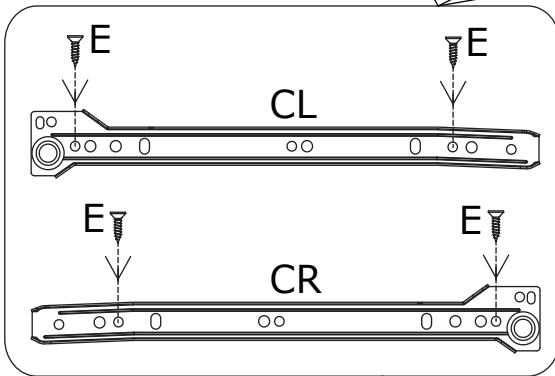  

  
Please pay attention to the holes where screws go into.

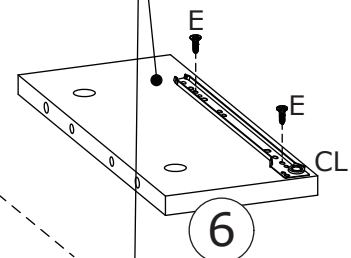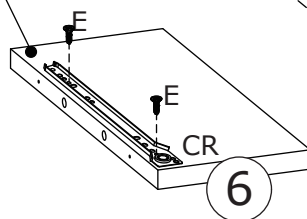

6







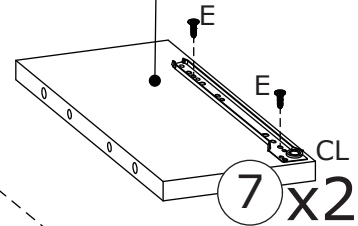 
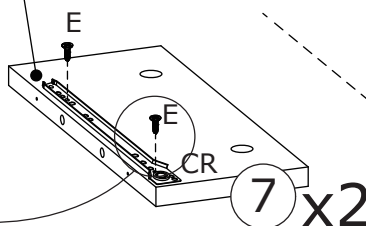 


7 x2

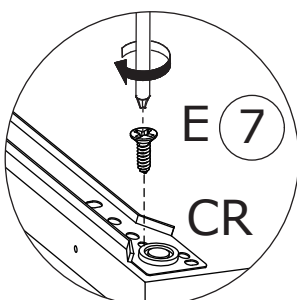 




2

        C x 28

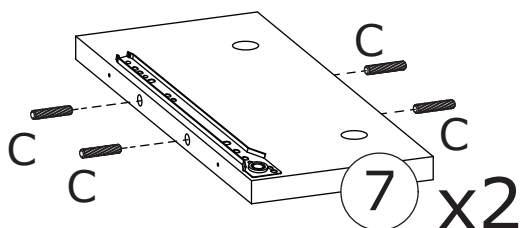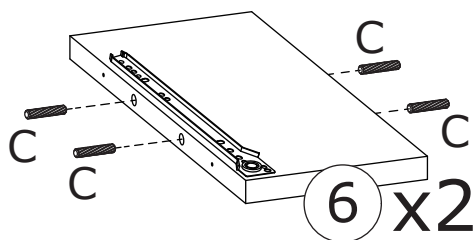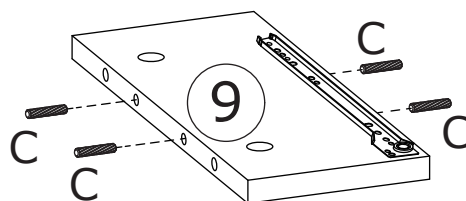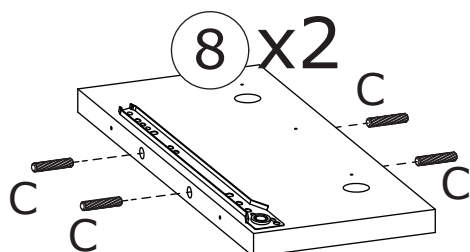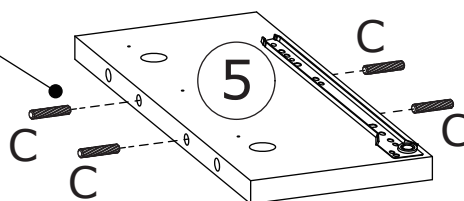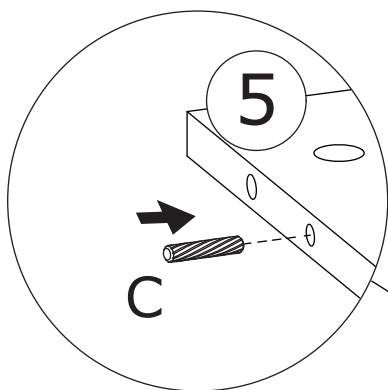
 $\varnothing 6 \times 30 \text{mm}$ 

Insert wooden dowel(C) into
board 5, 6, 7, 8 and 9 as shown.

   3

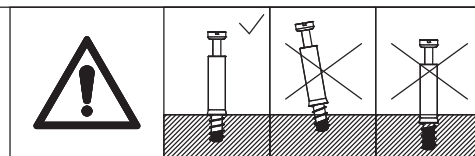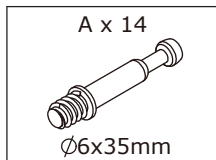

 Screw eccentric rod(A) into board 1 and 3 with a screwdriver as shown.




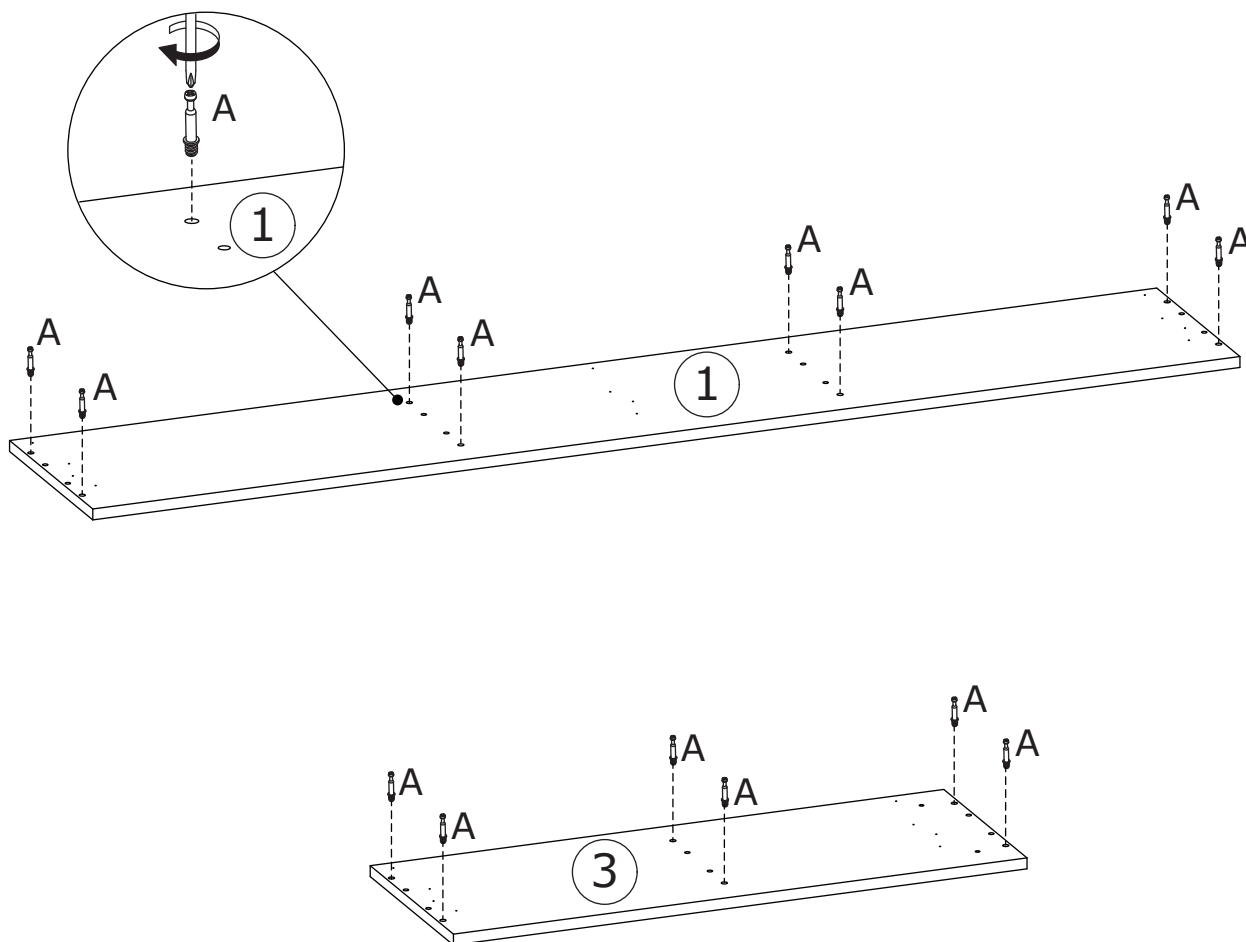


4


B x 8



  
 
 
Ø14x9mm

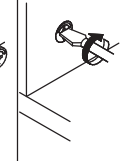

     
Connect board 5, 6, 7 and 8 to board 1, add cam lock(B) into board 5,6,7,8 and turn clockwise to tighten as shown.

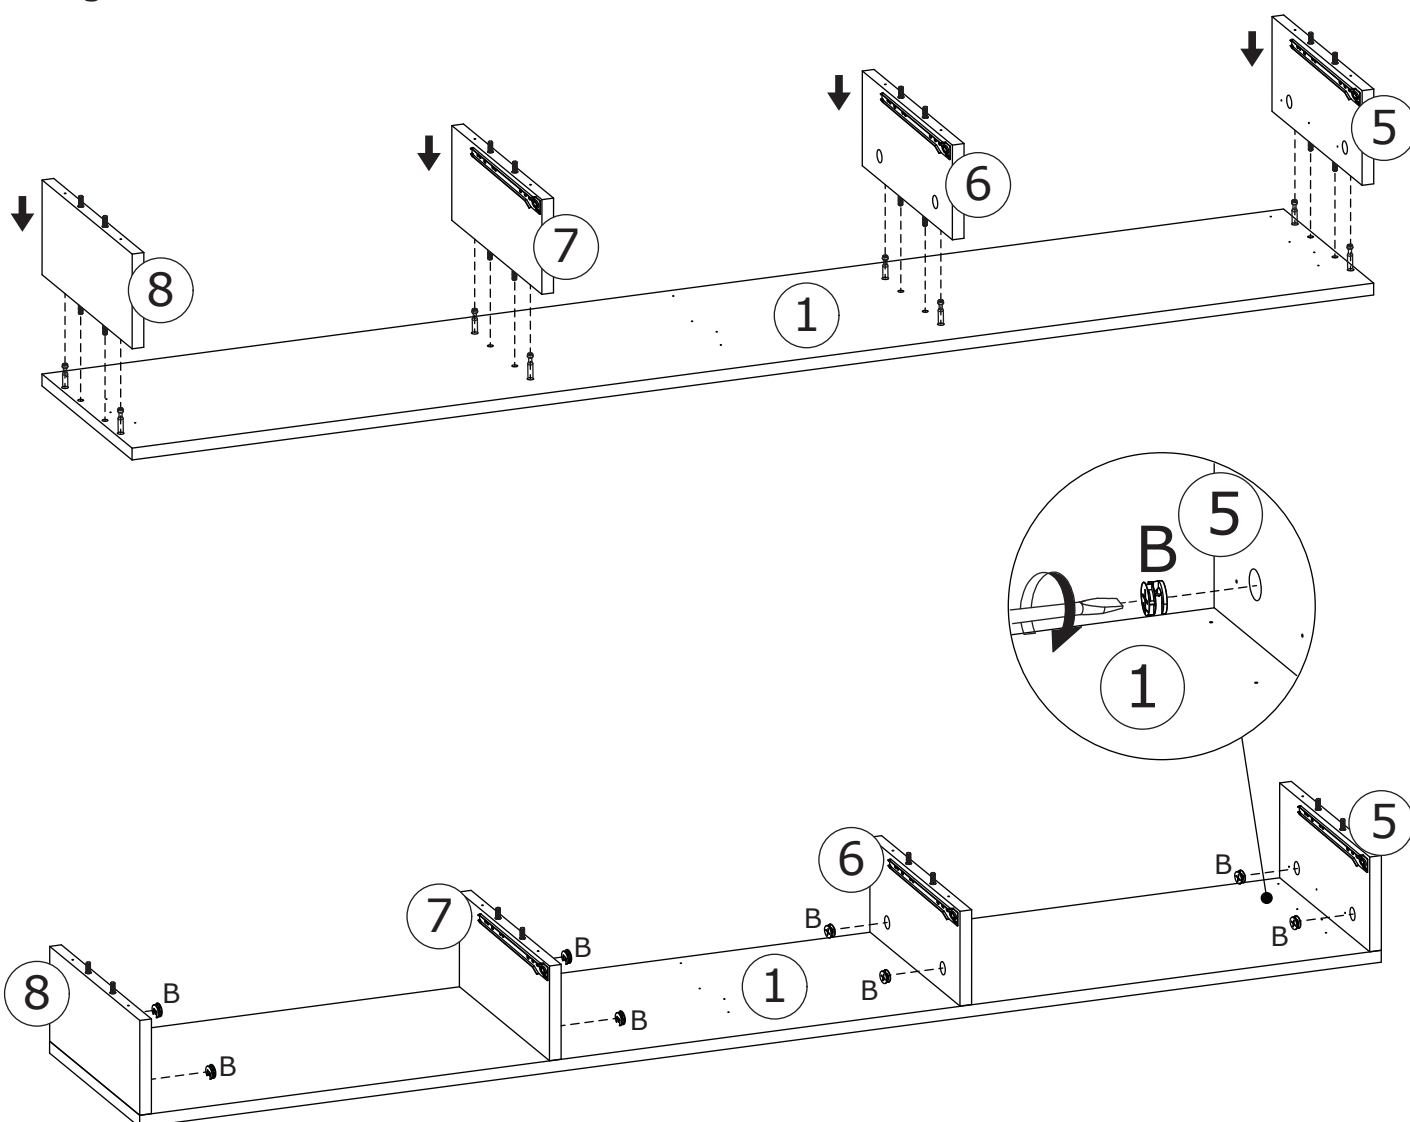


 
 
 
 
5

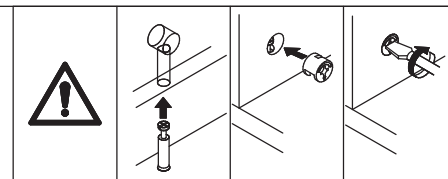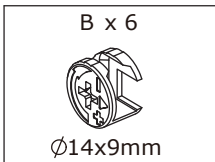

Connect board 8, 7 and 9 to board 3, add cam lock(B) into board 8,7,9 and turn clockwise to tighten as shown.

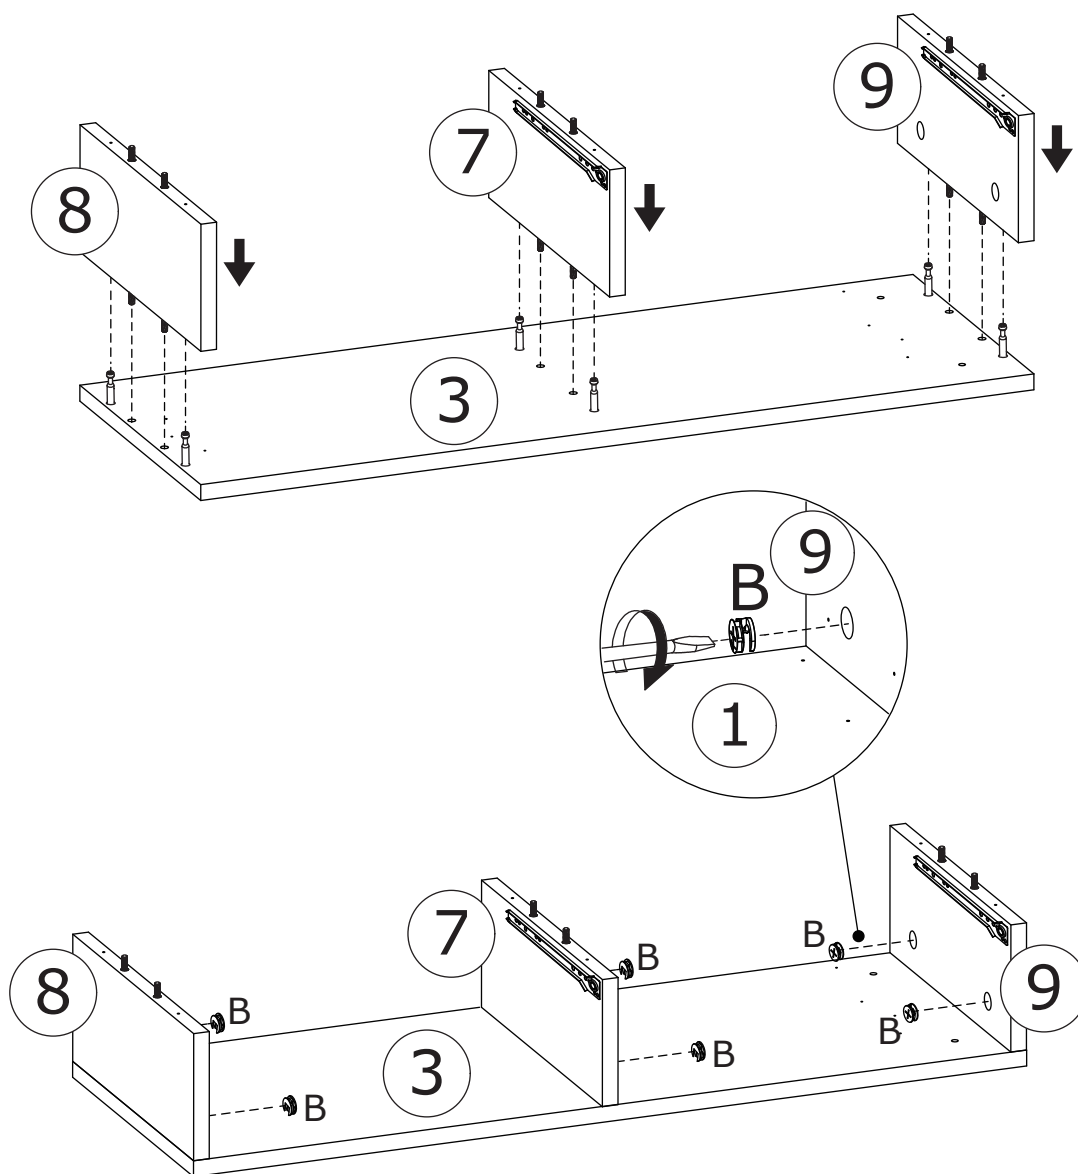


6

<p>G x 29</p>  <p>M4x14mm</p>	 <p>Hx2</p>	 <p>Jx2</p>	 <p>Kx1</p>	
--	--	--	---	---



Fix iron part(J) to board 1 and 3 with screw(G) as shown.

Fix iron part(H) and (K) to board 1, 8, 5 with screw(G) as shown.

 
Fix iron part(H) to board 3 and 8 with screw(G) as shown.

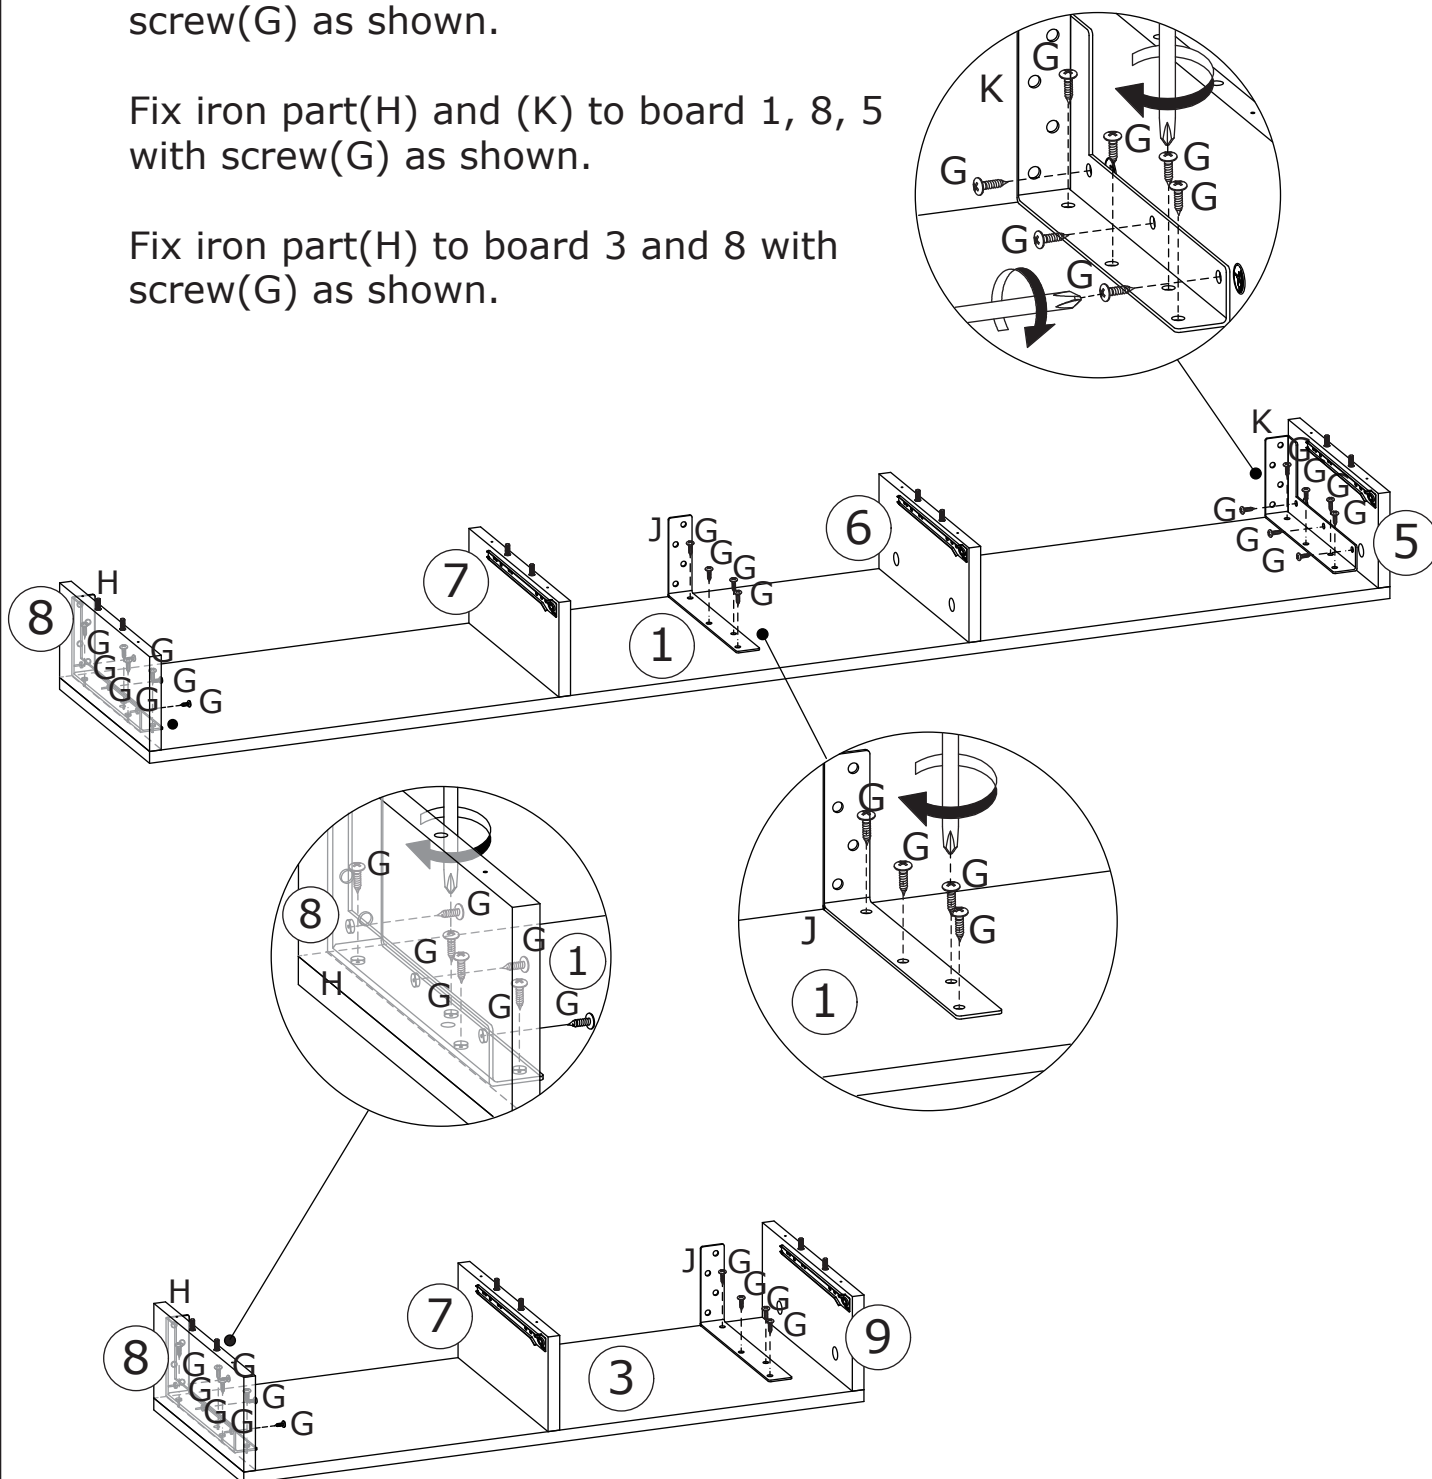



7

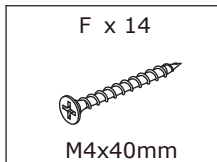  

 
Fix board 2 to board 5, 6, 7 and 8 with screw(F) as shown.
Fix board 4 to board 8, 7 and 9 with screw(F) as shown.

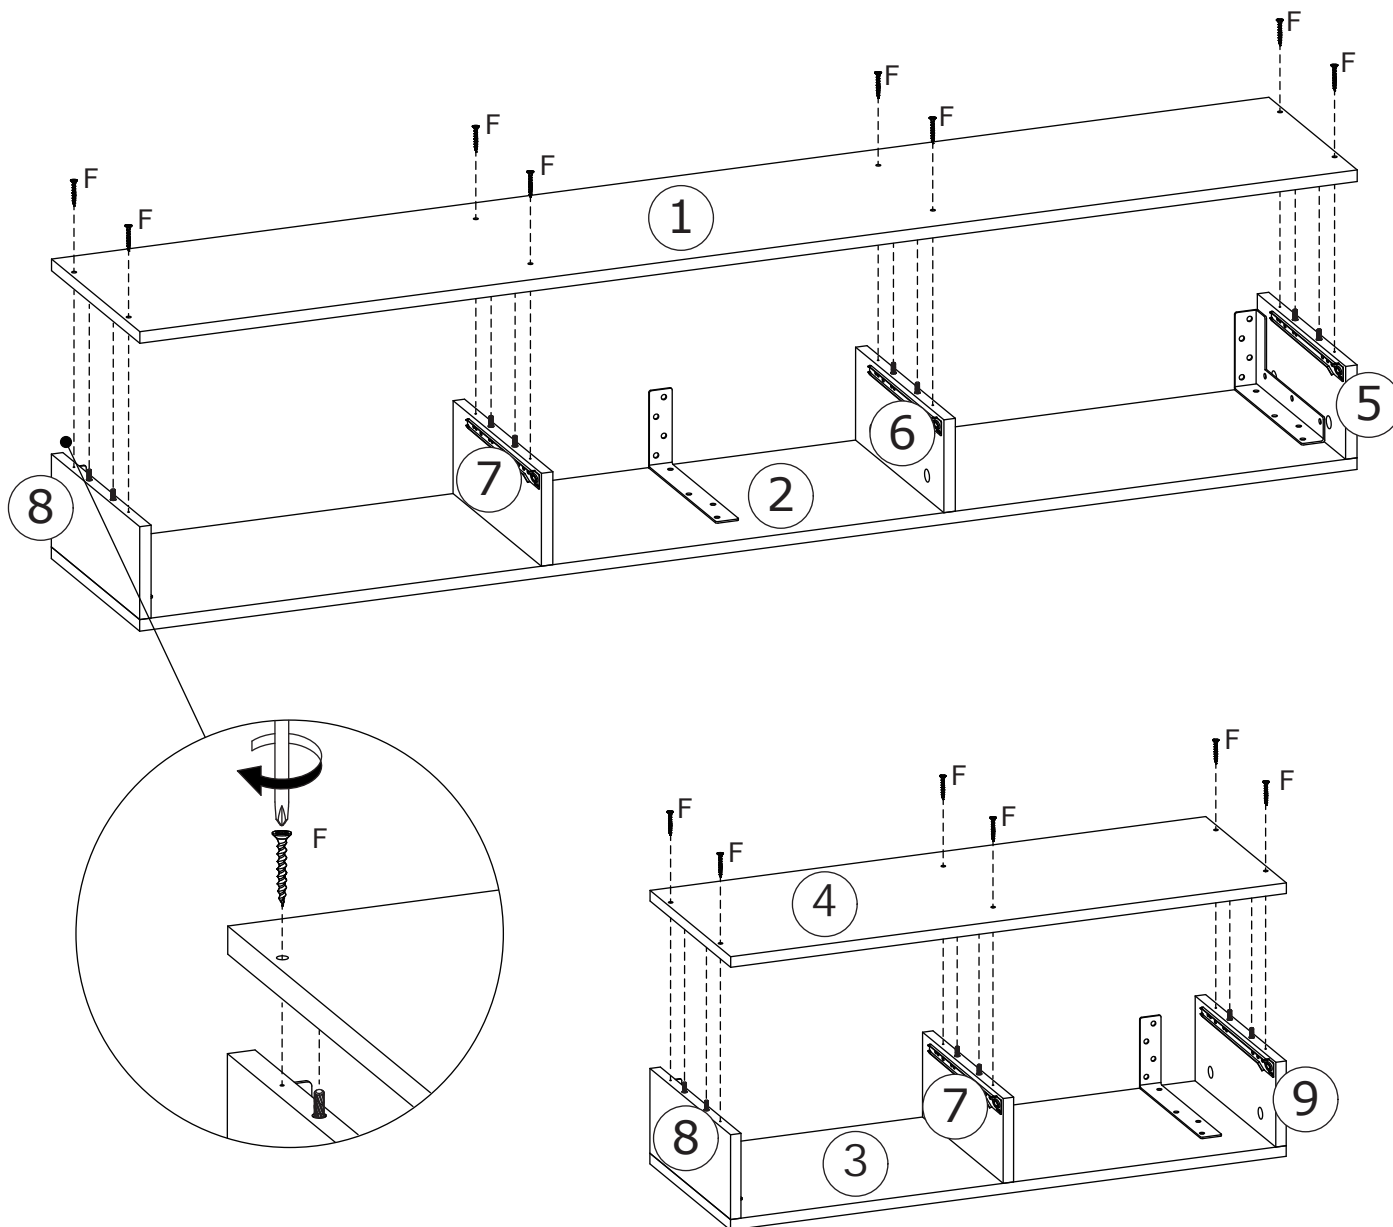

8

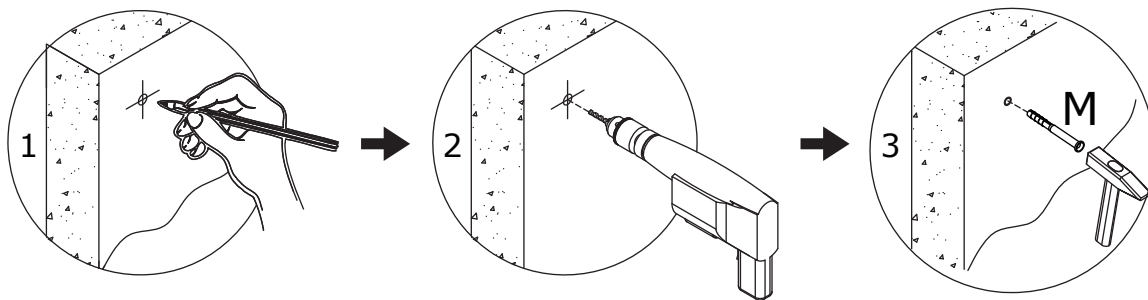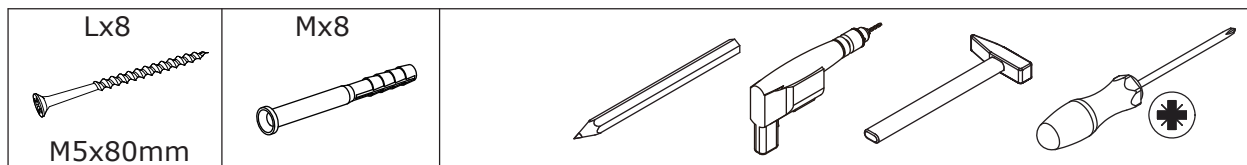  


Install anti-tipping device as shown.

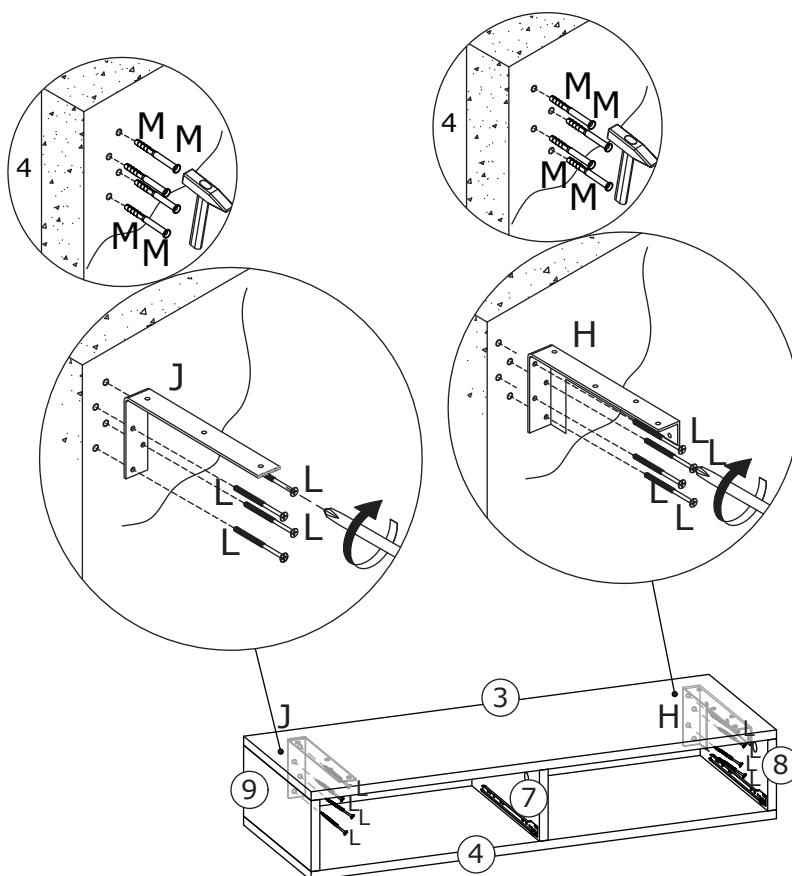 




9

Lx12




M5x80mm

 
 
Mx12

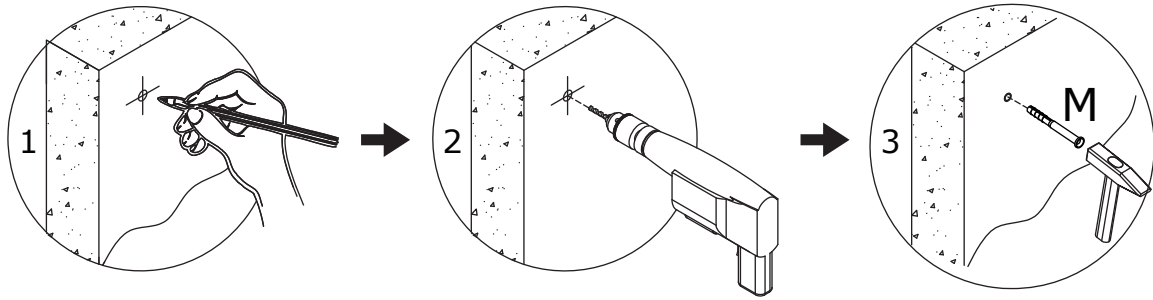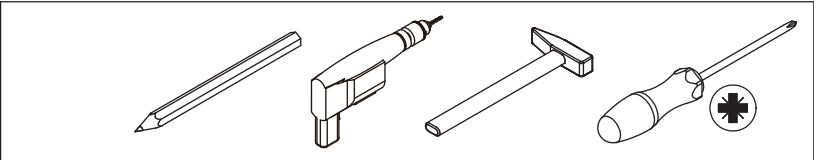

Install anti-tipping device as shown.

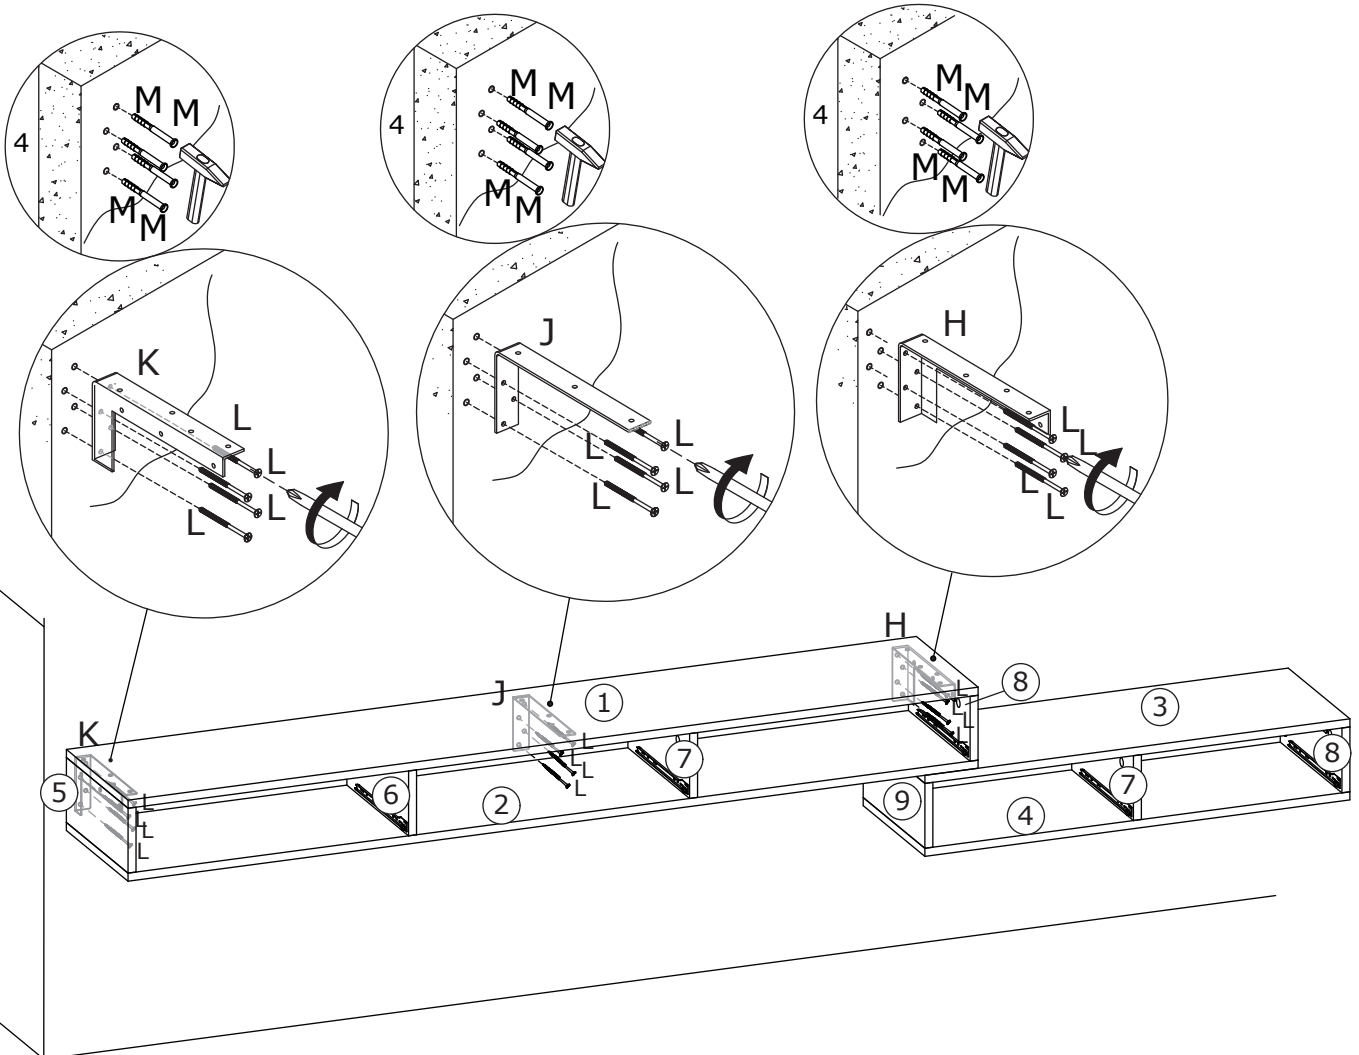 

10

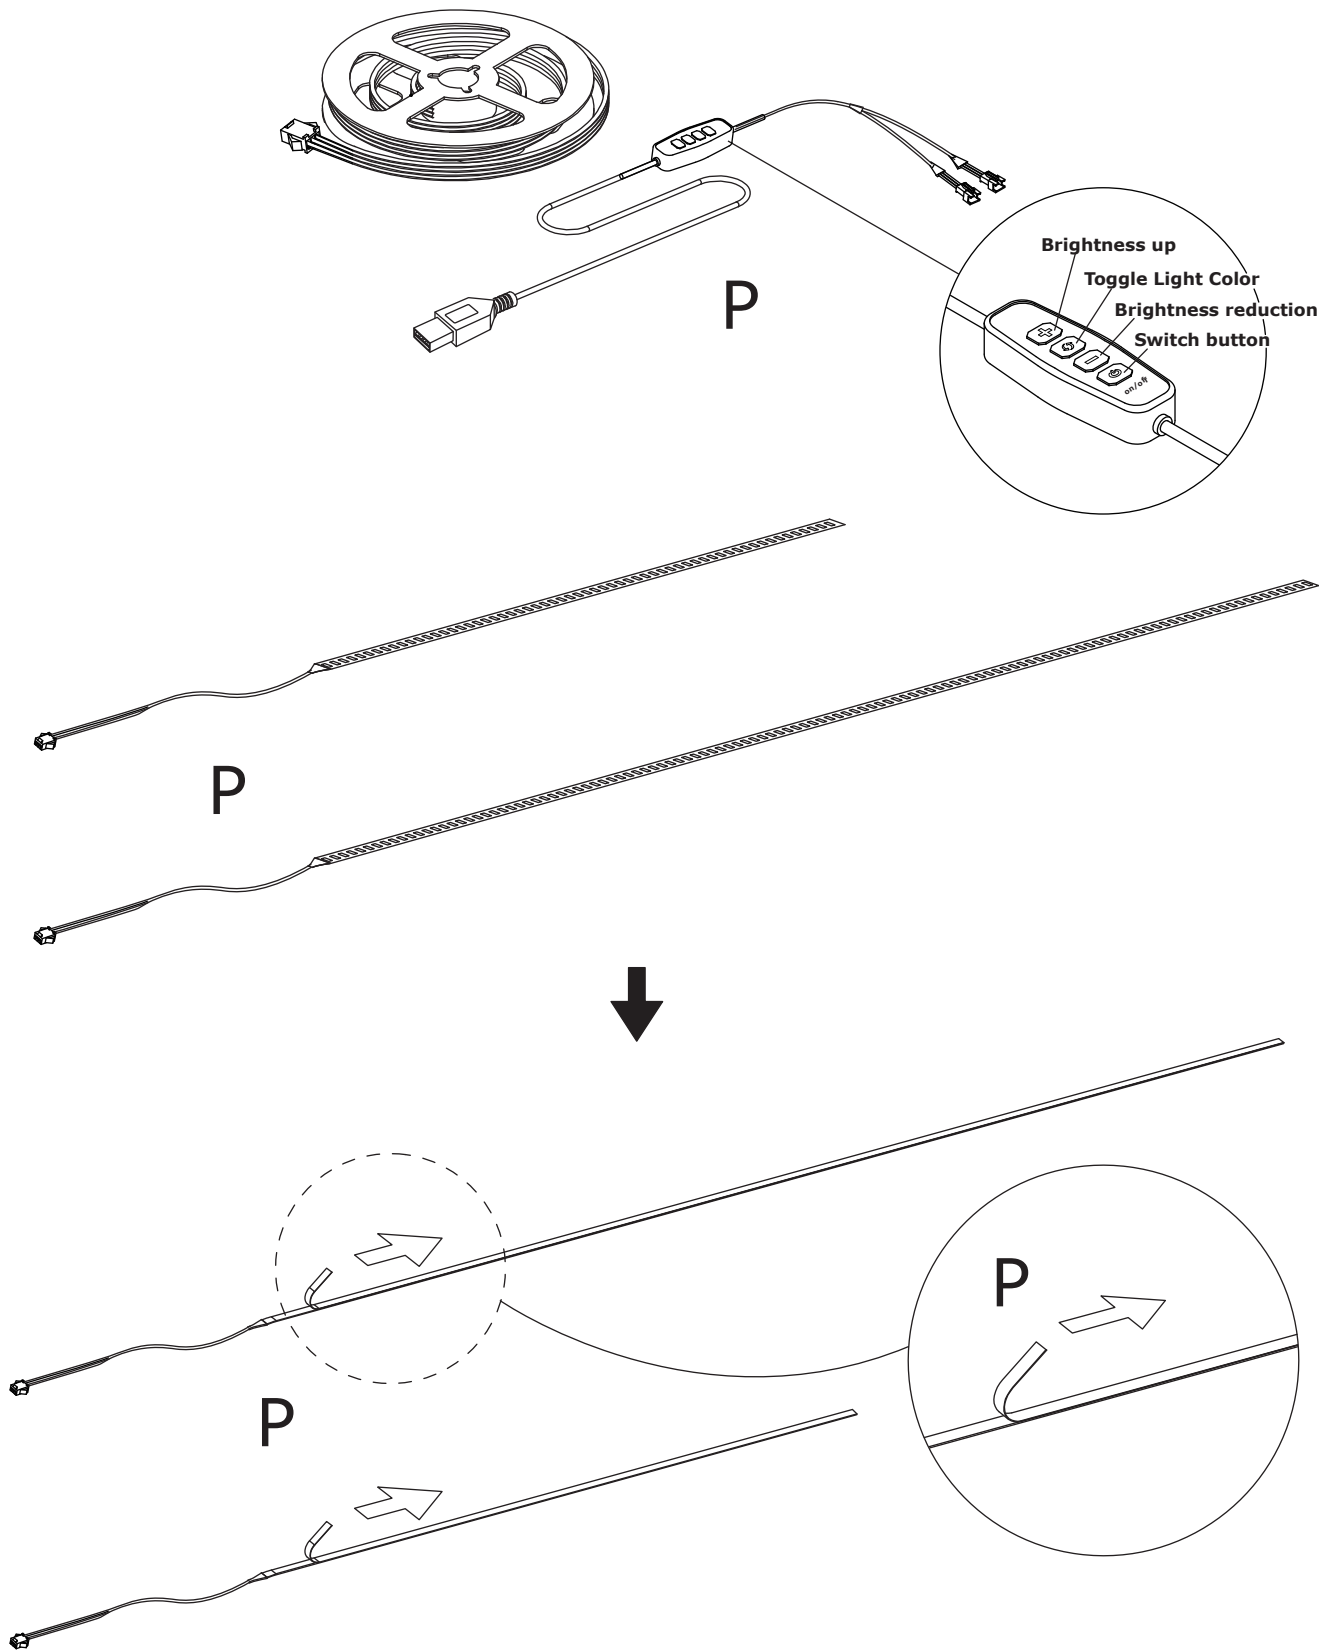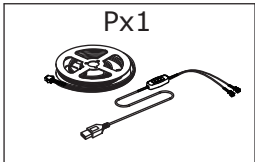  


11

Ex28





M3.5x12mm

 
Nx14



  Stick light strip to bottom boards,
then fix it using part(N) and screw(E)
as shown.

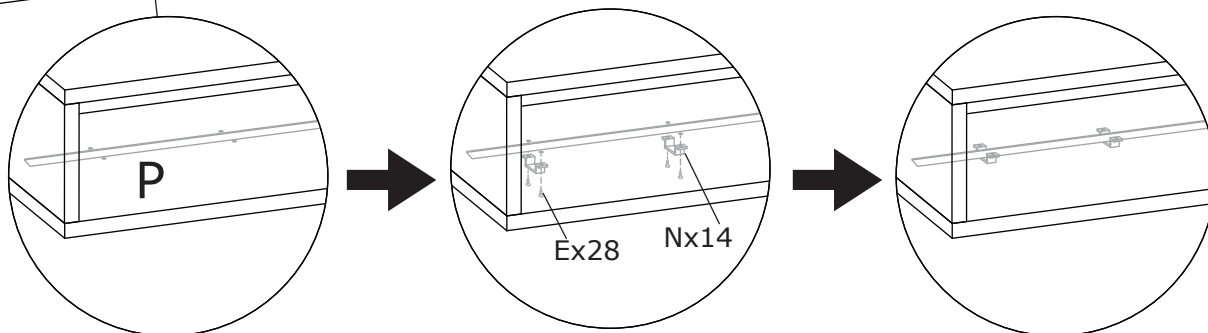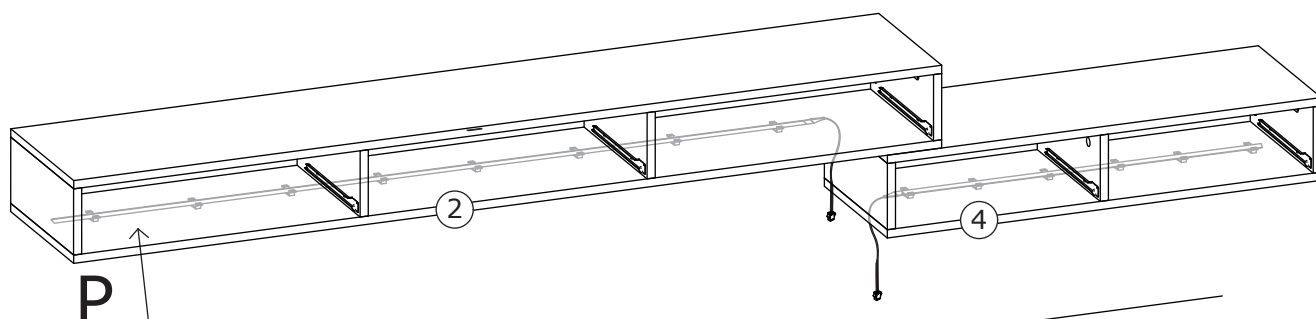


12


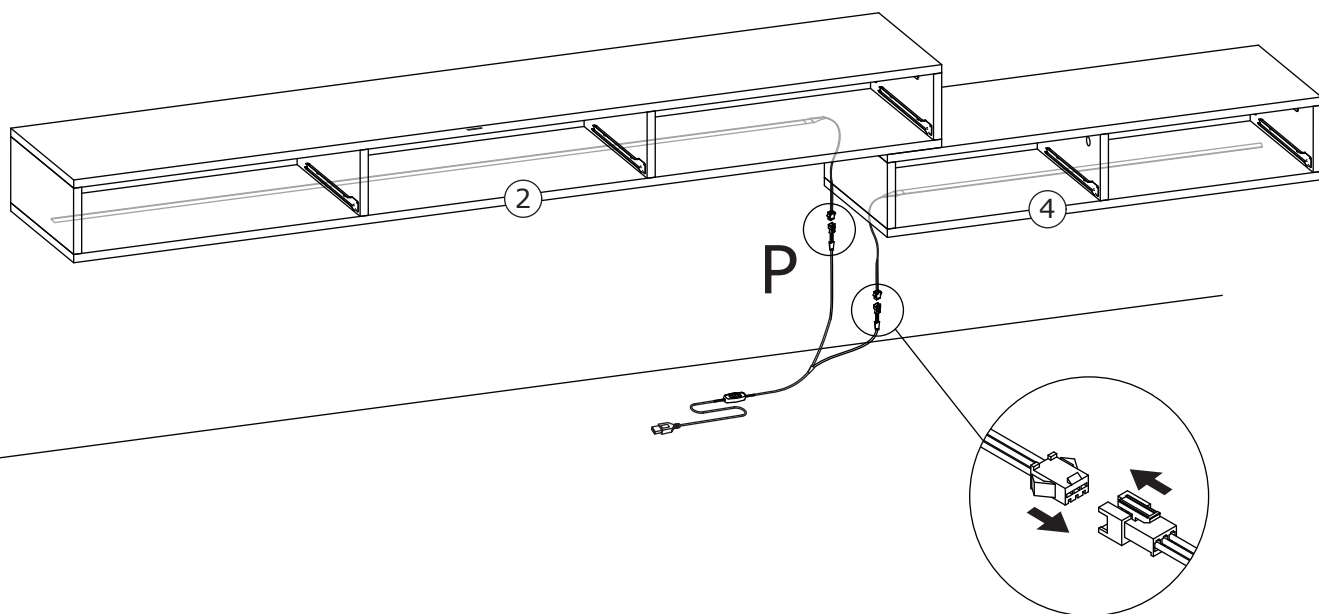 


13

 D x 15
M4x30mm




  Fix board 17 to board 15, 19 and 16 with screw(D) as shown.




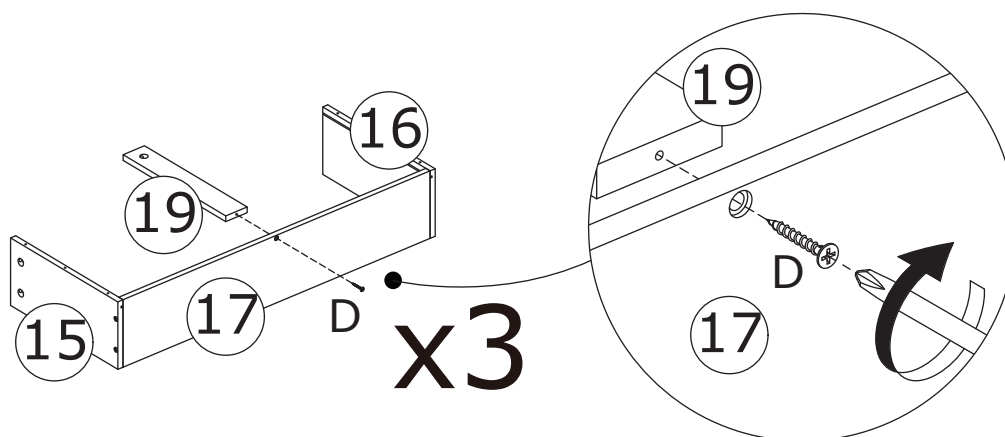
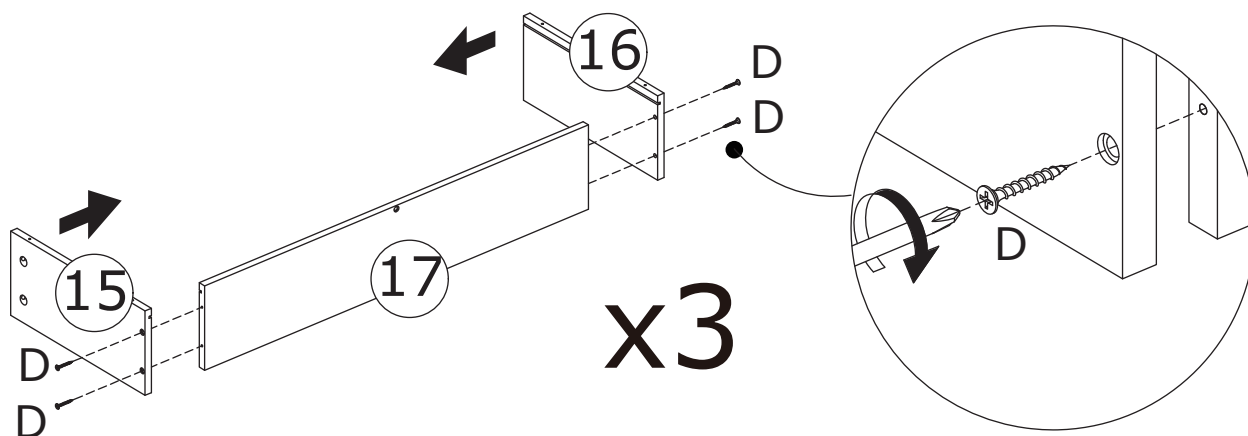


14

 

      

 
 
A x 15
Ø6x35mm

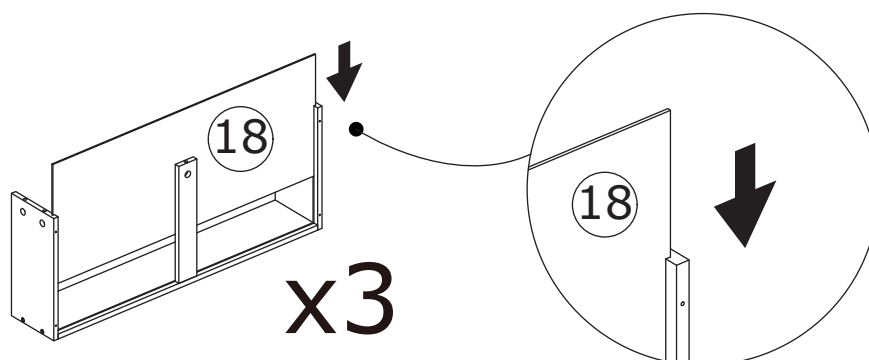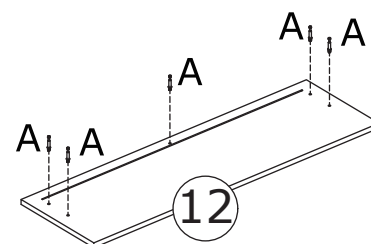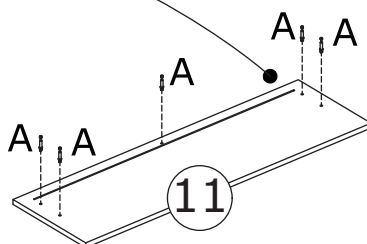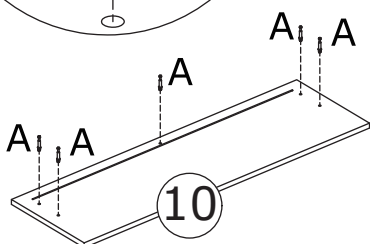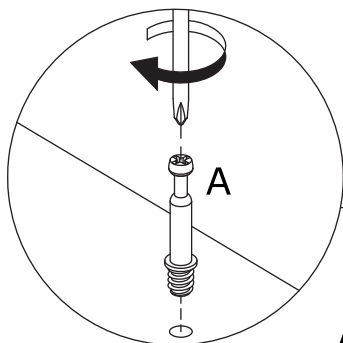


Screw eccentric rod(A) into board 10, 11 and 12 as shown.
Insert bottom board 18 along available grooves as shown.












15

<p>B x 15</p>  <p>Ø14x9mm</p>	<p>E x 12</p>  <p>M3.5x12mm</p>	<p>DL x 3</p> 	<p>DR x 3</p> 	 
--	--	---	--	---



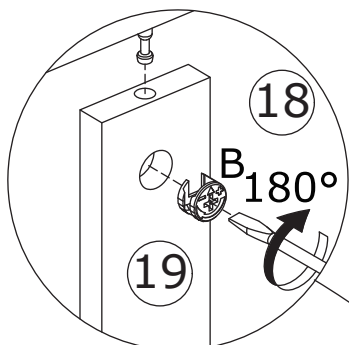 


Attach board 10/11/12 to board 15, 19 and 16, add cam lock(B) into and turn clockwise to tighten as shown.

         
Fix runner(DL) and (DR) to board 15 and 16 with screw(E) as shown.

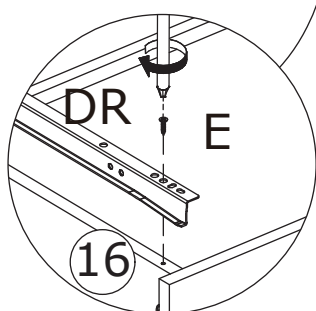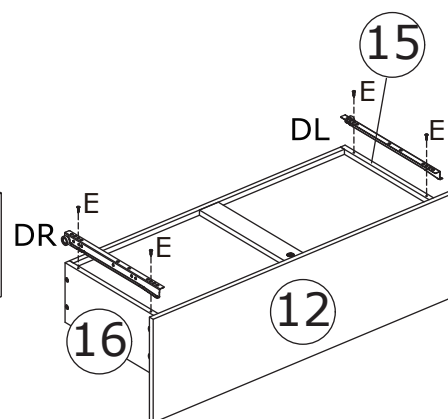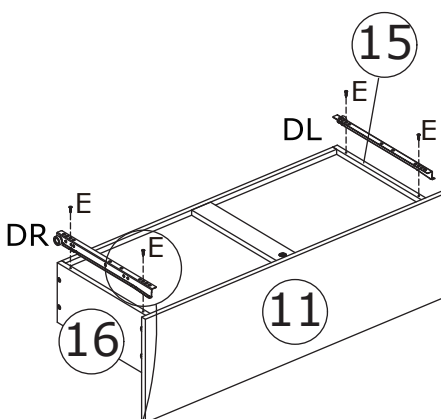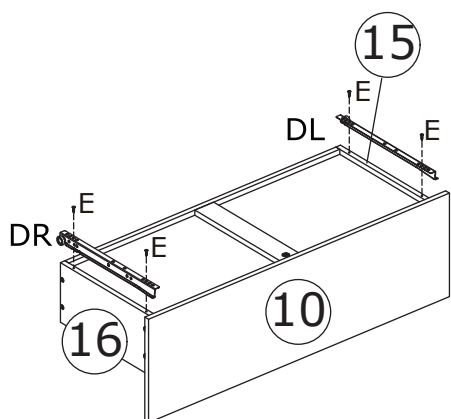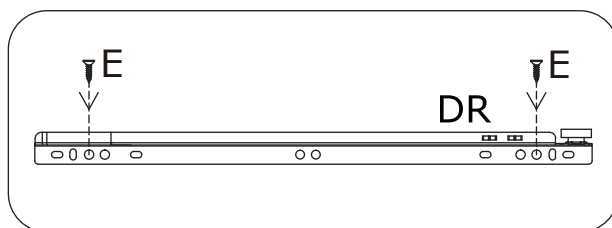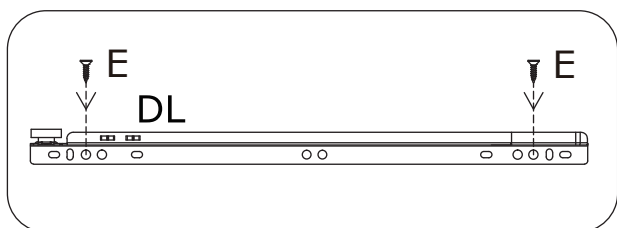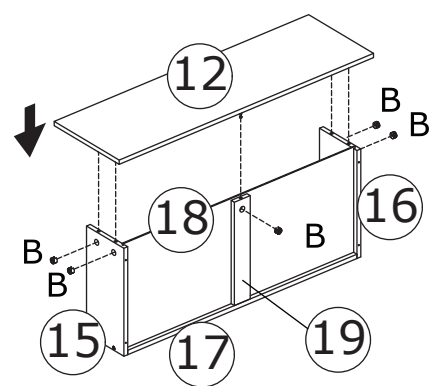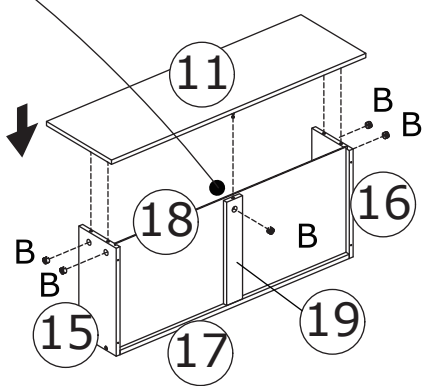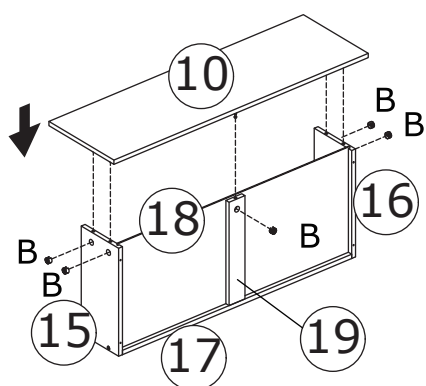


16

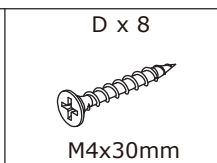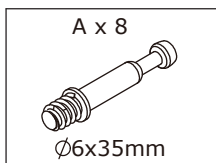   

 
Fix board 20 to board 15 and 16 with screw(D) as shown.

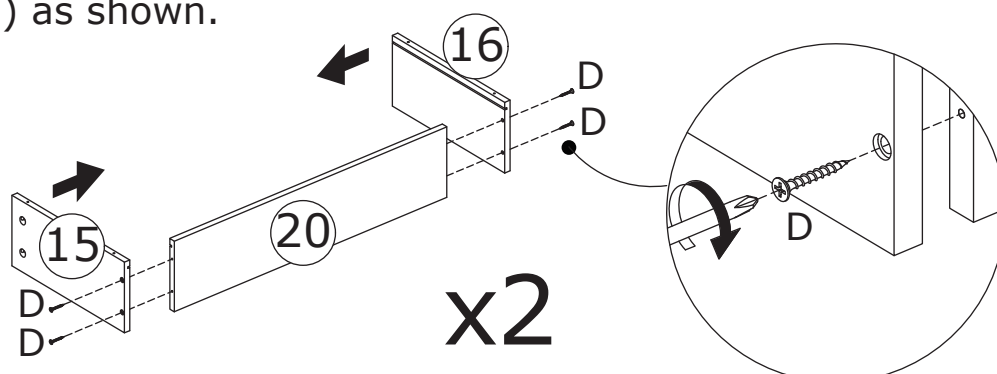

 
Screw eccentric rod(A) into board 13 and 14 as shown.

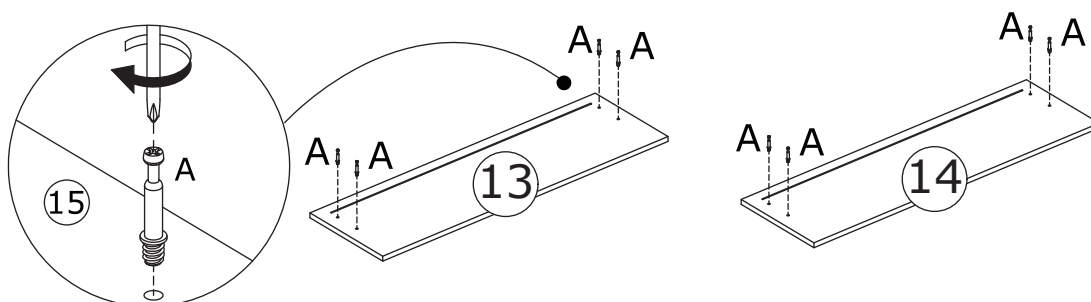





 
Insert bottom board 21 along available grooves as shown.

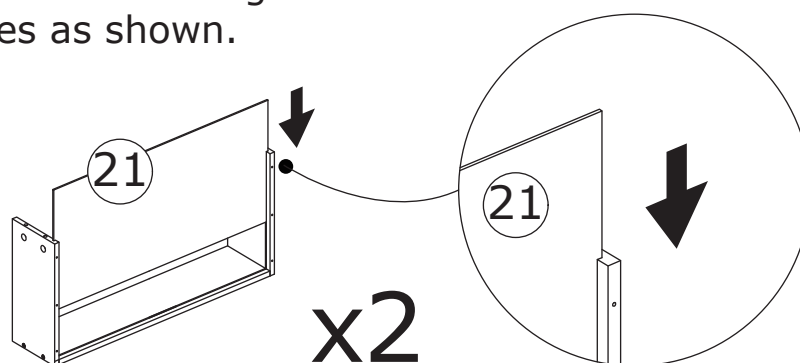

17

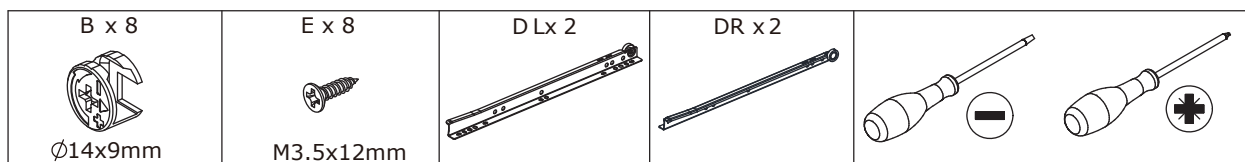 


     Attach board 13/14 to board 15 and 16, add cam lock(B) into and turn clockwise to tighten as shown. Fix runner(DL) and (DR) to board 15 and 16 with screw(E) as shown.

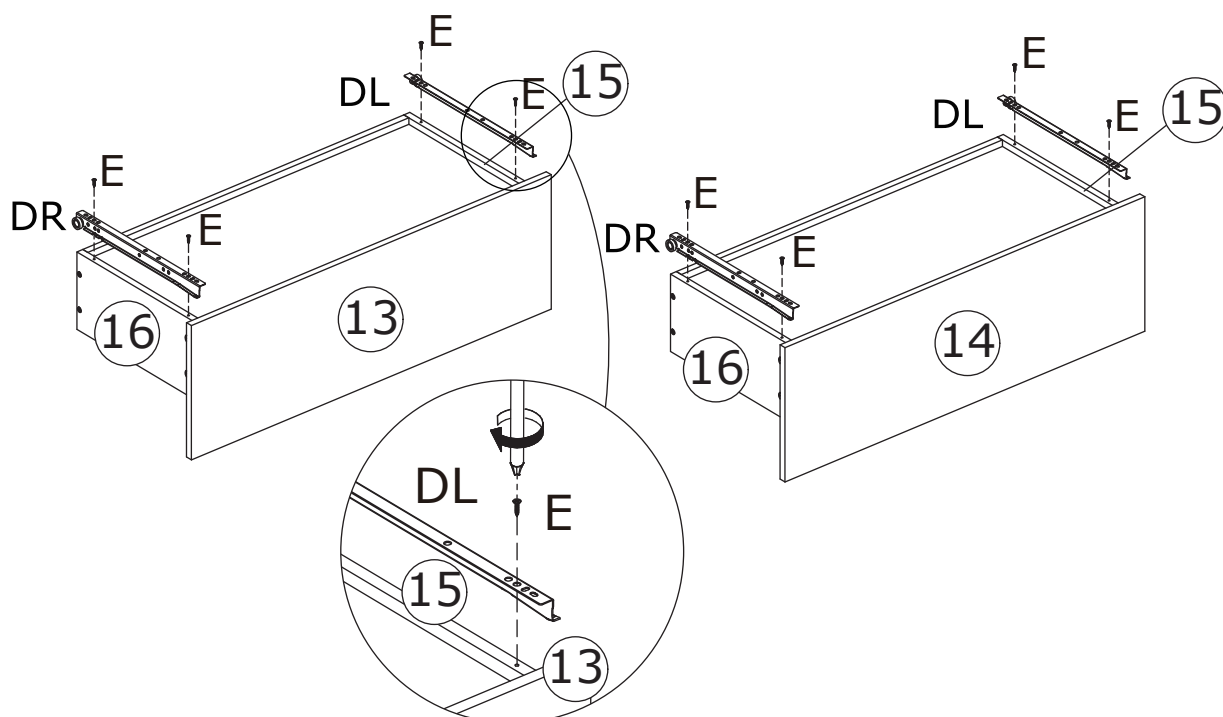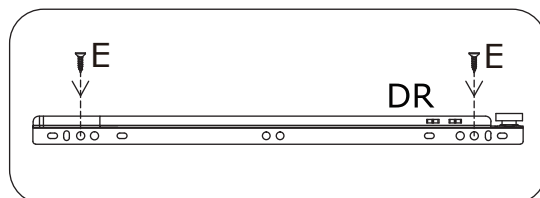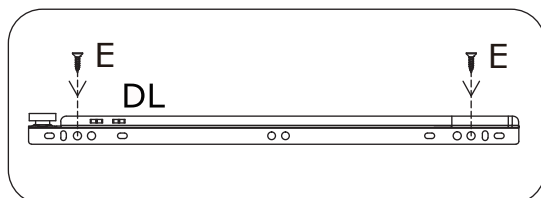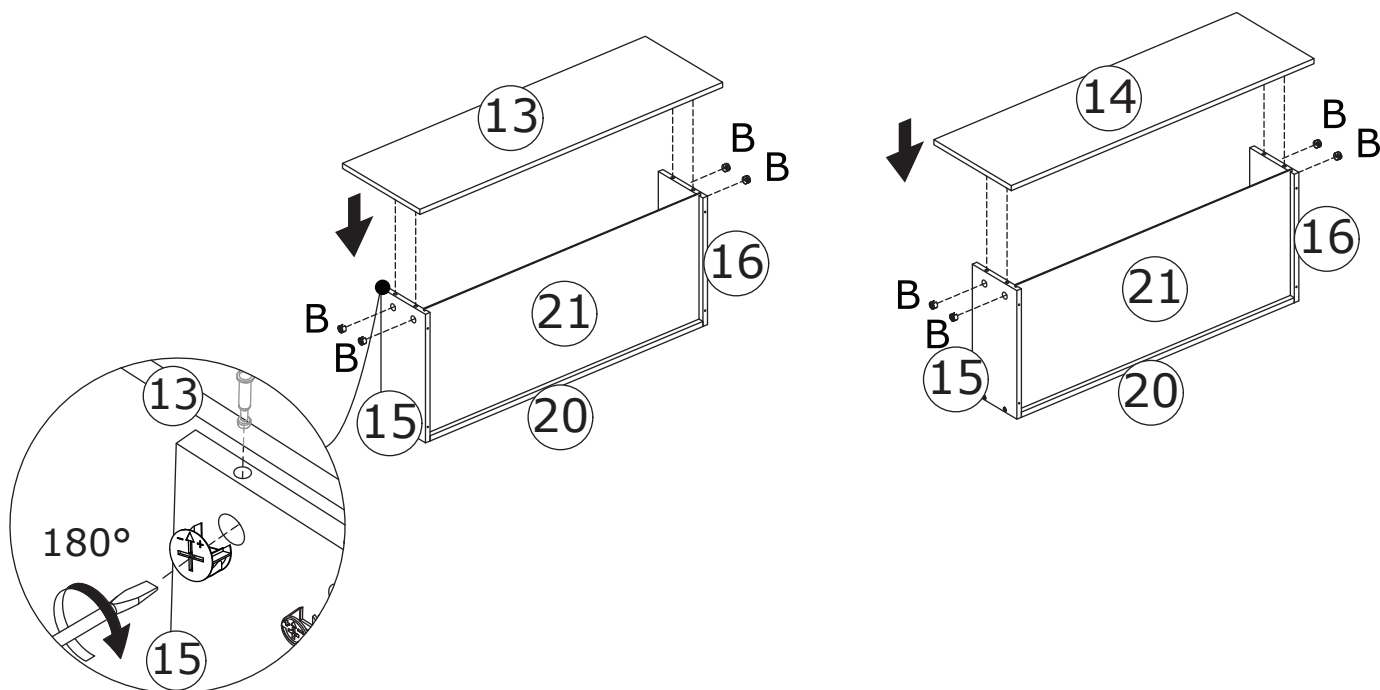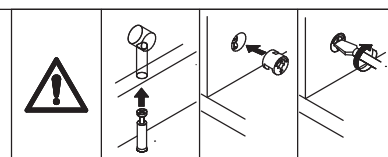

18

 Align rails, insert all drawers in.

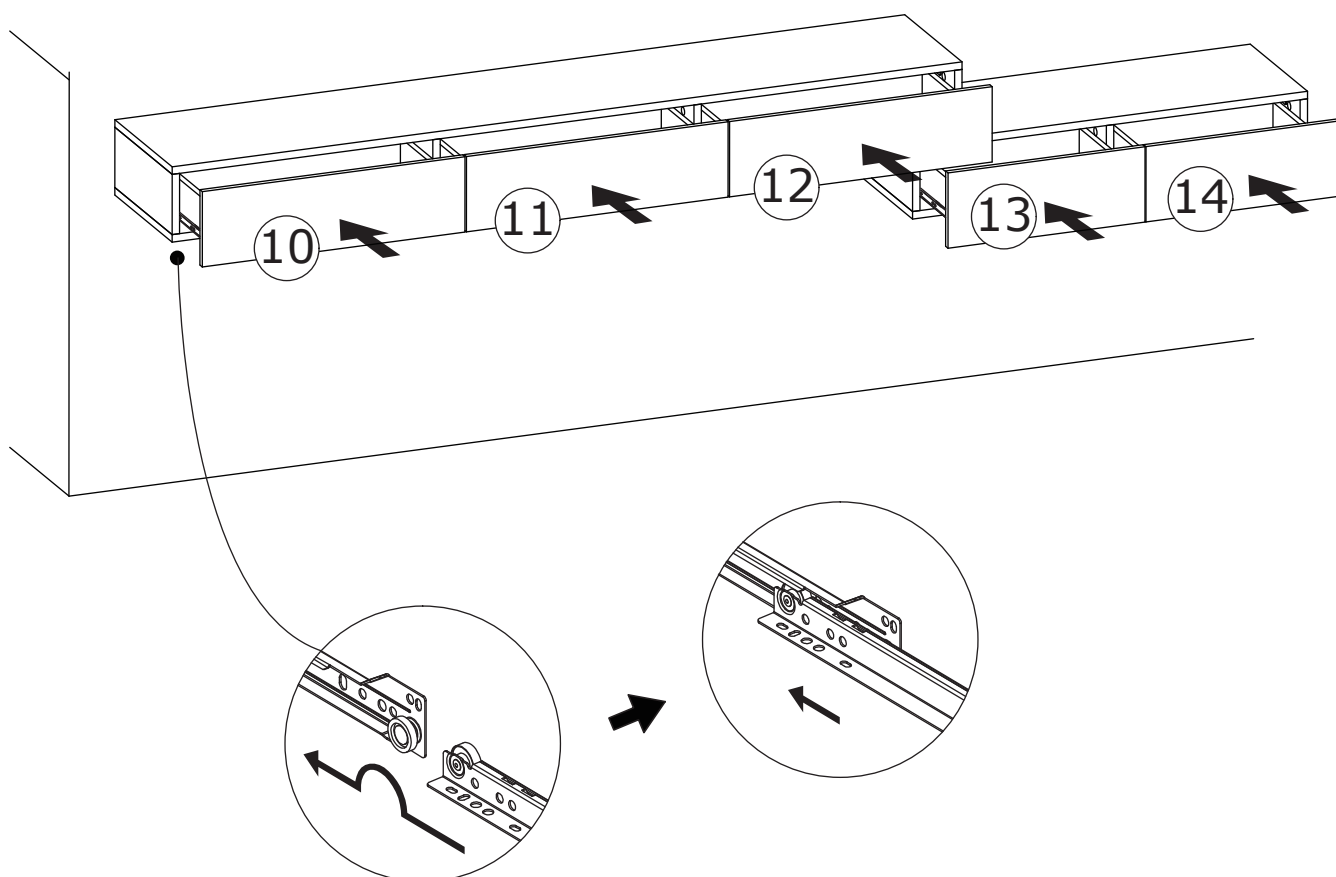

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.