

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

BOOKCASE

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!










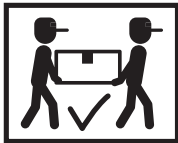








- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

                120 MINUTES

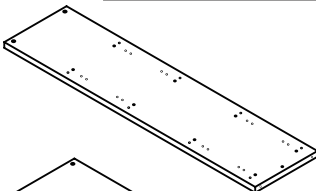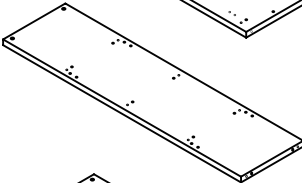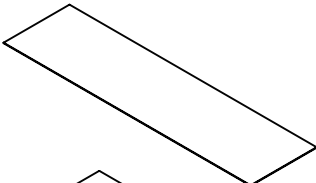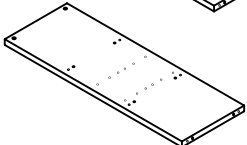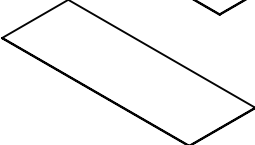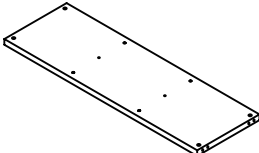 

 




 



 

 

 
PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	J	DOOR		3 PCS
B	LEFT DIVIDER PANEL		1 PC	K	LEFT BACK PANEL		1 PC
C	RIGHT DIVIDER PANEL		1 PC	L	MIDDLE BACK PANEL		1 PC
D	RIGHT SIDE PANEL		1 PC	M	RIGHT BACK PANEL		1 PC
E	BOTTOM PANEL		1 PC	N	DRAWER FRONT PANEL		2 PCS
F	CROSS BRACE		1 PC	O	DRAWER BACK PANEL		2 PCS
G	CROSS PANEL		6 PCS	P	LEFT DRAWER SIDE PANEL		2 PCS
H	LEFT TOP PANEL		1 PC	Q	RIGHT DRAWER SIDE PANEL		2 PCS
I	RIGHT TOP PANEL		2 PCS	R	DRAWER BOTTOM PANEL		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	PLASTIC FEET Ø 15mm		6 PCS
2	WOODEN DOWEL Ø 8x30mm		56 PCS	10	HANDLE		5 PCS
3	CAM BOLT Ø 7x35.5mm		44 PCS	11	SHORT BOLT Ø 4x23mm		5 PCS
4	CAM LOCK Ø 15x12mm		44 PCS	12	HINGE		6 PCS
5	LONG BOLT Ø 9.5x55mm		4 PCS	13	SCREW Ø 4x15mm FOR HINGE		24 PCS
6	LONG SCREW Ø 4.3x35mm		8 PCS	14	DOOR CATCH		3 PCS
7	RAIL L = 350mm		2 SET	15	NAIL		64 PCS
8	SHORT SCREW Ø 3x10mm		24 PCS	16	STICKER Ø 20mm		8 PCS





Z7,Z10,Z12 not included in blister packaging.

NOTE:
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 STEP 1

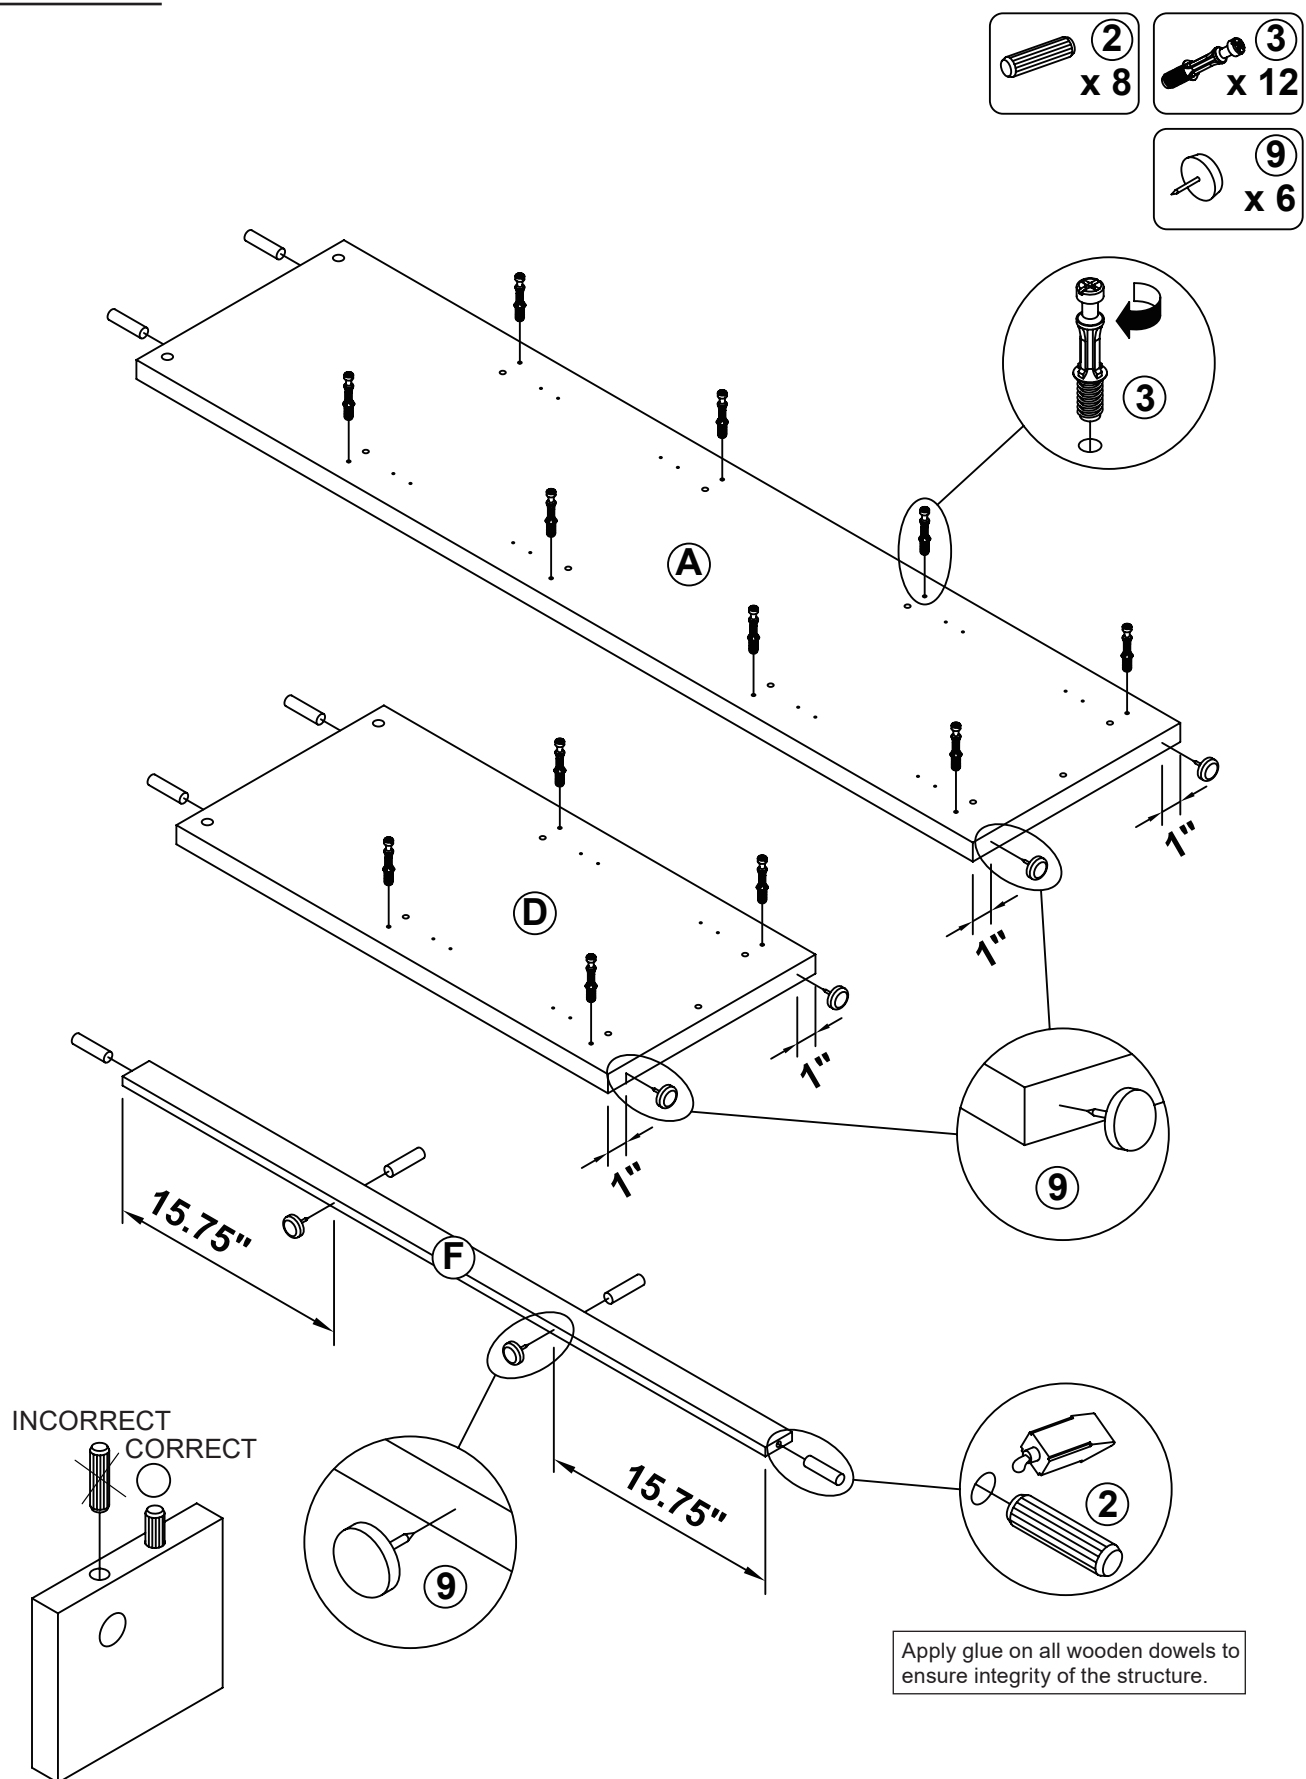

   
 
STEP 2

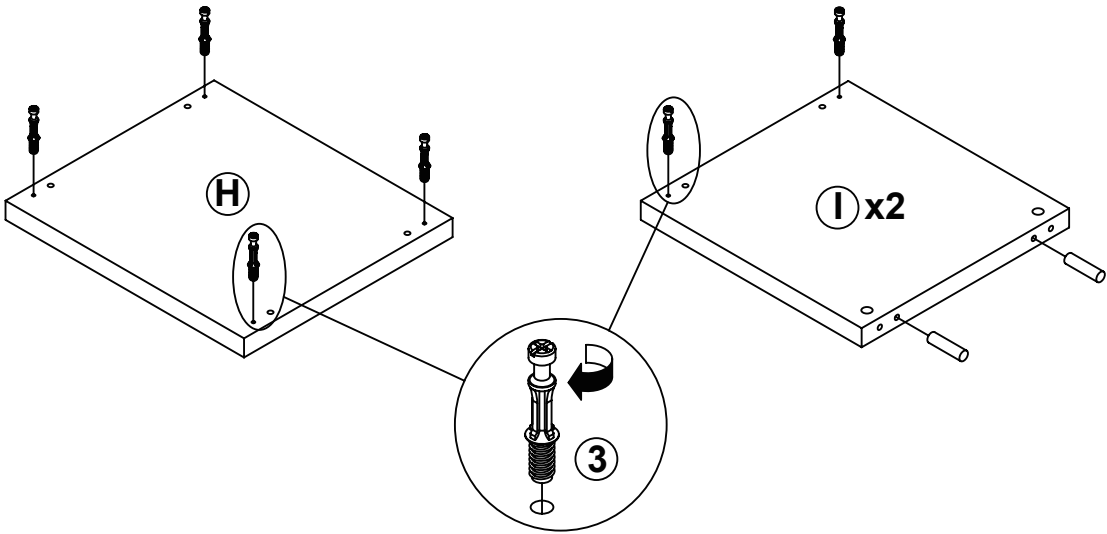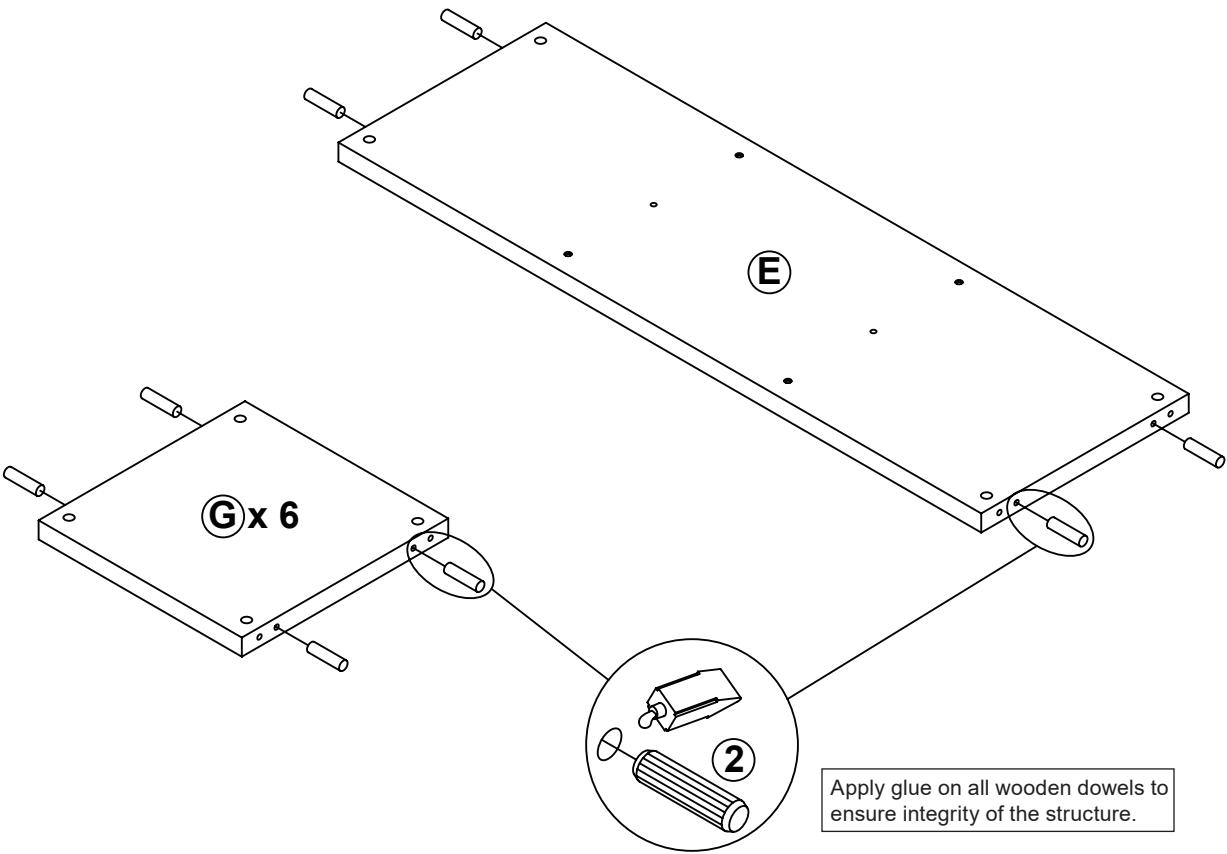


STEP 3



  
STEP 4

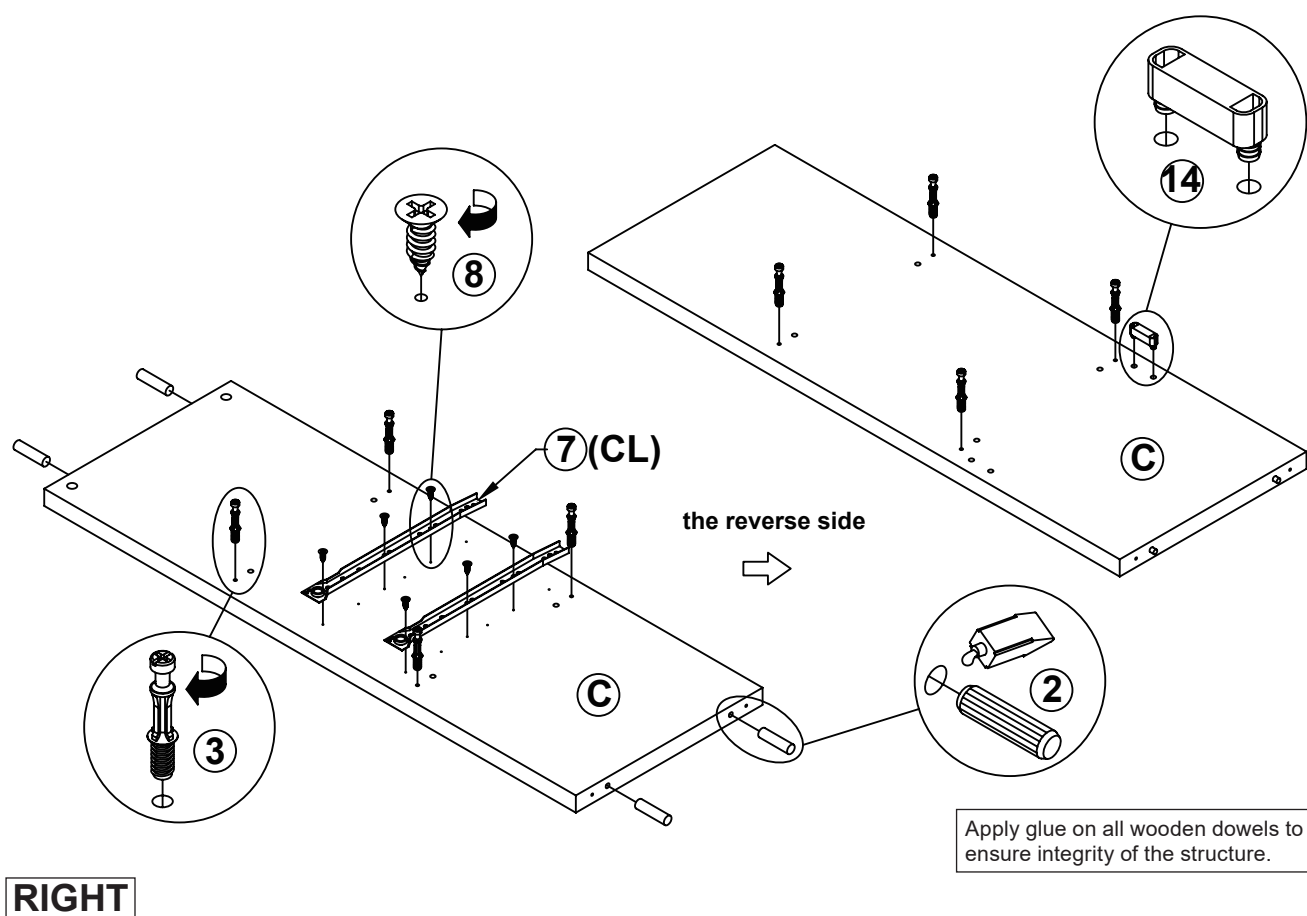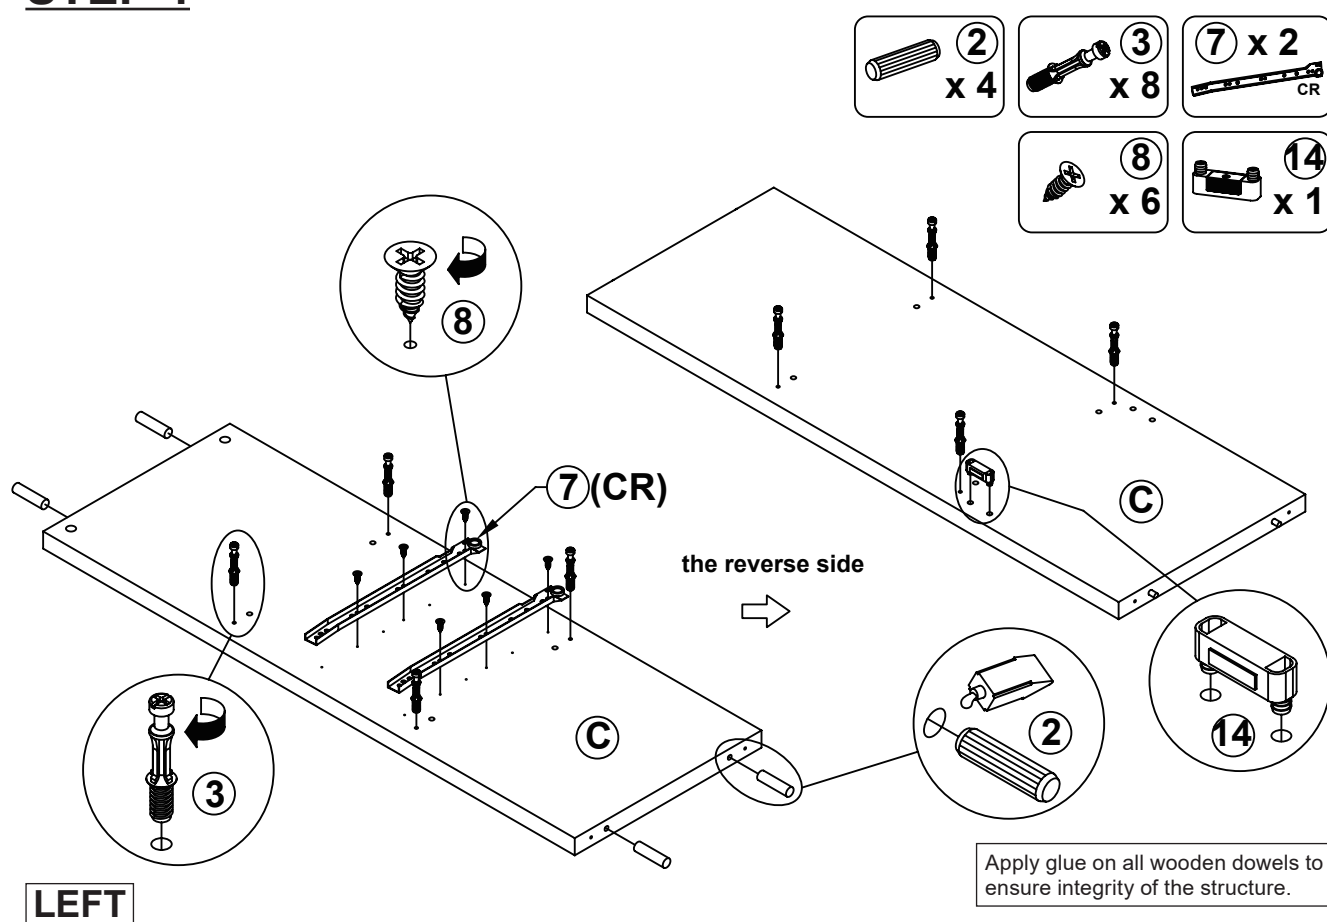

 
STEP 5



 
Apply glue on all wooden dowels to ensure integrity of the structure.

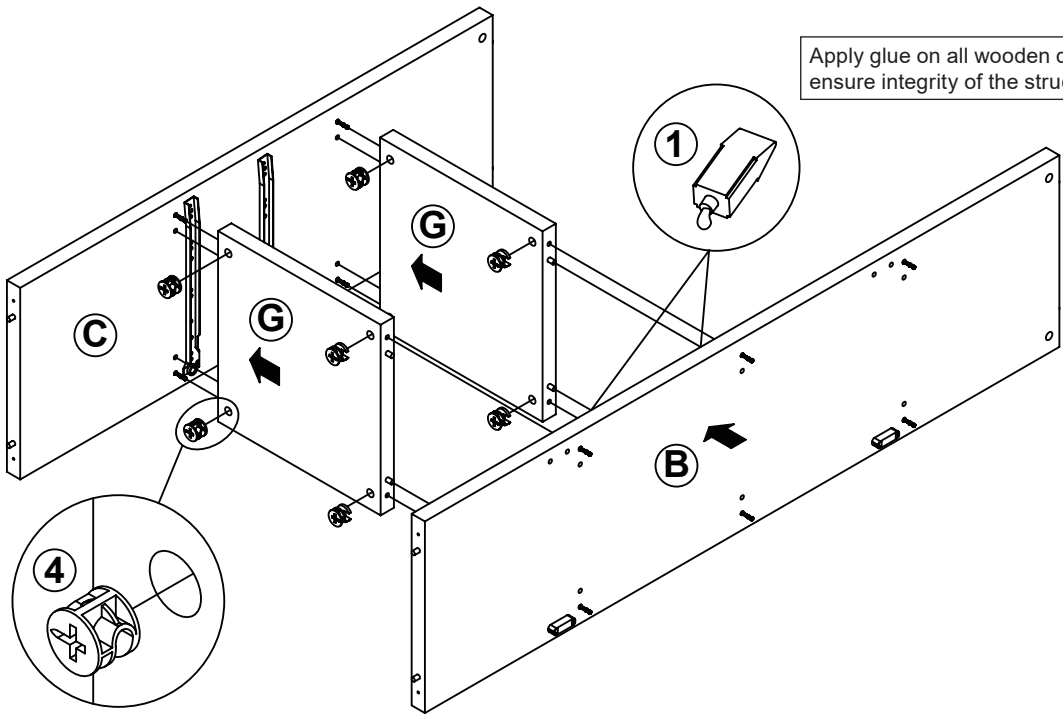

LEFT

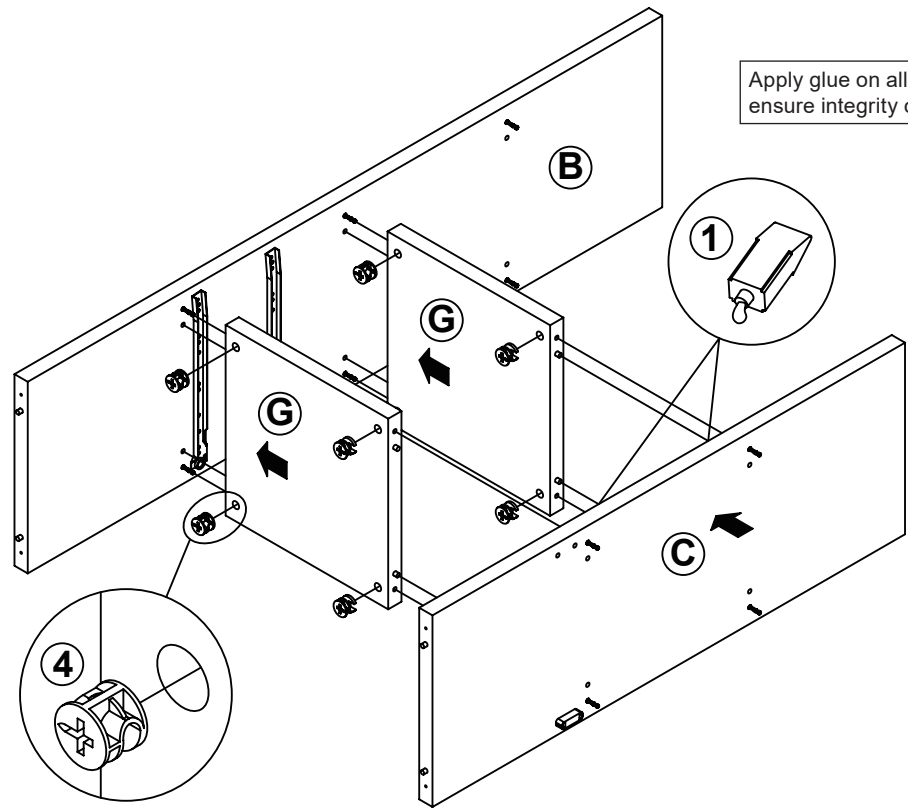 


 
Apply glue on all wooden dowels to ensure integrity of the structure.

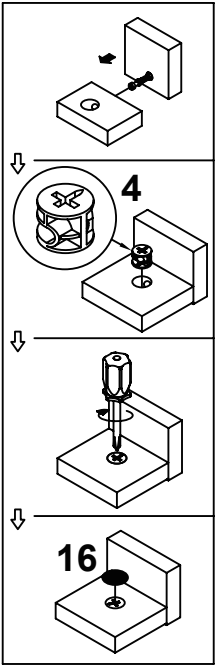

RIGHT


STEP 6

  Apply glue on all wooden dowels to ensure integrity of the structure.

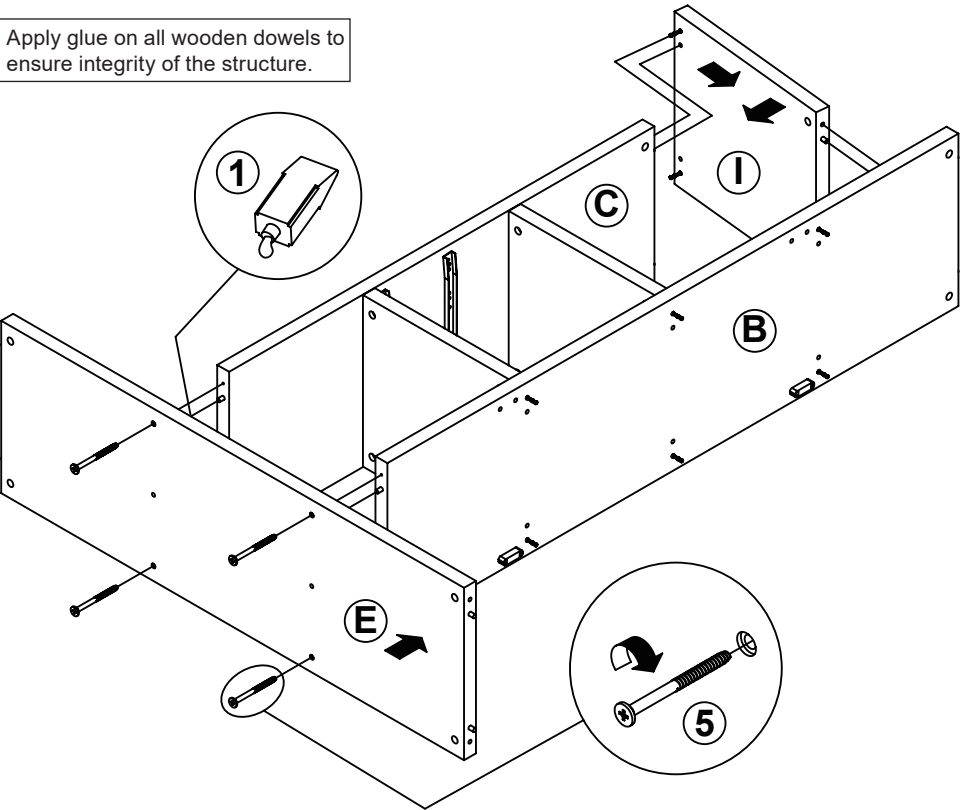




LEFT

 Apply glue on all wooden dowels to ensure integrity of the structure.

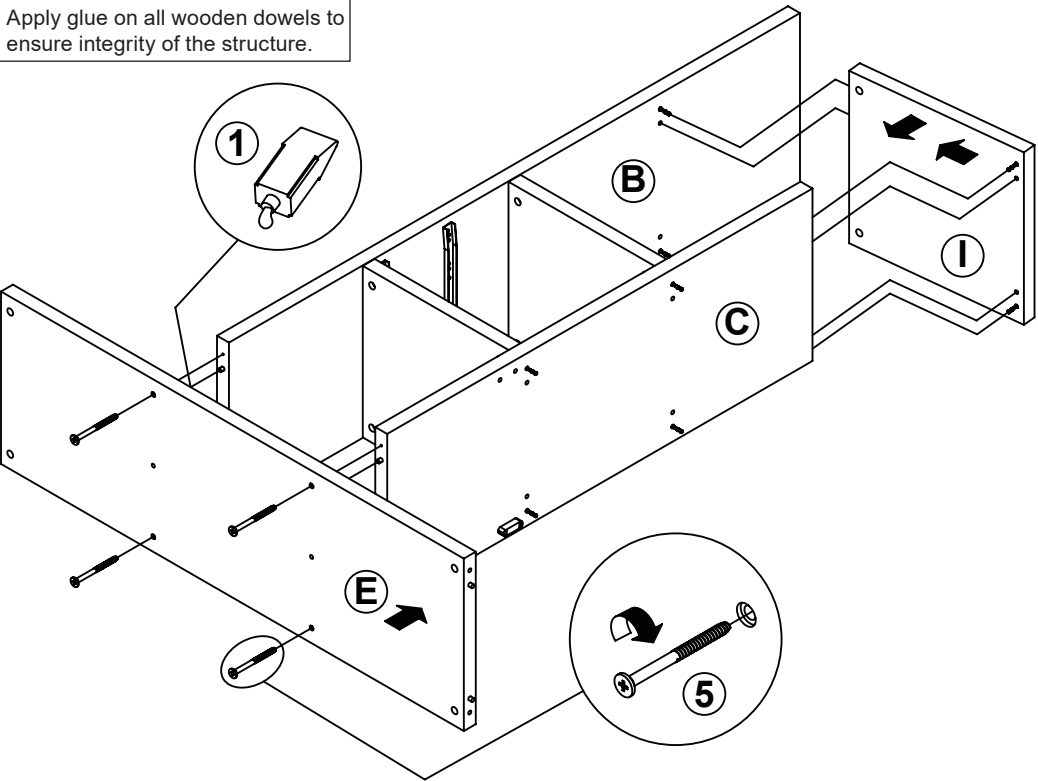


RIGHT

   
STEP 7

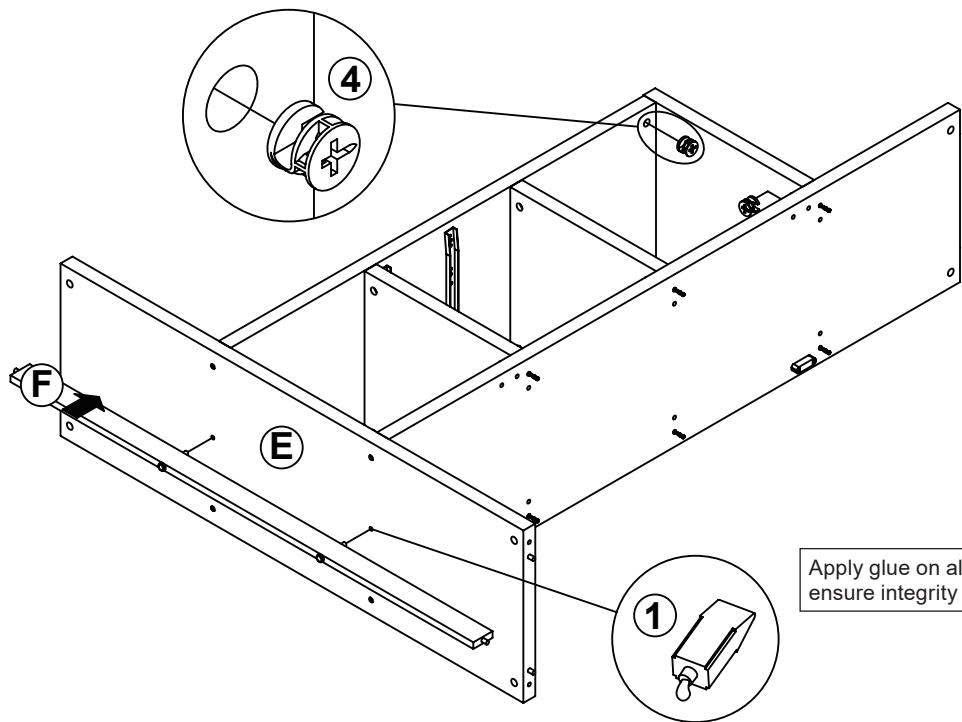




LEFT

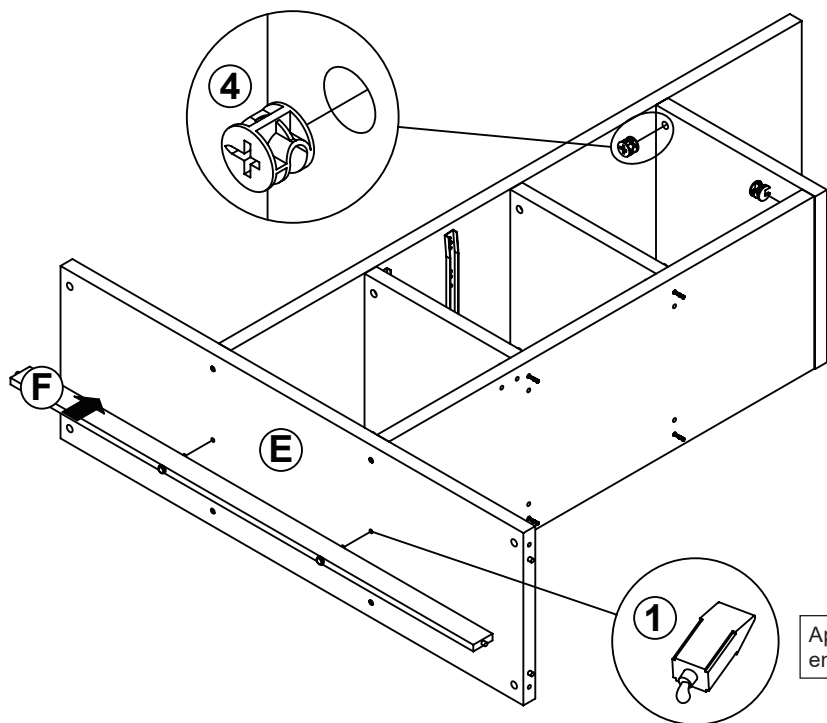 


RIGHT

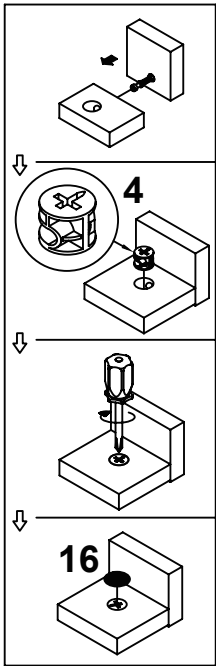 

   STEP 8

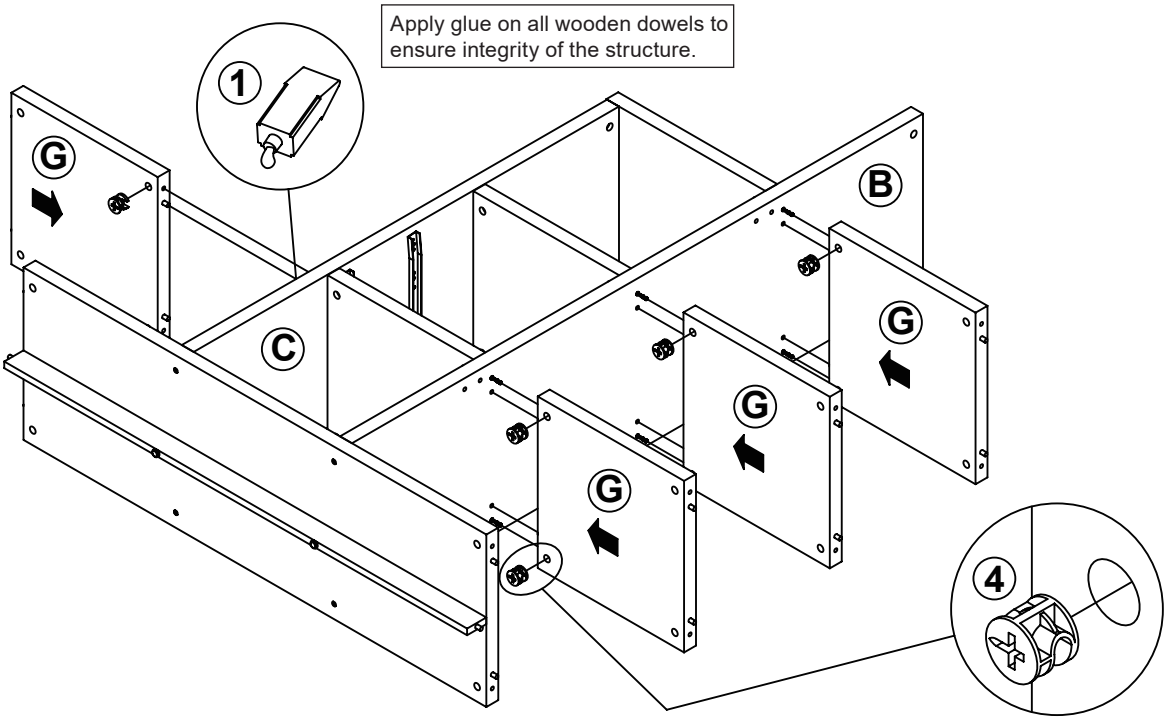




LEFT


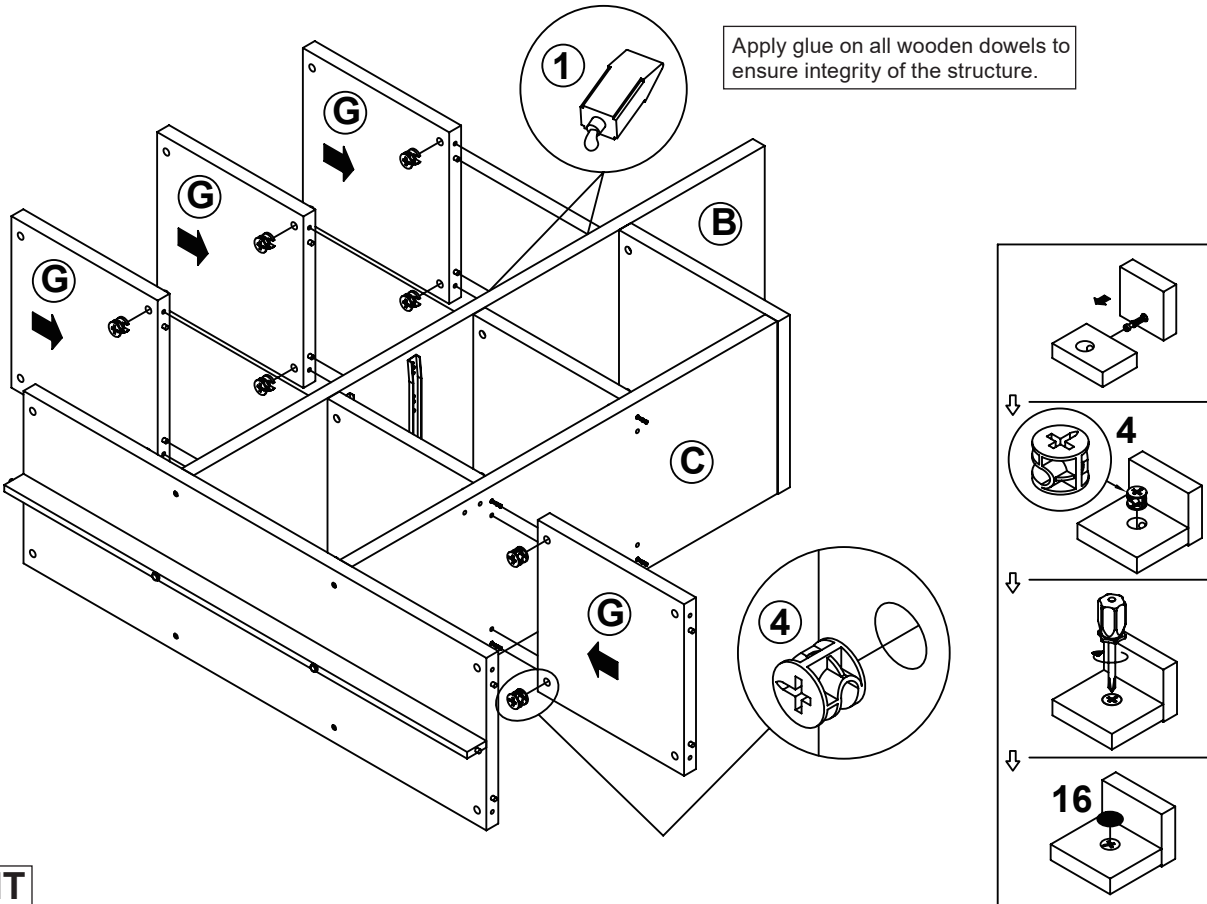 


RIGHT

   STEP 9

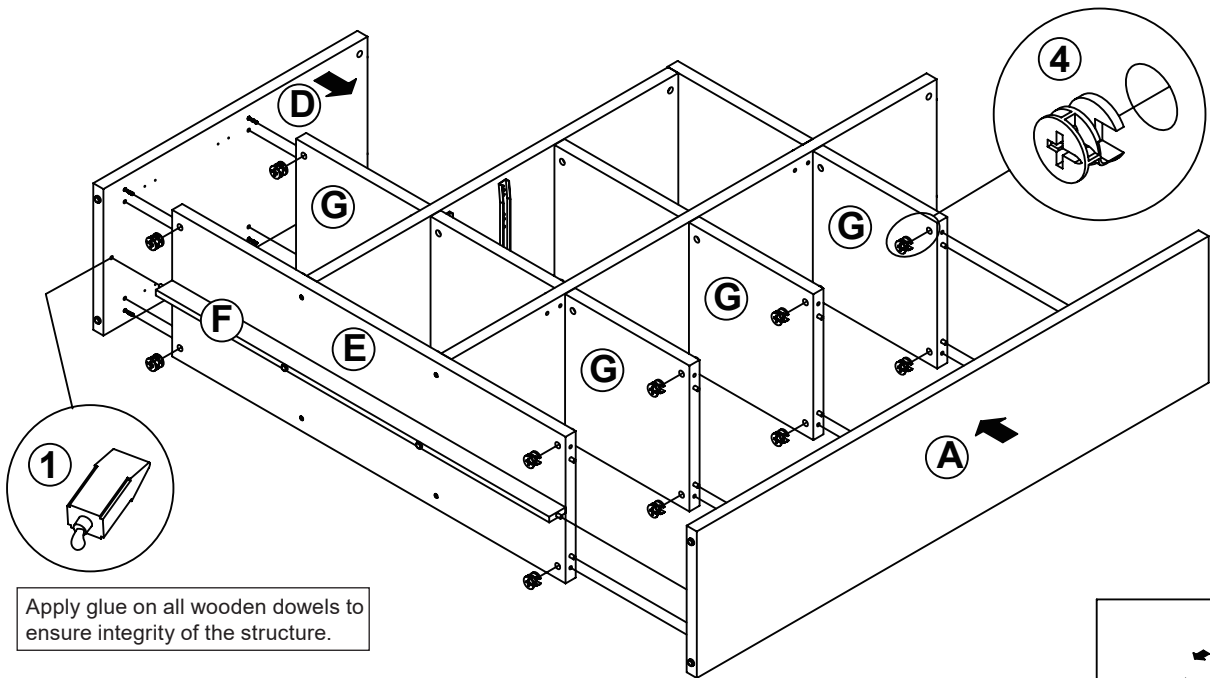



LEFT

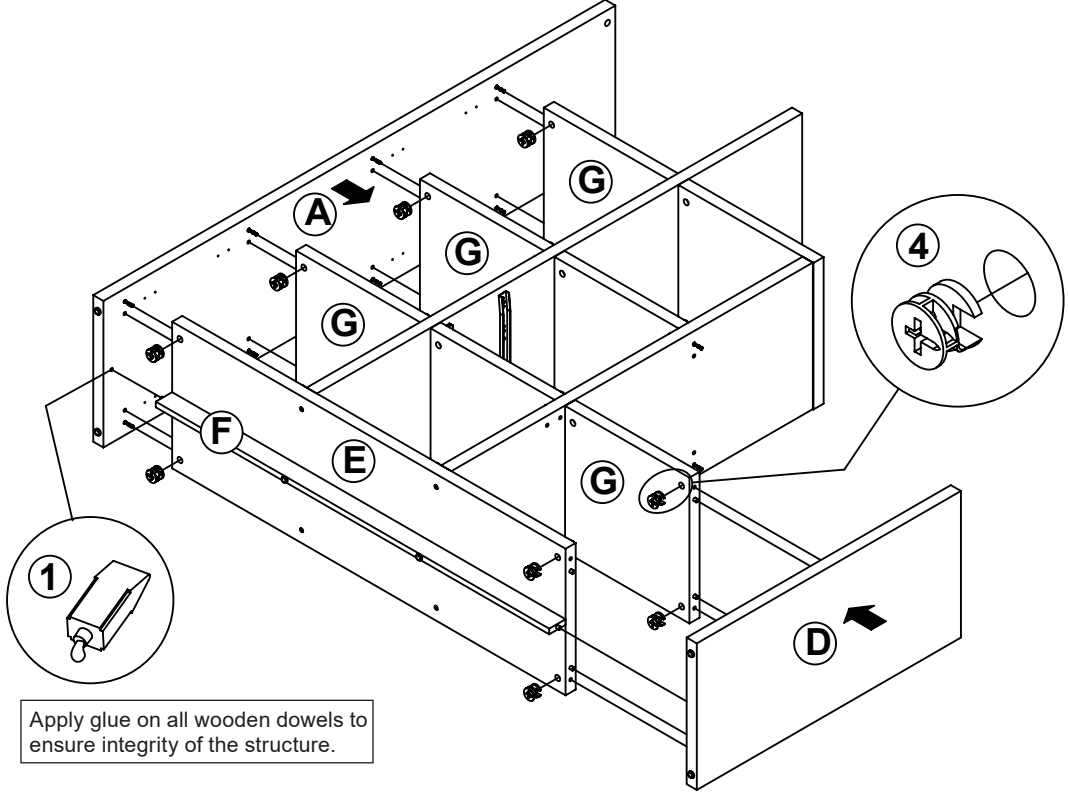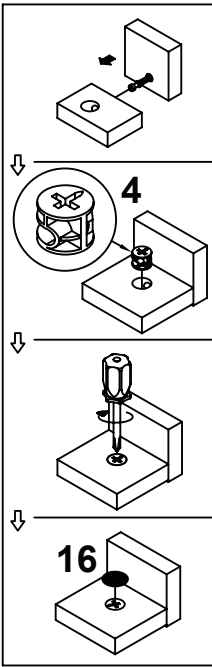  


RIGHT

  STEP 10


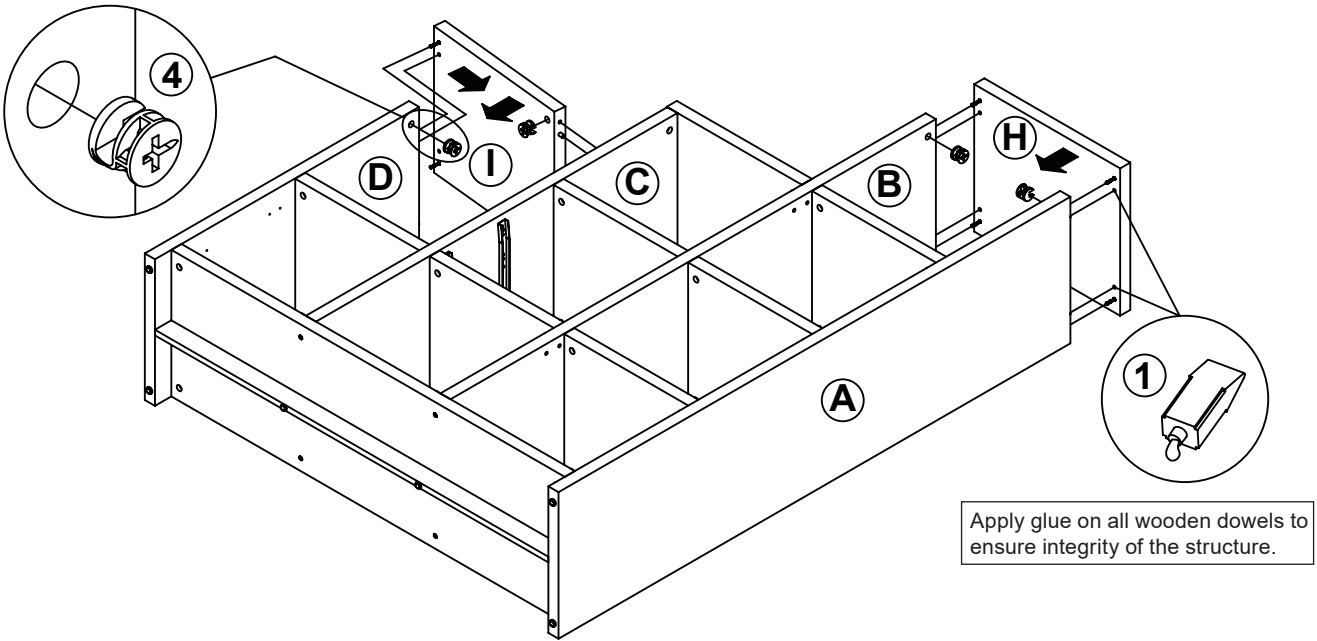



LEFT


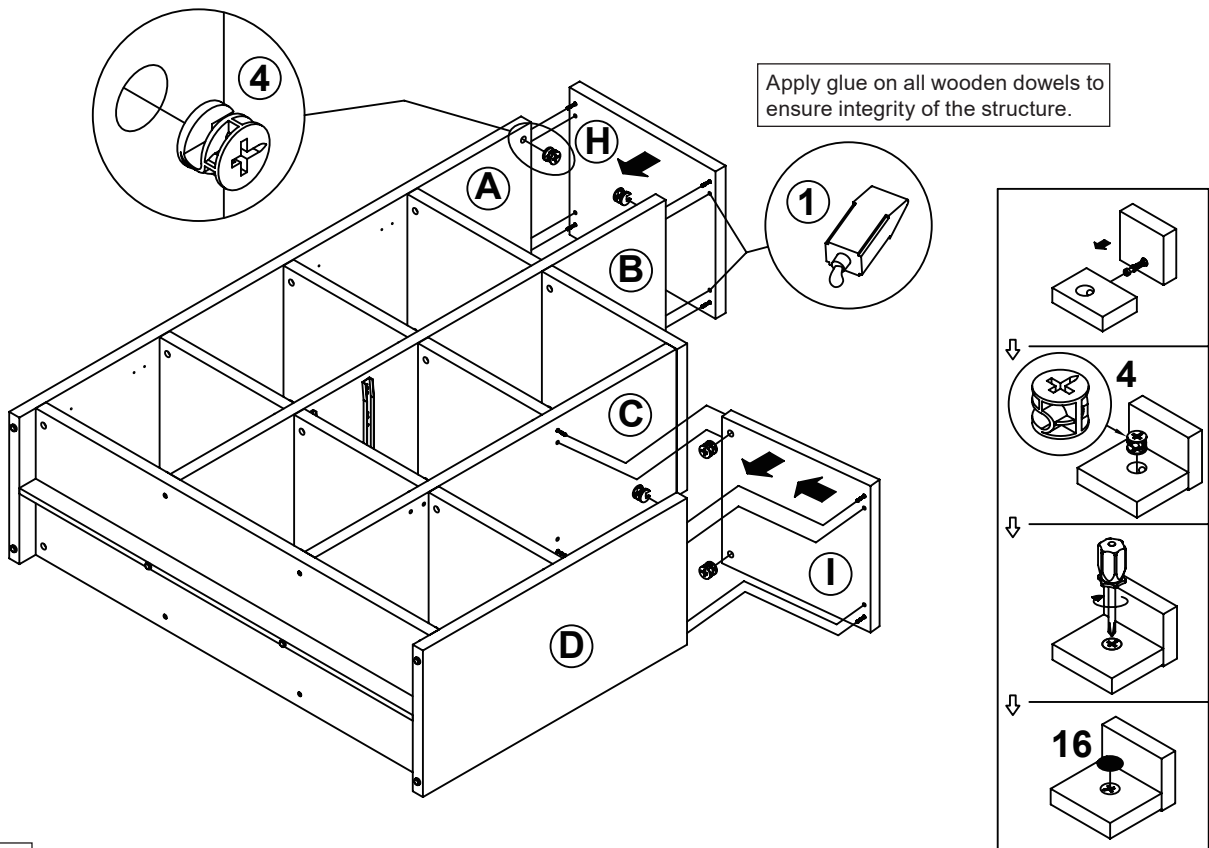 


RIGHT

   STEP 11

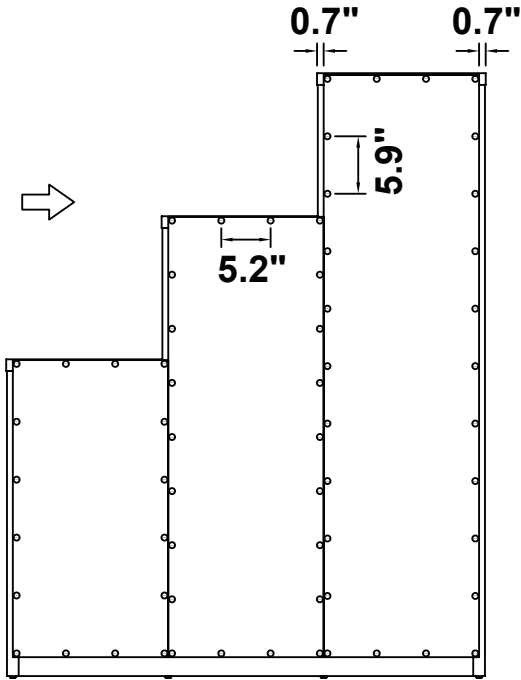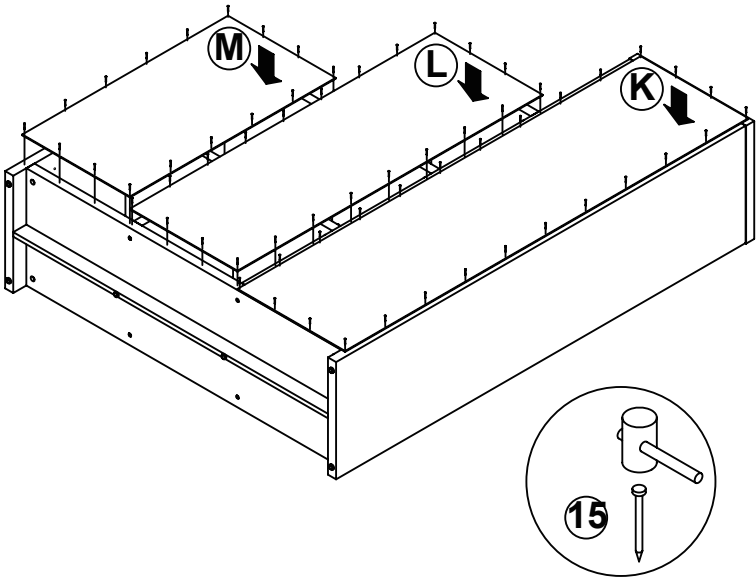


LEFT

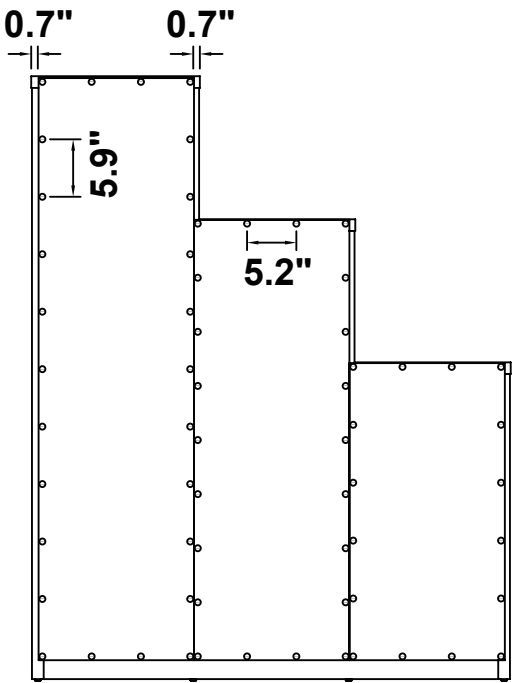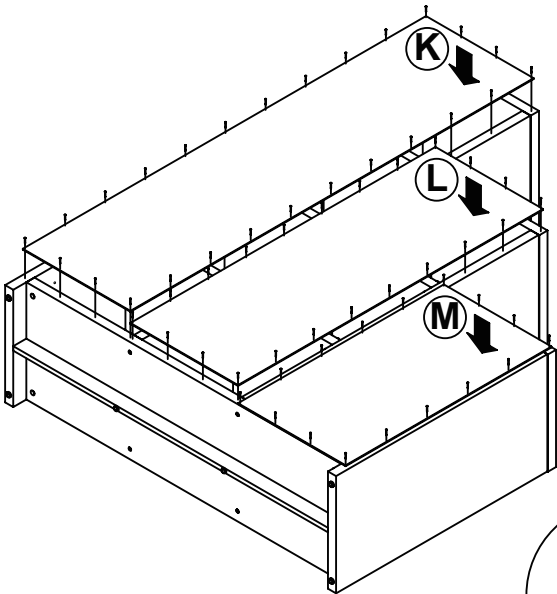  


RIGHT


 
STEP 12

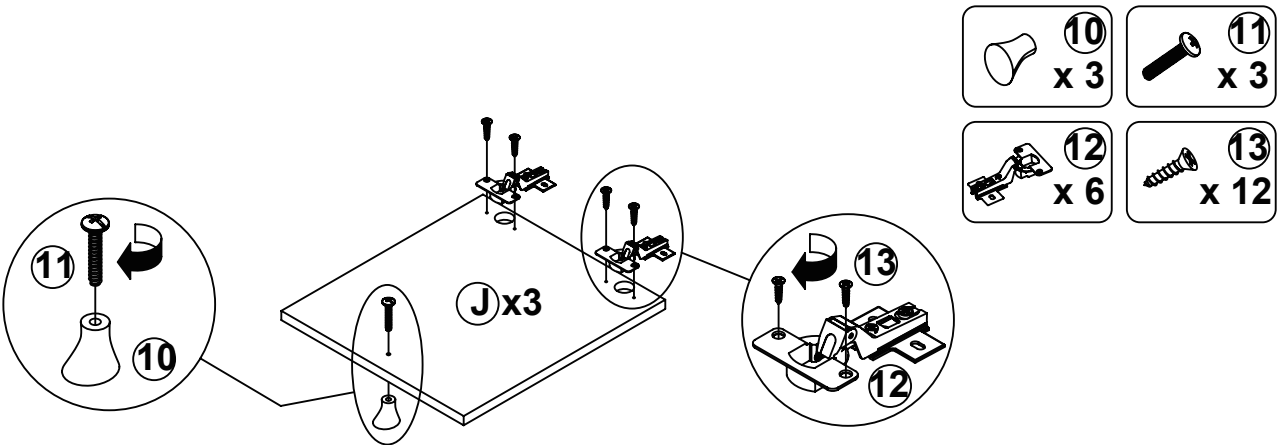

 
STEP 13

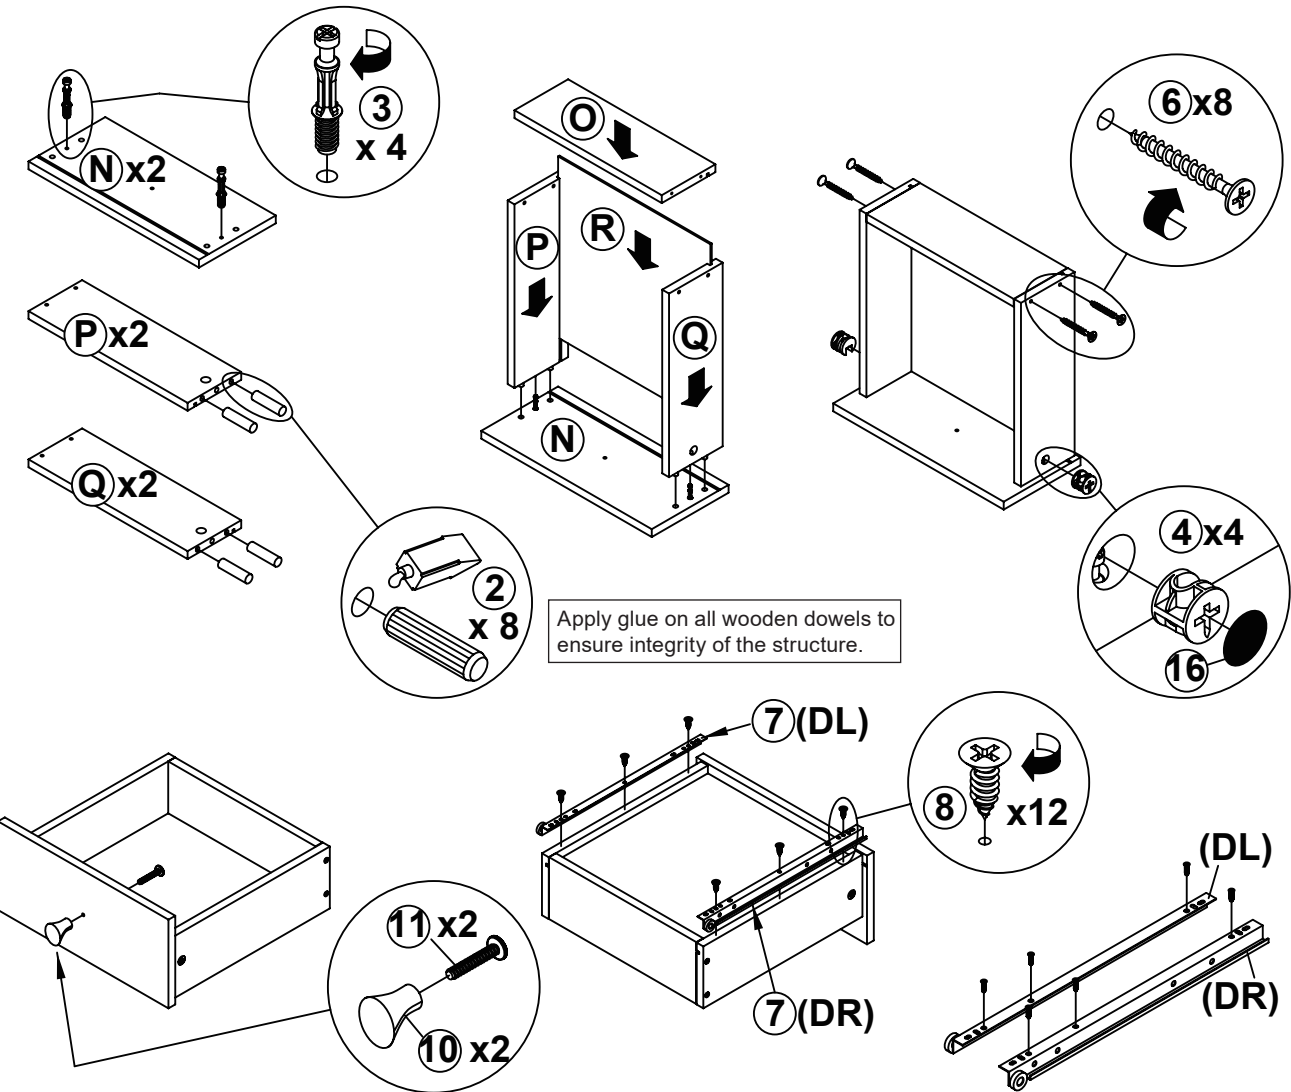



 
 
STEP 14

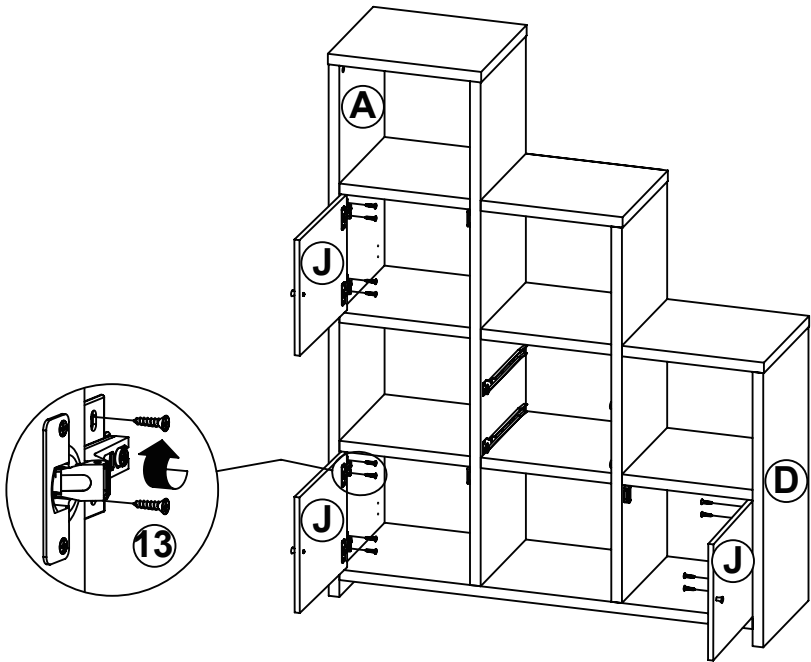


LEFT

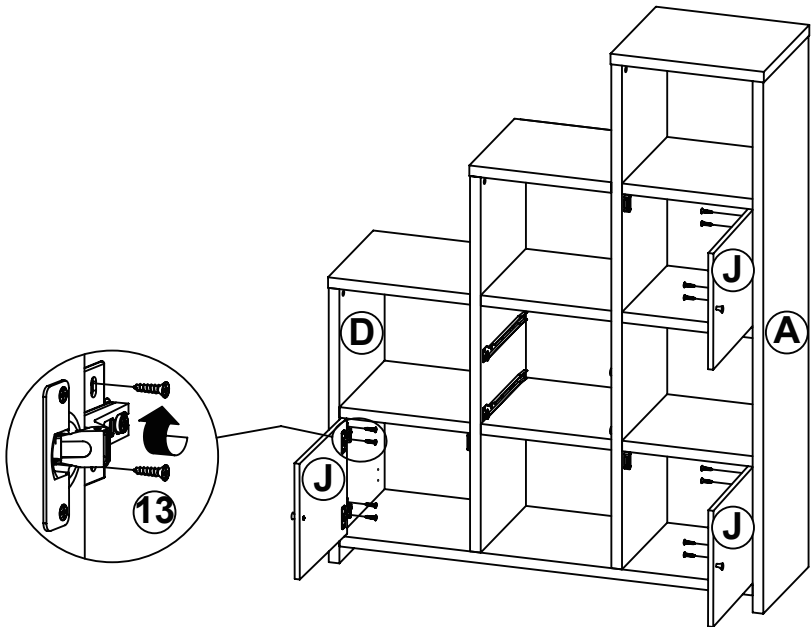 


RIGHT

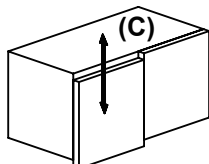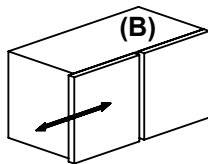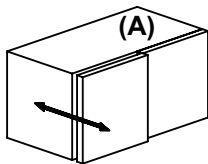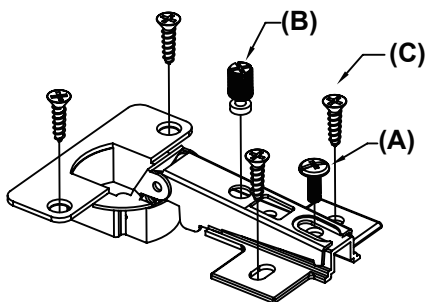    

 STEP 15

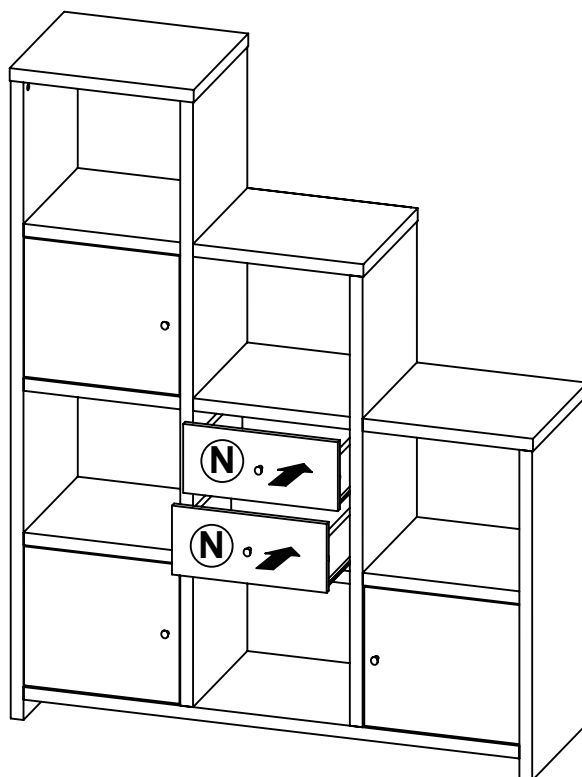


LEFT

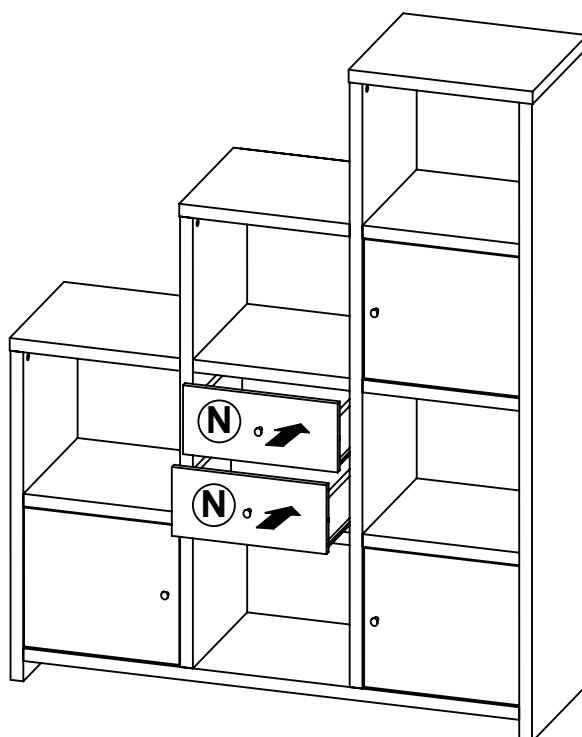 


RIGHT

 
STEP 16
COMPLETE


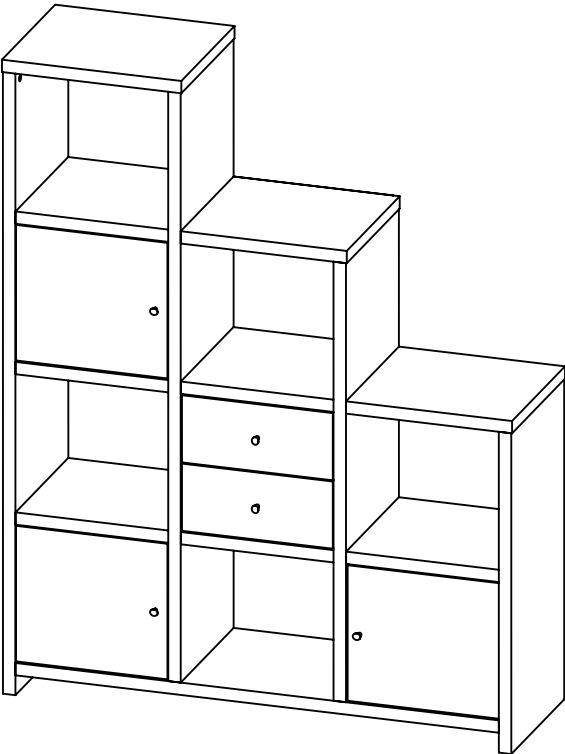


LEFT

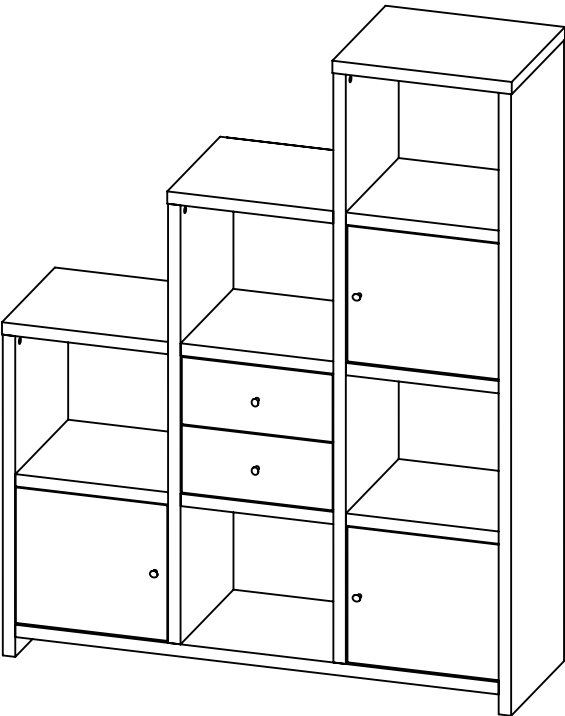 

RIGHT

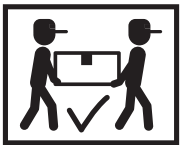 

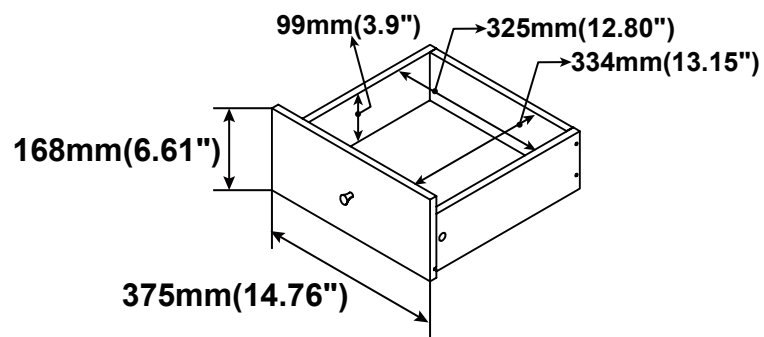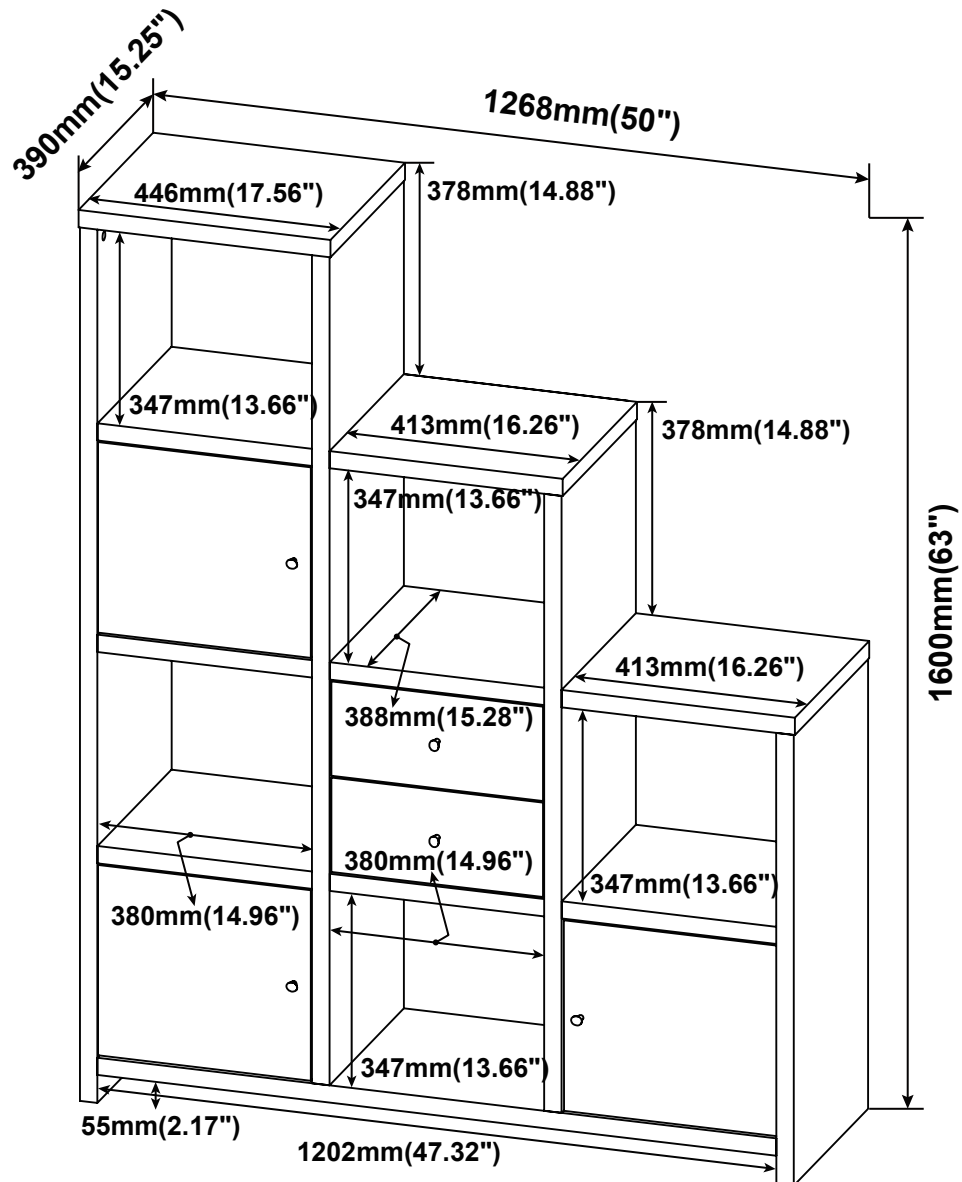  

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

