

Installation Guide For Style

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses, marking pen, 5/16" drill bit and drill.

Light Source: LED 31W

Fixture Hanging Height: Minimum Hanging Height is 25", Maximum Hanging Height is 100".

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Missing Parts? Contact your original place of purchase.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Do NOT remove packing material around shades and lamps until the last step to prevent scratching.

Package Contents

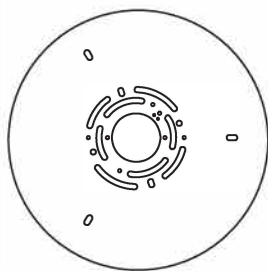

A Inner Backplate
x 1

B Mounting Screw
x 2


C Wall Anchor
x 3

D Washer
x 3

E Screw
x 3


F Rod F
x 3

G Rod G
x 2

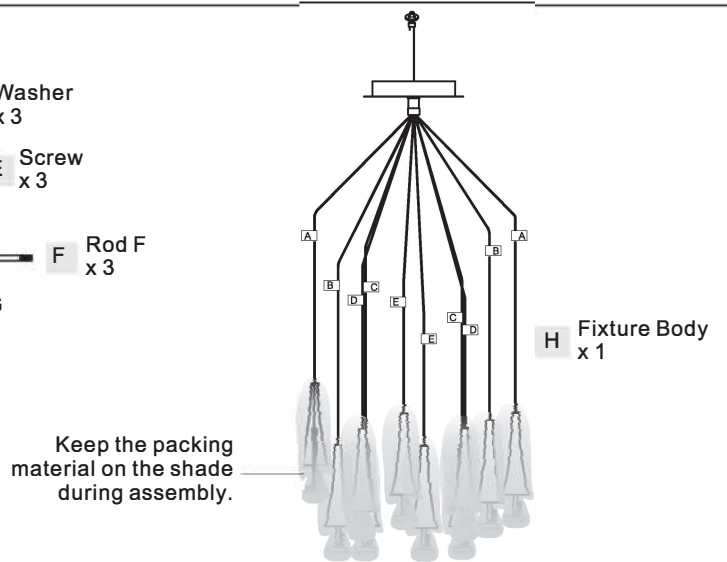


STEP 1 – Adjusting the Fixture Height

- To determine the cord length desired for each cord. Adjust the cord length 2 wires at a time. (AA, BB, CC, DD, EE)
- Loosen the two screws on the strain relief for the wires to be adjusted so that wire can be lengthened or shortened. The wires will not be cut. Pull the cords from the top or bottom of the canopy to adjust the length.
- Secure the strain relief holding the two wires just adjusted. Repeat for all wires.

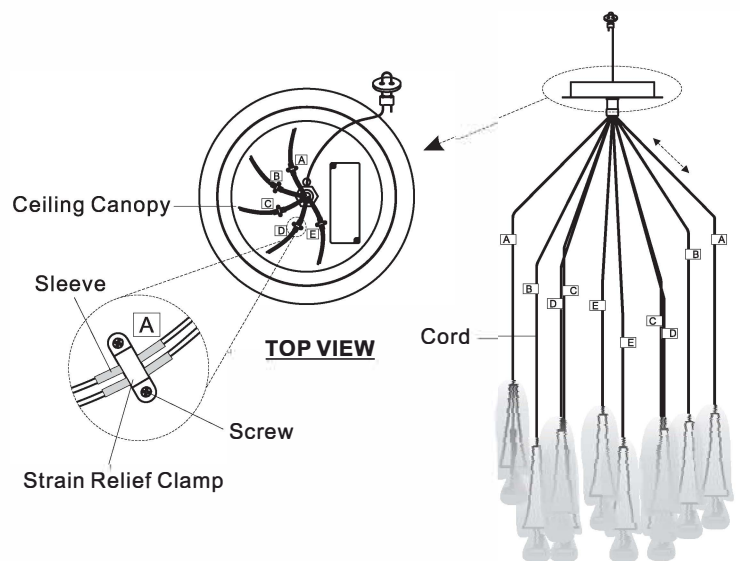


STEP 2 – Attach Inner Backplate to Outlet Box

- Attach the Inner Backplate (A) to the outlet box with the outlet box screws (not Supplied). Mark the locations of 3 Wall Anchors (C) on the ceiling from the key holes on the Inner Backplate (A).
- Remove the Inner Backplate (A). Use a 5/16" drill bit, drill holes at each 3 locations marked on the ceiling. Insert Wall Anchors (C) into drilled holes completely.
- Attach the Inner Backplate (A) to outlet box. Secure by threading outlet box screws (not supplied) into mounting holes on the outlet box and threading Screws (E) with Washers (D) into Wall Anchors (C). Hand tighten until snug.

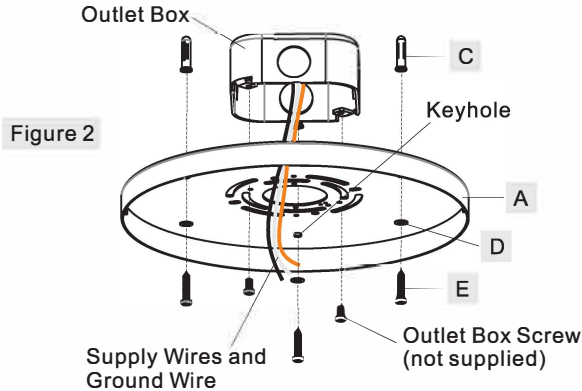


STEP 3 – Attach the Lanyard

- The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
- Turn the Button Stop so it may be inserted into a Inner Backplate slot. Make sure the Button Stop is completely inside the Inner Backplate. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

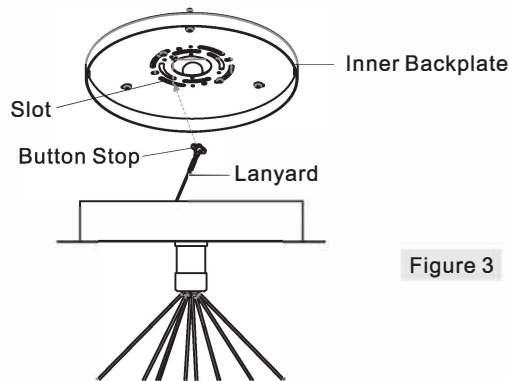

STEP 4 – Attach Fixture Body to Inner Backplate

- Place the ceiling canopy and Fixture Body (H) onto the Inner Backplate (A) and align holes on the ceiling canopy to mounting holes on the Inner Backplate (A). Secure by threading Mounting Screws (B) into mounting holes on the Inner Backplate (A). Hand tighten until snug with screwdrivers.

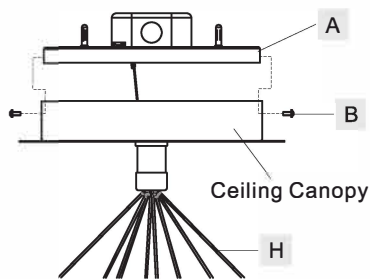

STEP 5 – Install Rods

- Remove set screws from ends of Rods (F/G).
- Attach both cords A to the ends of Rod F and tighten the set screws into the rod end securing the cords.
- Use the same process to assemble all cords to the rods using the same letter cord for a rod. (AA, BB, CC, DD, EE).
- Double check the hanging height after all rods are assembled. If necessary, unscrew Mounting Screws (B) and remove the ceiling canopy from the Inner Backplate. The lanyard will support the fixtures. Refer to Step 1 to adjust the cord length accordingly.
- If you want to adjust the rod location, unscrew set screws at the ends of the rod, move the rod to your desired location. Always tighten set screws on the ends after adjustment.



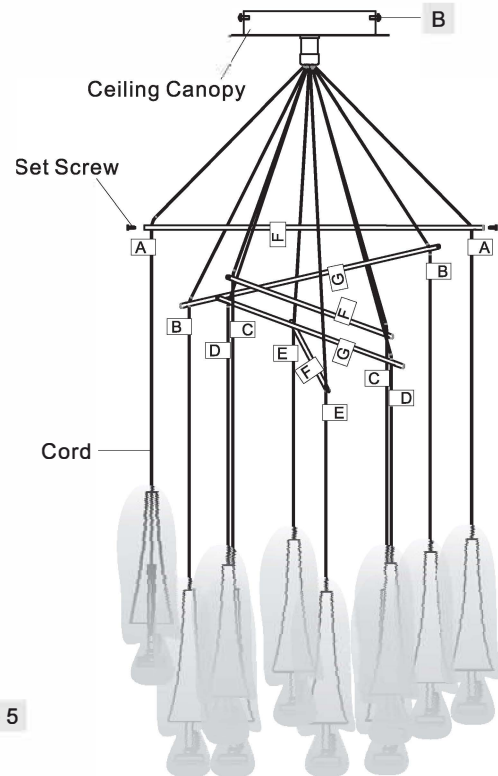


Figure 5

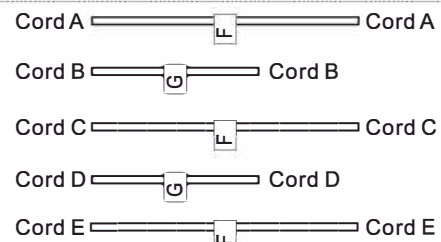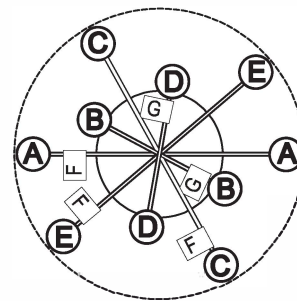

RECOMMENDED RODS DISTRIBUTION

STEP 6 - Wire Connections

- Unscrew mounting screws to remove the ceiling canopy from the inner backplate. The lanyard will support the fixture.
- Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- Re-attach the ceiling canopy to the inner backplate and secure with mounting screws (Refer to Step 4).

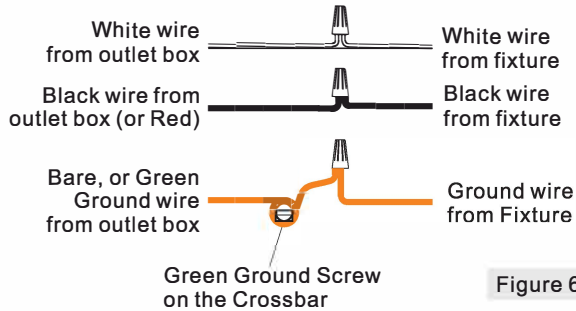


Figure 6

STEP 7 - Remove Packing Material

- Carefully remove packing materials around shades and lamps one by one.
- Place the shade onto the lamp properly.
- Remove labels on the cords and rods.

Your fixture is now assembled and ready to use. Enjoy!




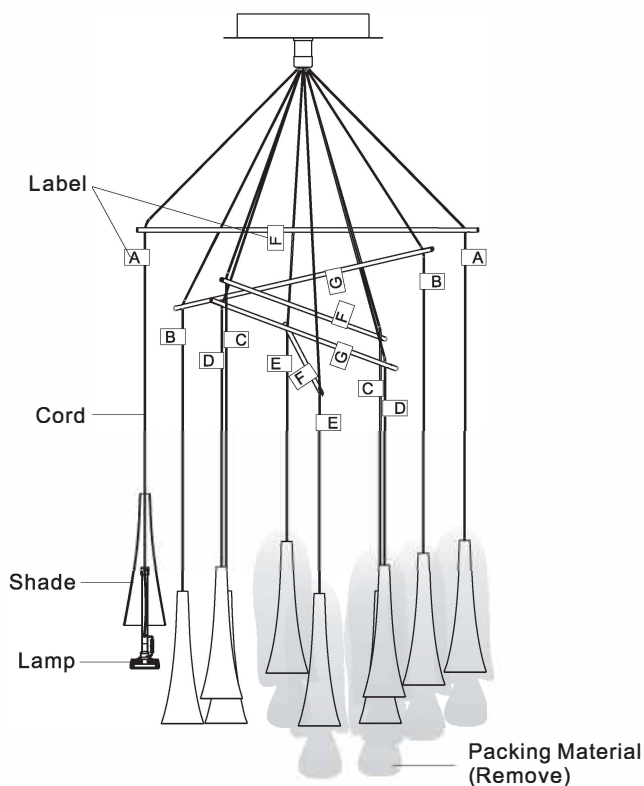


Figure 7

PCNX5010SG

FINISH: SATIN COPPER

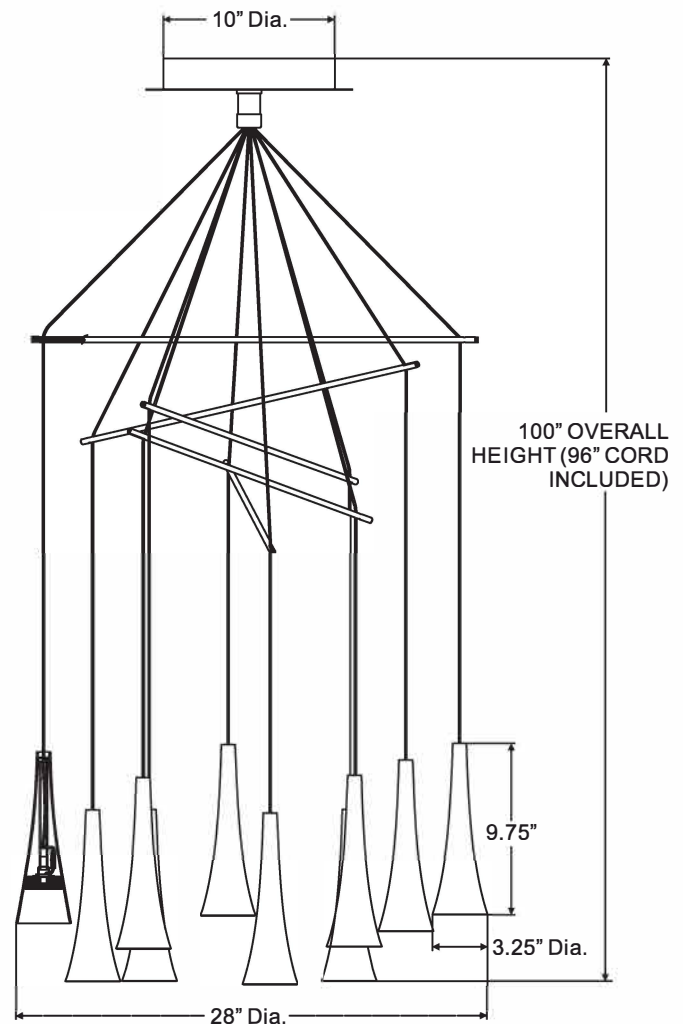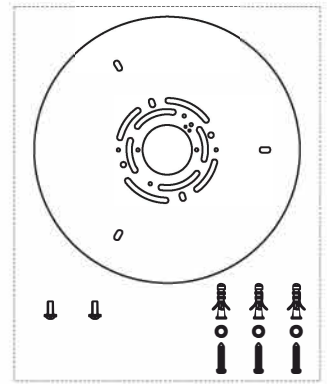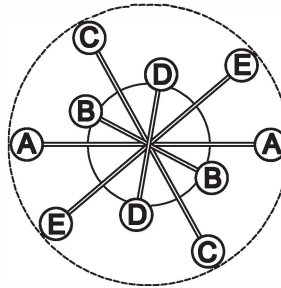

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"