

Electric Grill

YONGKANG DEKAO INDUSTRY AND TRADE Co., Ltd

This product is certified by CCC /CE/ROHS/FDA/FCC

WARRANTY CARD

Product name	Electric Barbecue Grill	Warranty period	
Item No.		1 year	
Purchase date	date month year	Name	
Customer Address		Tell	
Sales Address		Name	
		Tell	

●Warranty period start from the day that customer buy this product

1. Temperature regulator:
5 stages temperature regulator can up to the highest temperature 250°
2. Height adjustment shelf
This product can use the height adjustment on both side to discharge of oil .also you can use it to make some sample soup.
3. The outlet of electronic pan:
4. This product use Teflon paint,have excellent heat transfer performance.The pan have the oil outlet ,it's more convenient to use.

Please read the instruction carefully before using

- ◆This product is 220V power special supply product.
- ◆This product can't be using together with any other electronic product on a same power outlet.
- ◆Must avoid the child to touch this product when using.
- ◆Please insert the temperature regulator before connecting the power supply.
- ◆Don't move this product when using.
- ◆Please don't use this product when have flammable materials in the surrounding environment.
- ◆Please don't leave when the product in heating work.
- ◆This product is a family use product, please don't use it outside the house.
- ◆Don't insert the temperature regulator and have a long-time heating work when you are not barbebcue.
- ◆Please avoid power cords twisted or skin of power cords damaged.
- ◆The first step :prepare the material
- ◆Prepare all the meat and vegetables for the barbebcue.
- ◆The second step:Prepare the electronic pan

- ◆ Please use the electronic pan in a smooth and safety place.
- ◆ The third step: connect the temperature regulator
- ◆ Please connect the temperature regulator before insert the power supply
- ◆ Please confirm the temperature regulator is on the OFF.
- ◆ Notice: Please don't drop the temperature on the ground caused to the fault.
- ◆ Hold on the temperature regulator body when you pull out it.
- ◆ The forth step: the shelf height adjustment
- ◆ Prop up the height adjustment when barbecue, put down the height adjustment when you are
- ◆ Roast the food without too much soup.
- ◆ The fifth step: roast
- ◆ Notice: please make sure the product in a smooth and safety place, if the pan tilt out when using, then will have a danger of burns.

Use the temperature regulator to adjust the temperature

This product's temperature can arrive to 240°

The electronic pan need to preheat before using, the pan will be heated to the temperature that you set. The indicator light will turn off itself and stop heating once arriving the temperature you set.

Fault judgment and simple maintenance

Fault phenomenon	Fault reason	Handling method
The power indicator light is not bright	1. The power outlet is not connecting power supply 2. The temperature regulator and power cord is damaged	1. Ask qualified electrician to fix. 2. Purchase the temperature regulator from the specify maintenance department or the manufacturer (this part is not suitable for maintenance)
The electronic pan body is not heating	1. The temperature regulator connect the pan body does not reach the designated position well. 2. The temperature regulator connect pan body have loose phenomenon.	1. Please connect again to reach the designated position 2. Purchase the temperature regulator from the specify maintenance department or the manufacturer (this part is not suitable for maintenance)
The pan body's temperature is lower	1. Adjust temperature improper 2. Temperature regulator lost control	1. Adjust the temperature regulator again, adjust to a fit temperature. 2. Purchase the temperature regulator from the specify maintenance department or the manufacturer (this part is not suitable for maintenance)
Bottom of the pan has a slight white smoke emitted and slight noisy	1. Insulation materials caused by heating for first time	It is a normal phenomenon, it will disappear in 5~10 minutes.

If the above method is still can't solve the problem, please send to the specified maintenance department for repairing, please don't tear down the product by yourself.

■ Reference: The temperature regulator power supply will turn on to turn off again and again when you are using, according to heating condition.

■ Warning: Don't let your finger touch to the electronic pan.

■ Notice : Don't use the sharp metal tools when you are at the barbecue, it will hurt the surface of the pan. When the pan is in the hot state, don't put the plastic and objects such as easy to melt in the pan. You need to adjust the temperature regulator to the left end once you finish using, then pull out the plug. Don't touch the pan when it is in the hot state. You must have your pan cooled sufficiently before moving and clean it, pull out the temperature regulator lightly after the pan cooled sufficiently. Warning: Must pull out the plug when you are not using and clean the pan, avoiding the temperature regulator get wet by water.

■ Must have your pan cooled sufficiently after pulling out the plug.

■ Must pull out the temperature regulator.

■ Avoiding the temperature regulator fall into water or washed in the water.

■ Please use soft dry duster cloth and dry tissue to wipe the temperature regulator.

■ Please use duster cloth wipe the pan after barbecue.

■ Please don't let the temperature regulator socket part touch water when cleaning.

■ Please use soft dry duster cloth and dry tissue to wipe.

■ Make sure the product is in the completely dry condition before using, must make sure the temperature regulator socket part is in the dry condition.

■ Don't use rough objects, such as iron brush wipe the pan, it will scratch the paint on the surface of the pan.

Product name : ELECTRIC GRILL

Item no.: DK-DKP01/ DK-DKP02/ DK-DKP03/ DK-DKP04/ DK-DKP05/ DK-DKP06/ DK-DKP07/ DK-DKP08/ DK-KS08/ Rated voltage: 220V/50Hz~60Hz \ 110V/50Hz~60Hz Rated power: 1360W~2000W

1. This product's warranty period is one year.
2. If have any malfunction during the warranty period and normal circumstances, can get a free maintenance by purchasing shop.
3. You should pay the fix fee, if appear the following situations during the warranty period:
 - Caused the fault by reinvent yourself and don't comply with the notice when using.
 - Make the surface damage such as the defects when using.
 - Caused the fault and damage by the natural disasters such as fire, flood, earthquake and so on.
 - Caused the fault and damage by using in commercial use and fire accident.