 
 


**IMPORTANT!! PLEASE READ ENTIRE
INSTRUCTION SHEET BEFORE ASSEMBLY!!**

Wood Porch Swing

Identify all parts packed in the carton against the parts list. Remove all protective materials. Place parts on a non-abrasive surface. If you are missing any parts or Are unsure how to proceed with assembly, please call customer service center


Do not attempt to assemble the product if any parts are missing or damaged .

PART LIST							
A	Swing Back		1	AA	M8x55mm Bolt		8
B	Swing Seat		1	BB	Washer		16
C	Left Armrest		1	CC	Nut		8
D	Right Armrest		1	DD	M4x45mm Screw		4
E	Support Pannel		2	EE	Hex Wrench		1
F	Chains		2				

Step 1

Place the chair seat (B) on a flat, soft surface. Attach support pannels (E) to the chair seat (B) by using M8 bolts (AA), washer (BB) and nut (CC) through each hole of the support pannels (E) into the chair seat (B).

Note: Do not fully tighten the bolts.

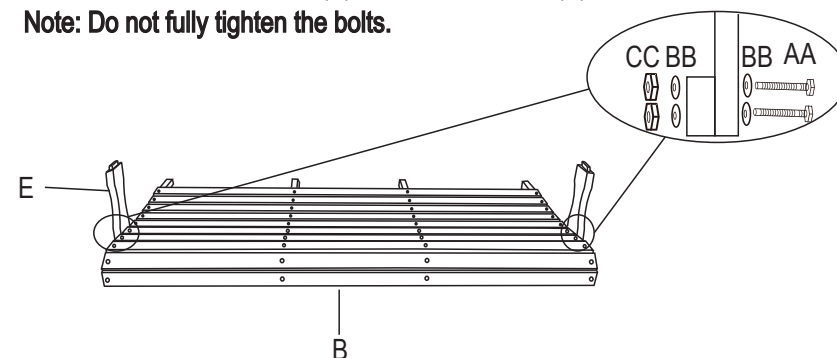


Step 2

Insert support pannel into(E) the groove on the left armrest(C). Attach the left armrest(C) to support pannel (E) by using screws (DD) through each hole of the left armrest into support panel (E).

Repeat the instructions for the right armrest (D).


Note: Screwdriver not provided

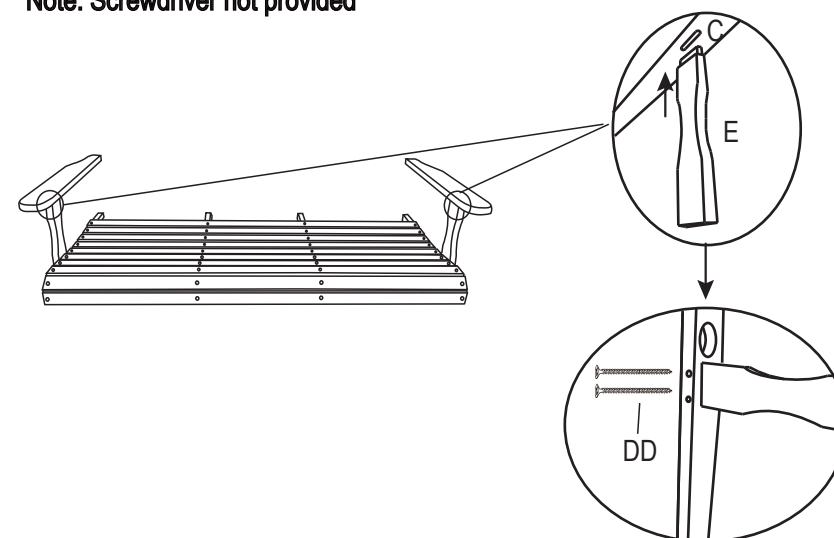

Step 3

Attach the armrests (C&D) to the swing back (A) by using the long bolts, washers and nuts on the chains(F) through each hole of the armrest (C&D) into swing back (A).


Note: Do not fully tighten the bolts.

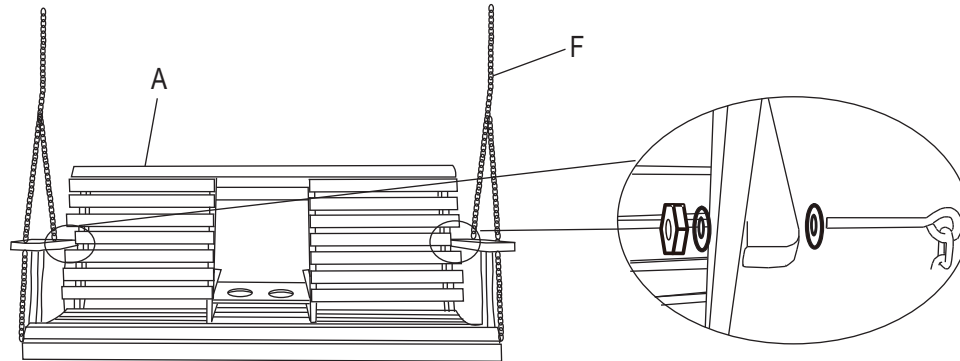

Step 4

Make the short bolt on the chain(F) through the hole of the armrest. Attach the chains (F) to the swing seat by using the short bolts, washers and nuts on the chains(F) through the hole of the swing seat (B).


Note: Do not fully tighten the bolts.

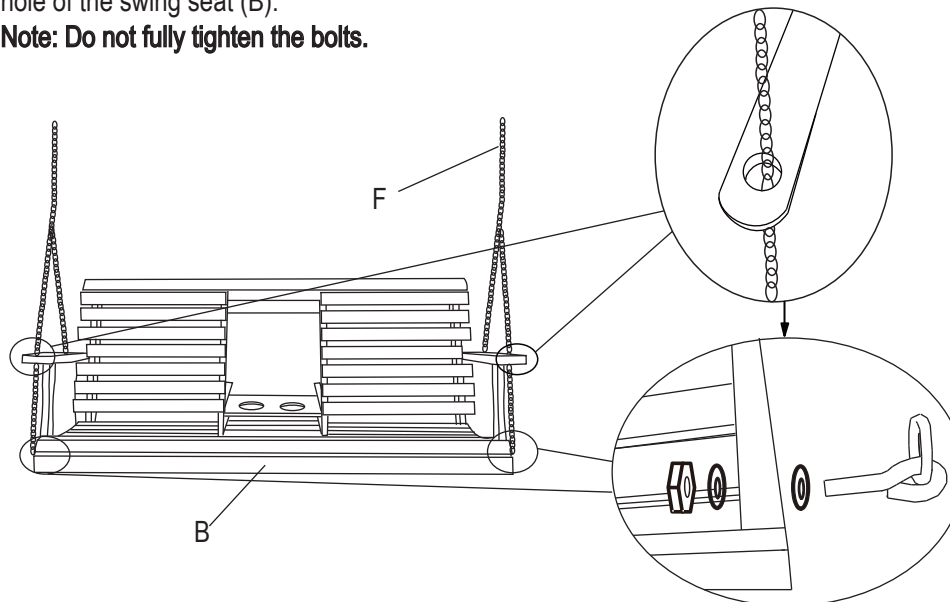

Step 5

Attach swing back (A) to swing seat (B) by using the M8 bolts (AA), washers (BB) and nuts (CC) through each hole of the swing back into swing seat.

Fully tighten all the bolts and nuts by wrench (EE).

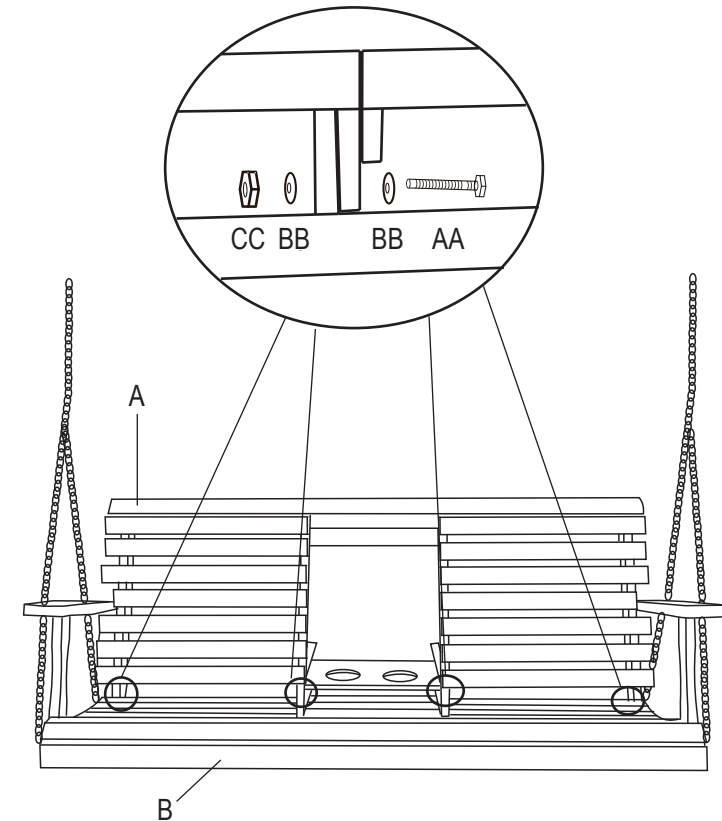

Now the swing is ready for your enjoyment!