

**DO NOT REMOVE
THIS TAG.**

PRODUCT INSTALLERS:



HON®

Altern™ Seating

Quick Guide

Congratulations on your new chair!

Quick Guide | Altern™



1

Height-Adjustable Arms

Pull the lever up to raise or lower arm-height.

2

Pneumatic Seat-Height Adjustment

To raise the seat, take your weight off the chair and lift the lever up. To lower the seat, place your full weight on the chair while lifting the lever.

3

Seat Depth

To adjust the seat depth, lift the lever and slide the seat forward or backwards.

4

Tilt Tension

To adjust the ease of recline, turn the front knob clockwise to loosen and counter-clockwise to tighten.

5

Tilt Lock

Push the control lever in to lock the chair in an upright position and pull the lever out to release and recline.



Scan to learn more!



Or visit hon.com/altern

